




for a greener tomorrow

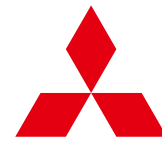

**MITSUBISHI  
ELECTRIC**

*Changes for the Better*

FACTORY AUTOMATION

**e-Factory**

Graphic Operation Terminal

# GOT2000 Series/ GOT SIMPLE Series



## GOT2000

Graphic Operation Terminal

## GOT SIMPLE

Graphic Operation Terminal

- Innovative display features in a simple body
- Enhanced lineup with rugged model for wider applications
- Advanced user-friendly features of HMI/GOT Screen Design Software GT Works3

# GLOBAL IMPACT OF MITSUBISHI ELECTRIC



Through Mitsubishi Electric's vision, "Changes for the Better" are possible for a brighter future.

## ***Changes for the Better***

We bring together the best minds to create the best technologies. At Mitsubishi Electric, we understand that technology is the driving force of change in our lives. By bringing greater comfort to daily life, maximizing the efficiency of businesses and keeping things running across society, we integrate technology and innovation to bring changes for the better.

Mitsubishi Electric is involved in many areas including the following:

### **Energy and Electric Systems**

A wide range of power and electrical products from generators to large-scale displays.

### **Electronic Devices**

A wide portfolio of cutting-edge semiconductor devices for systems and products.

### **Home Appliance**

Dependable consumer products like air conditioners and home entertainment systems.

### **Information and Communication Systems**

Commercial and consumer-centric equipment, products and systems.

### **Industrial Automation Systems**

Maximizing productivity and efficiency with cutting-edge automation technology.

# INDEX

|  |     |
|--|-----|
| 1. Lineup  | 04  |
| 2. Hardware  | 06  |
| 3. GT SoftGOT2000  | 26  |
| 4. GOT Solutions INDEX   | 30  |
| GOT Smart Web-based Remote Solutions <b>GOT Mobile</b>                   | 32  |
| GOT Easy Drive Control (Servo) Interactive Solutions <b>GOT Drive</b>    | 40  |
| GOT Easy Drive Control (Inverter) Interactive Solutions <b>GOT Drive</b> | 56  |
| GOT Easy Drive Control (Robot) Interactive Solutions <b>GOT Drive</b>    | 62  |
| Sophisticated Programmable Controller Interactive Features               | 63  |
| Maintenance, Troubleshooting and Diagnostics Features                    | 67  |
| Hardware Features  | 75  |
| Security & Additional System Features                                    | 80  |
| Data Handling Features   | 93  |
| Interactive Features with Other Industrial Devices                       | 96  |
| 5. MELSOFT iQ Works  | 102 |
| 6. MELSOFT GT Works3   | 104 |
| 7. e-F@ctory   | 120 |
| 8. Specifications  | 123 |
| 9. Product List  | 172 |
| 10. Support  | 182 |
| 11. Related Products   | 184 |

1

2

3

4

5

6

7

8

9

10

11



# HMI lineup

## GOT2000 Series

# GT27

Advanced model with multi-touch gesture functions

Ethernet RS-232 RS-422/485 CC-Link IE TSN CC-Link IE Control CC-Link IE Field\*1 CC-Link IE Field Basic CC-Link Bus MELSECNET

\*1 The CC-Link IE Field Network communication unit and GOT set is also available.

15 inch

TFT 65536 colors AC DC



XGA 1024x768

GT2715-XTBA  
GT2715-XTBD

12.1 inch

TFT 65536 colors AC DC



SVGA 800x600

GT2712-STBA  
GT2712-STBD  
GT2712-STWA [White model]  
GT2712-STWD [White model]

10.4 inch

TFT 65536 colors AC DC



SVGA 800x600

VGA 640x480

GT2710-STBA  
GT2710-STBD  
GT2710-VTBA  
GT2710-VTBD  
GT2710-VTWA [White model]  
GT2710-VTWD [White model]

# GT25

High performance, cost efficient, mid-range model

Ethernet RS-232 RS-422/485 CC-Link IE TSN\*2 CC-Link IE Control\*2 CC-Link IE Field\*1\*2 CC-Link IE Field Basic CC-Link\*2 Bus\*2 MELSECNET\*2

\*1 The CC-Link IE Field Network communication unit and GOT set is also available. \*2 Not supported by GT2505.

12.1 inch

TFT 65536 colors AC DC



SVGA 800x600

GT2512-STBA  
GT2512-STBD

10.4 inch

TFT 65536 colors AC DC



VGA 640x480

GT2510-VTBA  
GT2510-VTBD  
GT2510-VTWA [White model]  
GT2510-VTWD [White model]

8.4 inch

TFT 65536 colors AC DC



VGA 640x480

GT2508-VTBA  
GT2508-VTBD  
GT2508-VTWA [White model]  
GT2508-VTWD [White model]

# GT25

GOT2000 widescreen expands your view

Wide

Ethernet (2 ports) RS-232 RS-422/485 CC-Link IE Field Basic Sound output (built-in)

# GT25

Rugged

Ethernet (2 ports)  
RS-232 RS-422/485  
CC-Link IE Field Basic  
Sound output (built-in)

10.1 inch

TFT 65536 colors DC



WXGA 1280x800

GT2510-WXTBD  
GT2510-WXTSD

7 inch

TFT 65536 colors DC



WVGA 800x480

GT2507-WTBD  
GT2507-WTSD

7 inch

TFT 65536 colors DC



WVGA 800x480

GT2507T-WTSD

# GT23

Unchallenged cost performance

Ethernet RS-232 RS-422/485 CC-Link IE Field Basic

10.4 inch

TFT 65536 colors AC DC



VGA 640x480

GT2310-VTBA  
GT2310-VTBD

8.4 inch

TFT 65536 colors AC DC



VGA 640x480

GT2308-VTBA  
GT2308-VTBD

# GT21

Wide

Ethernet RS-232  
RS-422/485  
CC-Link IE Field Basic

7 inch

TFT 65536 colors DC



WVGA 800x480

GT2107-WTBD  
GT2107-WTSD

# GT Works3



GOT Screen Design Software  
**MELSOFT GT Works3**  
 Professional designs in just a few clicks

Multi-touch gesture | Multimedia\*2 | Video/RGB\*2 | Sound output | External I/O

\*2 Not supported by GT2705.

**8.4 inch**

TFT  
65536 colors  
AC  
DC



**SVGA**  
800x600  
**VGA**  
640x480

GT2708-STBA  
GT2708-STBD  
GT2708-VTBA  
GT2708-VTBD

**5.7 inch**

TFT  
65536 colors  
DC



**VGA**  
640x480

GT2705-VTBD

# SoftGOT



USB port  
license key



GOT2000 compatible HMI software  
**GT SoftGOT2000 Version1**  
 Make visualization of production accessible

## MELIPC Series (related products)

Panel computer with Windows® OS

**MI3000**

Ethernet (3 ports) | RS-232  
RS-422/485 | DisplayPort | Sound output

**21.5 inch / 15 inch**

TFT  
16.77 million colors  
DC



**NEW**

**Full HD**  
1920x1080  
**XGA**  
1024x768

MI3321G-W  
MI3315G-W

For the details,  
see page 184.

Sound output\*2 | External I/O\*2

## GT25 Handy

HMI functionality in the palm of your hand

Ethernet | RS-232 | RS-422/485\*1 | CC-Link IE Field Basic

\*1 GT2505HS supports RS-422 only.

**5.7 inch**

TFT  
65536 colors  
DC



**VGA**  
640x480

GT2505-VTBD

**6.5 inch**

TFT  
65536 colors  
DC



**VGA**  
640x480

GT2506HS-VTBD

**5.7 inch**

TFT  
65536 colors  
DC



**VGA**  
640x480

GT2505HS-VTBD

## GT25 Open frame

A new style of GOT2000

Ethernet | RS-232 | RS-422/485 | CC-Link IE TSN | CC-Link IE Control | CC-Link IE Field | CC-Link IE Field Basic | CC-Link | Bus | MELSECNET | Sound output | External I/O

**12.1 inch**

TFT  
65536 colors  
AC  
DC



**SVGA**  
800x600

GT2512F-STNA  
GT2512F-STND

**10.4 inch**

TFT  
65536 colors  
AC  
DC



**VGA**  
640x480

GT2510F-VTNA  
GT2510F-VTND

**8.4 inch**

TFT  
65536 colors  
AC  
DC



**VGA**  
640x480

GT2508F-VTNA  
GT2508F-VTND

## Compact models with basic functions

Ethernet\*1 | RS-232\*1 | RS-422/485\*1 | CC-Link IE Field Basic\*2

## GT21

\*1 Supported interfaces vary depending on the model. Please refer to descriptions in [ ] after the model.  
 \*2 Supported only by the models equipped with an Ethernet port.

**4.3 inch**

TFT  
65536 colors  
DC



480x272

GT2104-RTBD  
[Ethernet, RS-232, RS-422/485]

**3.8 inch**

TFT  
mono-chrome  
DC  
5-color LED



320x128

GT2103-PMBD  
[Ethernet, RS-422/485]  
GT2103-PMBDS  
[RS-232, RS-422/485]  
GT2103-PMBDS2  
[RS-232 x 2 channels]  
GT2103-PMBLS  
[RS-422] 5 V DC type

## GOT SIMPLE Series

Simple model having excellent cost performance

## GS21

Ethernet | RS-232 | RS-422  
CC-Link IE Field Basic

**10 inch / 7 inch**

TFT  
65536 colors  
DC



**WVGA**  
800x480

GS2110-WTBD  
GS2107-WTBD

For the status of conforming to various standards and laws, please refer to the Mitsubishi Electric Factory Automation Global website ([www.MitsubishiElectric.com/fa/](http://www.MitsubishiElectric.com/fa/)).

# GT27 model

Advanced model with multi-touch gesture functions



### A wide variety of specifications suit every system design


Communication interfaces such as Ethernet, RS-232, RS-422/485, USB host/device and SD memory card are standard features. High capacity data processing ensure smooth screen operation even when multiple tasks, such as logging, script, alarm, or device data transfer, are running. In addition, image recording, image playback, video image input, and RGB output are available\*, thus all the functions of GOT2000 can be used on GT27 models. \*Excluding GT2705

| Item                | Specifications  |
|---------------------|---|
| Display             | 5.7"/8.4"/10.4"/12.1"/15", TFT color LCD, 65536 colors  |
| Resolution          | XGA, SVGA, VGA  |
| Backlight           | White LED   |
| User memory         | Memory for storage (ROM): 57 MB (GT2705 has 32 MB)<br>Memory for operation (RAM): 128 MB (GT2705 has 80 MB)   |
| Standard interface  | Ethernet, RS-232, RS-422/485<br>USB host (USB-A): 2 channels* (USB 2.0 (High-Speed 480 Mbps))<br>USB device (USB Mini-B): 1 channel (USB 2.0 (High-Speed 480 Mbps))<br>SD memory card interface |
| Extension interface | CC-Link IE TSN <b>NEW</b> , CC-Link IE Control, CC-Link IE Field, CC-Link, bus, MELSECNET/H   |
| Side interface      | For installing a wireless LAN communication unit  |

\* White model has 1 channel.

### With Backup/Restoration function, fear troubles no more!

The programs and parameters of the programmable controller CPU can be backed up to the SD memory card or USB memory device in the GOT. In case of a CPU failure, users can perform batch operation to restore the data to the controller.

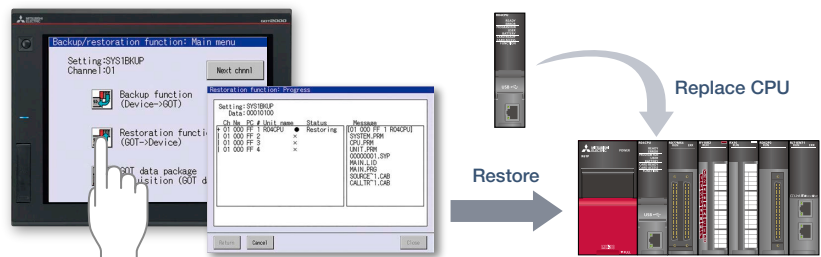


■ GT27 model external appearance [Standard model: front face/rear face]




- 1 Human sensor**  
The unit automatically detects an operator approaching the unit and displays the screen.  
\* GT2715, GT2712 only
- 2 USB interface: device (USB Mini-B)**  
Connect to a personal computer and transfer data.  
\* Standard models: front face only  
\* White models: rear face only
- 3 USB interface: host (USB-A)\*1**  
Transfer project data or read the data (logging data, etc.) to or from the GOT using the USB memory.  
A USB mouse, keyboard, barcode reader\*2, or RFID reader\*2 can also be connected.  
\*1 White models: rear face only  
\*2 USB keyboard (HID) compatible model only

- 4 Extension interface**  
Communication and option units can be installed.
- 5 Ethernet interface**  
Use Ethernet to simultaneously connect up to four types of industrial devices from different manufacturers. CC-Link IE Field Network Basic compatible devices can also be connected.
- 6 RS-232 interface**  
Connect to various industrial devices, barcode readers and serial printers.
- 7 RS-422/485 interface**  
Connect to various industrial devices and barcode readers.

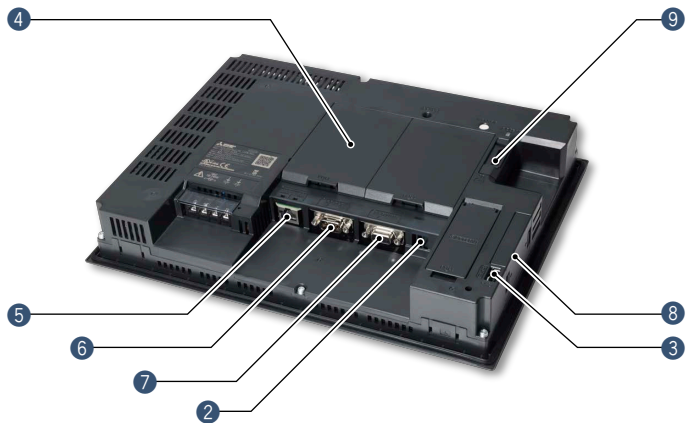

- 8 Side interface**  
Install a wireless LAN communication unit.
- 9 SD memory card interface**  
Save large volumes of data, including alarms and logging data.

■ GT27 model external appearance [White model: front face]

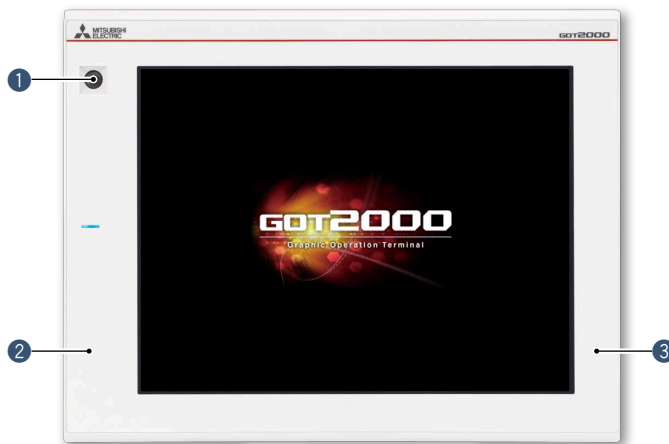

- 1 Human sensor**  
The unit automatically detects an operator approaching the unit and displays the screen.  
\* GT2712 only
- 2 Flat body**  
The front flat screen is easy to clean. (USB interface is on the back.)
- 3 White body**  
The white model portrays a clean image.



**White model features**

GOT is acceptable for use in hazardous locations classified by various safety standards (Class I, Division 2 [the United States, Canada], ATEX [Europe], KCs [Korea]).

\* Supported standards vary depending on the model. For the details, please refer to page 75.

# GT25 model

High performance, cost efficient, mid-range model

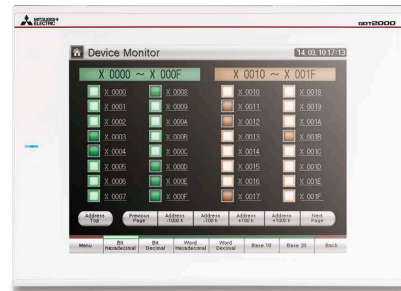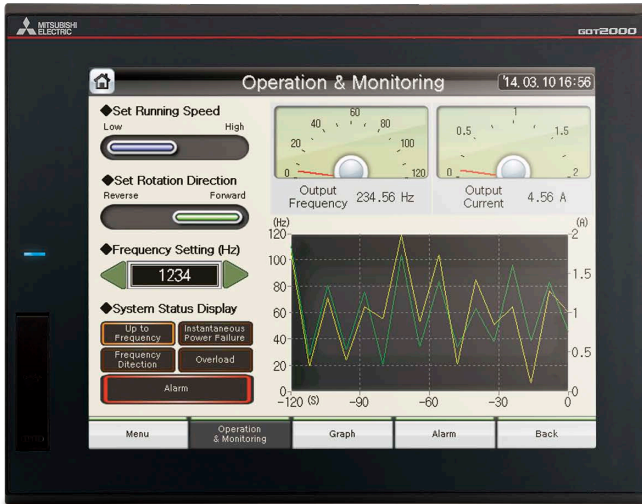

### A wide variety of specifications suit every system design

Communication interfaces such as Ethernet, RS-232, RS-422/485, USB host/device and SD memory card are standard features. High capacity data processing ensure smooth screen operation even when multiple tasks, such as logging, script, alarm, or device data transfer, are running.


| Item                  | Specifications   |
|-----------------------|--|
| Display               | 5.7"/8.4"/10.4"/12.1", TFT color LCD, 65536 colors   |
| Resolution            | SVGA, VGA  |
| Backlight             | White LED  |
| User memory           | Memory for storage (ROM): 32 MB<br>Memory for operation (RAM): 80 MB   |
| Standard interface    | Ethernet, RS-232, RS-422/485<br>USB host (USB-A): 2 channels*1 (USB 2.0 (High-Speed 480 Mbps))<br>USB device (USB Mini-B): 1 channel (USB 2.0 (High-Speed 480 Mbps))<br>SD memory card interface |
| Extension interface*2 | CC-Link IE TSN <b>NEW</b> , CC-Link IE Control, CC-Link IE Field, CC-Link, bus, MELSECNET/H  |
| Side interface*2      | For installing a wireless LAN communication unit   |

\*1 GT2505 and white model have 1 channel.

\*2 GT2505 does not have the extension interface and the side interface.

### FA Transparent function simplify your debugging work!

By connecting a personal computer to the front USB interface on the GOT, the GOT acts as a transparent gateway to enable startup and adjustment of equipment. Users do not have to bother with opening the electrical cabinet or changing cable connections.

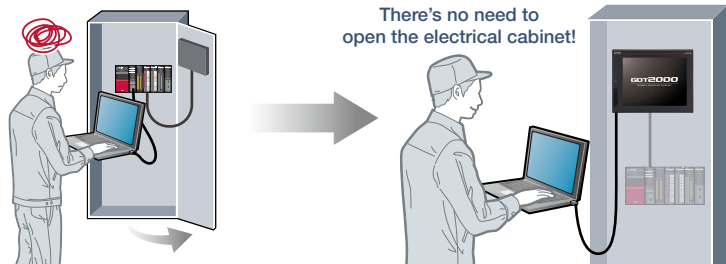

There's no need to open the electrical cabinet!



■ GT25 standard model external appearance [front face/rear face] \* Excluding GT2505



1 USB interface: device (USB Mini-B)

Connect to a personal computer and transfer data.

\* Standard models: front face only  
\* White models: rear face only

2 USB interface: host (USB-A)\*1

Transfer project data or read the data (logging data, etc.) to or from the GOT using the USB memory.

A USB mouse, keyboard, barcode reader\*2, or RFID reader\*2 can also be connected.

\*1 GT2505, white models: rear face only

\*2 USB keyboard (HID) compatible model only

3 Extension interface

Communication and option units can be installed.

4 Ethernet interface

Use Ethernet to simultaneously connect up to four types of industrial devices from different manufacturers. CC-Link IE Field Network Basic compatible devices can also be connected.

5 RS-232 interface


Connect to various industrial devices, barcode readers and serial printers.

6 RS-422/485 interface

Connect to various industrial devices and barcode readers.

7 Side interface


Install a wireless LAN communication unit.

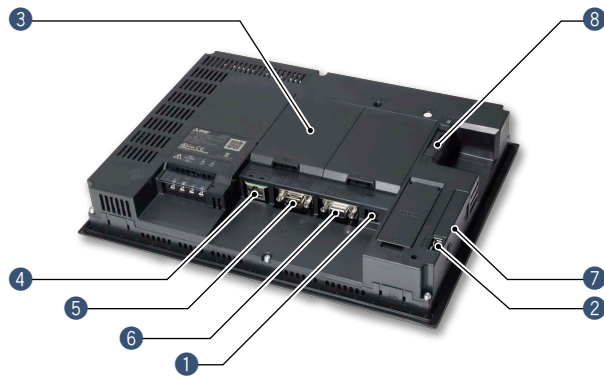


8 SD memory card interface

Save large volumes of data, including alarms and logging data.

■ GT2505 external appearance [front face/rear face]

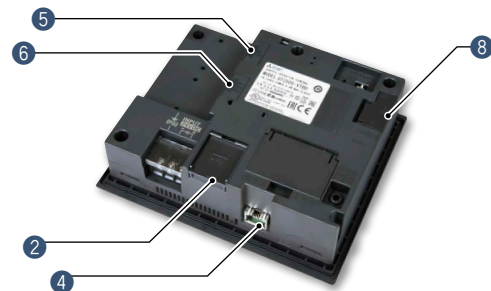

■ GT25 white model external appearance [front face]

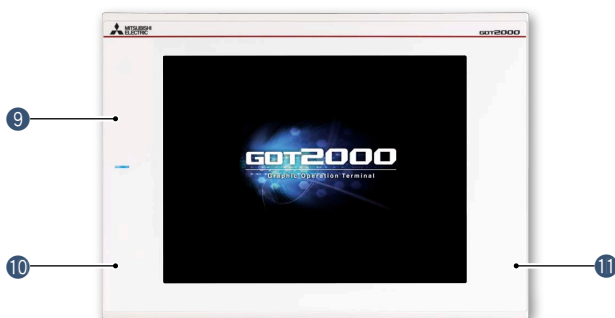

9 Simple design

In the same way as the standard model, the stylish and simple design with a linear motif is sleek and complements any machine design.

10 Flat body

The front flat screen is easy to clean. (USB interface is on the back.)

11 White body

The white model portrays a clean image.

White model features

GOT is acceptable for use in hazardous locations classified by various safety standards (Class I, Division 2 [the United States, Canada], ATEX [Europe], KCs [Korea]).

\* Supported standards vary depending on the model. For the details, please refer to page 75.

For details

Concept movie



# GT25 wide model

GOT2000 widescreen expands your view



For the details of GT25 wide models, please refer to the Graphic Operation Terminal GOT2000 Series Wide Model catalog (L(NA)08461ENG).

### Various interfaces are equipped in a compact body

The stylish design realized with a narrow bezel. The GOT2000 wide models are available in a choice of silver and black.

Two Ethernet ports and the built-in sound output interface\* equipped as standard add value to your system.

\* A speaker with built-in amplifier is required separately.


| Item                                      | Specifications  |
|---|---|
| Display                                   | 7" widescreen/10.1" widescreen, TFT color LCD, 65536 colors   |
| Resolution                                | 7": WVGA, 10.1": WXGA   |
| Backlight                                 | White LED   |
| User memory                               | Memory for storage (ROM): 32 MB<br>Memory for operation (RAM): 128 MB   |
| Standard interface                        | Ethernet (2 ports), RS-232, RS-422/485<br>USB host (USB-A): 1 channel (USB 2.0 (High-Speed 480 Mbps))<br>USB device (USB Mini-B): 1 channel (USB 2.0 (High-Speed 480 Mbps))<br>Sound output interface (ø3.5 minijack), SD memory card interface |
| Extension interface                       | —   |
| Wireless LAN communication unit interface | For installing a wireless LAN communication unit  |

### Ultra high resolution display improves expressiveness

Ultra high resolution WXGA screen\* displays necessary and sufficient information on one screen. Small characters can be displayed clearly.

\* WXGA display on the 10.1 inch model. WVGA display on the 7 inch model.


About 3.3 times higher resolution displays small characters clearly

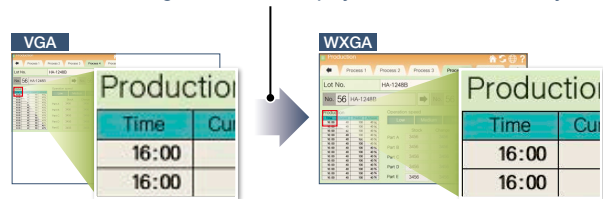

\* 10.1 inch model

**Add value to your system with sound notification**


The built-in sound output interface makes it easy to implement the sound notification system (page 77, page 118). Not only by displaying the contents of events on the screen but also by notifying with sound, you can convey the necessary information to the operators.

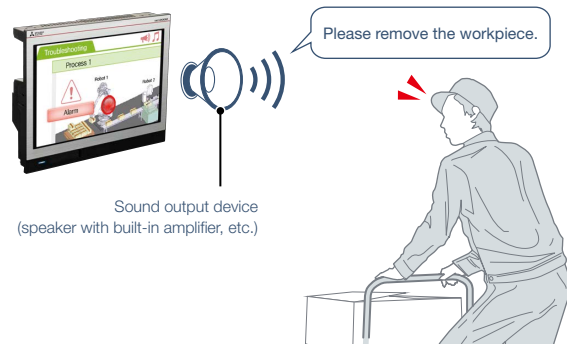

Sound output device (speaker with built-in amplifier, etc.)

**Enable separation of information and control system networks**

Two Ethernet ports physically separate the information system network in the office from the control system network at the production site. The network architecture becomes safer and more secure by setting different IP addresses for each network.

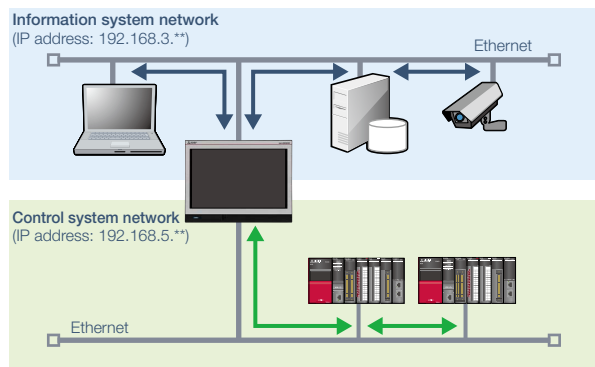


**GT25 wide model external appearance [front face/rear face]**



- 1 **USB interface: device (USB Mini-B)**  
Connect to a personal computer and transfer data.
- 2 **USB interface: host (USB-A)**  
Transfer project data or read the data (logging data, etc.) to or from the USB memory. A USB mouse, keyboard, barcode reader\*, or RFID reader\* can also be connected.  
\* USB keyboard (HID) compatible model only

- 3 **Ethernet interface (2 ports)**  
Use Ethernet to simultaneously connect up to four types of industrial devices from different manufacturers. CC-Link IE Field Network Basic compatible devices can also be connected.
- 4 **RS-422/485 interface**  
Connect to various industrial devices and barcode readers.
- 5 **RS-232 interface**  
Connect to various industrial devices, barcode readers and serial printers.
- 6 **Sound output interface (φ3.5 minijack)**  
Output sound by connecting φ3.5 stereo mini-plug (3-prong).

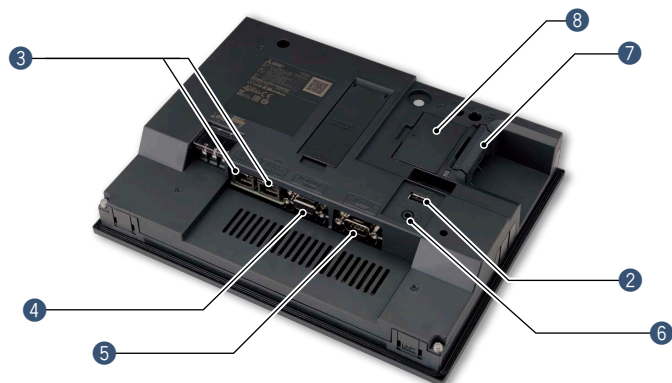

- 7 **SD memory card interface**  
Save large volumes of data, including alarms and logging data.
- 8 **Wireless LAN communication unit interface**  
Install a wireless LAN communication unit.



# GT25 handy GOT

HMI functionality in the palm of your hand



For the details of GT25 handy GOT, please refer to the Graphic Operation Terminal GOT2000 Series Handy GOT catalog (L(NA)08506ENG).

## GOT2000 Series handy GOT

With portable handy GOT, you can operate your machines while standing next to them.

| Item               | Specifications  |                                   |
|--------------------|---|-----------------------------------|
|                    | GT2506HS-VTBD   | GT2505HS-VTBD                     |
| Display            | 6.5", TFT color LCD, 65536 colors                                     | 5.7", TFT color LCD, 65536 colors |
| Resolution         | VGA   |                                   |
| Backlight          | White LED   |                                   |
| User memory        | Memory for storage (ROM): 32 MB<br>Memory for operation (RAM): 80 MB  |                                   |
| Standard interface | Ethernet*2, RS-232*1*2, RS-422/485*1*2                                |                                   |
|                    | USB host (USB-A):<br>1 channel (USB 2.0 (High-Speed 480 Mbps))        |                                   |
|                    | USB device (USB Mini-B):<br>1 channel (USB 2.0 (High-Speed 480 Mbps)) |                                   |
|                    | SD memory card interface  |                                   |

\*1 When using GT2506HS, select one channel from RS-232 or RS-422/485.


\*2 When using GT2505HS, select one channel from Ethernet, RS-232, or RS-422. RS-485 cannot be used.

## Example of connecting GT25 handy GOT and industrial devices

### GT2506HS-VTBD

#### Ethernet connection

- The maximum distance between the connector conversion box and the GOT is 10 m.
- Up to four different industrial devices are connectable.

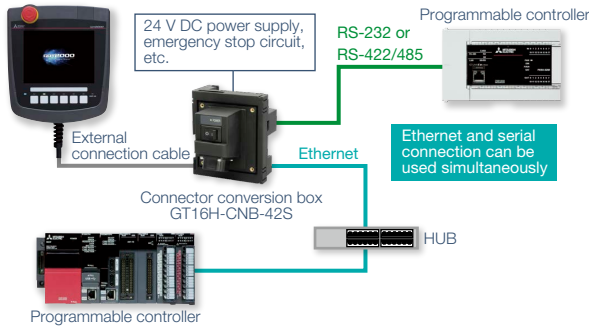

#### Serial connection

### Connector conversion box


Used to connect handy GOT and industrial devices via Ethernet or serial connection.

| Connector conversion box                                  | GT2506HS |                    | GT2505HS |                |
|---|----------|--------------------|----------|----------------|
|   | Ethernet | RS-232, RS-422/485 | Ethernet | RS-232, RS-422 |
| GT16H-CNB-42S<br>ID number recognition function supported | ○        | ○                  | ○        | -              |
| GT16H-CNB-37S   | ○        | -                  | ○        | -              |
| GT11H-CNB-37S   | -        | -                  | -        | ○              |

### GT2505HS-VTBD


#### Ethernet connection

- The maximum distance between the connector conversion box and the GOT is 10 m.
- Up to four different industrial devices are connectable.

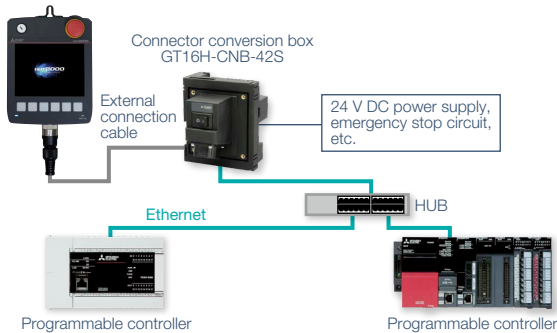

#### Serial connection

- Select either of RS-232 or RS-422.
- The maximum distance between the connector conversion box and the GOT is 10 m.

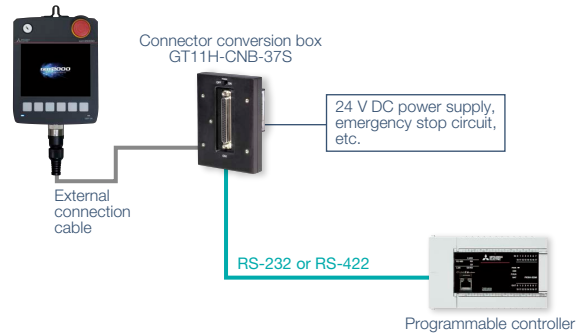

■ **GT2506HS external appearance [front face/rear face]**



■ **GT2505HS external appearance [front face/rear face]**



1 **Emergency stop switch**

An emergency stop switch is used to stop the operation of devices in case of an emergency. It utilizes a “normally closed contact” for safety.

2 **LED operation switches (GT2506HS)/  
Operation switches (GT2505HS)**

The switches can be used to operate and stop machines. Hard switches on the operation panel are no longer required. These switches can be wired to inputs of programmable controllers and other devices.

3 **SD memory card interface**

Save large volumes of data, including alarms and logging data.

4 **USB interface: device (USB Mini-B)**

Connect to a personal computer and transfer data.

5 **USB interface: host (USB-A)**

Transfer project data or read the data (logging data, etc.) to or from the GOT using the USB memory.

6 **Keylock switch (2-position switch)**

Operators can be restricted depending on the operation, such as switching manual/automatic operation or selecting the modes. Once the key is pulled out, others cannot operate it. The switch is used with wiring to the input of programmable controllers.

7 **Grip switch**

The three-position (OFF-ON-OFF) type deadman switch is adopted as an interlock for preventing operation mistakes and prohibiting operation of a machine. The switch can directly control external equipment to give immediate stop commands to a machine. The switch can be wired to inputs of programmable controllers and other devices.

**GT2505HS**


**Wall-mounting attachment for Handy GOT  
GT14H-50ATT**



The wall-mounting attachment for handy GOT is to place the GT2505 Handy GOT while it is not being used.



Firmly held with four posts, the GOT can be stably placed on the attachment. When you use the GOT, you can quickly remove it and start operation.

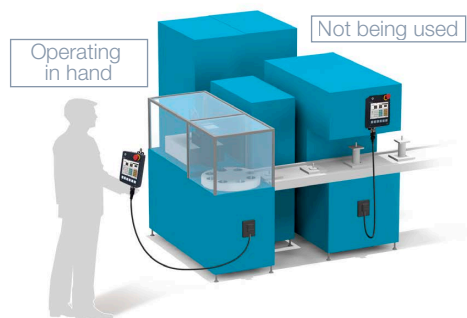



# GT25 rugged model

Wide operating temperature range model with a stylish metal housing



For the details of the GT25 rugged model, please refer to the Graphic Operation Terminal GOT2000 Series Rugged Model catalog (L(NA)08555ENG).

### Suitable for outdoors or in non air-conditioned rooms

The working ambient temperature has been expanded to -20°C to 65°C. The high-brightness LCD panel (2 times brighter than non-rugged models) provides a clear screen view when installed outdoors. The rugged model is ultraviolet ray resistant with an environmental protection sheet that has UV protection function.

\* Note that the structure does not guarantee protection in all users' environments.

### High brightness, clear visibility under daylight

The high-brightness LCD panel (1000 cd/m<sup>2</sup>\*) provides a clear screen view even under strong sunlight.

\* Brightness of independent panel.




| Item                                      | Specifications   |
|---|--|
| Display                                   | 7" widescreen, TFT color LCD, 65536 colors   |
| Resolution                                | WVGA   |
| Backlight                                 | White LED  |
| Panel material                            | Aluminum   |
| User memory                               | Memory for storage (ROM): 32 MB<br>Memory for operation (RAM): 128 MB  |
| Standard interface                        | Ethernet (2 ports), RS-232, RS-422/485<br>USB host (USB-A):<br>1 channel (USB 2.0 (High-Speed 480 Mbps))<br>USB device (USB Mini-B):<br>1 channel (USB 2.0 (High-Speed 480 Mbps))<br>Sound output interface (φ3.5 minijack),<br>SD memory card interface |
| Extension interface                       | —  |
| Wireless LAN communication unit interface | For installing a wireless LAN communication unit   |
| Operating ambient temperature             | -20 °C to 65 °C  |
| Brightness (LCD panel)                    | 1000 cd/m <sup>2</sup> (Typ)   |
| UV cutoff                                 | Approximately 95% (370 nm)   |
| Protective structure                      | Front: IP66F, IP67F Inside control panel: IP2X   |
| Vibration resistance                      | 19.6 m/s <sup>2</sup> (continuous), 19.6 m/s <sup>2</sup> (intermittent)   |
| Shock resistance                          | 392 m/s <sup>2</sup> (40G)   |
| Dedicated option                          | UV protective sheet, protective cover for oil, stand   |



**UV resistant**

Ultraviolet rays are cut by approximately 95% (370 nm) with a UV-cutting layer and UV-absorbing layer. Degradation of the LCD panel or touch panel caused by ultraviolet rays is reduced. Use the optional UV protection sheet to further improve resistance to ultraviolet rays.

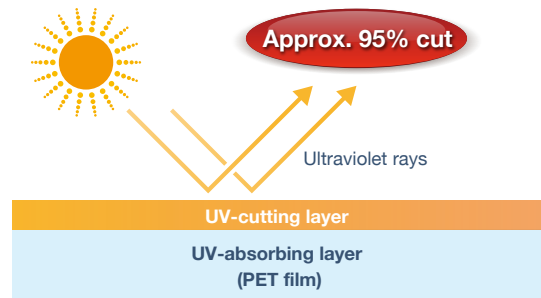

**Vibration and shock resistant**

Since the structure of the front panel has been reinforced with a metal housing, the rugged model can be used in environments that are subject to vibration or shock, such as construction equipment or snow plows.



**GT25 rugged model external appearance [front face/rear face]**



**1 GOT front face**

The metal enclosure increases resistance against vibration and shock. Ultraviolet rays are cut by approximately 95% (370 nm). Also comply with IP66F and IP67F ratings.

**2 Ethernet interface (2 ports)**

Use Ethernet to simultaneously connect up to four types of industrial devices from different manufacturers. CC-Link IE Field Network Basic compatible devices can also be connected.

**3 RS-422/485 interface**

Connect to various industrial devices and barcode readers.

**4 RS-232 interface**

Connect to various industrial devices, barcode readers and serial printers.

**5 Sound output interface (φ3.5 minijack)**

Output sound by connecting φ3.5 stereo mini-plug (3-prong).

**6 USB interface: host (USB-A)**

Transfer project data or read the data (logging data, etc.) to or from the GOT using the USB memory. A USB mouse, keyboard, barcode reader\*, or RFID reader\* can also be connected.

\* USB keyboard (HID) compatible model only

**7 USB interface: device (USB Mini-B)**


Connect to a personal computer and transfer data.

**8 SD memory card interface**

Save large volumes of data, including alarms and logging data.

**9 Wireless LAN communication unit interface**

Install a wireless LAN communication unit.

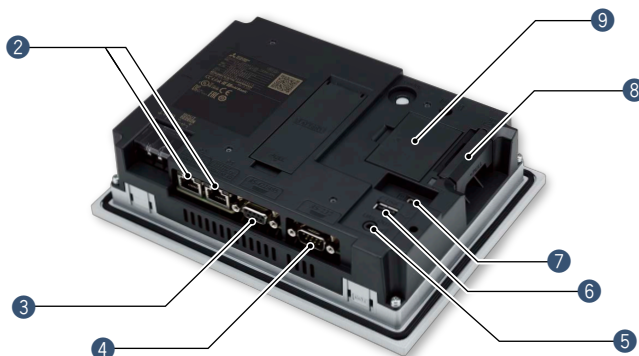



# GT25 open frame model

A new style of GOT2000



For the details of the GT25 open frame model, please refer to the Graphic Operation Terminal GOT2000 Series White & Open catalog (L(NA)08414ENG).

### GOT complements machine design

Installing the GOT2000 from the back side of the control panel complements the machine-design surface. Using a stainless-look environmental protection sheet allows the touch panel to blend into the production machines for the pharmaceutical and food industries.

| Item                | Specifications  |
|---------------------|---|
| Display             | 8.4"/10.4"/12.1", TFT color LCD, 65536 colors   |
| Resolution          | SVGA, VGA   |
| Backlight           | White LED   |
| User memory         | Memory for storage (ROM): 32 MB<br>Memory for operation (RAM): 80 MB  |
| Standard interface  | Ethernet, RS-232, RS-422/485<br>USB host (USB-A): 1 channel (USB 2.0 (High-Speed 480 Mbps))<br>USB device (USB Mini-B): 1 channel (USB 2.0 (High-Speed 480 Mbps))<br>SD memory card interface |
| Extension interface | CC-Link IE TSN <b>NEW</b> , CC-Link IE Control, CC-Link IE Field, CC-Link, bus, MELSECNET/H   |
| Side interface      | For installing a wireless LAN communication unit  |

### IP67F protection

To conform to IP67F, attach an environmental protection sheet.\* GOT can be operated with wet hands, wiped with a damp cloth, and washed with water.

\* Note that the structure does not guarantee protection in all users' environments. The GOT may not be used in certain environments where it is subjected to splashing oil or chemicals for a long period of time or soaked in oil mist.



### Suitable for pharmaceutical and food industries

Flush surface without any gaps and grooves prevents dust, dirt, and debris from accumulated on the edge.





■ GT25 open frame model external appearance [front face/rear face]



1 Touch panel

Using an environmental protection sheet (optional or prepared by the users) is required.

2 Unit installation fitting

Fittings to install GOT to a panel are included.

3 Extension interface

Communication and option units can be installed.

4 Ethernet interface

Use Ethernet to simultaneously connect up to four types of industrial devices from different manufacturers. CC-Link IE Field Network Basic compatible devices can also be connected.

5 RS-232 interface

Connect to various industrial devices, barcode readers and serial printers.

6 RS-422/485 interface

Connect to various industrial devices and barcode readers.

7 Side interface

Install a wireless LAN communication unit.

8 SD memory card interface

Save large volumes of data, including alarms and logging data.


9 USB interface: device (USB Mini-B)

Connect to a personal computer and transfer data.

10 USB interface: host (USB-A)

Transfer project data or read the data (logging data, etc.) to or from the GOT using the USB memory. A USB mouse, keyboard, barcode reader\*, or RFID reader\* can also be connected.

\* USB keyboard (HID) compatible model only

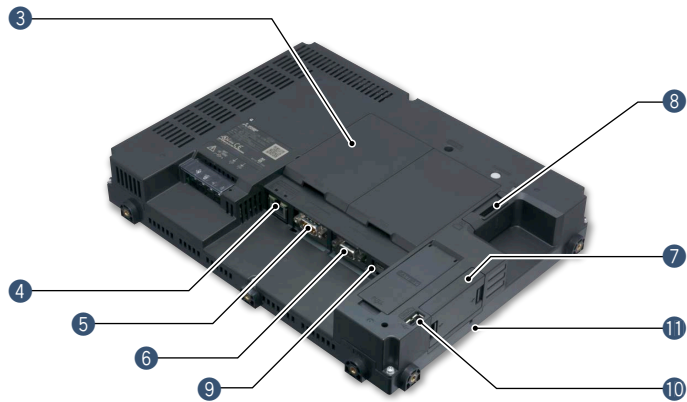

11 POWER LED

Check the power supply status.

■ Easy installation

Adjustable to various panels


The installation fitting is adjustable from 1.5 mm to 4 mm of the control panel thickness. GOT can adjust the difference of the control panel thickness. Vertical installation is also available.

Designed for safe installation

The edge of the touch panel is protected to prevent damage to the touch panel or injury by touching the sharp edge. It is possible to safely install the GOT.


Dedicated installation fittings

Attach appropriate installation fittings (vertical/horizontal) depending on the installation orientation.

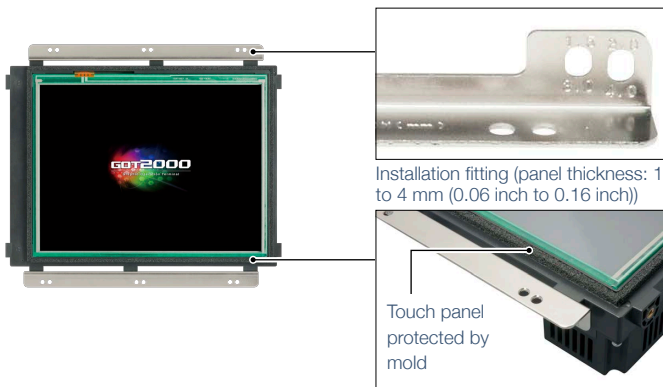

Designed for safe installation

Installation instructions

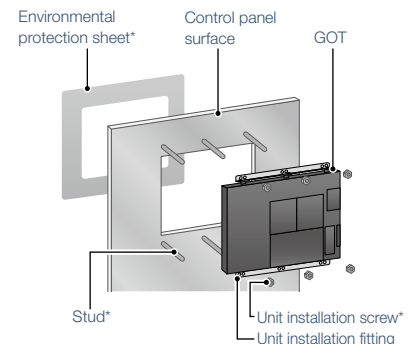

\* An environmental protection sheet (optional or prepared by the users), studs and screws (prepared by the users) are required separately.

# GT23 model

Unchallenged cost performance



### A wide variety of specifications suit every system design


Communication interfaces such as Ethernet, RS-232, RS-422/485, USB host/device and SD memory card are standard features. Advanced interactive features such as data logging, multi-channel communication, and FA transparent function are supported.

| Item               | Specifications  |
|--------------------|---|
| Display            | 8.4"/10.4", TFT color LCD, 65536 colors   |
| Resolution         | VGA   |
| Backlight          | White LED   |
| User memory        | Memory for storage (ROM): 9 MB<br>Memory for operation (RAM): 9 MB  |
| Standard interface | Ethernet, RS-232, RS-422/485<br>USB host (USB-A): 1 channel (USB 1.1 (Full-Speed 12 Mbps))<br>USB device (USB Mini-B): 1 channel (USB 1.1 (Full-Speed 12 Mbps))<br>SD memory card interface |

### Use the System Launcher function and quickly check the system status!


A graphical system configuration diagram indicates module statuses. When you touch a module the extended function list is shown and you can carry out maintenance work efficiently.

#### System configuration diagram

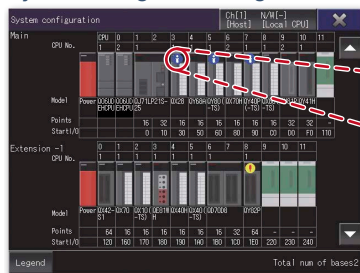

Icons show the module status. You can check the module with an error at a glance.

#### Extended functions menu

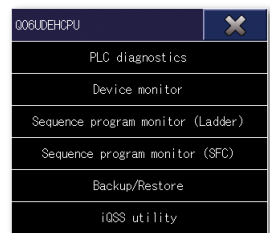

■ **GT23 model external appearance [Standard model: front face/rear face]**



**1 Simple design**

The simple design with a linear motif is sleek and complements any machine design.

**2 Flat body**

The front flat screen is easy to clean. (USB interface is on the back.)

**3 Ethernet interface**

Use Ethernet to simultaneously connect up to two types of industrial devices from different manufacturers. CC-Link IE Field Network Basic compatible devices can also be connected.

**4 RS-232 interface**

Connect to various industrial devices, barcode readers and serial printers.

**5 RS-422/485 interface**

Connect to various industrial devices and barcode readers.

**6 USB interface: device (USB Mini-B)**

Connect to a personal computer and transfer data.


**7 USB interface: host (USB-A)**

Transfer project data or read the data (logging data, etc.) to or from the GOT using the USB memory. A USB mouse, keyboard, barcode reader\*, or RFID reader\* can also be connected.

\* USB keyboard (HID) compatible model only


**8 SD memory card interface**

Save large volumes of data, including alarms and logging data.

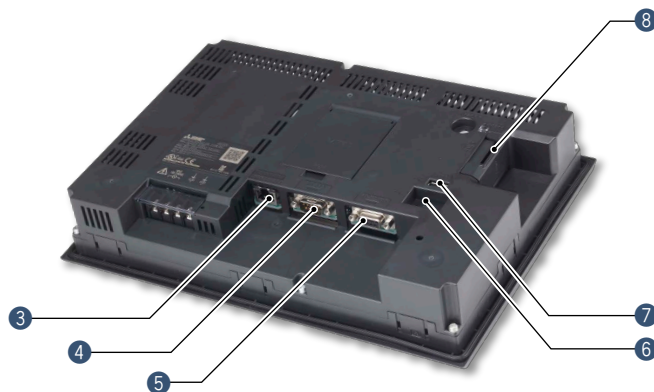

**Easily collect log data and display it in graphs and lists**

Use the GOT to collect data from the programmable controller and temperature controllers. The data can be displayed in graphs and lists. It can also be exported to a personal computer for further analysis. The logging data can be saved in the built-in SRAM even if the power fails.

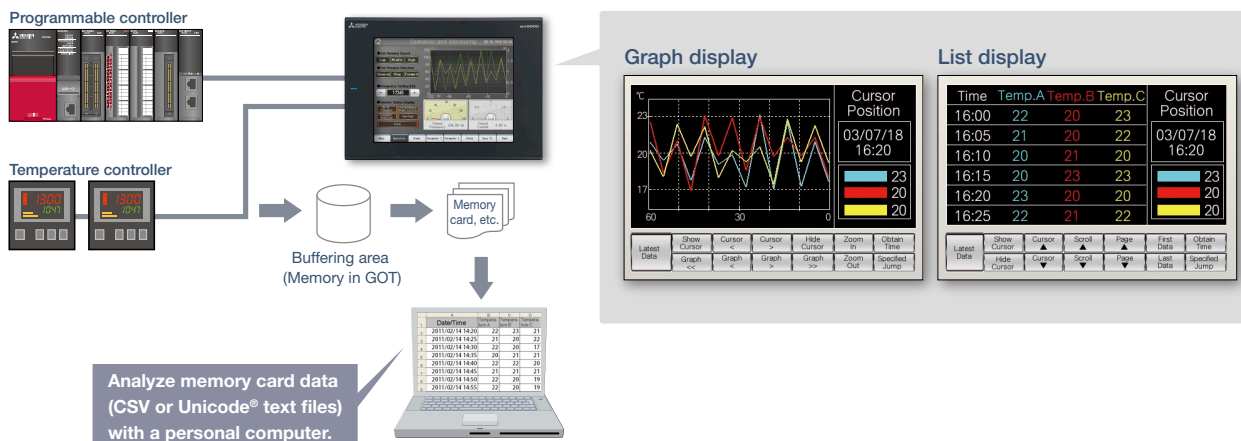

For details

Concept movie



# GT21 wide model

Expands possibilities of GT21 models

2

Hardware



Smart silver



Cool black



For the details of GT21 wide models, please refer to the Graphic Operation Terminal GOT2000 Series Wide Model catalog (L(NA)08461ENG).

### The highest resolution screen in the GT21 models, with various built-in interfaces

The GOT2000 wide models are available in a choice of silver and black. In addition to the high resolution display, 65536 colors of LCD improves quality of screen display.

The first GT21 model with the USB host enables you to connect a USB mouse and keyboard, or transfer data using a USB memory. In addition, Ethernet printers can be used.

| Item               | Specifications  |
|--------------------|---|
| Display            | 7" widescreen, TFT color LCD, 65536 colors  |
| Resolution         | WVGA  |
| Backlight          | White LED   |
| User memory        | Memory for storage (ROM): 15 MB   |
| Standard interface | Ethernet, RS-232, RS-422/485<br>USB host (USB-A): 1 channel (USB 1.1 (Full-Speed 12 Mbps))<br>USB device (USB Mini-B): 1 channel (USB 1.1 (Full-Speed 12 Mbps))<br>SD memory card interface |

### Widescreen displays large amounts of information

High resolution WVGA screen has sufficient display area for long alarm messages.

5 times higher resolution greatly increases expressiveness

Standard GT1055-Q

QVGA 320 × 240 dots



Wide GT2107-W

WVGA 800 × 480 dots



**Remote monitoring provides wide access to application**

Remote monitoring with the VNC server function is now available on GT21. By remotely connecting to GOT from personal computer or tablet, you can operate, monitor production equipment and connect to system devices.

\* GT2107-W only among GT21 models.



**Enhanced graphics**

Outline fonts can now be used on GT21 model. Antialiasing smooths out jagged text edges and displays clear characters, offering improved visibility of screen display.

\* GT2107-W only among GT21 models.

**Standard** 16dot HQ Gothic

Happy

**Wide** Outline Gothic (antialiasing enabled)

Happy

Clear characters improves visibility

**GT21 wide model external appearance [front face/rear face]**



**1 USB interface: device (USB Mini-B)**

Connect to a personal computer and transfer data.

**2 USB interface: host (USB-A)**

Transfer project data or read the data (logging data, etc.) to or from the GOT using the USB memory. A USB mouse, keyboard, barcode reader\*, or RFID reader\* can also be connected.

\* USB keyboard (HID) compatible model only

**3 Ethernet interface**

Use Ethernet to simultaneously connect up to two types of industrial devices from different manufacturers. CC-Link IE Field Network Basic compatible devices can also be connected.

**4 RS-422/485 interface**


Connect to various industrial devices and barcode readers.

**5 RS-232 interface**

Connect to various industrial devices, barcode readers and serial printers.

**6 SD memory card interface**

Save large volumes of data, including alarms and logging data.

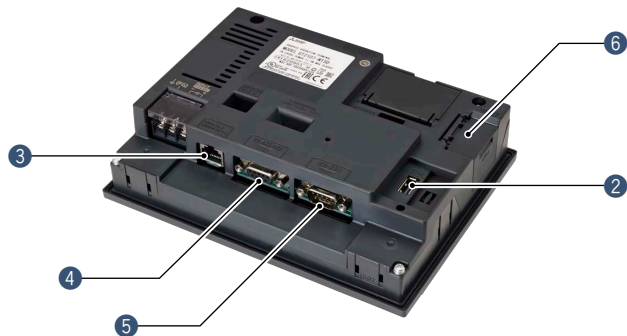

# GT21 model

## ■ GT2104-R

Compact model with exciting possibilities



### Widescreen type compact model!

High resolution, 480 × 272 dot display realized in a compact body!


| Item               | Specifications   |
|--------------------|--|
| Display            | 4.3", TFT color LCD, 65536 colors  |
| Resolution         | 480 × 272 dots   |
| Backlight          | White LED  |
| User memory        | Memory for storage (ROM): 9 MB   |
| Standard interface | Ethernet, RS-232, RS-422/485<br>USB device (USB Mini-B):<br>1 channel (USB 1.1 (Full-Speed 12 Mbps))<br>SD memory card interface |

### Wide screen display fits a lot of data!

The wide model shows a large amount of information on a 65536 color display.



**4.7 inch** Screen size: 4.7 inch  
Resolution: 320 × 240  
Display color: 256 colors

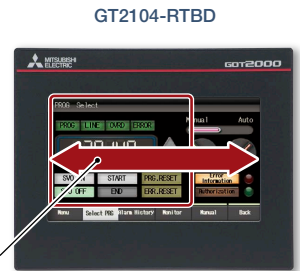

**4.3 inch** Screen size: 4.3 inch  
Resolution: 480 × 272  
Display color: 65536 colors



Resolution

1.5 times wider in horizontal direction

## ■ GT2104-R external appearance [front face/rear face]



### 1 Simple design

The simple design with a linear motif is sleek and complements any machine design.

### 2 Flat body

The front flat screen is easy to clean. (USB interface is on the back.)

### 3 USB interface: device (USB Mini-B)

Connect to a personal computer and transfer data.

### 4 Ethernet interface


Use Ethernet to simultaneously connect up to two types of industrial devices from different manufacturers. CC-Link IE Field Network Basic compatible devices can also be connected.

### 5 RS-422/485 interface

Connect to various industrial devices and barcode readers.

### 6 RS-232 interface

Connect to various industrial devices, barcode readers and serial printers.

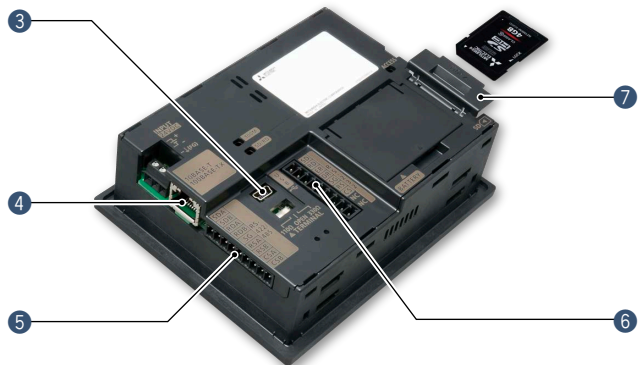

### 7 SD memory card interface

Save large volumes of data, including alarms and logging data.

■ **GT2103-PMBD**

**Small screen, big possibilities**




**Small, compact, easy to operate!**

Ethernet built into a compact body!  
The intuitively understandable 5-color backlight offers choices of backlight color and backlight blink according to machine operation state.

| Item                | Specifications   |
|---------------------|--|
| Display             | 3.8", monochrome (black/white), 32 shade grayscale TFT LCD display                           |
| Resolution          | 320 × 128 dots   |
| Backlight           | 5-color LED (white, green, pink, orange, red)  |
| User memory         | Memory for storage (ROM): 3 MB   |
| Standard interface  | Ethernet, RS-422/485<br>USB device (USB Mini-B):<br>1 channel (USB 1.1 (Full-Speed 12 Mbps)) |
| Extension interface | For installing an SD memory card unit  |

**High-definition LCD**

GT2103 is equipped with an easy to see, compact high-resolution TFT LCD with 32 gray scales.

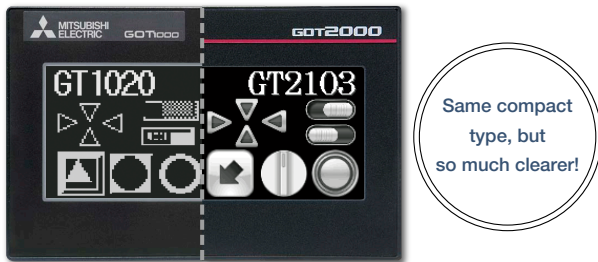

**GT1020**  
Monochrome  
Monochrome (black/white) STN LCD

**GT2103**  
Monochrome TFT LCD  
with 32 gray scales

\* Comparison of GT1020 and GT2103-P


**SD memory card unit is available!**

SD memory cards can be used when the optional SD memory card unit is attached.



SD memory card unit  
**GT21-03SDCD**  
Separate SD memory card is required.

■ **GT2103-PMBD external appearance [rear face]**

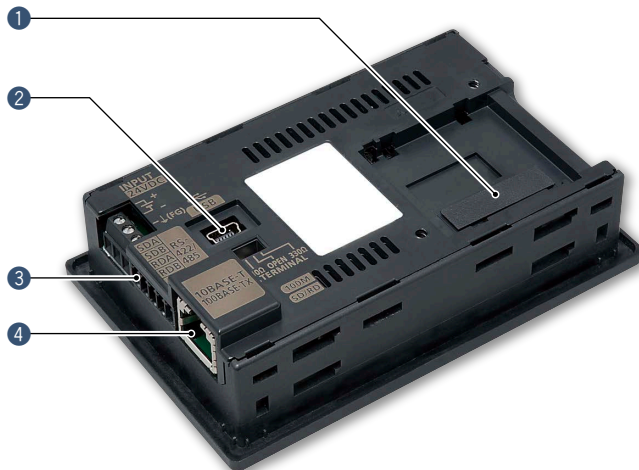


- 1 SD memory card unit interface**  
Connect an optional SD memory card unit and save data including alarms and logging data.  
\* Excluding GT2103-PMBLS
- 2 USB interface: device (USB Mini-B)**  
Connect to a personal computer and transfer data.
- 3 RS-422/485 interface**  
Connect to various industrial devices and barcode readers.  
\* Excluding GT2103-PMBDS2  
\* RS-422 on GT2103-PMBLS (dedicated to FX connection)
- 4 Ethernet interface**  
Use Ethernet to simultaneously connect up to two types of industrial devices from different manufacturers. CC-Link IE Field Network Basic compatible devices can also be connected.  
\* GT2103-PMBD only

For details

Concept movie

# GOT SIMPLE

Simple models with various user friendly features

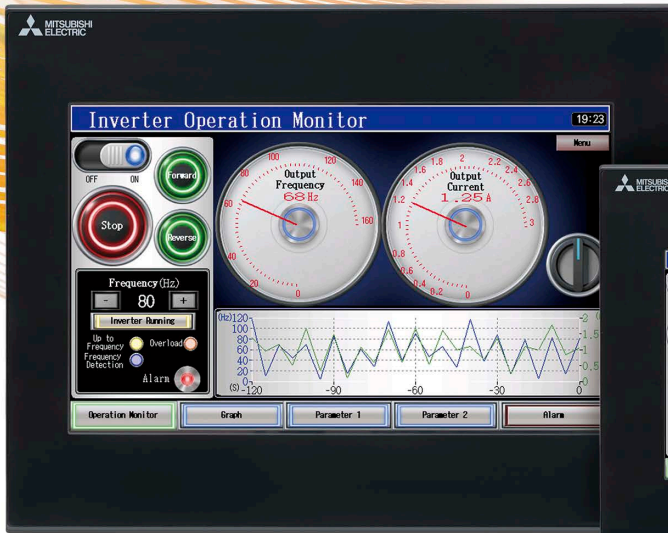

10" widescreen GS2110-WTBD



7" widescreen GS2107-WTBD

### Enhanced basic functions



WVGA screen has sufficient display area for long alarm messages or wide trend graph display.

Not only Mitsubishi Electric industrial devices, but also third-party industrial devices can be connected to enable monitoring of the equipment. In addition, Ethernet printers can be used. **NEW**

| Item               | Specifications  |
|--------------------|---|
| Display            | 7"/10", TFT color LCD, 65536 colors   |
| Resolution         | WVGA  |
| Backlight          | White LED   |
| User memory        | Memory for storage (ROM): 9 MB  |
| Standard interface | Ethernet, RS-232, RS-422<br>USB device (USB Mini-B): 1 channel (USB 1.1 (Full-Speed 12 Mbps))<br>SD memory card interface |

### Easily exchange data with FTP


By using GOT, production results and alarm logs can be stored in an SD memory card of the GOT (FTP client) and sent to a personal computer (FTP server). The GOT can also receive the production instruction data from the personal computer.

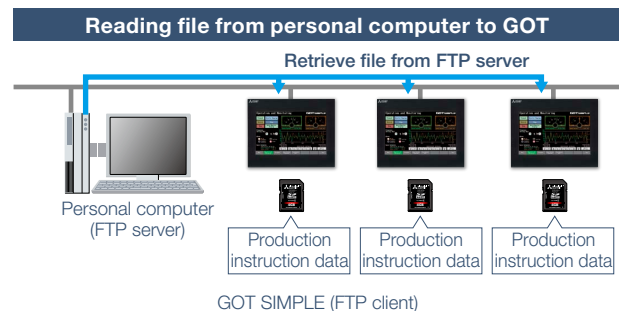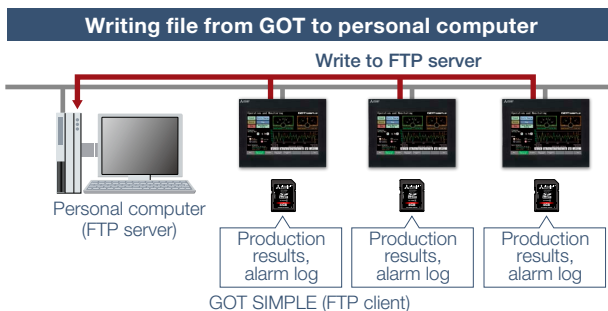




### Security with password management

Setting the operation authority and the viewing authority per operator achieves “enhanced security” and “prevention of improper operation”. Operator authentication can be performed at startup and when the screen is switched.

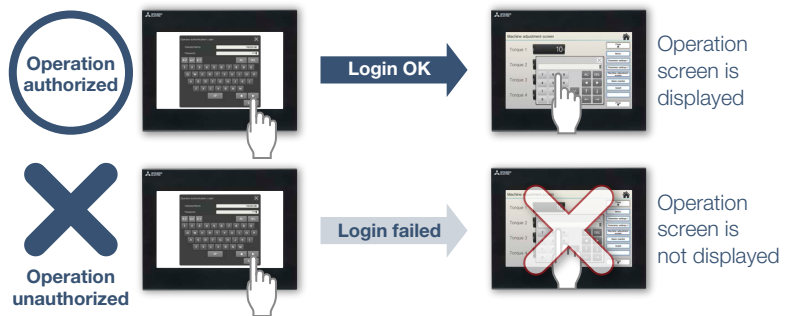

### IP filter function

Registering the IP address of the device which can access the GOT restricts the access from unauthorized devices. Registering the IP address of the device to prohibit access is also possible.

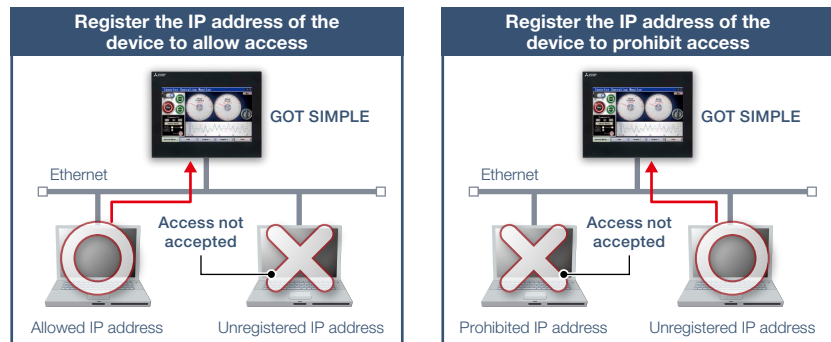

### Backup important programs for safety in case of an error

Sequence programs can be replaced even without a personal computer. When the programs and parameters are backed up in GOT\*1, the data and machine operation can instantly be restored even if an unexpected failure occurs.

\*1 A separate SD memory card is required.

\*2 The target connection devices are QCPU, LCPU, FX5UCPU and FXCPU.



## ■ GOT SIMPLE Series external appearance [front face/rear face]



#### 1 GOT front face

IP65F front face protection is useful for various production machines and facilities.

#### 2 Ethernet interface

Use Ethernet to simultaneously connect up to two types of industrial devices from different manufacturers. CC-Link IE Field Network Basic compatible devices can also be connected.

#### 3 RS-232 interface

Connect to various industrial devices, barcode readers and serial printers.

#### 4 RS-422 interface


Connect to various industrial devices and barcode readers.

#### 5 USB interface: device (USB Mini-B)

Connect to a personal computer and transfer data.

#### 6 SD memory card interface

Save large volumes of data, including alarms and logging data.

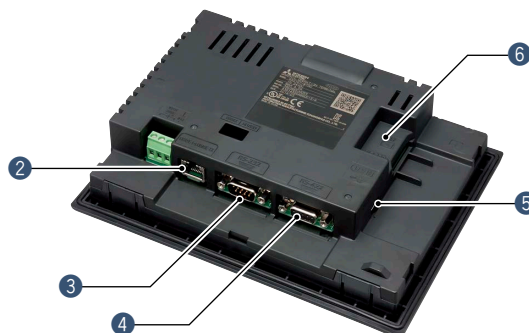



GOT2000 compatible HMI software  
**GT SoftGOT2000**

Turn your personal computer or panel computer into GOT2000




For the details of GT SoftGOT2000, please refer to the GT SoftGOT2000 Solutions catalog (L(NA)08606ENG).

License key (for USB port)

### High affinity with GOT2000 Series

Functions equivalent to the GOT2000 Series can be used in GT SoftGOT2000. The project data created with HMI/GOT Screen Design Software GT Works3 can be used by converting it into the GT SoftGOT2000 data.

► For the supported functions, see “Function list” on page 148.

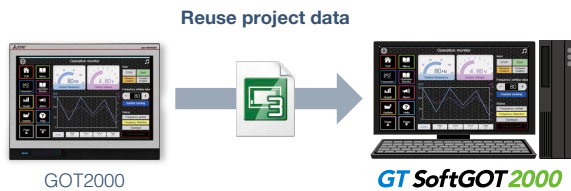

### Same operability with GOT2000 Series

In addition to touch operations, long press can also be used. Using momentary switches and delay settings enables safe operation and improves operability.



### MI3000 with GT SoftGOT2000


► GT SoftGOT2000 is preinstalled on MELIPC MI3000. For the details, see page 184.

### System configurations

GT SoftGOT2000 can be used in single channel connection that monitors one channel and in multi-channel connection that enables monitoring up to four channels of industrial devices. Select the connection type to match your system configuration.


#### Single channel connection (GT SoftGOT2000)

Connectable in all communication types that are supported by GT SoftGOT2000.

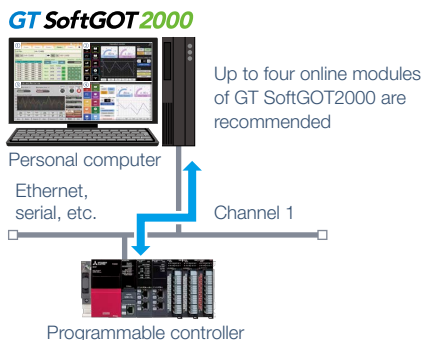

#### Multi-channel connection (GT SoftGOT2000 (Multi-channel)) **NEW**


Multi-channel connection is supported in Ethernet connection, connection with OPC UA servers, and microcomputer connection only. Up to four channels of industrial devices can be monitored on a single module of GT SoftGOT2000.

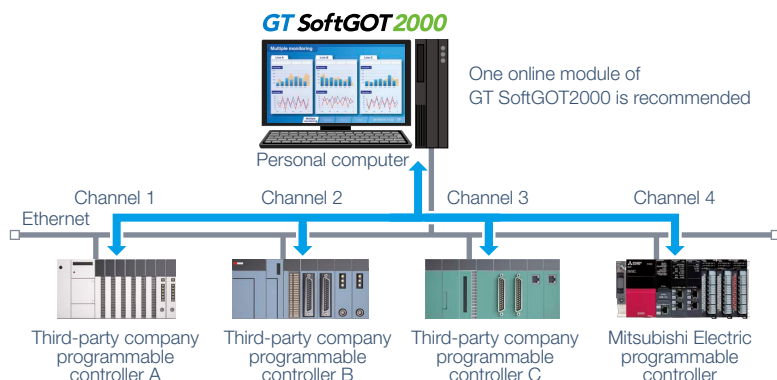

**Connectable to OPC UA servers NEW**


GT SoftGOT2000 accesses an OPC UA server as an OPC UA client.\*1

\*1 To connect to OPC UA servers, installation of MELSOFT GT OPC UA Client software is required. To use the OPC UA client connection, use Windows® 7 OS or later. For more information about how to obtain the software, please contact your local sales office.

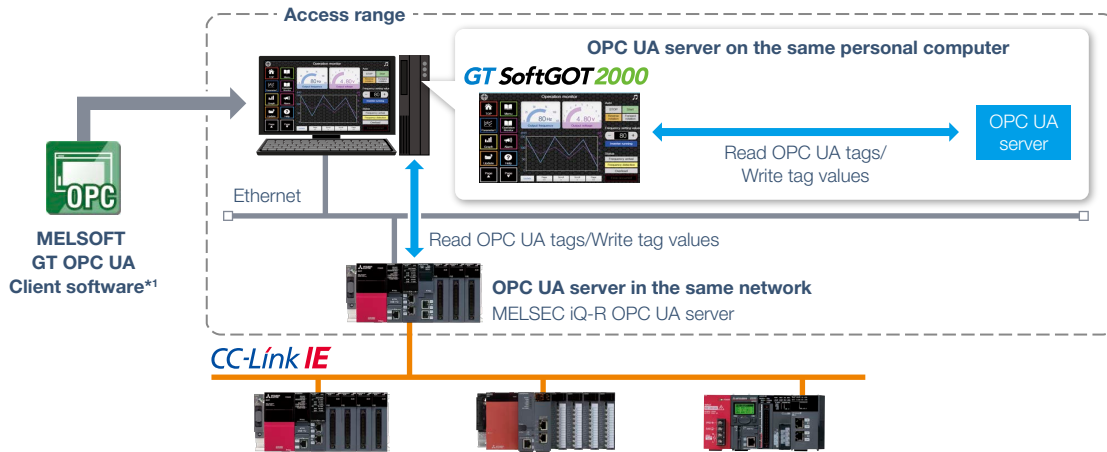

**Edgexross interaction**

Edgexross is the open software platform in Japan in the edge computing field that coordinates factory automation and IT systems. Edgexross analyzes and diagnoses data near the shop floor and enables real time feedback to the production, data collection, and sending or receiving data to/from facilities and equipment regardless of vendors and network types. The data collected by Edgexross can be easily visualized and analyzed using various functions such as trend graph display on GT SoftGOT2000.

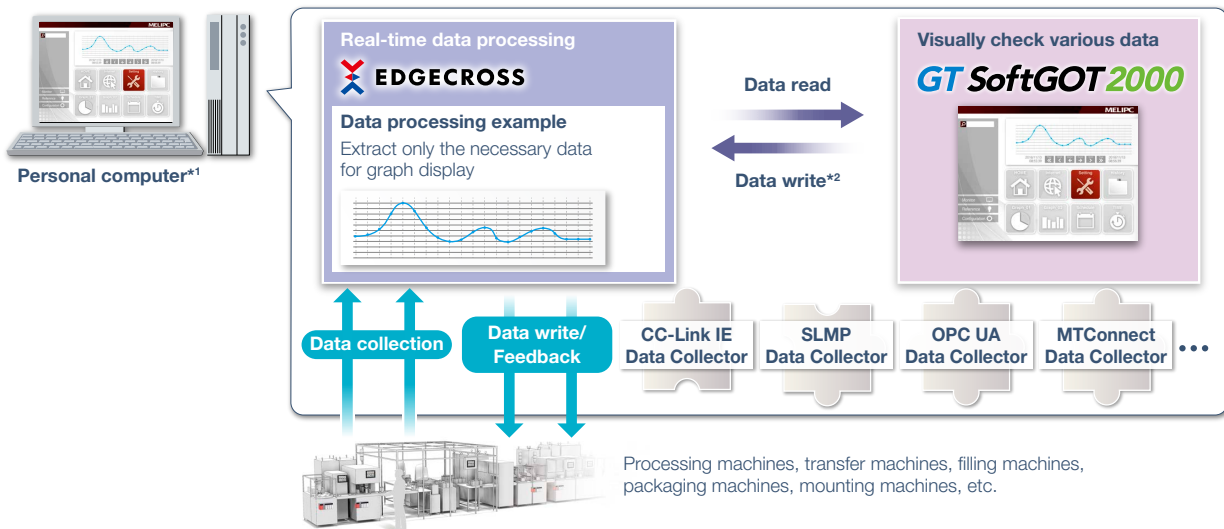

\*1 It is required to install Edgexross Basic Software, Data Collector, and GT SoftGOT2000 on a personal computer.

\*2 To write data from GT SoftGOT2000 to Edgexross Basic Software, installation of MELSOFT GT OPC UA Client software is required separately.

**Flexible resolution setting**


The users can flexibly specify resolutions to change the screen size depending on the information device to use.



**The same screens as the on-site GOT can be monitored on an office computer (SoftGOT-GOT link function)**

If GOT is used at the shop floor, GT SoftGOT2000 reads project data from the GOT via Ethernet, and uses the project data to monitor connected devices. There is no need to create project data dedicated for GT SoftGOT2000 and quick remote monitoring of industrial devices is enabled via Ethernet. Since GT SoftGOT2000 can also display a different screen from the one shown on the GOT at the shop floor, monitoring on GT SoftGOT2000 does not affect shop floor operation. In addition, exclusive control of authorization is provided as standard to prevent simultaneous operations and ensure safe operation.


\* SoftGOT-GOT link function is supported by GT27 and GT25. Not supported by GT23, GT21, and GS21.

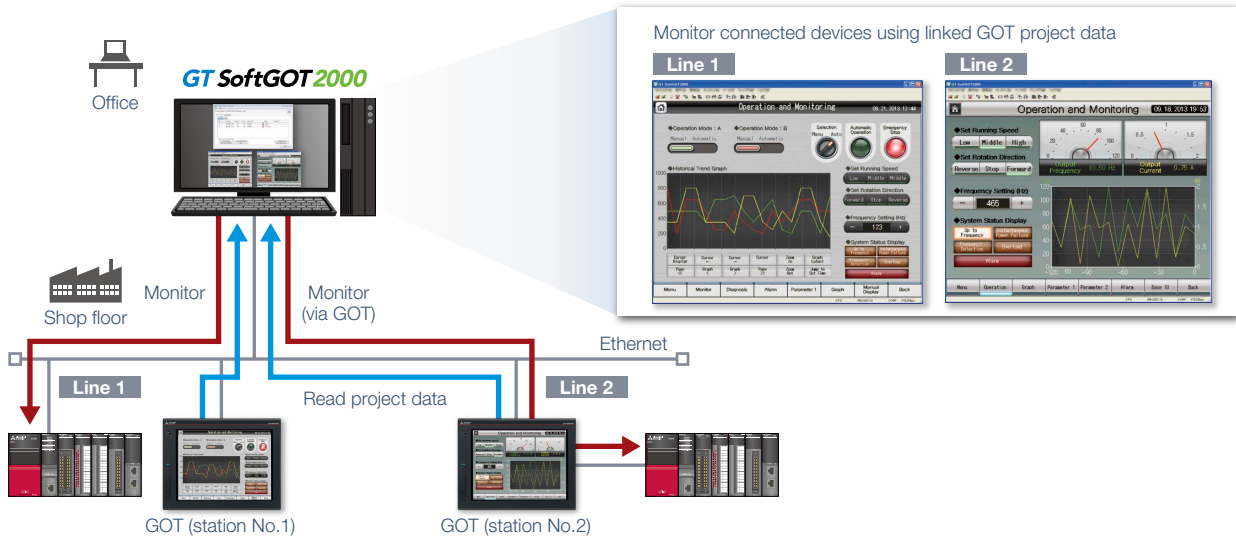

**GT SoftGOT2000 Commander makes monitoring work efficient**

When using the SoftGOT-GOT link function, GT SoftGOT2000 Commander can be used to collectively check the monitoring status of GT SoftGOT2000 modules, and start or stop monitoring of the modules.

\* GT SoftGOT2000 Commander is a software included in GT Works3, the same as GT SoftGOT2000.

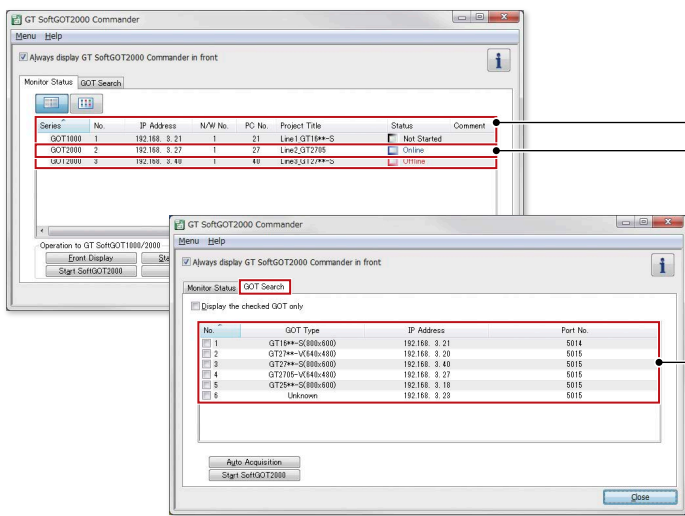

**Effective usage when there are multiple GOTs that use the SoftGOT-GOT link function**

The list shows which GT SoftGOT2000 module is linked to which GOT, and each monitoring status. Since it is recommended to use up to four modules of GT SoftGOT2000 online simultaneously, after starting up 20 modules of the software, up to four modules can be set online and thus large-scale systems can be monitored efficiently.

**Managing start/stop of monitoring is easy**

Double-click the Comment column of each line to switch between Online and Offline, or between Not started and Online (Offline).  
 - Online: during monitoring  
 - Offline: stopped monitoring

**Automatically search for GOTs to monitor**

GOTs that can use the SoftGOT-GOT link function can be searched.


### Building advanced systems

Windows® applications can be started up from GT SoftGOT2000.

The data of GT SoftGOT2000 internal devices can be read and written from the user-created applications. Interaction between GT SoftGOT2000 and user-created applications enables the users to control or manage data by own method.

\* GD, GS, GB, SGB, or SGD internal devices can be used.

\* For the supported applications, please refer to the GT SoftGOT2000 Version1 Operating Manual.

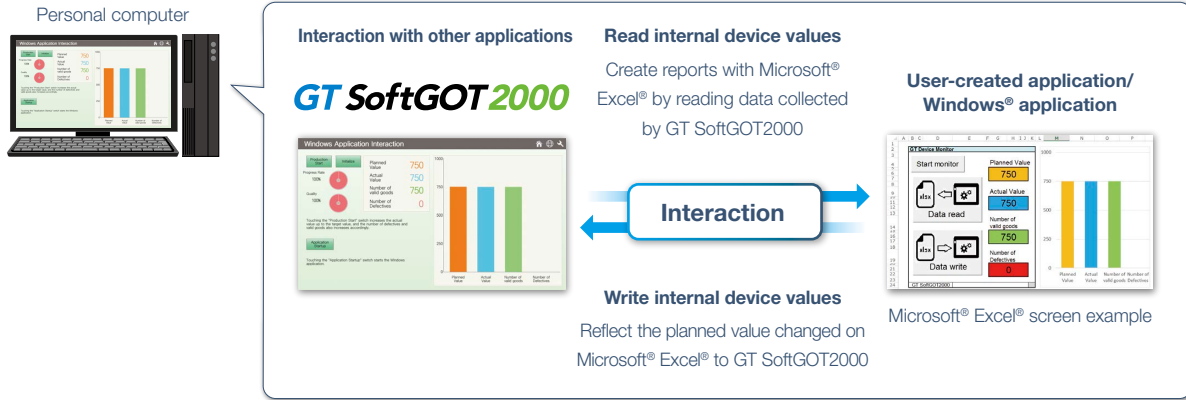

### Starting up other applications with a touch switch on the GT SoftGOT2000 screen

By creating a touch switch on the GT SoftGOT2000 screen in advance, it is possible to start other applications (such as Microsoft® Excel®) while monitoring GT SoftGOT2000. Interaction between equipment monitoring and personal computer applications makes monitoring work efficient.

#### Starting up Microsoft® Excel®


The data collected by GT SoftGOT2000 can be checked in a graph quickly.



#### Starting up GX Works3

MI3000 at the shop floor monitors sequence programs without bringing a laptop computer.

\* GX Works3 should be installed in advance.

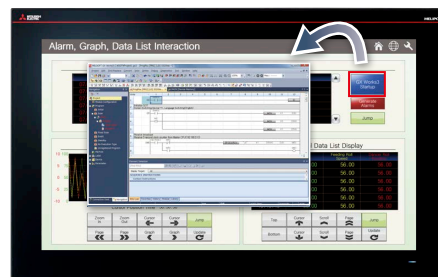

#### MI3000 with GT SoftGOT2000

► For the details of MI3000, see page 184.

#### Automatic startup

By using scripts, other applications can be started automatically by setting conditions such as when an error occurs or specific device values. (GS devices are used to control the function.)

# GOT Solutions INDEX



## GOT Smart Web-based Remote Solutions 32

|   |    |  |    |
|---|----|--|----|
| • GOT Mobile function   | 34 | • VNC server function                                    | 37 |
| • iQ Monozukuri ANDON <span style="background-color: #0070C0; color: white; padding: 2px;">Upgraded</span>                | 35 | • SoftGOT-GOT link function                              | 38 |
| • iQ Monozukuri Process Remote Monitoring <span style="background-color: #C00000; color: white; padding: 2px;">NEW</span> | 36 | • Remote personal computer operation function (Ethernet) | 39 |

## GOT Easy Drive Control (Servo) Interactive Solutions 40

|  |    |  |    |
|--|----|--|----|
| • Drive recorder function  | 44 | • Servo amplifier monitor function   | 51 |
| • Servo amplifier graph function <span style="background-color: #C00000; color: white; padding: 2px;">NEW</span> | 45 | • Intelligent module monitor function  | 52 |
| • Machine diagnosis function   | 46 | • R motion monitor function/<br>Q motion monitor function  | 52 |
| • Servo amplifier life diagnosis function  | 47 | • Motion SFC monitor function  | 53 |
| • One-touch tuning function/Tuning function  | 48 | • Motion program editor function <span style="background-color: #C00000; color: white; padding: 2px;">NEW</span>         | 54 |
| • System launcher (servo network) function   | 49 | • GOT Drive Plus (paid template screens) <span style="background-color: #C00000; color: white; padding: 2px;">NEW</span> | 55 |
| • Power monitor  | 50 |  |    |
| • Alarm display function   | 50 |  |    |

## GOT Easy Drive Control (Inverter) Interactive Solutions NEW 56

|   |    |   |    |
|---|----|---|----|
| • Parameter settings (simple mode)/<br>Parameter recipe (simple backup/restoration) | 58 | • Machine diagnosis (load characteristics<br>measurement) | 60 |
| • Batch monitor   | 59 | • Inverter life diagnosis                                 | 61 |
| • Operation command   | 59 | • FA transparent  | 61 |

## GOT Easy Drive Control (Robot) Interactive Solutions 62

|   |    |
|---|----|
| • Interactive functions to support startup<br>and maintenance of robots | 62 |
|---|----|

## Sophisticated Programmable Controller Interactive Features 63

|  |    |  |    |
|--|----|--|----|
| • Sequence program monitor (SFC) function  | 63 | • FX list editor function & FX ladder monitor function | 65 |
| • Sequence program monitor (Ladder)/ Sequence program monitor (iQ-R ladder) function | 64 | • Log viewer function                                  | 66 |

## Maintenance, Troubleshooting and Diagnostics Features 67

|   |    |  |    |
|---|----|--|----|
| • Backup/Restoration function   | 67 | • Network monitor function   | 71 |
| • System launcher function <span style="background-color: #0070C0; color: white; padding: 2px;">Upgraded</span> | 68 | • Alarm function   | 72 |
| • CC-Link IE Field Network diagnostics  | 69 | • Document display function <span style="background-color: #0070C0; color: white; padding: 2px;">Upgraded</span> | 73 |
| • FA transparent function   | 70 | • GOT diagnostics function   | 74 |
| • Device monitor function   | 71 |  |    |

## Hardware Features 75

|   |    |   |    |
|---|----|---|----|
| • Compatible with environmental standards | 75 | • Multimedia function   | 78 |
| • Wireless LAN communication unit         | 76 | • Video display/RGB display/ Video output function <span style="background-color: #0070C0; color: white; padding: 2px;">Upgraded</span> | 79 |
| • Ethernet communication unit             | 76 |   |    |
| • Sound output function                   | 77 |   |    |

## Security & Additional System Features 80

|   |    |  |    |
|---|----|--|----|
| • Recipe function <span style="background-color: #0070C0; color: white; padding: 2px;">Upgraded</span>        | 80 | • Printing hard copies and reports <span style="background-color: #0070C0; color: white; padding: 2px;">Upgraded</span>        | 87 |
| • Recipe display (record list)  | 81 | • Base screen size expansion <span style="background-color: #C00000; color: white; padding: 2px;">NEW</span>                   | 88 |
| • Writing resource data   | 82 | • Changing comments without using GT Designer3 <span style="background-color: #C00000; color: white; padding: 2px;">NEW</span> | 89 |
| • Various security functions  | 83 | • Regarding FDA 21 CFR Part 11 support   | 90 |
| • Operation log function <span style="background-color: #0070C0; color: white; padding: 2px;">Upgraded</span> | 84 | • Logging & Graph/List <span style="background-color: #0070C0; color: white; padding: 2px;">Upgraded</span>                    | 91 |
| • Operator authentication function  | 85 | • Gesture function   | 92 |
| • Network drive <span style="background-color: #C00000; color: white; padding: 2px;">NEW</span>               | 86 |  |    |

## Data Handling Features 93

|  |    |   |    |
|--|----|---|----|
| • MES interface function   | 93 | • File transfer function <span style="background-color: #0070C0; color: white; padding: 2px;">Upgraded</span> | 95 |
| • File manager function <span style="background-color: #0070C0; color: white; padding: 2px;">Upgraded</span> | 94 |   |    |

## Interactive Features with Other Industrial Devices 96

|   |    |   |     |
|---|----|---|-----|
| • Multi-channel function/ Device data transfer function   | 96 | • Standard screen samples, Function samples | 100 |
| • Interaction function with CNCs  | 97 | • Connection samples, iQSS related samples  | 101 |
| • iQSS utility function   | 98 |   |     |
| • e-F@ctory Starter Package (free of charge sample project) <span style="background-color: #C00000; color: white; padding: 2px;">NEW</span> | 99 |   |     |


# GOT Smart Web-based Remote Solutions




4

## Monitor your worksite from a remote location

■ Can I check the equipment status from a remote location?

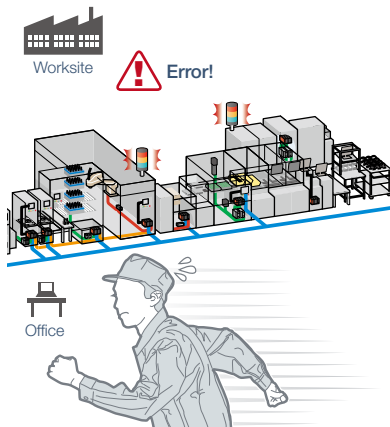

■ Can I check the situation without visiting the worksite?

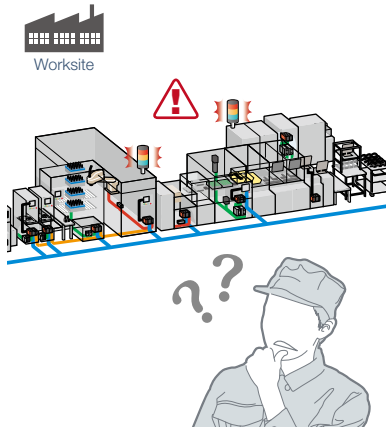

■ Can I view manuals and drawings in a personal computer in my office from the worksite?



GOT offers various remote monitoring and operation functions that can be used for various applications depending on your needs. The GOT remote solutions increase efficiency in various applications from startup, adjustment, to maintenance using mobile devices and personal computers. The GOT2000 improves visualization accessibility and reduces total cost of ownership.

### ■ Comparison of remote maintenance functions

| Item  | Monitor or operate GOT or connected devices from a personal computer or tablet |  |  |  |  | Monitor a personal computer from GOT                        |
|---|--|--|--|--|--|---|
|   | GOT Mobile function P.34   | iQ Monozukuri ANDON Upgraded P.35                    | iQ Monozukuri Process Remote Monitoring NEW P.36     | VNC server function P.37                           | SoftGOT-GOT link function P.38                   | Remote personal computer operation function (Ethernet) P.39 |
| Number of simultaneous connections from clients | ○ Maximum 5  | —  | —  | × Simultaneous connection prohibited (1 to 1 only) | ○ Maximum 7*1                                    | —   |
| Monitor a different screen on each client       | ○  | —  | —  | × Always monitor the same screen as on GOT         | △ *2   | —   |
| Drawing performance                             | ○  | ○  | ○  | △  | ○  | —   |
| Viewing application                             | Web browser (Google Chrome, Safari)  | GT SoftGOT2000 (license key required separately)     | GT SoftGOT2000 (license key required separately)     | VNC viewer (freeware*3)                            | GT SoftGOT2000 (license key required separately) | —   |
| Required options                                | License (register on GOT)  | License (register on PC), License key (attach to PC) | License (register on PC), License key (attach to PC) | License (register on GOT)                          | License key (attach to PC)                       | License (register on GOT)                                   |
| Authorization exclusive control                 | ○  | ○  | ○  | ○  | ○  | —   |
| Screen display                                  | Supported objects (touch switch, etc.)   | △ Some functions are different from GOT              | ○ Same as GOT  | ○ Same as GOT                                      | ○ Same as GOT                                    | —   |
|   | Monitoring functions (sequence program monitor, etc.)                          | × Not supported                                      | × Not supported                                      | ○ Same as GOT                                      | × Not supported                                  | —   |

\*1 When using the GOT network interaction function, multiple clients can be connected simultaneously. Note that restrictions exist depending on the connection type between GOT and the connected device.

\*2 When a GOT internal device is used as the screen switching device, each client can display a different screen.

\*3 For the VNC client software that can be used, please refer to the Technical Bulletin GOT-A-0069 on the Mitsubishi Electric Factory Automation Global website ([www.MitsubishiElectric.com/fa/](http://www.MitsubishiElectric.com/fa/)).



**Safety precautions**  
 When the GOT Mobile function, the VNC Server function, the SoftGOT-GOT link function, the remote personal computer operation function (Ethernet), or iQ Monozukuri products is used to perform remote control of control equipment, the field operator may not notice the remote control, possibly leading to an accident. In addition, a communication delay or interruption may occur depending on the network environment, and remote control of control equipment cannot be performed normally in some cases. Before using these functions to perform remote control, fully grasp the circumstances of the field site and ensure safety.


■ Use GOT remote functions effectively in your worksites



# Monitor your worksite from a remote location



## GOT Mobile function

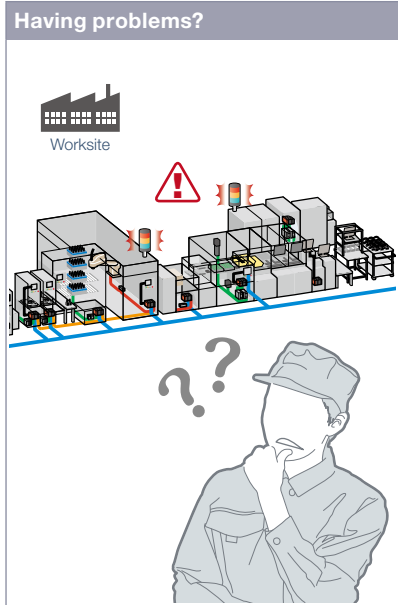

## GOT will solve your problems!


Check the status of the worksite using a web browser.



Outside of the clean room




From a remote location

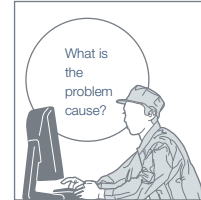

From your office

Other usage

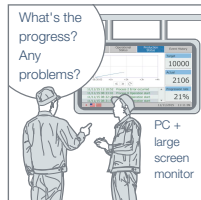

On a large screen



Up to five operators



Monitor production with one PC

Can I check the equipment status from a remote location?

Check the equipment status using a web browser on tablets from a remote location. Up to five information devices can simultaneously access a single GOT so that you can view and operate a different screen on each device.

\* Up to five clients can connect to one GOT at the same time.



### Function features

Via GOT at the worksite, connected devices can be monitored from computers and tablets in a remote location.

\* A separate license (GT25-WEBSKEY) is required.

### Safe with security and exclusive control

Exclusive control of authorization prevents accidents that might be caused by simultaneous operations in the same network. (GOT network interaction\*) Set passwords to control monitoring and operation. \*1 For the details, please refer to page 38.

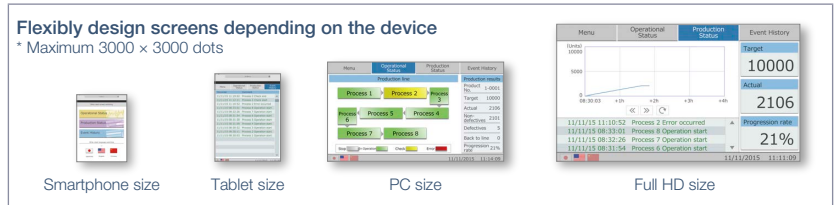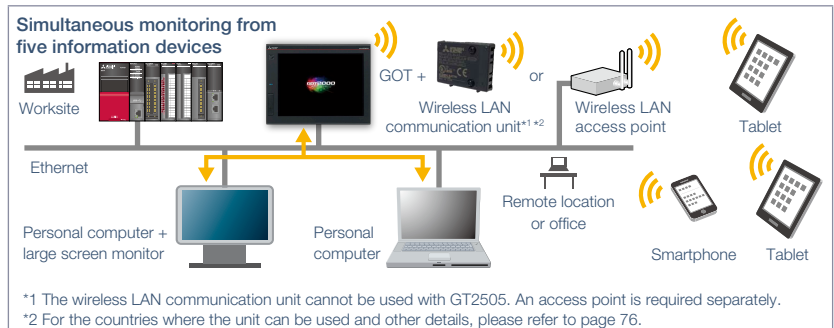

GOT2000 Series  
GOT Mobile Function  
Application Examples  
(L(NA)08464ENG).



### Specification details and restrictions

\* For the necessary option devices, please refer to the "Function list" (page 148).

- **Objects, figures, functions that can be used with the GOT Mobile function** There are some restrictions on the objects, figures, and functions that can be used on information devices such as tablets. For the details, please refer to the relevant product manual.
- **Precautions for the GOT Mobile function** Please refer to the Technical Bulletin No. GOT-A-0090 on the Mitsubishi Electric Factory Automation Global website ([www.MitsubishiElectric.com/fa/](http://www.MitsubishiElectric.com/fa/)).
- **Peripheral devices** For the VPN connection and the peripheral devices compatible with other Mitsubishi industrial devices, please contact your local sales office.

### Recommended industries

- Automotive
- SEMICON, LCD
- Electronics
- F & B
- Pharma
- Plant

### Supported GOT types

- GT27
- GT25
- GT23
- GT21
- GS21
- SoftGOT

### Supported devices

- PLC
- Servo
- Inverter
- Robot
- CNC



Support system design




Support system operation

# Implement the ANDON system easily

Upgraded


## iQ Monozukuri ANDON

### Having problems?

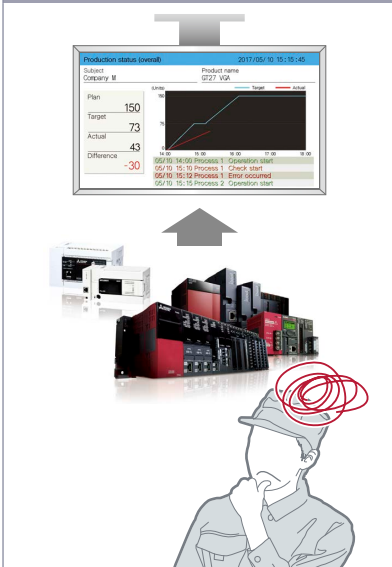

Can I implement the ANDON system at low cost and visualize the worksite?

### GOT will solve your problems!

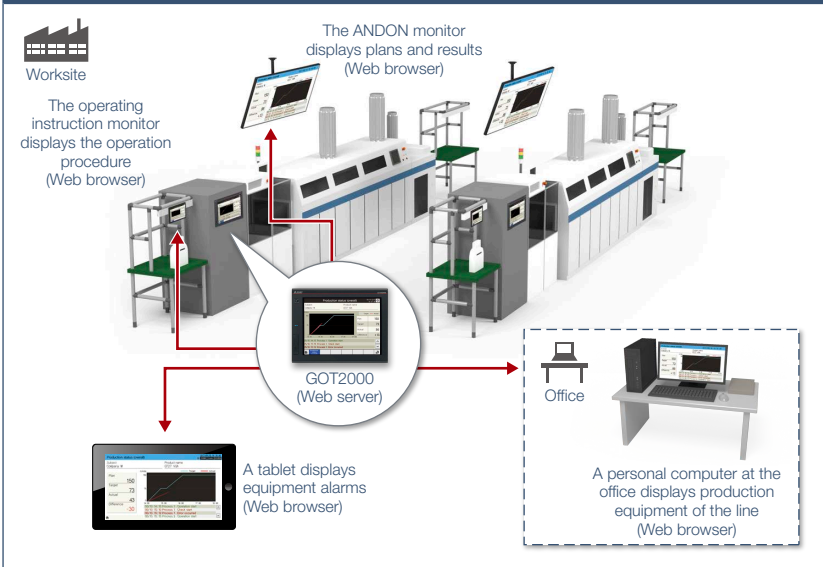

iQ Monozukuri ANDON is a simple ANDON\* package that easily enables visualization of production sites using GOT2000 and a general-purpose web browser. Information obtained from production equipment is displayed on the monitor for ANDON via GOT2000, allowing sharing of the production site information to enable visualization.

\* ANDON system visualizes information (production status, alarms) that is obtained from production equipment, sharing the information among site workers, a manager, and a maintenance personnel.

### Function features

If you have equipment that can be connected to GOT2000, an ANDON system can be configured easily. The dedicated setting tool (Contents Publisher) allows you to set/change the display of ANDON screens even without programming knowledge for configuring the ANDON system. \* iQ Monozukuri ANDON package is required separately.

### Monitoring multiple devices with DB (database) mode **NEW**

The production information of multiple lines is collected in real-time in ANDON DB (database), and displayed on the ANDON monitor by transferring the data via GOT.

Concept movie




For more details, please refer to the iQ Monozukuri ANDON catalog (L(NA)08487ENG).

### System configuration example\*1

**iQ Monozukuri ANDON package\*2**

- 1 Contents Publisher
- 2 Project file of the GOT for iQ Monozukuri ANDON (template screens)
- 3 GOT Mobile function license
- 4 License for iQ Monozukuri ANDON

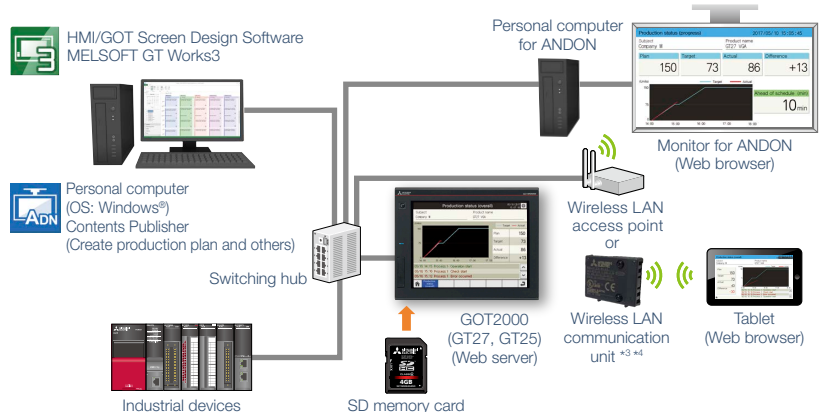

\*1 The system configuration of the DB (database) mode differs from this example. For the details, please refer to the catalog on the left.

\*2 Used by transferring to a personal computer, GOT2000 or an SD memory card.

\*3 The wireless LAN communication unit cannot be used with GT2505. An access point is required separately.

\*4 For the countries where the unit can be used and other details, please refer to page 76.

### Recommended industries

|            |              |             |
|------------|--------------|-------------|
| Automotive | SEMICON, LCD | Electronics |
| F & B      | Pharma       | Plant       |

### Supported GOT types

|      |      |         |
|------|------|---------|
| GT27 | GT25 | GT23    |
| GT21 | GS21 | SoftGOT |

### Supported devices

|     |       |          |
|-----|-------|----------|
| PLC | Servo | Inverter |
|     | Robot | CNC      |

# Easily monitor multiple devices from a remote office



NEW

## iQ Monozukuri Process Remote Monitoring

**Having problems?**

Third-party company programmable controller A

Mitsubishi Electric programmable controller

Third-party company programmable controller B

**GOT will solve your problems!**

Personal computer or MELIPC MI3000

Collected data is displayed in a list or chart

Camera and on-site GOT images are displayed

HUB

Equipment 1, Equipment 2, ..., Equipment 50

Network camera

How can I effectively use the information separately stored in each device?

Manufacturing process and productivity of the whole production can be improved by analyzing the data aggregated and visualized on GT SoftGOT2000. The operation status of the shop floor and the information such as operation logs and alarms can be collected from each equipment via an on-site GOT.

### Function features

IoT technologies can be easily introduced to the shop floor, and the information of multiple equipment can be collected, visualized, and managed collectively. The template project for GT SoftGOT2000 makes it easy to startup systems. In addition, a dedicated setting tool (Process Remote Monitoring setting tool) can be used to collectively manage (read/edit/write) the information of operators registered on on-site GOTs.



For more details, please refer to the iQ Monozukuri Process Remote Monitoring catalog (L(NA)08674ENG).

Displaying graphs

Displaying efficiency visually

GT SoftGOT2000

Displaying a list

Process Remote Monitoring setting tool

Collecting information from on-site GOTs

Writing data to on-site GOTs

Up to 50 GOTs\*1

\*1 Up to five GOTs can be managed for each license. To manage information of 50 GOTs, purchase the product including 10 licenses.

### Recommended industries

- Automotive
- SEMICON, LCD
- Electronics
- F & B
- Pharma
- Plant

### Supported GOT types

- GT27
- GT25
- GT23
- GT21\*
- GS21
- SoftGOT

### Supported devices



- PLC
- Servo
- Inverter
- Robot
- CNC

\* Supported only by the models equipped with an Ethernet port.

# Operate the GOT from a remote PC or tablet



## VNC server function

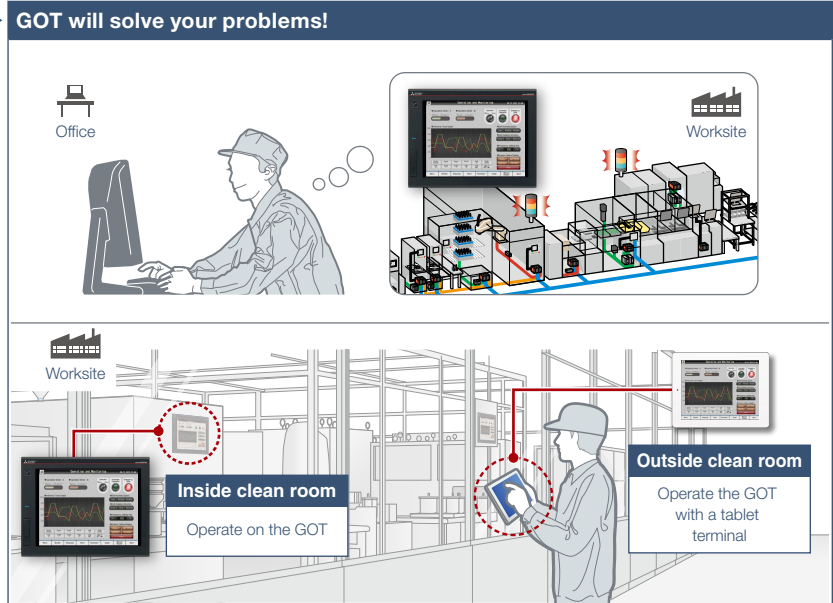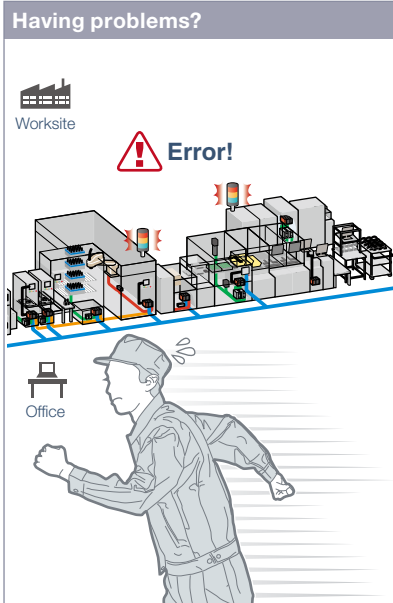

A problem occurred at the worksite in a remote location. Can I check the situation without visiting the worksite?

You do not need to visit the worksite. Monitor and operate the GOT from a remote location, and you can take corrective actions quickly.

\* One client can connect to one GOT at the same time.

### Function features

Remotely view and operate the GOT screen from information devices such as a personal computer and tablet. No dedicated screens are required.


\* A separate license (GT25-VNCSKEY) is required.  
\* Supported by GT2107-W only among GT21 models.

### Same operations as GOT

Utility functions including the sequence program monitor and the network monitor are also supported on computers and tablets.

### Safe with security and exclusive control

Exclusive control of authorization prevents accidents that might be caused by simultaneous operations in the same network. (GOT network interaction\*)  
Set passwords to control monitoring and operation. \* For the details, please refer to page 38.

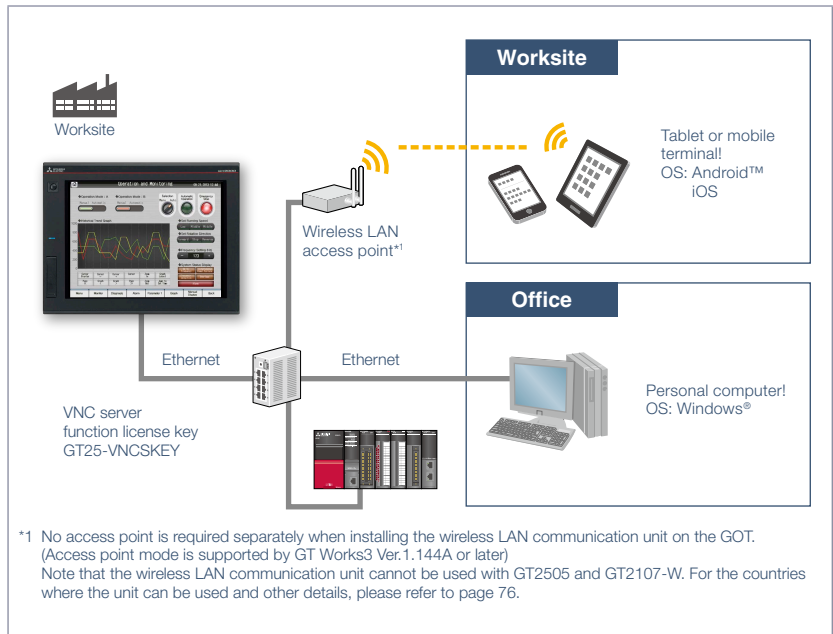

### Specification details and restrictions

\* For the necessary option devices, please refer to the "Function list" (page 148).

● **Applicable VNC client software** Please refer to the Technical Bulletin No. GOT-A-0069 on the Mitsubishi Electric Factory Automation Global website ([www.MitsubishiElectric.com/fa/](http://www.MitsubishiElectric.com/fa/)).

● **Peripheral devices** For the VPN connection and the peripheral devices compatible with other Mitsubishi Electric industrial devices, please contact your local sales office.

### Recommended industries

|            |              |             |
|------------|--------------|-------------|
| Automotive | SEMICON, LCD | Electronics |
| F & B      | Pharma       | Plant       |

### Supported GOT types

|       |      |         |
|-------|------|---------|
| GT27  | GT25 | GT23    |
| GT21* | GS21 | SoftGOT |

### Supported devices



|     |       |          |
|-----|-------|----------|
| PLC | Servo | Inverter |
|     | Robot | CNC      |

\* GT2107-W only. For the details, refer to the function descriptions above.

# Remote monitoring with SoftGOT



## SoftGOT-GOT link function

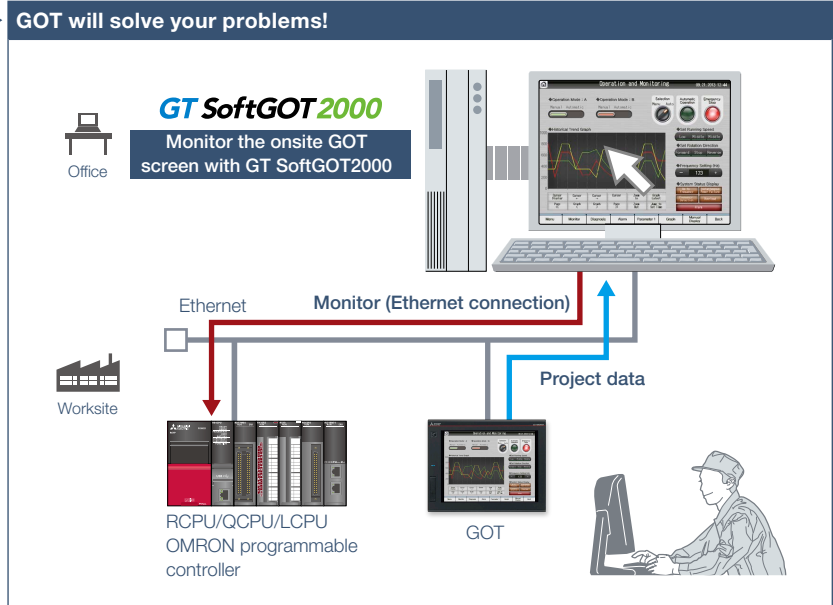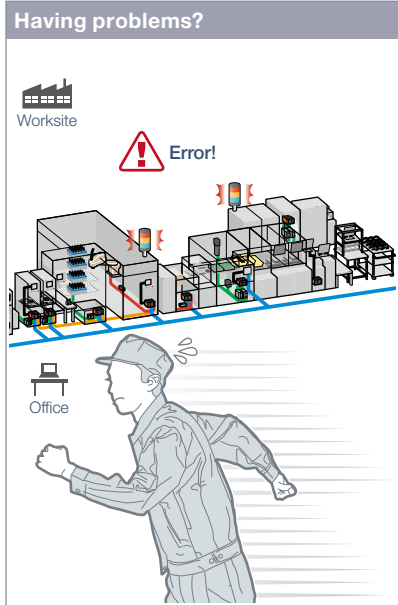

A problem occurred at the worksite. Can I check the situation in my office?

Without creating screens for remote monitoring, check the worksite on GT SoftGOT2000 by reading project data from GOT at the worksite.

### Function features


Read project data from the GOT connected to GT SoftGOT2000 via Ethernet, and you can monitor the devices that are connected to the GOT on different screens from the one shown on the GOT.

\* A separate license key (GT27-SGTKEY-U) is required.

### Safe with security and exclusive control

Exclusive control of authorization prevents accidents that might be caused by simultaneous operations in the same network. The exclusive control can be enabled/disabled for each screen. (GOT network interaction)

Set passwords to the GOT project data and prevent invalid access.

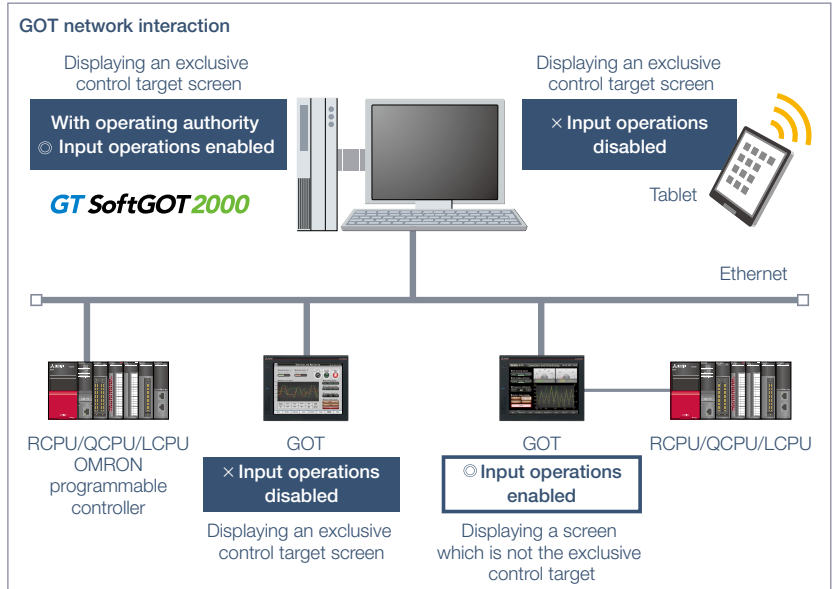

### Specification details and restrictions

\* For the necessary option devices, please refer to the "Function list" (page 148).

- **Various peripherals** RCPUCPU, QCPU, LCPU, OMRON programmable controller, MELIPC, CNC C70, robot controller (F Series (CR750-Q, CR751-Q, CR750-D, CR751-D), SQ Series (CRnQ-700 (Q172DRCPU)), SD Series (CRnD-700), FR Series (CR800-Q (Q172DSRCPU)))
- **Functions that can be used in GT SoftGOT2000** In GT SoftGOT2000, some functions available in GOT2000 series cannot be used. For the details, please refer to the relevant product manual.

### Recommended industries

|            |              |             |
|------------|--------------|-------------|
| Automotive | SEMICON, LCD | Electronics |
| F & B      | Pharma       | Plant       |

### Supported GOT types

|      |      |         |
|------|------|---------|
| GT27 | GT25 | GT23    |
| GT21 | GS21 | SoftGOT |


### Supported devices

|     |       |          |
|-----|-------|----------|
| PLC | Servo | Inverter |
|     | Robot | CNC      |

# Operate the PC from a remote GOT



## Remote personal computer operation function (Ethernet)

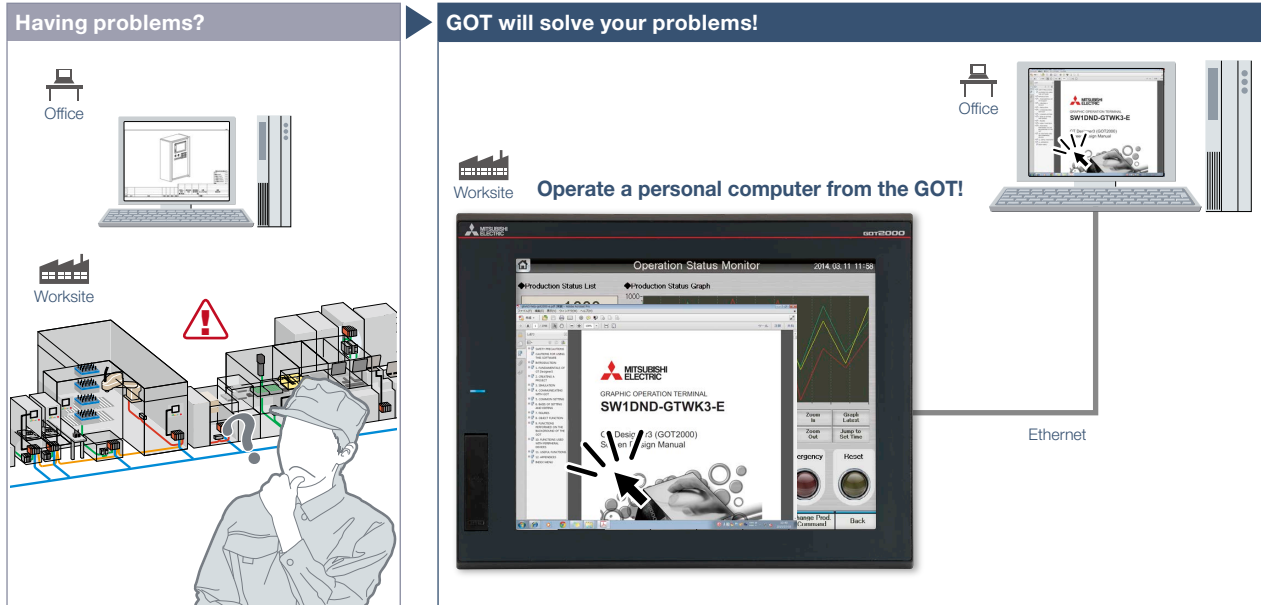

How can I view manuals and drawings in a personal computer in my office from the worksite?


On GOT at the worksite, you can operate a personal computer in a remote location and view manuals and drawings in the computer.

### Function features

Connect GOT at the worksite to a personal computer in a remote location via Ethernet. This allows you to remotely operate the personal computer and view manuals and access the web browser on the computer.

\* A separate license (GT25-PCRAKEY) is required.

Connecting a USB mouse/keyboard to the front (or rear) USB interface makes it easier to operate the personal computer.

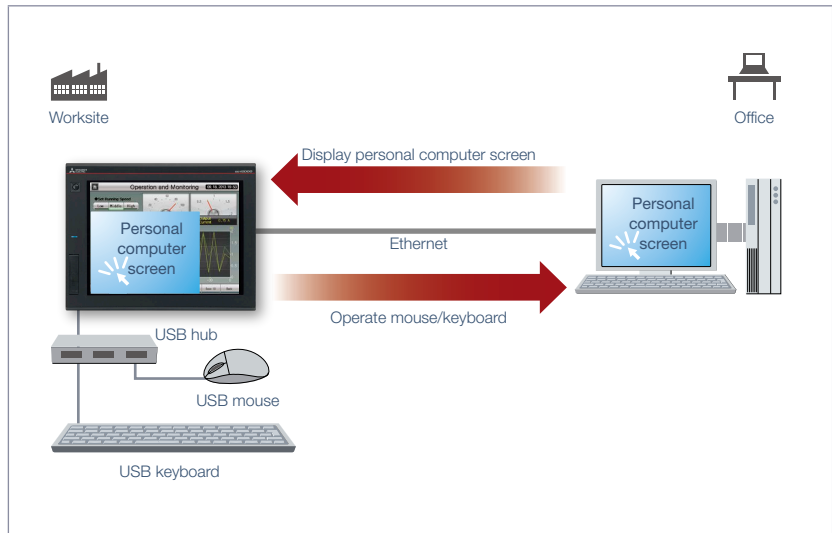

\* For the necessary option devices, please refer to the "Function list" (page 148).

### Recommended industries

Electronics F & B Plant

### Supported GOT types

GT27 GT25 GT23  
GT21 GS21 SoftGOT

### Supported devices

PLC Servo Inverter  
Robot CNC

# GOT Easy Drive Control (Servo) Interactive Solutions

MITSUBISHI GRAPHIC OPERATION TERMINAL  
**GOT2000**  
 MITSUBISHI SERVO AMPLIFIERS & MOTORS  
**+ MELSERVO-J4**

Designed to suit your application and improve maintenance



**GOT Drive**



GOT2000 Series Drive Control Interactive Solutions Movie ▶




For the details, please refer to the GOT2000 Drive Control (Servo) Interactive Solutions catalog (L(NA)08335ENG).

4

GOT Solutions - GOT Easy Drive Control (Servo) Interactive Solutions


## ■ GOT and servo system configurations

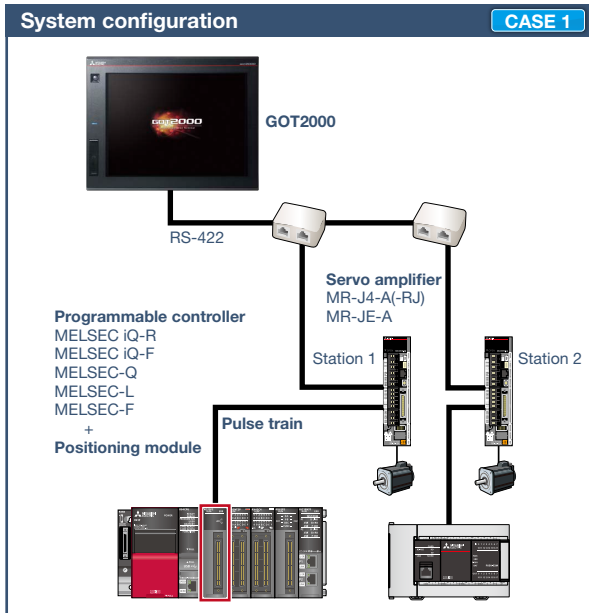

### ■ System configuration features

- Command interface: pulse train
- Control mode: positioning control
- Program: sequence program (ladder)
- Max. number of control axes: 1/2/4/8/32 axes

\* Cannot be used in the MR-J3 compatible mode.

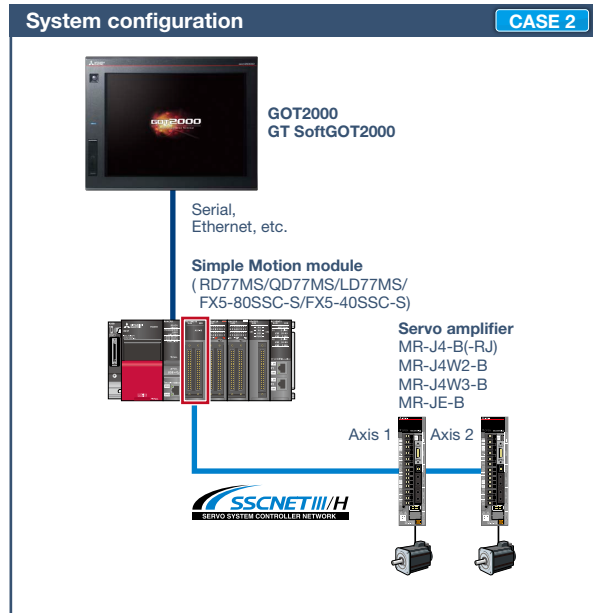


### ■ System configuration features

- Command interface: SSCNET III/H
- Control mode: positioning control, synchronous control, speed control, torque control, tightening & press-fit control, cam control
- Program: sequence program (ladder)
- Max. number of control axes: 2/4/8/16 axes

\* Cannot be used in the MR-J3 compatible mode.




■ GOT and servo system configurations

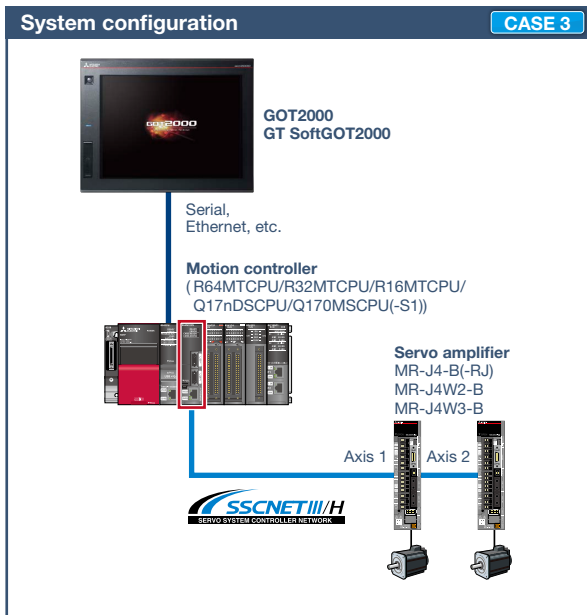

■ System configuration features


- Command interface: SSCANET III/H
- Control mode: positioning control, synchronous control, speed control, torque control, tightening & press-fit control, cam control
- Program: motion program (SFC)
- Max. number of control axes: 16/32/64 axes

\* Cannot be used in the MR-J3 compatible mode.

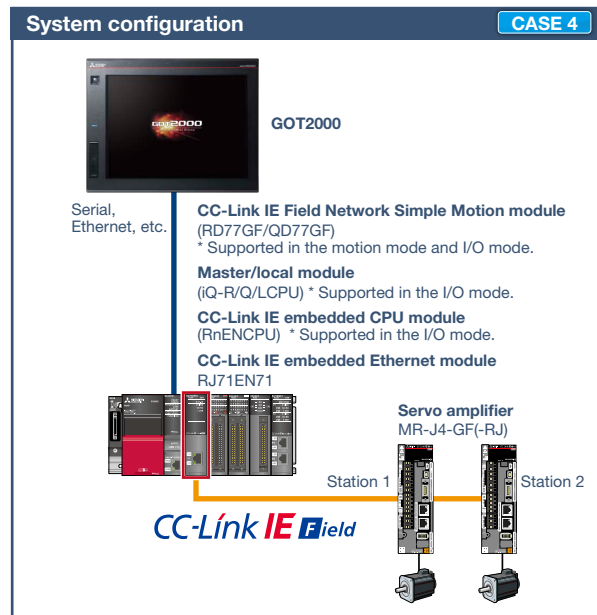

■ System configuration features

- Command interface: CC-Link IE Field Network
- Control mode: positioning control, synchronous control, speed control, torque control, cam control
- Program: sequence program (ladder)
- Max. number of control axes: 4/8/16/32 axes

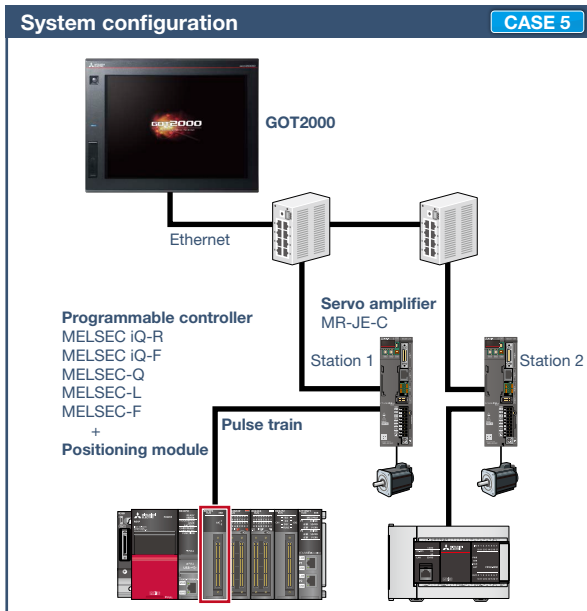

■ System configuration features

- Command interface: pulse train
- Control mode: positioning control, speed control, torque control
- Program: sequence program (ladder)
- Max. number of control axes: 1/2/4/8 axes

The GOT2000 provides advanced functionality and improves connectivity with Mitsubishi servo systems. It provides some functions of MR Configurator2 (supporting MR-J4). The GOT Drive enhanced functionality is designed to eliminate need for additional hardware, software and suits customers' applications to speed up system startup, improve maintenance and troubleshooting.



## ■ Drive control interactive functions and supported models (GT Works3 Ver.1.225K)

Supported drive control interactive functions differ depending on the system configuration. Please refer to the following list.

| Function name                                     |                               | Page   | GOT supported models |                             |                                |             |                               | Supported system configuration |                      |                      |                 |                 |   |   |
|---|-------------------------------|--|----------------------|-----------------------------|--------------------------------|-------------|-------------------------------|--------------------------------|----------------------|----------------------|-----------------|-----------------|---|---|
|   |                               |  | GT 27                | GT 25                       | GT 23                          | GT 21/GS 21 | GT Soft GOT 2000 <sup>7</sup> | CASE 1                         |                      |                      |                 |                 |   |   |
|   |                               |  |                      |                             |                                |             |                               | MR-J4-A(-RJ)                   |                      |                      | MR-JE-A         |                 |   |   |
| Function available                                | Sample screen <sup>*1,9</sup> | Dedicated screen <sup>*2</sup>                               | Function available   | Sample screen <sup>*1</sup> | Dedicated screen <sup>*2</sup> |             |                               |                                |                      |                      |                 |                 |   |   |
| Startup, adjustment                               | Parameter setting             | Basic setting parameters                                     | —                    | ○                           | ○                              | ○           | ○                             | ○                              | ●                    | ◎ <sup>*5</sup>      | ○               | ×               | × |   |
|   |                               | Gain/Filter parameters                                       | —                    | ○                           | ○                              | ○           | ○                             | ○                              | ○                    | ●                    | ◎ <sup>*5</sup> | ○               | × | × |
|   |                               | Extension setting 1 parameters                               | —                    | ○                           | ○                              | ○           | ○                             | ○                              | ○                    | ●                    | ◎ <sup>*5</sup> | ○               | × | × |
|   |                               | Extension setting 2 parameters                               | —                    | ○                           | ○                              | ○           | ○                             | ○                              | ○                    | ●                    | ◎ <sup>*5</sup> | ○               | × | × |
|   |                               | Extension setting 3 parameters                               | —                    | ○                           | ○                              | ○           | ○                             | ○                              | ○                    | ●                    | ◎ <sup>*5</sup> | ○               | × | × |
|   |                               | I/O setting parameters                                       | —                    | ○                           | ○                              | ○           | ○                             | ○                              | ○                    | ●                    | ◎ <sup>*5</sup> | ○               | × | × |
|   |                               | Linear servo/DD motor setting                                | —                    | ○                           | ○                              | ○           | ○                             | ○                              | ○                    | ●                    | ◎ <sup>*5</sup> | —               | — | — |
|   |                               | Point table  | —                    | ○                           | ○                              | ○           | ○                             | ×                              | ○<br>MR-J4-A-RJ only | ●<br>MR-J4-A-RJ only | —               | ○               | × | — |
|   | Test operation                | JOG operation  | —                    | ○                           | ○                              | ○           | ○                             | ○                              | ○                    | ●                    | ◎ <sup>*5</sup> | ○               | × | × |
|   |                               | Positioning operation  | —                    | ○                           | ○                              | ○           | ○                             | ○                              | ○                    | ●                    | ◎ <sup>*5</sup> | ○               | × | × |
|   |                               | Output signal (DO) forced output                             | —                    | ○                           | ○                              | ○           | ○                             | ○                              | ○                    | ●                    | △ <sup>*5</sup> | ○               | × | × |
|   | Adjustment                    | One-touch tuning function                                    | P.48                 | ○                           | ○                              | ○           | ○                             | ○                              | ○                    | ●                    | —               | ○               | × | — |
|   |                               | Tuning function  | P.48                 | ○                           | ○                              | ○           | ○                             | ○                              | ○                    | ●                    | —               | ○               | × | — |
|   |                               | Servo amplifier graph function <b>NEW</b>                    | P.45                 | ○                           | ○                              | ×           | ×                             | ×                              | ×                    | —                    | ×               | ×               | — | × |
| FA transparent function <sup>*4</sup>             |                               | —  | ○                    | ○                           | ○                              | ×           | —                             | —                              | —                    | —                    | —               | —               | — |   |
| Maintenance                                       | Troubleshooting               | System launcher (servo network) function                     | P.49                 | ○                           | ○                              | ×           | ×                             | ×                              | —                    | —                    | —               | —               | — | — |
|   |                               | Drive recorder function                                      | P.44                 | ○                           | ○                              | ×           | ×                             | ×                              | ×                    | —                    | ×               | ×               | — | × |
|   |                               | Servo amplifier graph function <b>NEW</b>                    | P.45                 | ○                           | ○                              | ×           | ×                             | ×                              | ×                    | —                    | ×               | ×               | — | × |
|   |                               | Backup/Restoration function                                  | —                    | ○                           | ○                              | ○           | ×                             | ×                              | ×                    | —                    | —               | ×               | — | — |
|   |                               | Operation monitor  | —                    | ○                           | ○                              | ○           | ○                             | ○                              | ○                    | ●                    | △ <sup>*5</sup> | ○               | × | × |
|   |                               | Power monitor  | P.50                 | ○                           | ○                              | ○           | ○                             | ○                              | ○                    | ●                    | —               | ○               | × | — |
|   |                               | Input/output monitor   | —                    | ○                           | ○                              | ○           | ○                             | ○                              | ○                    | ●                    | △ <sup>*5</sup> | ○               | × | × |
|   |                               | R motion monitor function <sup>*4</sup>                      | P.52                 | ○                           | ○                              | ×           | ×                             | ×                              | —                    | —                    | —               | —               | — | — |
|   |                               | Q motion monitor function <sup>*4</sup>                      | P.52                 | ○                           | ○                              | ×           | ×                             | ×                              | —                    | —                    | —               | —               | — | — |
|   |                               | Motion SFC monitor function <sup>*4</sup>                    | P.53                 | ○                           | ○                              | ×           | ×                             | ×                              | —                    | —                    | —               | —               | — | — |
|   |                               | Motion program editor function <b>NEW</b>                    | P.54                 | ○                           | ○                              | ×           | ×                             | ×                              | —                    | —                    | —               | —               | — | — |
|   |                               | Servo amplifier monitor function                             | P.51                 | ○                           | ○                              | ×           | △                             | ×                              | ○                    | ●                    | ◎               | ×               | × | × |
|   |                               | Intelligent module monitor function <sup>*4</sup>            | P.52                 | ○                           | ○                              | ×           | ×                             | ×                              | ○ <sup>*3</sup>      | —                    | ◎               | ○ <sup>*3</sup> | — | ◎ |
|   | Alarm display function        | P.50   | ○                    | ○                           | ○                              | ○           | ○                             | ○                              | ●                    | —                    | ○               | ×               | — |   |
|   | Predictive maintenance        | Machine diagnosis function                                   | P.46                 | ○                           | ○                              | ○           | ○                             | ○                              | ○                    | ●                    | —               | ○               | × | — |
|   |                               | Failure prediction function                                  | —                    | ○                           | ○                              | ○           | ○                             | ×                              | —                    | —                    | —               | —               | — | — |
|   |                               | Switching axis numbers (station numbers) of servo amplifiers | —                    | ○                           | ○                              | ○           | ○                             | ○                              | ○                    | ●                    | —               | ○               | × | — |
| Servo amplifier life diagnosis function           |                               | P.47   | ○                    | ○                           | ○                              | ○           | ○                             | ○                              | ●                    | —                    | ○               | ×               | — |   |
| Screen design                                     | Utilizing screen data         | —  | ○                    | ○                           | ○                              | ○           | ○                             | ○                              | —                    | —                    | ○               | —               | — |   |
| GOT Drive Plus (paid template screens) <b>NEW</b> |                               | P.55   | ○                    | ○                           | ×                              | ×           | ×                             | —                              | —                    | —                    | —               | —               | — |   |

\*1 The sample screen is the project data that is included in GT Works3 (Ver.1.225K). Sample screens are not supported by GT23.

\*2 The dedicated screen is the screen that is provided as the extended function of GOT; therefore there is no need for the users to create the screen.

\*3 In the system configuration of CASE 1 (page 40) and CASE 5 (page 41), the function can be used by adding wiring between GOT and programmable controller.

\*4 The supported version of GT Works3 differs depending on the type of connected device (CPU, intelligent function module).

\*5 Parameters of the function can be monitored by using the servo amplifier monitor function in the dedicated screen.

\*6 Usable when the GOT and the programmable controller (iQ-R only) are connected via Ethernet, and the programmable controller and the servo amplifier are connected via the CC-Link IE Field Network.

●: Sample screens available    ◎: Dedicated screens available    ○: Function supported    △: Partially supported    —: Not applicable    ×: Not supported

| Supported system configuration           |                               |                                |                    |                                |                                |                                  |                             |                                |                    |                             |                                |
|--|-------------------------------|--------------------------------|--------------------|--------------------------------|--------------------------------|----------------------------------|-----------------------------|--------------------------------|--------------------|-----------------------------|--------------------------------|
| CASE 2/CASE 3                            |                               |                                | CASE 2             |                                |                                | CASE 4 <b>NEW</b>                |                             |                                | CASE 5 <b>NEW</b>  |                             |                                |
| MR-J4-B(-RJ)<br>MR-J4-W2-B<br>MR-J4-W3-B |                               |                                | MR-JE-B            |                                |                                | MR-J4-GF(-RJ)                    |                             |                                | MR-JE-C            |                             |                                |
| Function available                       | Sample screen <sup>*1*9</sup> | Dedicated screen <sup>*2</sup> | Function available | Sample screen <sup>*1*10</sup> | Dedicated screen <sup>*2</sup> | Function available               | Sample screen <sup>*1</sup> | Dedicated screen <sup>*2</sup> | Function available | Sample screen <sup>*1</sup> | Dedicated screen <sup>*2</sup> |
| ○  | ●                             | —                              | ○                  | ●                              | —                              | ○                                | ×                           | —                              | ○                  | ×                           | —                              |
| ○  | ●                             | —                              | ○                  | ●                              | —                              | ○                                | ×                           | —                              | ○                  | ×                           | —                              |
| ○  | ●                             | —                              | ○                  | ●                              | —                              | ○                                | ×                           | —                              | ○                  | ×                           | —                              |
| ○  | ●                             | —                              | ○                  | ●                              | —                              | ○                                | ×                           | —                              | ○                  | ×                           | —                              |
| ○  | ●                             | —                              | ○                  | ●                              | —                              | ○                                | ×                           | —                              | ○                  | ×                           | —                              |
| ○  | ●                             | —                              | ○                  | ●                              | —                              | ○                                | ×                           | —                              | ○                  | ×                           | —                              |
| ○  | ●                             | —                              | —                  | —                              | —                              | ○                                | ×                           | —                              | —                  | —                           | —                              |
| —  | —                             | —                              | —                  | —                              | —                              | ○                                | ×                           | —                              | —                  | —                           | —                              |
| ○  | ●                             | —                              | ○                  | ●                              | —                              | ○                                | ×                           | —                              | ○                  | ×                           | —                              |
| ○  | ●                             | —                              | ○                  | ●                              | —                              | ○                                | ×                           | —                              | ○                  | ×                           | —                              |
| ○  | ●                             | —                              | ○                  | ●                              | —                              | ○                                | ×                           | —                              | ○                  | ×                           | —                              |
| ○  | ●                             | —                              | ○                  | ●                              | —                              | ○                                | ×                           | —                              | ○                  | ×                           | —                              |
| ○  | —                             | ◎                              | ○                  | —                              | ◎                              | ×                                | —                           | ×                              | ×                  | —                           | ×                              |
| ○  | —                             | —                              | ○                  | —                              | —                              | —                                | —                           | —                              | —                  | —                           | —                              |
| ○  | —                             | ◎                              | ○                  | —                              | ◎                              | —                                | —                           | —                              | —                  | —                           | —                              |
| ○  | —                             | ◎                              | ○                  | —                              | ◎                              | ○                                | —                           | ◎                              | ×                  | —                           | ×                              |
| ○  | —                             | ◎                              | ○                  | —                              | ◎                              | ×                                | —                           | ×                              | ×                  | —                           | ×                              |
| ○ <sup>*8</sup>                          | —                             | —                              | ×                  | —                              | —                              | ○ <sup>*6</sup><br>MR-J4-GF only | —                           | —                              | ×                  | —                           | —                              |
| ○  | ●                             | —                              | ○                  | ●                              | —                              | ○                                | ×                           | —                              | ○                  | ×                           | —                              |
| ○  | ●                             | —                              | ○                  | ●                              | —                              | ○                                | ×                           | —                              | ○                  | ×                           | —                              |
| ○  | ●                             | —                              | ○                  | ●                              | —                              | ○                                | ×                           | —                              | ○                  | ×                           | —                              |
| ○ <sup>*8</sup>                          | —                             | ◎                              | —                  | —                              | —                              | —                                | —                           | —                              | —                  | —                           | —                              |
| ○ <sup>*8</sup>                          | —                             | ◎                              | —                  | —                              | —                              | —                                | —                           | —                              | —                  | —                           | —                              |
| ○ <sup>*8</sup>                          | —                             | ◎                              | —                  | —                              | —                              | —                                | —                           | —                              | —                  | —                           | —                              |
| ○ <sup>*8</sup>                          | —                             | ◎                              | —                  | —                              | —                              | —                                | —                           | —                              | —                  | —                           | —                              |
| —  | —                             | —                              | —                  | —                              | —                              | —                                | —                           | —                              | —                  | —                           | —                              |
| ○  | —                             | ◎                              | ○                  | —                              | ◎                              | ○                                | —                           | ◎                              | ○ <sup>*3</sup>    | —                           | ◎                              |
| ○  | ●                             | —                              | ○                  | ●                              | —                              | ○                                | ×                           | —                              | ○                  | ×                           | —                              |
| ○  | ●                             | —                              | ○                  | ●                              | —                              | ○                                | ×                           | —                              | ○                  | ×                           | —                              |
| —  | —                             | —                              | —                  | —                              | —                              | ○                                | ×                           | —                              | —                  | —                           | —                              |
| ○  | ●                             | —                              | ○                  | ×                              | —                              | ○                                | ×                           | —                              | ○                  | ×                           | —                              |
| ○  | ●                             | —                              | ○                  | ●                              | —                              | ○                                | ×                           | —                              | ○                  | ×                           | —                              |
| ○  | —                             | —                              | ○                  | —                              | —                              | ○                                | —                           | —                              | ○                  | —                           | —                              |
| ○  | ●<br>(Template)               | —                              | —                  | —                              | —                              | —                                | —                           | —                              | —                  | —                           | —                              |

\*7 Supported by using GT Works3 version 1.160S or later. GT SoftGOT2000 can be used in the system configuration of CASE 2 (page 40) and CASE 3 (page 41).  
 \*8 The function can be used in the system configuration of CASE 3 (page 41).  
 \*9 Sample screens are available for GT27\*-V (640 × 480) and GT2104-R (480 × 272) only. The data can be used for GOTs with different resolutions by changing the GOT type.  
 \*10 Sample screens are available for GT27\*-V (640 × 480) only. The data can be used for GOTs with different resolutions by changing the GOT type.

# Check the servo amplifier data on GOT when an alarm occurs



Support maintenance work

## Drive recorder function

Having problems?



GOT will solve your problems!

**GOT2000**

| No. | Recorder name | Communication error    | Time | Unit |
|-----|---------------|------------------------|------|------|
| 1   | SE-P          | SS communication error | 5:00 | 05   |
| 2   | SE-P          | SS communication error | 5:00 | 05   |
| 3   | SE-P          | SS communication error | 5:00 | 05   |
| 4   | SE-P          | SS communication error | 5:00 | 05   |
| 5   | SE-P          | SS communication error | 5:00 | 05   |
| 6   | SE-P          | SS communication error | 5:00 | 05   |
| 7   | SE-P          | SS communication error | 5:00 | 05   |
| 8   | SE-P          | SS communication error | 5:00 | 05   |
| 9   | SE-P          | SS communication error | 5:00 | 05   |
| 10  | SE-P          | SS communication error | 5:00 | 05   |
| 11  | SE-P          | SS communication error | 5:00 | 05   |
| 12  | SE-P          | SS communication error | 5:00 | 05   |

Drive recorder information list screen

Graph waveform screen


Check graph waveform from the alarm list!

In case of a system failure, is there a simple and quick way to check the problem cause?

Servo data such as motor current and position command before and after the alarm occurrence can be read from the servo amplifier and displayed in a waveform or a list form.

### Function features

GOT can be used to display the screen equivalent to the drive recorder of MR Configurator2. Easily check the servo data (motor current, position command, etc.) on GOT without using a personal computer. The servo data can be stored on the GOT's SD memory card or USB memory. After obtaining the servo data, you can send it to an office in a remote location and quickly solve the problem.

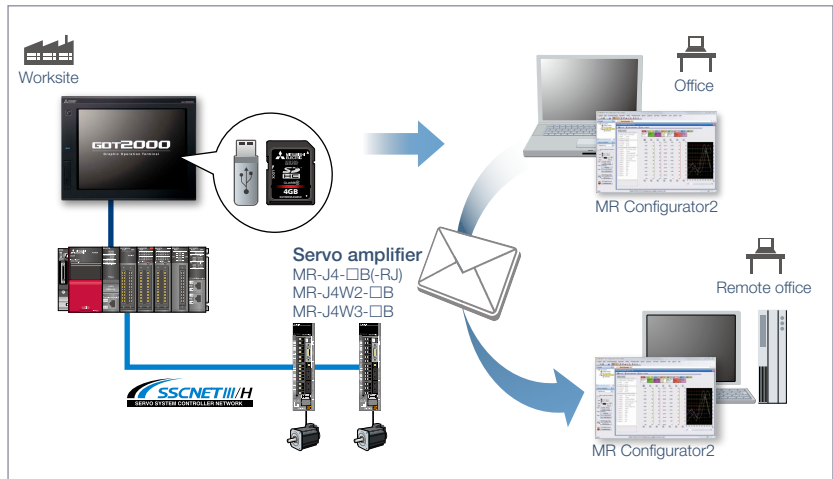

### Specification details and restrictions

\* For the necessary option devices, please refer to the "Function list" (page 148).

- **Target models** MELSERVO-J4 Series (MR-J4-□B(-RJ), MR-J4W2-□B, MR-J4W3-□B, MR-J4-□GF(-RJ)), MELSERVO-JE Series (MR-JE-□B)
- **Supported connection types\*** Connection via motion controller/Simple Motion module
- \*1 For the details of connectable models of each connection type, please refer to the "Connectable model list" (page 152).
- **How to obtain sample screens** The switch to start the drive recorder function has been added to the sample screen. Sample screens are included in GT Works3. For the details, please contact your local sales office. The sample screens are supported by the following GT Works3 versions.  
MR-J4-□B(-RJ), MR-J4W2-□B, MR-J4W3-□B: Ver.1.155M or later.

### Recommended industries

- Automotive
- Electronics
- F & B
- Pharma

### Supported GOT types

- GT27
- GT25
- GT23
- GT21
- GS21
- SoftGOT

### Supported devices

- PLC
- Servo
- Inverter
- Robot
- CNC

# Support startup and maintenance of servo systems



Support maintenance work

NEW

## Servo amplifier graph function

**Having problems?**

If waveform data can be checked and adjusted on GOT, you do not need to bring a PC.

**GOT will solve your problems!**

**Servo amplifier graph waveform**

The data of each axis (speed, torque values, etc.) are shown in up to 64 lines in a graph using a window screen on a user-created screen.

Can I adjust gains while checking the waveform data at the worksite?

The servo amplifier graph function visualizes changes in operation of the equipment due to gain adjustment. Without using a personal computer, you can adjust gains and check parameter information efficiently.

### Function features

Since gain adjustment and parameters check can be performed without using a personal computer, servo systems can be started up efficiently. Superimposing normal and abnormal waveform data and analyzing them helps in equipment maintenance.

Normal waveform data + Abnormal waveform data → You can see the difference at a glance by superimposing normal and abnormal waveform data

### Displaying waveform data item names

By checking item names of waveform data while viewing the graph waveform screen, problems can be identified quickly.

### Analyze the waveform data of a servo amplifier

In the servo amplifier graph function, a specific period of time can be set in the collection and trigger setting window. Then the waveform data that occurred within the set period and the parameter information can be buffered in a servo amplifier, and can be read out and displayed on the GOT. By saving a normal waveform data as a history, you can compare it with the data measured in the same conditions by superimposing them; therefore it is useful for equipment maintenance.

### Specification details and restrictions

\* For the necessary option devices, please refer to the "Function list" (page 148).

- **Target models** MELSERVO-J4 Series (MR-J4-□B-(R)J), MR-J4W2-□B, MR-J4W3-□B), MELSERVO-JE Series (MR-JE-□B)
- **Supported connection types**\*1 Connection via motion CPU/Simple Motion module\*2\*3

\*1 For the details of connectable models of each connection type, please refer to the "Connectable model list" (page 152).

\*2 When a programmable controller is connected to a servo amplifier through a Simple Motion module (SSCNET III/H), GOT and a motion CPU (Q Series) or GOT and CR800-Q (Q172DSRCPU) cannot be directly connected via Ethernet.

\*3 When a servo amplifier is connected to the GOT through a motion CPU (Q Series), use a connection type other than the CC-Link IE Field Network connection between the CPU and the GOT. When the motion CPU and the GOT are connected by CC-Link connection (intelligent device station), set [MELSEC (compatible)] to the transmission path.

### Recommended industries

|            |              |             |
|------------|--------------|-------------|
| Automotive | SEMICON, LCD | Electronics |
| F & B      | Pharma       | Plant       |

### Supported GOT types

|      |      |         |
|------|------|---------|
| GT27 | GT25 | GT23    |
| GT21 | GS21 | SoftGOT |

### Supported devices


|     |       |          |
|-----|-------|----------|
| PLC | Servo | Inverter |
|     | Robot | CNC      |

# Support servo system maintenance



Support maintenance work


## Machine diagnosis function

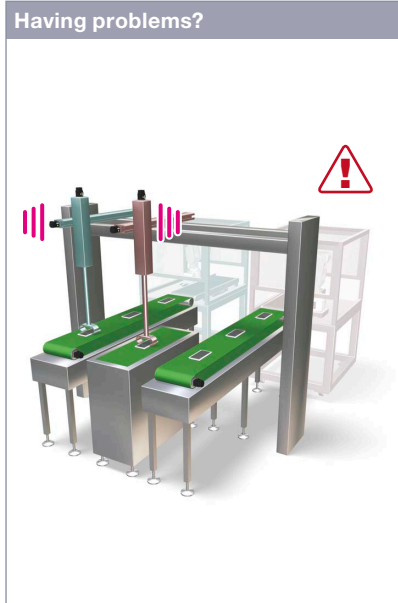


Having problems?

GOT will solve your problems!

GOT2000

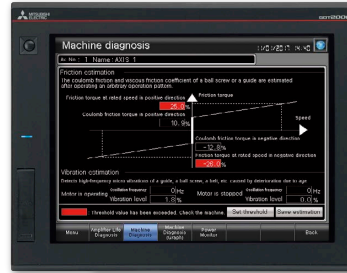

GOT displays the estimation value collected by the machine diagnosis function of the servo amplifier.

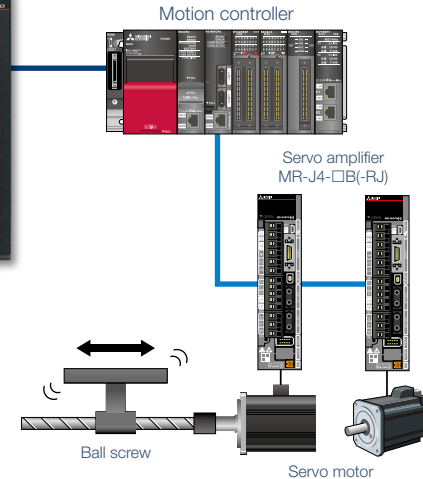

How can I predict deterioration of a machine if it has excessive load and is frequently accelerated?


Without using a personal computer, you can predict the deterioration of the machine for easy preventive maintenance.

### Function features

GOT displays the machine diagnosis screen that is equivalent to the maintenance functions of MR Configurator2. You can easily check the machine diagnosis information of servo amplifiers on the GOT without a personal computer.

### Failure prediction function

When connecting to MR-J4-GF(-RJ), the servo amplifier detects and notifies deterioration of drive components. By grasping the failure prediction information of the production line and performing maintenance at appropriate time, operation rate of the whole production line can be increased.

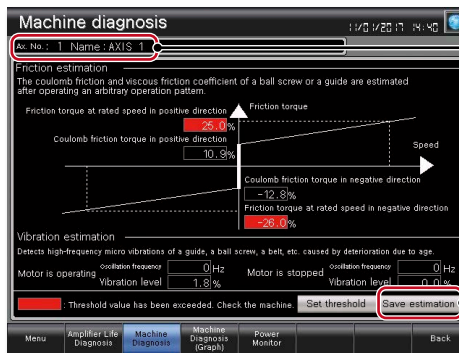

By switching the axis number, multiple axes can be maintained on the same screen.

Save estimation values to a file and compare the values to check the deterioration of the machine.

### Machine diagnosis screen\*1

GOT displays estimation values (machine friction, torque vibration, etc.) that are collected by the machine diagnosis function of the servo amplifier. When any of the estimation values exceed the threshold values that are set on the GOT, the numerical value display area turns red.

\*1 Ready to use sample screens (VGA) are available.

### Specification details and restrictions

- **Target models** MELSERVO-J4 Series (MR-J4-□A(-RJ), MR-J4-□B(-RJ), MR-J4W2-□B, MR-J4W3-□B, MR-J4-□GF(-RJ)), MELSERVO-JE Series (MR-JE-□A, MR-JE-□B)
  - **Supported connection types\*1** Direct connection with a servo amplifier, connection via motion controller/Simple Motion module, connection via CC-Link IE Field Network Simple Motion module/master or local station module
  - \*1 For the details of connectable models of each connection type, please refer to the "Connectable model list" (page 152).
  - **Machine diagnosis** Friction estimation requires acceleration and deceleration of machine operation speed. When performing speed control or torque control, the speed is always kept constant so that friction estimation may not be performed. For the details, please refer to the GOT2000 Drive Control (Servo) Interactive Solutions catalog (L(NA)08335ENG).
  - **How to obtain sample screens** Sample screens are included in GT Works3. For the details, please contact your local sales office.
- The sample screens are supported by the following GT Works3 versions.  
 MR-J4-□A(-RJ): Ver.1.126G or later, MR-J4-□B(-RJ), MR-J4W2-□B, MR-J4W3-□B: Ver.1.155M or later, MR-JE-□B: Ver.1.150G or later.

### Recommended industries

- Automotive
- Electronics
- F & B
- Pharma

### Supported GOT types

- GT27
- GT25
- GT23
- GT21
- GS21
- SoftGOT


### Supported devices

- PLC
- Servo
- Inverter
- Robot
- CNC

# Support servo system maintenance



## ■ Servo amplifier life diagnosis function

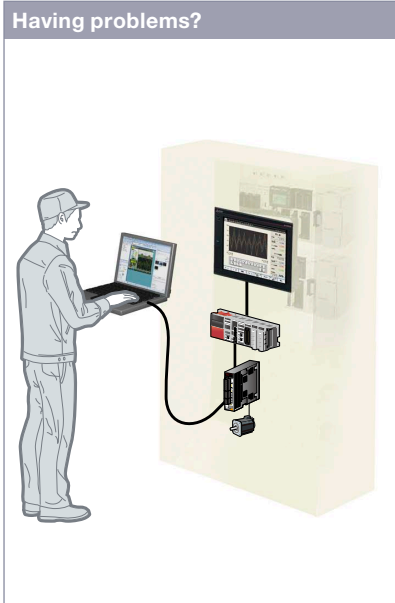


A problem occurred at the worksite. Can I check the situation in my office?

Without creating screens for remote monitoring, check the worksite on GT SoftGOT2000 by reading project data from GOT at the worksite.

### Function features

GOT displays the amplifier life diagnosis screen that is equivalent to the maintenance functions of MR Configurator2.

You can easily check the internal data of servo amplifiers on the GOT without a personal computer.

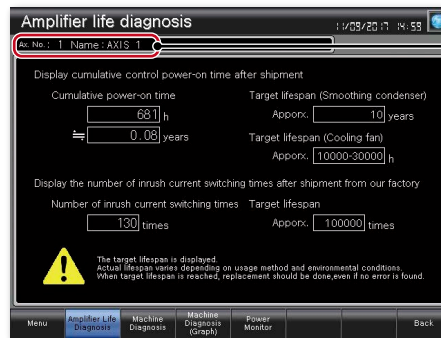

By switching the axis number, multiple axes can be maintained on the same screen.

### Amplifier life diagnosis screen\*1

Check cumulative operation time, on/off counts of inrush relay on GOT. In addition, replacement timing of servo amplifier components (capacitor, relay) can be displayed on the GOT.

\*1 Ready to use sample screens (VGA) are available.

### Specification details and restrictions

- **Target models** MELSERVO-J4 Series (MR-J4-□A(-RJ), MR-J4-□B(-RJ), MR-J4W2-□B, MR-J4W3-□B, MR-J4-□GF(-RJ)), MELSERVO-JE Series (MR-JE-□A, MR-JE-□B)
- **Supported connection types\*1** Direct connection with a servo amplifier, connection via motion controller/Simple Motion module, connection via CC-Link IE Field Network Simple Motion module/master or local station module

\*1 For the details of connectable models of each connection type, please refer to the "Connectable model list" (page 152).

- **How to obtain sample screens** Sample screens are included in GT Works3. For the details, please contact your local sales office. The sample screens are supported by the following GT Works3 versions.

MR-J4-□A(-RJ): Ver.1.126G or later, MR-J4-□B(-RJ), MR-J4W2-□B, MR-J4W3-□B: Ver.1.155M or later, MR-JE-□B: Ver.1.150G or later.

### Recommended industries

- Automotive
- Electronics
- F & B
- Pharma

### Supported GOT types

- GT27
- GT25
- GT23
- GT21
- GS21
- SoftGOT

### Supported devices


- PLC
- Servo
- Inverter
- Robot
- CNC

# Support startup and adjustment of servo systems



Support system startup/adjustment

## One-touch tuning function/Tuning function

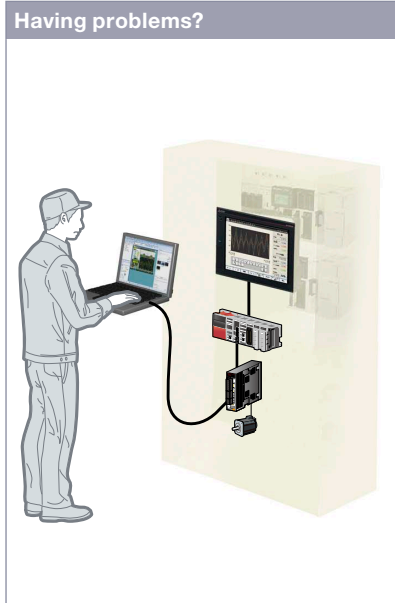

### GOT will solve your problems!

**GOT2000**

By switching the axis number, multiple axes can be adjusted on the same screen.

**Simple Motion module**

**Servo amplifier MR-J4-□B(-RJ)**


SSCNET/H

It's difficult to determine an optimum gain when setting up the device. It's bothersome to connect a personal computer every time I adjust a gain.

GOT can be used to adjust gains of servo amplifiers. Since the adjustment can be performed in parallel with other setup work, you can efficiently set up the system.


### Function features

GOT displays the tuning screens that are equivalent to the adjustment functions of MR Configurator2. You can easily adjust gain parameters of servo amplifiers on the GOT without a personal computer.

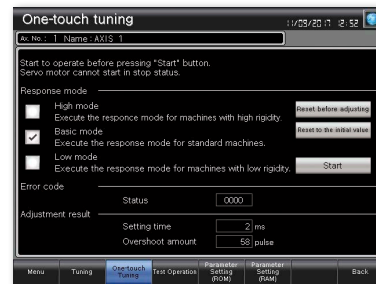

One-touch tuning screen\*1

Just a single touch on the switch on the GOT screen. You can check tuning results such as settling time and overshoot amount.

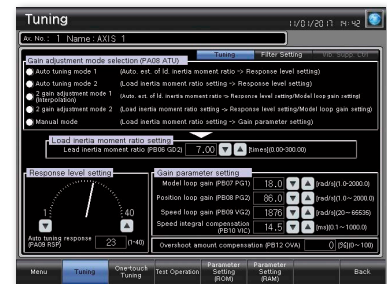

Tuning screen\*1

To obtain higher performance, you can perform fine tuning of gain parameters in the tuning screen.

\*1 Ready to use sample screens (VGA) are available.

### Specification details and restrictions

- **Target models** MELSERVO-J4 Series (MR-J4-□A(-RJ), MR-J4-□B(-RJ), MR-J4W2-□B, MR-J4W3-□B, MR-J4-□GF(-RJ)), MELSERVO-JE Series (MR-JE-□A, MR-JE-□B)
- **Supported connection types\*1** Direct connection with a servo amplifier, connection via motion controller/Simple Motion module, connection via CC-Link IE Field Network Simple Motion module/master or local station module

\*1 For the details of connectable models of each connection type, please refer to the "Connectable model list" (page 152).

- **How to obtain sample screens** Sample screens are included in GT Works3. For the details, please contact your local sales office. The sample screens are supported by the following GT Works3 versions.

MR-J4-□A(-RJ): Ver.1.126G or later, MR-J4-□B(-RJ), MR-J4W2-□B, MR-J4W3-□B: Ver.1.155M or later, MR-JE-□B: Ver.1.150G or later.

### Recommended industries

- Automotive
- Electronics
- F & B
- Pharma

### Supported GOT types

- GT27
- GT25
- GT23
- GT21
- GS21
- SoftGOT

### Supported devices

- PLC
- Servo
- Inverter
- Robot
- CNC






Support maintenance work

# Graphically monitor servo systems


## System launcher (servo network) function

**Having problems?**




**GOT will solve your problems!**

**System configuration diagram**

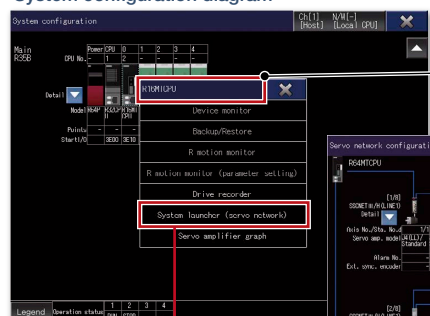

Select motion CPU or Simple Motion module

**Servo network configuration diagram**

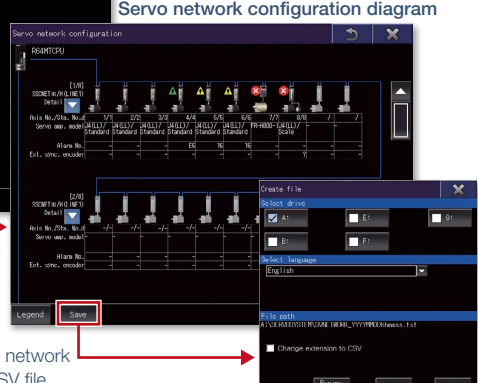

Select system launcher (servo network) from the function list

Output the servo system network configuration to a text/CSV file

How can I check the status of servo systems on GOT?


A graphical configuration diagram indicates the status of servo amplifier.

### Function features

GOT generates the servo network configuration diagram for the number of used axes so that the servo system can be checked in a graphical screen. By starting the drive recorder from the servo network configuration diagram, you can quickly identify the error cause and solve the problem.


### Start various functions from the system launcher (servo network diagram)

Select servo amplifier

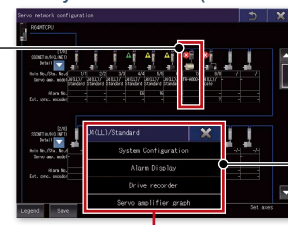


Where the error occurred is visible and easy to check


Select a function from the context menu

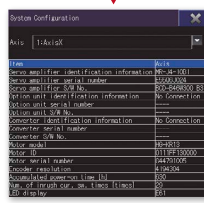

**System configuration display**  
Displays the model name and the serial number of servo amplifiers or motors.

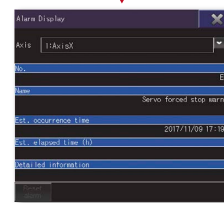

**Alarm display**  
Displays currently occurring errors in the servo amplifier.



**Drive recorder graph waveform**  
Waveforms can be analyzed from the drive recorder information list screen.

### Specification details and restrictions

- **Target models** MELSERVO-J4 Series (MR-J4-□B-(R-J), MR-J4W2-□B, MR-J4W3-□B)
- **Supported connection types\*** Connection via motion controller/Simple Motion module
- \*1 For the details of connectable models of each connection type, please refer to the "Connectable model list" (page 152).
- **Extended functions that can be started from the system launcher (servo network)** System launcher, drive recorder, servo amplifier graph

### Recommended industries

- Automotive
- SEMICON, LCD
- Electronics
- F & B
- Pharma
- Plant

### Supported GOT types

- GT27
- GT25
- GT23
- GT21
- GS21
- SoftGOT

### Supported devices

- PLC
- Servo
- Inverter
- Robot
- CNC

# Support startup, maintenance, and cost reduction



Support maintenance work

## Power monitor

**Having problems?**

I just need to check power consumption. It's bothersome to connect a personal computer.

**GOT will solve your problems!**

Calculation data  
Servo amplifier MR-J4-□B(-RJ)  
Servo motor

Calculate power consumption on servo amplifier

Driving power energy  
Servo motor  
Regenerative energy

Display power consumption and total power consumption on HMI

To manage specific consumption and observe demand, power consumption should be checked easily.

GOT can be used to check (visualize) power consumption and total power consumption without using measuring equipment such as a power meter or a personal computer.

### Specification details and restrictions

- **Target models** MELSERVO-J4 Series (MR-J4-□A(-RJ), MR-J4-□B(-RJ), MR-J4W2-□B, MR-J4W3-□B, MR-J4-□GF(-RJ)), MELSERVO-JE Series (MR-JE-□A, MR-JE-□B)
- **Supported connection types**\*1 Direct connection with a servo amplifier, connection via motion controller/Simple Motion module, connection via CC-Link IE Field Network Simple Motion module/master or local station module
- \*1 For the details of connectable models of each connection type, please refer to the "Connectable model list" (page 152).
- **How to obtain sample screens** Sample screens are included in GT Works3. For the details, please contact your local sales office. The sample screens are supported by the following GT Works3 versions.  
MR-J4-□A(-RJ): Ver.1.126G or later, MR-J4-□B(-RJ), MR-J4W2-□B, MR-J4W3-□B: Ver.1.155M or later, MR-JE-□B: Ver.1.150G or later.

### Recommended industries

- Automotive
- SEMICON, LCD
- Electronics
- F & B
- Pharma

### Supported GOT types

- GT27
- GT25
- GT23
- GT21
- GS21
- SoftGOT

### Supported devices

- PLC
- Servo
- Inverter
- Robot
- CNC

## Alarm display function

**Having problems?**

What this alarm number indicates?

**GOT will solve your problems!**

Alarm display

Touch here to display the detail information

Document display \* Not supported by GT23, GT21, and GS21.

Check the details of the alarm

How can I easily identify the problem cause when an alarm occurs on a servo amplifier?

Without opening a cabinet, current alarms, alarm history, and the detail information can be checked on GOT. Use the document display function\* to display the servo amplifier user's manual and quickly check troubleshooting procedures on the GOT.

\* Not supported by GT23, GT21, and GS21.

### Specification details and restrictions

- **Target models** MELSERVO-J4 Series (MR-J4-□A(-RJ), MR-J4-□B(-RJ), MR-J4W2-□B, MR-J4W3-□B, MR-J4-□GF(-RJ)), MELSERVO-J3 Series, MELSERVO-JE Series (MR-JE-□A, MR-JE-□B)
- **Supported connection types**\*1 Direct connection with a servo amplifier, connection via motion controller/Simple Motion module, connection via CC-Link IE Field Network Simple Motion module/master or local station module
- \*1 For the details of connectable models of each connection type, please refer to the "Connectable model list" (page 152).
- **How to obtain sample screens** Sample screens are included in GT Works3. For the details, please contact your local sales office. The sample screens are supported by the following GT Works3 versions.  
MR-J4-□A(-RJ): Ver.1.126G or later, MR-J4-□B(-RJ), MR-J4W2-□B, MR-J4W3-□B: Ver.1.155M or later, MR-J3-□A: Ver.1.128J or later, MR-JE-□B: Ver.1.150G or later.

### Recommended industries

- Automotive
- SEMICON, LCD
- Electronics
- F & B
- Pharma

### Supported GOT types

- GT27
- GT25
- GT23
- GT21
- GS21
- SoftGOT

### Supported devices

- PLC
- Servo
- Inverter
- Robot
- CNC

# Support startup and adjustment of servo systems



Support system  
startup/  
adjustment

## ■ Servo amplifier monitor function

**Having problems?**

It's bothersome to design setting screen from scratch...

**GOT will solve your problems!**

GOT2000

Servo amplifier MR-J4-□A(-RJ)

RS-422

Dedicated screens, sample screens are available!

How can I check the status of servo amplifier easily?

In a system which outputs pulse trains, the GOT can be connected to a servo amplifier in a serial connection to perform the following operations: set up, monitoring, alarm display, diagnosis, parameter setting, and test operations.

### Function features

Various monitoring functions, changes to the parameter settings, and test operations can be performed on the servo amplifier connected to the GOT.

| MR-J4-A Servo amp Monitor (GOT) |                |                                 | Valid         | Error |
|---------------------------------|----------------|---------------------------------|---------------|-------|
| Cumulative feedback pulses      | -1061092 pulse | Within one revolution position  | 4066386 pulse |       |
| Servo motor speed               | 0 r/min        | ABS counter                     | -627 rev      |       |
| Droop pulses                    | 1 pulse        | Load to motor start pulse       | 7.00 times    |       |
| Cumulative command pulses       | 0 pulse        | Bus voltage                     | 310 V         |       |
| Forward pulse frequency         | 0 kbps         | Encoder internal temperature    | 58 °C         |       |
| Analog speed command voltage    | -0.05 V        | Settling time                   | 2 ms          |       |
| Analog torque command voltage   | 0.00 V         | Oscillation detection frequency | 0 Hz          |       |
| Regenerative load ratio         | 0 %            | Tough drive times               | 0 times       |       |
| Effective load ratio            | 0 %            | Unit power consumption          | 10 W          |       |
| Peak load ratio                 | 0 %            | Unit total power consumption    | 10 Wh         |       |
| Instantaneous torque            | 0 %            |                                 |               |       |

### Dedicated screens

Without creating screens, parameters can be monitored and written from dedicated screens.

### Sample screens (VGA)

Various sample screens such as monitoring, parameter settings, test operations are available and they are all customizable.

### Specification details and restrictions

● **Target models** MELSERVO-J4 Series (MR-J4-□A(-RJ)), MELSERVO-J3 Series (MR-J3-□A), MELSERVO-J2-Super Series (MR-J2S-□A, MR-J2S-□CP), MELSERVO-J2M Series (MR-J2M-P8A)

\* Supported functions of the servo amplifier monitor vary depending on the servo amplifier model.

● **Supported connection types** Direct connection with a servo amplifier

● **How to obtain sample screens** Sample screens are included in GT Works3. For the details, please contact your local sales office.

The sample screens are supported by the following GT Works3 versions.

MR-J4-□A(-RJ): Ver.1.126G or later, MR-J3-□A: Ver.1.128J or later.

### Recommended industries

- Automotive
- Electronics
- F & B
- Pharma

### Supported GOT types

- GT27
- GT25
- GT23
- GT21
- GS21
- SoftGOT

### Supported devices

- PLC
- Servo
- Inverter
- Robot
- CNC

# Support startup and maintenance of servo systems



Support maintenance work

## Intelligent module monitor function

**Having problems?**

Can I check the programs and the status of a positioning module at the same time?

**GOT will solve your problems!**

Intelligent module monitor RD75D4 monitor screen (example)

GX Works3 ladder monitor screen (example)

USB connection

How can I debug positioning systems efficiently?

You can debug positioning systems efficiently by displaying the data such as the status, parameters, and the I/O information of positioning module axes on GOT while monitoring positioning sequence programs on a personal computer simultaneously.

\* For the details of supported devices and connection types, please refer to the relevant product manual.

### Recommended industries

- Automotive
- SEMICON, LCD
- Electronics
- F & B
- Pharma

### Supported GOT types

- GT27
- GT25
- GT23
- GT21
- GS21
- SoftGOT

### Supported devices

- PLC
- Servo
- Inverter
- Robot
- CNC

## R motion monitor function/Q motion monitor function

**Having problems?**

Can I check and change servo parameters of a motion controller easily?

**GOT will solve your problems!**

R motion monitor screen

Q motion monitor screen

Can I check and change servo parameters of a motion controller easily?

In a dedicated screen on GOT, it is possible to monitor and set parameters of motion controllers that are installed on the same base unit.

\* For the details of supported devices and connection types, please refer to the relevant product manual.

### Recommended industries

- Automotive
- SEMICON, LCD
- Electronics
- F & B
- Pharma

### Supported GOT types

- GT27
- GT25
- GT23
- GT21
- GS21
- SoftGOT


### Supported devices

- PLC
- Servo
- Inverter
- Robot
- CNC



# Support debug of SFC programs

## Motion SFC monitor function

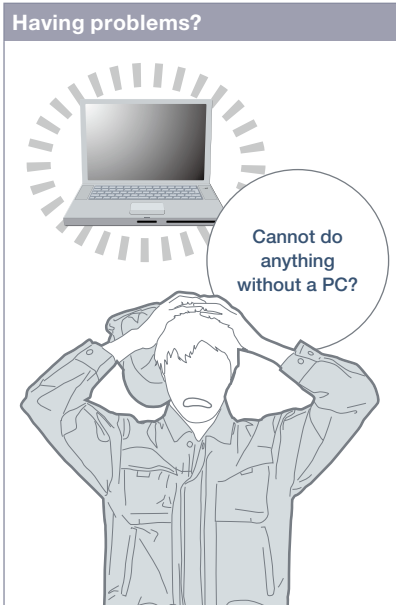

**GOT will solve your problems!**

**Program tabs**  
Touch a tab to display the program.

**Step/transition**  
The active step is highlighted. Touch the step to display the detail program window. The SFC diagram scrolls automatically along with the progress of active steps.

**Detail program window**  
Displays the program and the present value of the calculation control step/transition.

How can I check motion SFC programs without a personal computer?

GOT can monitor motion SFC programs in the motion CPU (Q series) and display them in the SFC diagram format.

### Function features

GOT can be used to monitor motion SFC programs and device values of a motion CPU (Q Series) which is connected to the GOT. Viewing the program batch monitor or active step list enables you to check the complete status at a glance.

| Program batch monitor |              |           |
|-----------------------|--------------|-----------|
| No.                   | Name         | State     |
| 10                    | sub1         | Stopped   |
| 11                    | sub2_Devtest | Executing |
| 12                    | sub3         | Stopped   |
| 13                    | sub4         | Stopped   |
| 14                    | sub5         | Stopped   |
| 15                    | sub6         | Stopped   |
| 16                    | sub7         | Stopped   |
| 17                    | sub8         | Stopped   |
| 18                    | sub9         | Stopped   |
| 19                    | sub10        | Stopped   |
| 20                    | sub11        | Stopped   |

Program batch monitor

| Active step list |            |
|------------------|------------|
| No.              | Comment    |
| FS103            | bit device |
|                  |            |
|                  |            |
|                  |            |
|                  |            |
|                  |            |
|                  |            |
|                  |            |
|                  |            |
|                  |            |
|                  |            |
|                  |            |
|                  |            |
|                  |            |
|                  |            |
|                  |            |

Active step list

### Specification details and restrictions

- **Target models** Motion CPU (Q Series) \*1\*2

\*1 Use the following production number motion CPU when using the Q172CPU or Q173CPU.

- Bus connection, direct CPU connection  
Q172CPU: production number K\*\*\*\*\* or later Q173CPU: production number J\*\*\*\*\* or later
- Other than bus connection, direct CPU connection  
Q172CPU: production number N\*\*\*\*\* or later Q173CPU: production number M\*\*\*\*\* or later

\*2 Operating system software packages for motion CPU (Q Series) should be SV13 or SV22.

Use a motion CPU with the following OS installed when using the Q172CPU, Q173CPU, Q172CPUN, or Q173CPUN.

- SW6RN-SV13Q□: 00H or later (00E or later for using the Q172CPU or Q173CPU with the bus connection or direct CPU connection)
- SW6RN-SV22Q□: 00H or later (00E or later for using the Q172CPU or Q173CPU in the bus connection or direct CPU connection)

\* Production of Q172CPU, Q173CPU, Q172CPUN, and Q173CPUN has been discontinued.

- **Supported connection types**\*1 Ethernet connection\*2, direct CPU connection, serial communication connection, CC-Link IE Controller Network connection, CC-Link connection, bus connection, MELSECNET connection

\*1 For the details of connectable models of each connection type, please refer to the "Connectable model list" (page 152).

\*2 When the CC-Link IE Field Network Ethernet adapter module is used, the motion SFC monitor function cannot be used.

\* For the necessary option devices, please refer to the "Function list" (page 148).

### Recommended industries

- Automotive
- Plant

### Supported GOT types

- GT27
- GT25
- GT23
- GT21
- GS21
- SoftGOT

### Supported devices

- PLC
- Servo
- Inverter
- Robot
- CNC



# Support startup and maintenance of servo systems



Support maintenance work

**NEW**

## Motion program editor function

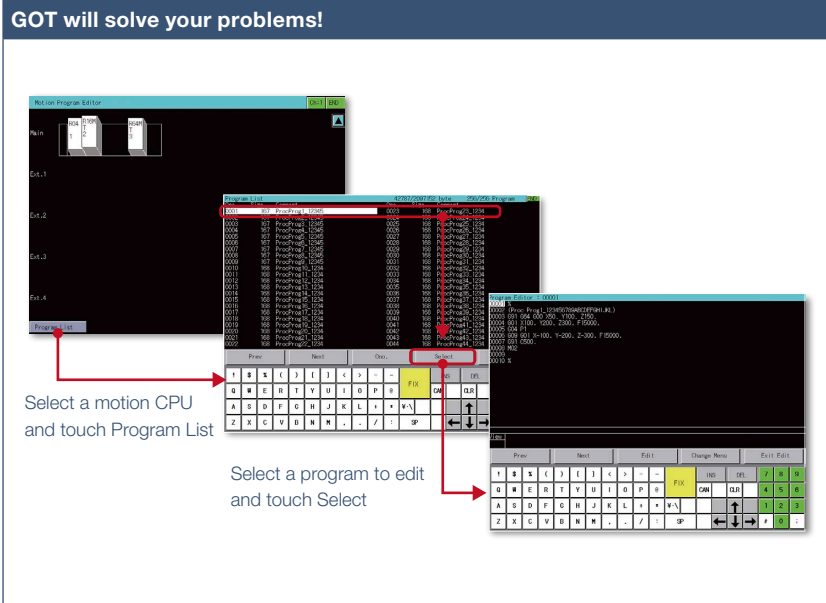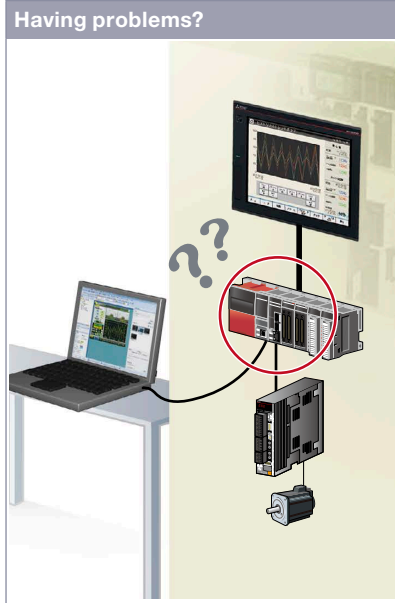


An error occurred during production. Can I edit the motion programs (G-code programs) at the worksite?

GOT can be used to edit motion programs (G-code programs). You can edit the necessary motion program by selecting it from the program list.

### Function features


Motion programs (G-code programs) can be edited in the dedicated screen of the motion program editor function of the GOT.

- \* Supported by GOTs with a resolution of SVGA or higher.
- \* To use G-code control, the G-code add-on library (paid) must be installed.

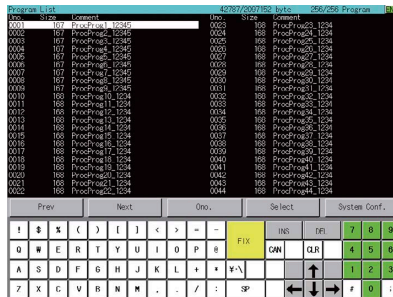

Program List screen

GOT lists the G-code programs stored in the connected motion CPU (MELSEC iQ-R Series).

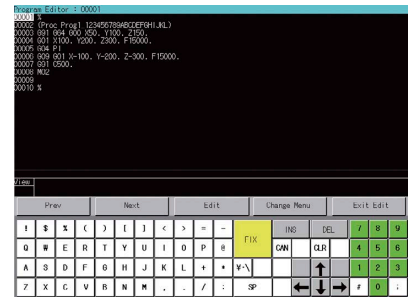

Program Editor screen

G-code programs listed on the GOT can be edited in the line editor format.

### Specification details and restrictions

- **Target models\*** R64MTCPU/R32MTCPU/R16MTCPU (valid when the G-code add-on library is used)
- \*1 When all the following conditions are satisfied, the motion program editor is available.
  - The operating system software is SW10DNC-RMTFW Ver.14 or later.
  - The add-on library is Gcode\_Ctrl.adm Ver.0102 or later.
  - Any item other than [Not Used] is set in the G-code control setting in the basic setting.
- **Supported connection types** Ethernet connection

### Recommended industries

- Automotive
- SEMICON, LCD
- Electronics
- F & B
- Pharma

### Supported GOT types

- GT27\*
- GT25\*
- GT23
- GT21
- GS21
- SoftGOT

### Supported devices

- PLC
- Servo
- Inverter
- Robot
- CNC

\* Excluding some models. For the details, refer to the function descriptions above.

# Compilation of interactive functions with servos

NEW

## GOT Drive Plus (paid template screens)



Support maintenance work



Support system startup/adjustment



Support system operation

**Having problems?**

In free-version sample screens, only one axis can be checked on a single screen...

The resolution must be changed to fit the GOT.

**GOT will solve your problems!**

Information of multiple axes

The detailed graph can be displayed from the list screen


Is there an easier way to visualize multi-axes servo systems?

### Function features

GOT Drive Plus is the paid GOT project data that can visualize servo systems. The data is available for all resolutions of GT27 and GT25 models. Since the template screens for the GOT Mobile function are provided, you can promptly start the remote monitoring of servo systems. The template project can be used as is depending on the system configuration, thus reducing time for screen creation.

With GOT Drive Plus, data of 16 axes can be displayed on one screen without changing the resolution setting of the GOT project data. By monitoring multiple servo amplifiers in the equipment on one screen, you can comprehensively check the servo system.

### Quick remote monitoring with the GOT Mobile function template screens

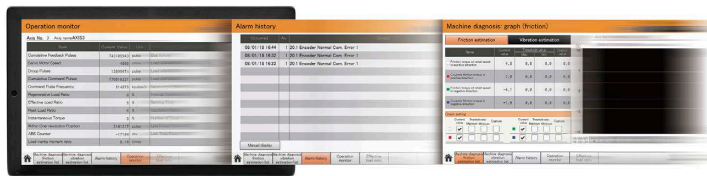

### Features comparison

○: Reduced screen design/working man-hours    ×: Increased screen design/working man-hours

| Item                    | GOT Drive Plus <b>NEW</b>   |  | GOT Drive |   |
|-------------------------|---|--|-----------|---|
|                         | GT Works3 Add-on License for GOT2000 Enhanced Drive Control (Servo) Project Data (SW1DND-GTSV-MZ) | Sample screens included in GT Works3   |           |   |
| Screen design man-hours | ○   | Screens are designed for every resolution of GT27 and GT25 and can be used to connect to Motion controllers and Simple Motion modules. The screens can be used as it is.   | ×         | Sample screens are available only for VGA to connect to Simple Motion modules. The layout must be adjusted according to the resolution of GOT to be used as well as the system configuration. |
| Multi-axis monitor      | ○   | Up to 16 axes can be monitored at the same time on one screen.<br>[Applicable screens]<br>• Machine diagnosis • Effective load factor<br>• Alarm history<br>* On the screens other than the above, only one axis can be monitored on one screen. | ×         | Only one axis can be monitored on one screen.   |
| Remote monitoring       | ○   | Screens for the GOT Mobile function are provided as standard for remote monitoring on tablets and smartphones.   | ×         | Screens for the GOT Mobile function are not available. The users must create the mobile screens.  |

For the details, please refer to the GOT2000 Drive Control (Servo) Interactive Solutions GOT Drive Plus catalog (L(NA)08594ENG).



### Specification details and restrictions

- **Target models** MELSERVO-J4 Series (MR-J4-□B(-RJ), MR-J4-W2-□B, MR-J4W3-□B)
- **Supported connection types\*** Connection via motion controller/Simple Motion module
- \*1 For the details of connectable models of each connection type, please refer to the "Connectable model list" (page 152).
- **Lineup of project data** • WXGA (1280 × 800) • WVGA (800 × 480) • XGA (1024 × 768) • VGA (640 × 480) • SVGA (800 × 600) • 5.7" VGA (640 × 480)

### Recommended industries

Automotive SEMICON, LCD Electronics  
F & B Pharma Plant

### Supported GOT types

GT27 GT25 GT23  
GT21 GS21 SoftGOT

### Supported devices


PLC Servo Inverter  
Robot CNC

# GOT Easy Drive Control (Inverter) Interactive Solutions NEW



**GOT Drive**  
MITSUBISHI GRAPHIC OPERATION TERMINAL  
**GOT2000 + INVERTER**

Challenges that cannot be resolved just with the inverter can now be resolved with GOT2000 and inverter interactive functions.

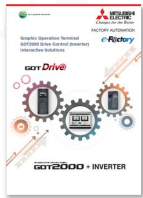

For the details, please refer to the GOT2000 Series Drive Control (Inverter) Interactive Solutions catalog (L(NA)08572ENG).

The GOT2000 provides advanced functionality and improves connectivity with Mitsubishi Electric inverter systems. It provides some functions of FR Configurator2. The GOT Drive enhanced functionality is designed to realize central monitoring, speed up system startup, improve predictive maintenance and troubleshooting.

## ■ Drive control interactive functions and supported inverter models

○: Supported    ×: Not supported    △: Only monitorable parameters are supported    —: Not applicable    ●: Sample screens available

| Function   | CASE 1                  |                              |                                 |                              |                    |                              | CASE 2   |                              |
|--|-------------------------|------------------------------|---------------------------------|------------------------------|--------------------|------------------------------|--|------------------------------|
|  | FR-A800-E/<br>FR-F800-E |                              | FR-A800-E-CRN/<br>FR-A800-E-R2R |                              | FR-E700-NE         |                              | FR-A800-GF/<br>FR-A800 + FR-A8NCE/<br>FR-F800 + FR-A8NCE |                              |
|  | Function available      | Sample screen <sup>1*3</sup> | Function available              | Sample screen <sup>1*3</sup> | Function available | Sample screen <sup>1*3</sup> | Function available                                       | Sample screen <sup>1*3</sup> |
| Parameter setting (simple mode)                      | ○                       | ●                            | ○                               | ×                            | ○                  | ×                            | ○  | ● <sup>*2</sup>              |
| Parameter recipe (simple backup/restoration)         | ○                       | ●                            | ○                               | ×                            | ○                  | ×                            | ○  | ● <sup>*2</sup>              |
| Batch monitor  | ○                       | ●                            | ○                               | ×                            | ○                  | ×                            | ○  | ● <sup>*2</sup>              |
| Operation command                                    | ○                       | ●                            | ○                               | ×                            | ○                  | ×                            | ○  | ● <sup>*2,5</sup>            |
| Machine diagnosis (load characteristics measurement) | ○                       | ●                            | ○                               | ×                            | ×                  | ×                            | ○  | ● <sup>*2,5</sup>            |
| Inverter life diagnosis                              | ○                       | ●                            | ○                               | ×                            | ○                  | ×                            | ○  | ● <sup>*2</sup>              |
| FA transparent                                       | ○                       | —                            | ○                               | —                            | ○                  | —                            | ○  | —                            |

| Function   | CASE 3                  |                              |                                 |                              |                    |                              | CASE 4              |                              |                             |                              |                     |                              |
|--|-------------------------|------------------------------|---------------------------------|------------------------------|--------------------|------------------------------|---------------------|------------------------------|-----------------------------|------------------------------|---------------------|------------------------------|
|  | FR-A800-E/<br>FR-F800-E |                              | FR-A800-E-CRN/<br>FR-A800-E-R2R |                              | FR-E700-NE         |                              | FR-A800/<br>FR-F800 |                              | FR-A800-CRN/<br>FR-A800-R2R |                              | FR-E700/<br>FR-D700 |                              |
|  | Function available      | Sample screen <sup>1*3</sup> | Function available              | Sample screen <sup>1*3</sup> | Function available | Sample screen <sup>1*3</sup> | Function available  | Sample screen <sup>1*3</sup> | Function available          | Sample screen <sup>1*3</sup> | Function available  | Sample screen <sup>1*3</sup> |
| Parameter setting (simple mode)                      | ○                       | ● <sup>*2</sup>              | ○                               | ×                            | ○                  | ×                            | ○                   | ●                            | ○                           | ×                            | ○                   | ●                            |
| Parameter recipe (simple backup/restoration)         | ○                       | ● <sup>*2</sup>              | ○                               | ×                            | ○                  | ×                            | ○                   | ×                            | ○                           | ×                            | ○                   | ×                            |
| Batch monitor  | ○                       | ● <sup>*2</sup>              | ○                               | ×                            | ○                  | ×                            | ○                   | ●                            | ○                           | ×                            | △                   | ●                            |
| Operation command                                    | ○                       | ● <sup>*2</sup>              | ○                               | ×                            | ○                  | ×                            | ○                   | ●                            | ○                           | ×                            | ○                   | ●                            |
| Machine diagnosis (load characteristics measurement) | ○                       | ● <sup>*2</sup>              | ○                               | ×                            | ×                  | ×                            | ○                   | ×                            | ○                           | ×                            | ×                   | ×                            |
| Inverter life diagnosis                              | ○                       | ● <sup>*2</sup>              | ○                               | ×                            | ○                  | ×                            | ○                   | ●                            | ○                           | ×                            | △                   | ●                            |
| FA transparent                                       | ○                       | —                            | ○                               | —                            | ○                  | —                            | ○ <sup>*4</sup>     | —                            | ○ <sup>*4</sup>             | —                            | ○ <sup>*4</sup>     | —                            |

\*1 The sample screen is the project data that is included in GT Works3 (Ver.1.225K). Sample screens are not supported by GT23, GT21, and GS21.

\*2 The sample screen for CASE 1 can be used by changing the controller setting into the one for the system configuration to be used.

\*3 If the sample screen of the required inverter is not available, monitoring is possible by creating a project and setting the inverter parameters and devices in the numerical displays and lamps on the user's screen.

\*4 The function can be used when GOT and personal computer are connected with USB.


\*5 Settings need to be changed so that the CPU devices assigned to RY link devices can be controlled directly from GOT.




**GOT and inverter system configurations**

Select the required connection type to match your system configuration. Multiple inverters can be monitored with one GOT by switching the target station number.


**CASE 1 Direct connection with Ethernet**

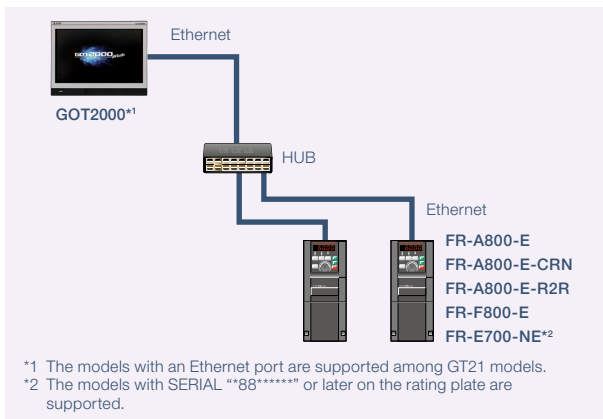


**CASE 2 CC-Link IE Field Network connection via programmable controller**

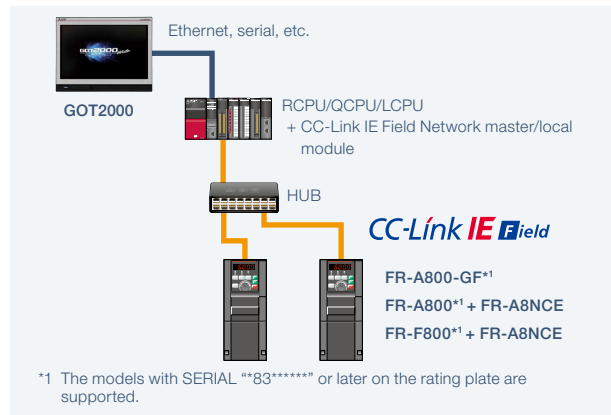

**CASE 3 Ethernet connection via programmable controller**

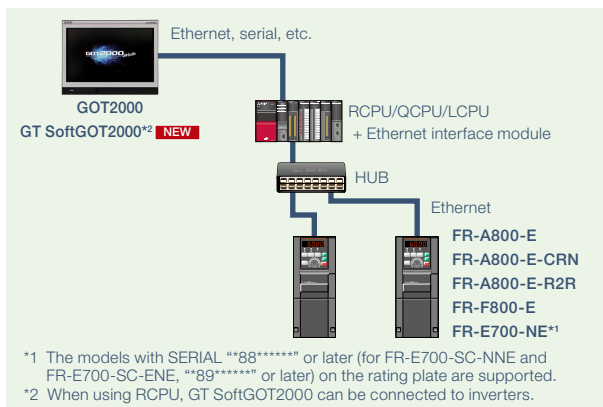

**CASE 4 Direct connection with RS-485**

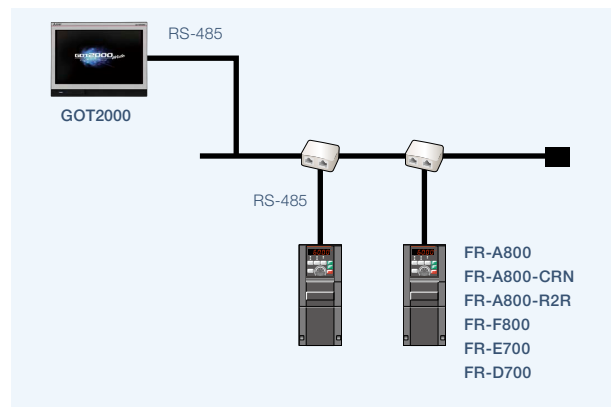


**Three-step simple startup**

There are various sample screens that can be used with the GOT2000 for inverter parameter setting, batch monitoring, and machine diagnosis (load characteristics measurement), etc. Use the sample screens for easy system startup.


**STEP 1 >>>**

Select and connect the GOT and inverter.

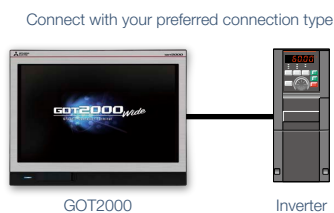


**STEP 2 >>>**

Sample screens\*1\*2 matching the connection type can be used for the user's project data.

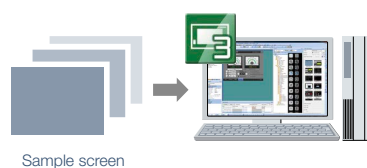

**STEP 3 >>>**

Transfer the project data to the GOT.

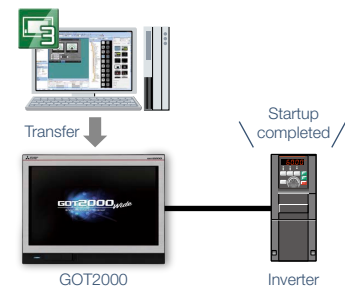

\*1 Sample screens are included in GT Works3 (Ver.1.205P or later). For the details, please contact your local sales office.


\*2 Sample screens are available for the GOT type GT27\*\*V (640 x 480) only. The GOT type can be changed, and used for a GOT with different resolution. Sample screens are not supported by GT23, GT21, and GS21.

# Support startup and adjustment of inverters



Support system  
startup/  
adjustment

## Parameter settings (simple mode)/Parameter recipe (simple backup/restoration)

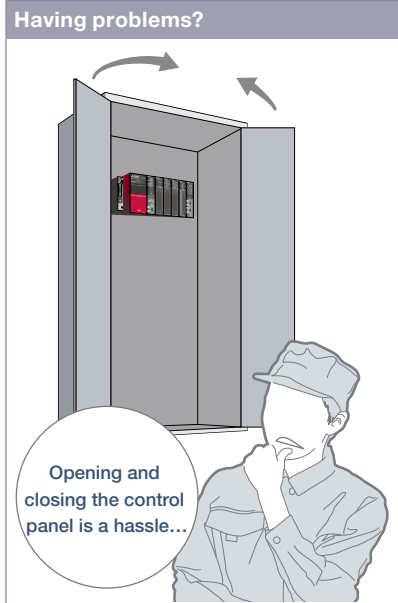

We want to set the parameters without opening the control panel!

### GOT will solve your problems!

#### Parameter Setting screen



Back up (save) or restore (write) parameters as a recipe file when necessary.


Use GOT to adjust the inverter's simple mode parameters. Since there is no need to open the control panel, the adjustment work efficiency can be increased.

### Function features

GOT can be used to adjust parameters of inverters easily. Since the pre-adjustment parameters can be backed up or restored with the GOT, systems can be started up efficiently.

### Parameter settings (simple mode)

Use GOT to adjust the inverter's simple mode parameters. The parameter names can be confirmed on a list, so the required parameters can be easily found and adjusted.

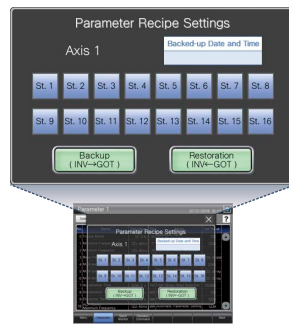

Parameter Setting screen

### How to return parameters to pre-adjustment values

- 1 Back up the current parameters as a recipe file before adjustment
- 2 Restore parameters that were previously backed up



### Parameter recipe (simple backup/restoration)

The current inverter parameters can be backed up (saved) as a recipe file using the GOT. To return the parameters to the pre-adjustment state while starting up and adjusting the inverter, just restore (write) the parameters that were previously backed up (saved).

\* Ready to use sample screens (VGA) are available.

### Specification details and restrictions

- **Target models** FR-A800(-E), FR-A800(-E)-CRN, FR-A800(-E)-R2R, FR-F800(-E), FR-A800-GF, FR-E700(-NE), FR-D700
- **Supported connection types\*1** Direct connection with an inverter, connection via a programmable controller, connection via CC-Link IE Field Network master or local station module


\*1 For the details of connectable models of each connection type, please refer to the "Connectable model list" (page 152).

● **How to obtain sample screens** Sample screens are included in GT Works3. For the details, please contact your local sales office. The sample screens are supported by the following GT Works3 versions. FR-F800(-E): Ver.1.205P or later, FR-A800(-E), FR-A800-GF, FR-E700(-NE), FR-D700: Ver.1.200J or later.

### Recommended industries



### Supported GOT types



### Supported devices




# Support startup and adjustment of inverters




Support system  
startup/  
adjustment

## Batch monitor

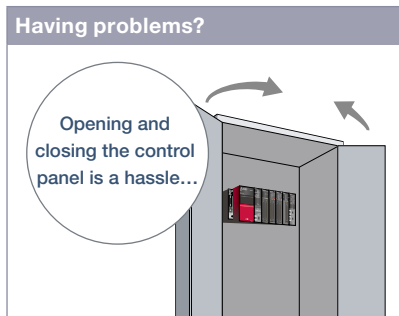

We want to monitor the inverter status without opening the control panel!

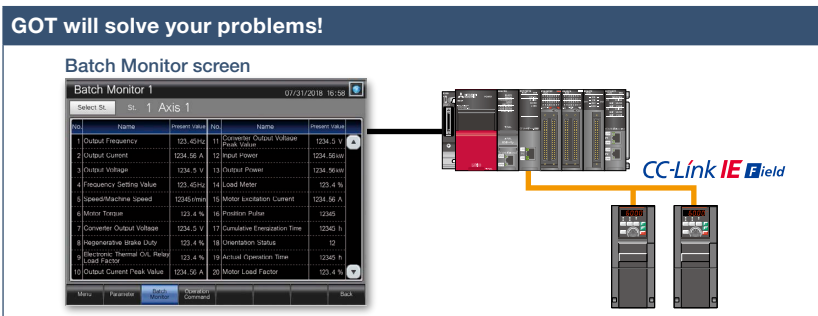

The inverter's current values such as the output frequency, output current, and output voltage can be monitored with the GOT without preparing the personal computer or directly confirming the inverter.

### Specification details and restrictions

- **Target models** FR-A800(-E), FR-A800(-E)-CRN, FR-A800(-E)-R2R, FR-F800(-E), FR-A800-GF, FR-E700(-NE), FR-D700
- **Supported connection types\*1** Direct connection with an inverter, connection via a programmable controller, connection via CC-Link IE Field Network master or local station module
- \*1 For the details of connectable models of each connection type, please refer to the "Connectable model list" (page 152).
- **How to obtain sample screens** Sample screens are included in GT Works3. For the details, please contact your local sales office. The sample screens are supported by the following GT Works3 versions. FR-F800(-E): Ver.1.205P or later, FR-A800(-E), FR-A800-GF, FR-E700(-NE), FR-D700: Ver.1.200J or later.

### Recommended industries

|            |              |             |
|------------|--------------|-------------|
| Automotive | SEMICON, LCD | Electronics |
| F & B      | Pharma       | Plant       |


### Supported GOT types

|      |      |         |
|------|------|---------|
| GT27 | GT25 | GT23    |
| GT21 | GS21 | SoftGOT |


### Supported devices

|     |       |          |
|-----|-------|----------|
| PLC | Servo | Inverter |
|     | Robot | CNC      |

## Operation command

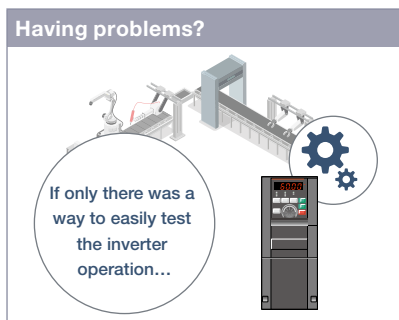

We want to start up the system while confirming the inverter's operation!

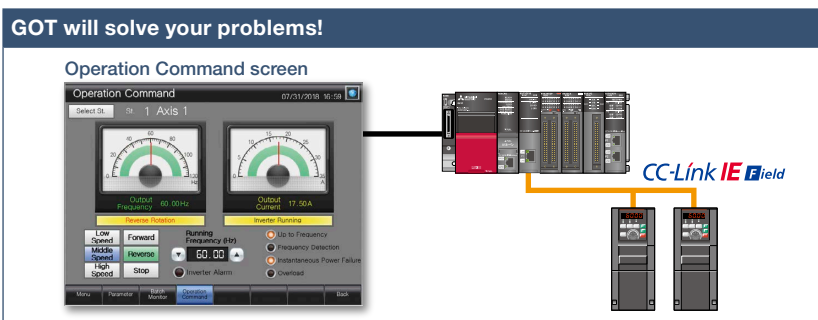

The inverter operation commands can be issued from the GOT. Since the system operation can be confirmed while monitoring the inverter's output frequency and output current values, the startup work efficiency can be increased.

### Specification details and restrictions

- **Target models** FR-A800(-E), FR-A800(-E)-CRN, FR-A800(-E)-R2R, FR-F800(-E), FR-A800-GF, FR-E700(-NE), FR-D700
- **Supported connection types\*1** Direct connection with an inverter, connection via a programmable controller, connection via CC-Link IE Field Network master or local station module
- \*1 For the details of connectable models of each connection type, please refer to the "Connectable model list" (page 152).
- **How to obtain sample screens** Sample screens are included in GT Works3. For the details, please contact your local sales office. The sample screens are supported by the following GT Works3 versions. FR-F800(-E): Ver.1.205P or later, FR-A800(-E), FR-A800-GF, FR-E700(-NE), FR-D700: Ver.1.200J or later.

### Recommended industries

|            |              |             |
|------------|--------------|-------------|
| Automotive | SEMICON, LCD | Electronics |
| F & B      | Pharma       | Plant       |

### Supported GOT types

|      |      |         |
|------|------|---------|
| GT27 | GT25 | GT23    |
| GT21 | GS21 | SoftGOT |

### Supported devices

|     |       |          |
|-----|-------|----------|
| PLC | Servo | Inverter |
|     | Robot | CNC      |


# Support maintenance of inverters



## Machine diagnosis (load characteristics measurement)



We want to detect clogged filters and clogged pipes!

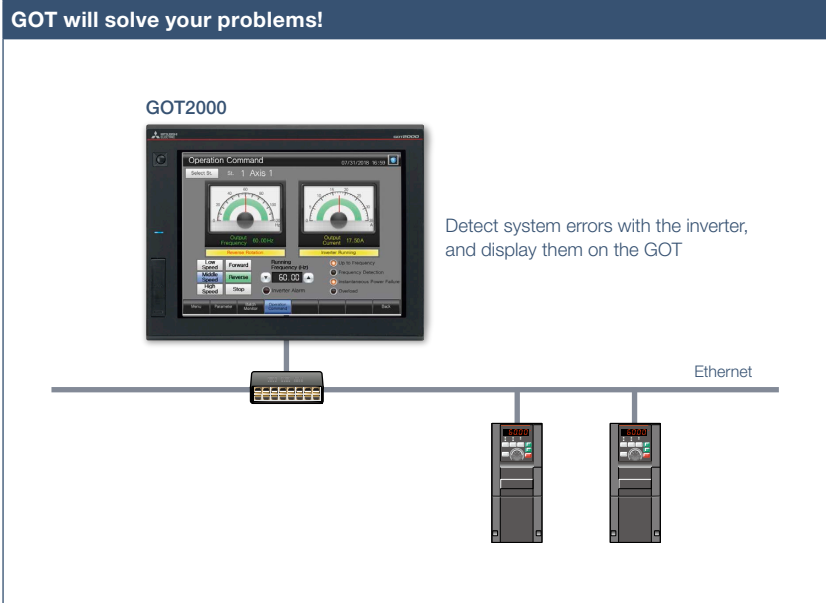


Detect system errors with the inverter, and display them on the GOT

### Function features

Detect system errors with the inverter, and display them on the GOT. If the load is out of the normal range, an error indicator lamp lights up so that it is useful to perform quick troubleshooting.

<Possible error causes>

- In overload range: clogged filter, clogged pipe, etc.
- In light load range: broken belt, broken blade, idle run, etc.

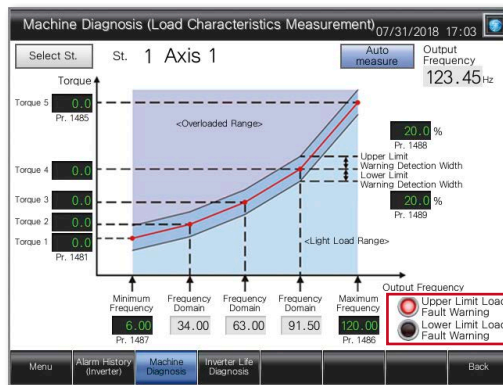

The lamp lights up while the load characteristics value is out of the range between the set upper and lower limit alarm detection width values.

### Machine Diagnosis (Load Characteristics Measurement) screen

Set the range of frequency to detect load characteristics error and calculate the load characteristics reference value. Set the upper and lower limit warning detection width (threshold value) against the calculated reference value.

### Specification details and restrictions

● **Target models** FR-A800(-E), FR-A800(-E)-CRN, FR-A800(-E)-R2R, FR-F800(-E), FR-A800-GF

● **Supported connection types\*1** Direct connection with an inverter, connection via a programmable controller, connection via CC-Link IE Field Network master or local station module

\*1 For the details of connectable models of each connection type, please refer to the "Connectable model list" (page 152).

● **How to obtain sample screens** Sample screens are included in GT Works3. For the details, please contact your local sales office. The sample screens are supported by the following GT Works3 versions. FR-F800(-E): Ver.1.205P or later, FR-A800(-E), FR-A800-GF: Ver.1.200J or later.

### Recommended industries

|            |              |             |
|------------|--------------|-------------|
| Automotive | SEMICON, LCD | Electronics |
| F & B      | Pharma       | Plant       |

### Supported GOT types

|      |      |         |
|------|------|---------|
| GT27 | GT25 | GT23    |
| GT21 | GS21 | SoftGOT |

### Supported devices

|     |       |          |
|-----|-------|----------|
| PLC | Servo | Inverter |
|     | Robot | CNC      |



Support maintenance work

# Support maintenance of inverters

## Inverter life diagnosis

**Having problems?**

The inverter has failed...

We want to know the inverter replacement timing!

**GOT will solve your problems!**

**Inverter Life Diagnosis screen**

Replacement timing of inverter components can be displayed on the GOT

GOT can be used to monitor the operation status of the inverter's components (main circuit capacitor, control circuit capacitor, cooling fan, etc.) and confirm the replacement timing. Perform predictive maintenance by replacing parts before the inverter fails.

### Specification details and restrictions

- **Target models** FR-A800(-E), FR-A800(-E)-CRN, FR-A800(-E)-R2R, FR-F800(-E), FR-A800-GF, FR-E700(-NE), FR-D700
- **Supported connection types\*1** Direct connection with an inverter, connection via a programmable controller, connection via CC-Link IE Field Network master or local station module

\*1 For the details of connectable models of each connection type, please refer to the "Connectable model list" (page 152).

● **How to obtain sample screens** Sample screens are included in GT Works3. For the details, please contact your local sales office. The sample screens are supported by the following GT Works3 versions. FR-F800(-E): Ver.1.205P or later, FR-A800(-E), FR-A800-GF, FR-E700(-NE), FR-D700: Ver.1.200J or later.

### Recommended industries

|            |              |             |
|------------|--------------|-------------|
| Automotive | SEMICON, LCD | Electronics |
| F & B      | Pharma       | Plant       |

### Supported GOT types

|      |      |         |
|------|------|---------|
| GT27 | GT25 | GT23    |
| GT21 | GS21 | SoftGOT |

### Supported devices

|     |       |          |
|-----|-------|----------|
| PLC | Servo | Inverter |
|     | Robot | CNC      |

## FA transparent

**Having problems?**

There are so many control panels, opening, closing or adjusting them is a hassle...

We want to perform debugging smoothly!

**GOT will solve your problems!**

USB  
Ethernet\*1  
Wireless LAN\*1\*2

FR Configurator2

By connecting a personal computer with the GOT's USB interface, the inverter can be programmed, started up, and adjusted via GOT. There is no need to open the control panel and change the cable.

\*1 Some system configurations are not supported. For the details, please refer to the connection manual.

\*2 Installation of the wireless LAN communication unit (GT25-WLAN) is required on the GOT. The unit cannot be used with GT2505, GT25 handy, GT23, GT21, and GS21 models. For the countries where the wireless LAN communication unit can be used and other details, please refer to the "Product list" (page 172).

### Specification details and restrictions

- **Target models** FR-A800(-E), FR-A800(-E)-CRN, FR-A800(-E)-R2R, FR-F800(-E), FR-A800-GF, FR-E700(-NE), FR-D700
- **Supported connection types\*1** Connection via a programmable controller, connection via CC-Link IE Field Network master or local station module

\*1 For the details of connectable models of each connection type, please refer to the "Connectable model list" (page 152).

### Recommended industries

|            |              |             |
|------------|--------------|-------------|
| Automotive | SEMICON, LCD | Electronics |
| F & B      | Pharma       | Plant       |

### Supported GOT types

|       |       |         |
|-------|-------|---------|
| GT27  | GT25* | GT23*   |
| GT21* | GS21* | SoftGOT |

### Supported devices

|     |       |          |
|-----|-------|----------|
| PLC | Servo | Inverter |
|     | Robot | CNC      |

\* Restrictions apply to some functions. For the details, refer to the function descriptions above.

# GOT Easy Drive Control (Robot) **GOT Drive** Interactive Solutions



## Interactive functions to support startup and maintenance of robots



How can I startup and adjust robots easily?

### GOT will solve your problems!

Various screens are available such as the robot status monitor, data setting, and the predictive maintenance menu.




Use GOT to operate or monitor the status of a robot. The robot can be started and stopped, and the error information can be monitored easily from the GOT.

\* For the details of connectable models, please refer to the "Connectable model list" (page 152).


### Function features

GOT can be used for simple adjustment of robots. The robot error information can also be checked; therefore, it is useful for troubleshooting.

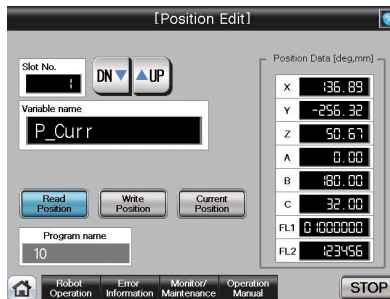

Position edit screen\*1

Position variables of robots can be edited.

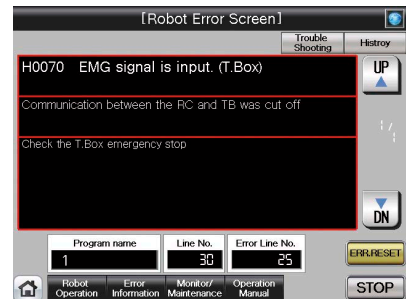

Robot error screen\*1

The details of errors on robots can be checked.

\*1 Ready to use sample screens (VGA) are available. Sample screens are not supported by GT23, GT21, and GS21.

### Specification details and restrictions

● **Target models** FR Series (CR800-R (R16RTCPU), CR800-Q (Q172DSRCPU), CR800-D)\*1, F Series (CR750-Q (Q172DRCPU), CR751-Q (Q172DRCPU), CR750-D\*1, CR751-D\*1), SQ Series CRnQ-700 (Q172DRCPU), SD Series CRnD-700

\*1 Sample screens are available. Sample screens are not supported by GT23, GT21, and GS21.

● **Supported connection types\*1** Ethernet connection, direct CPU connection, serial communication connection, CC-Link IE Controller Network connection, CC-Link IE Field Network connection, CC-Link connection, bus connection, MELSECNET connection

\*1 For the details of connectable models of each connection type, please refer to the "Connectable model list" (page 152).

● **How to obtain sample screens** For the details, please contact your local sales office. The sample screens are supported by the following GT Works3 versions. FR Series (CR800-R (R16RTCPU), CR800-Q (Q172DSRCPU), CR800-D): Ver.1.205P or later, F Series (CR750-D, CR751-D): Ver.1.153K or later.

### Recommended industries

Electronics F & B

### Supported GOT types

GT27 GT25 GT23  
GT21 GS21 SoftGOT

### Supported devices

PLC Servo Inverter  
Robot CNC

# Support debug of SFC programs



## Sequence program monitor (SFC) function

**Having problems?**

**GOT will solve your problems!**

**Block tabs**  
Touch a tab to display the block.

**Displayed by steps**  
The active step is highlighted. Touch the step to display the zoom window or SFC diagram of the relevant block. The SFC diagram scrolls automatically along with the progress of active steps.

**Transition condition**  
Touching a transition condition displays a window for turning on or off a bit device.

How can I debug SFC programs without a personal computer?

GOT can monitor SFC programs of the PLC CPU and display the programs in the SFC diagram format (MELSAP3 or MELSAP-L format).

### Function features

With the sequence program monitor (SFC), the GOT can monitor SFC programs of controllers, and changing device values of the programs is available. The function can be used to solve problems and maintain programmable controller systems that use SFC programs.

**Step List** Block No.0

| No. | Step                        | Comment |
|-----|-----------------------------|---------|
| 0   | Operation permission wait   |         |
| 1   | Work carrier detection wait |         |
| 2   | Buzzer output               |         |
| 3   |                             |         |
| 4   | Product counter reset       |         |
| 5   | Product counter reset       |         |
| 6   | Conveyor operation          |         |

**Active Step List** Block No.0

| No. | Step                      | Comment |
|-----|---------------------------|---------|
| 0   | Operation permission wait |         |
|     |                           |         |
|     |                           |         |
|     |                           |         |
|     |                           |         |
|     |                           |         |

### Step list

GOT displays steps in the displayed block.

### Active step list

GOT displays active steps in the displayed block.

### Specification details and restrictions

- **Target models** QCPU (Q mode), LCPU
  - **Supported connection types**\*1 Ethernet connection\*2, direct CPU connection\*3, serial communication connection, CC-Link IE Controller Network connection, CC-Link IE Field Network connection, CC-Link connection, bus connection, MELSECNET connection
- \*1 For the details of connectable models of each connection type, please refer to the "Connectable model list" (page 152).  
 \*2 When the CC-Link IE Field Network Ethernet adapter module is used, the sequence program monitor (SFC) function cannot be used.  
 \*3 When the Q12PRHCPU or Q25PRHCPU is used, the sequence program monitor (SFC) function cannot be used.

\* For the necessary option devices, please refer to the "Function list" (page 148).

### Recommended industries

- Automotive
- Plant

### Supported GOT types

- GT27
- GT25
- GT23
- GT21
- GS21
- SoftGOT


### Supported devices

- PLC
- Servo
- Inverter
- Robot
- CNC

# Support RCPU, QCPU, and LCPU maintenance




## Sequence program monitor (Ladder)/Sequence program monitor (iQ-R ladder) function

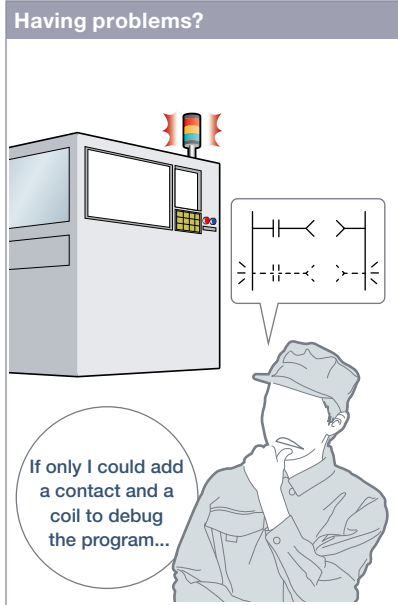

How can I debug and edit ladder programs without a personal computer?

### GOT will solve your problems!

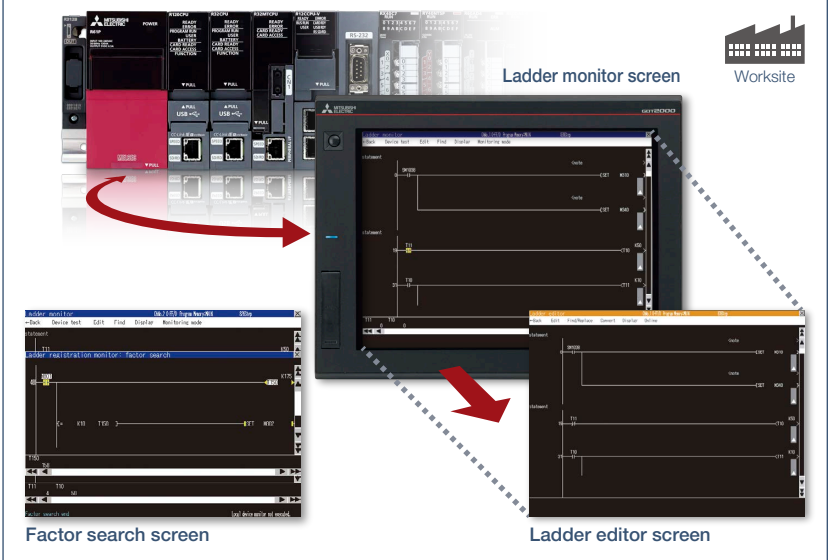

When an error occurs, monitor the ladder program and identify the cause of error. There is no need for a personal computer on the production floor. Just touch the GOT screen and easily edit the ladder program to make simple changes.

### Function features


GOT can monitor and edit a sequence program in a controller in the ladder format, and also can change current values of devices.

### Sequence program monitor (Ladder monitor)

Sequence programs of RCPU, QCPU, and LCPU can be monitored in the ladder format.

### Ladder editor

Sequence programs of RCPU, QCPU, and LCPU can be edited in the ladder format. Just touch the position where you want to edit (contact, vertical line, etc.) and enter, change, or delete the ladder symbol or device. Vertical lines, horizontal lines, columns, and rows can be inserted or deleted.

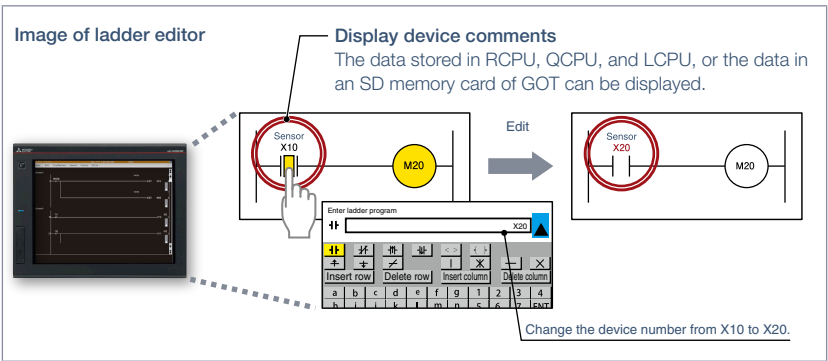

### Specification details and restrictions

\* For the necessary option devices, please refer to the "Function list" (page 148).

● **Target models** RCPU\*1, QCPU (Q mode)\*2, LCPU, motion CPU (Q Series)\*3, CNC (C80, C70)

\*1 R08PCPU, R16PCPU, R32PCPU, and R120PCPU can be monitored only when the operation mode is the process mode. R08SFPCPU, R16SFPCPU, R32SFPCPU, and R120SFPCPU are not supported by the safety program edit and the device test of programmable controller CPUs.

\*2 Excluding the Q02PHCPU, Q06PHCPU, Q12PHCPU, Q25PHCPU, Q12PRHCPU, Q25PRHCPU.

\*3 Only the PLC CPU area (CPU No.1) in the Q170MCPUCPU(-S1), Q170MSCPU(-S1) can be monitored.

● **Supported connection types**\*1 Ethernet connection\*2, direct CPU connection, serial communication connection, CC-Link IE Controller Network connection, CC-Link IE Field Network connection, CC-Link connection, bus connection, MELSECNET connection

\*1 For the details of connectable models of each connection type, please refer to the "Connectable model list" (page 152).

\*2 When the CC-Link IE Field Network Ethernet adapter module is used, the ladder editor cannot be used.

### Recommended industries

Automotive Electronics Plant

### Supported GOT types

GT27 GT25 GT23  
GT21 GS21 SoftGOT

### Supported devices

PLC Servo Inverter  
Robot CNC




# Support FXCPU maintenance



Support maintenance work

## FX list editor function & FX ladder monitor function

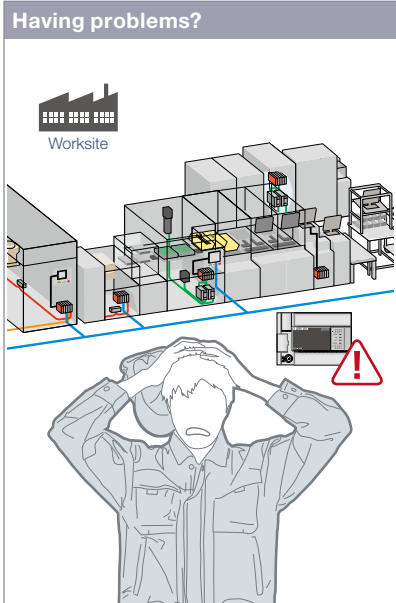

The system has been changed at the worksite. I need to change sequence programs of the MELSEC-F Series programmable controller.

### Function features

You can easily edit and monitor sequence programs without preparing any peripheral devices other than the GOT.


### FX list editor

Just by simple key operations you can check, partially correct, change, or add parameters or sequence programs of an FXCPU.


\* Supported by GT2107-W and GT2104-R among GT21.  
\* Not supported by GT25 wide models.

#### Example of changing sequence program commands

|     |      |        |     |      |
|-----|------|--------|-----|------|
| LD  | X000 | Change | LD  | X000 |
| OUT | Y020 | →      | OUT | Y030 |
| LD  | X001 |        | LD  | X001 |

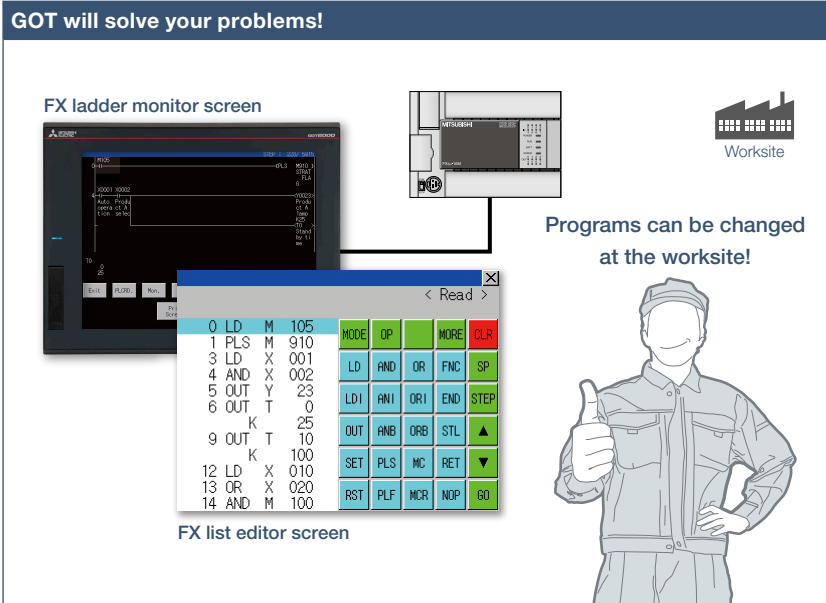


Sequence programs of the MELSEC-F Series programmable controllers can be edited in the list (command) format. Minor program changes can be applied even without a personal computer or a peripheral device.

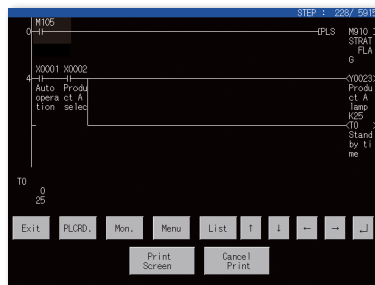

### FX ladder monitor

The MELSEC-FX list editor can be opened from the FX ladder monitor screen with a single touch operation. You can edit sequence programs while checking the ladder diagram. You can also display the list screen from the step line displayed in the ladder monitor.

\* Not supported by GT23, GT21, and GS21.

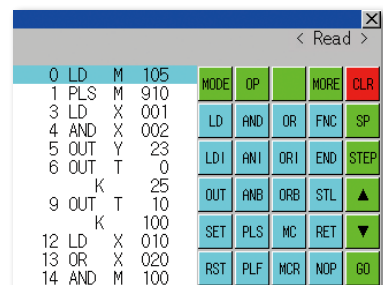

### Specification details and restrictions

#### <FX list editor>

- **Target models** FXCPU (excluding FX5CPU)
- **Supported connection types**\*1 Ethernet connection\*2, direct CPU connection
- \*1 For the details of connectable models of each connection type, please refer to the "Connectable model list" (page 152).
- \*2 When the CC-Link IE Field Network Ethernet adapter module is used, the FX list editor cannot be used.
- **Functions** Writing sequence programs, setting parameters, PLC diagnostics, registering keywords, etc.

#### Recommended industries

Electronics F & B

#### <FX ladder monitor>

- **Target models** FXCPU (excluding FX5CPU)
- **Supported connection types**\*1 Ethernet connection, direct CPU connection
- \*1 For the details of connectable models of each connection type, please refer to the "Connectable model list" (page 152).
- **Functions** Search operation, display switching, test operation\*2\*3, hard copy
- \*2 Present values of V and Z cannot be changed.
- \*3 Set values of T and C cannot be changed.

#### Supported GOT types

GT27 GT25\* GT23\*  
GT21\* GS21\* SoftGOT

#### Supported devices



PLC Servo Inverter  
Robot CNC

\* Excluding some models or restrictions apply to some functions. For the details, refer to the function descriptions above.



# Visually check logging data

## Log viewer function

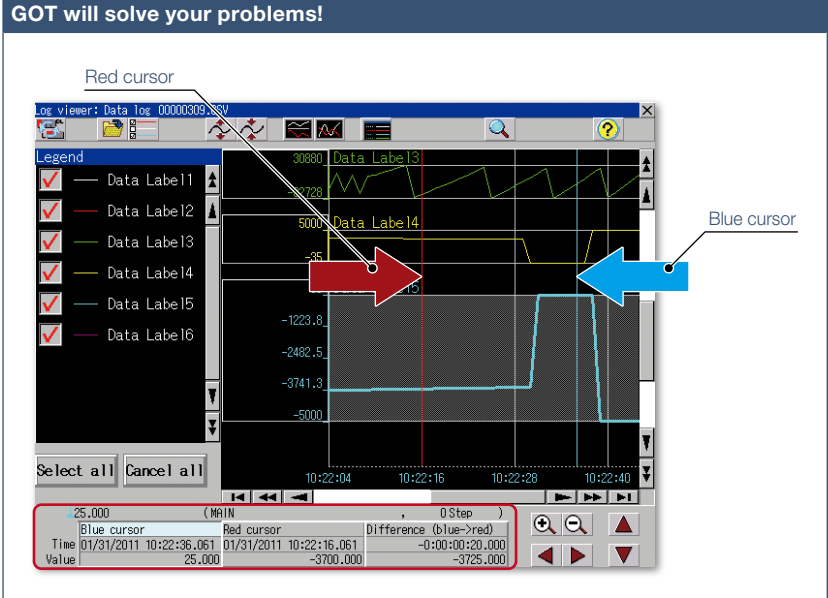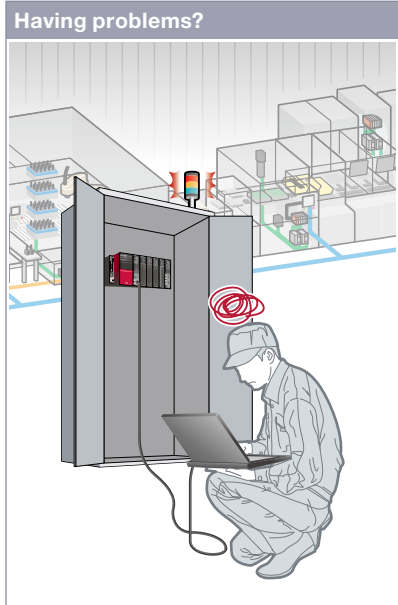

How can I check the logging data collected by programmable controllers without opening a cabinet?

GOT displays the logging data, which achieves quick troubleshooting without using a personal computer at the worksite.

### Function features


GOT displays the logging data collected by the data logging function of programmable controller CPUs or other modules.

### Quick check of data by multiple cursors

Multiple cursors make it easier to visually check how the data has changed. You can search for the data by specifying the time and index No.

### Logging data can be easily changed

FA transparent function (page 70) enables you to view the logging data with GX LogViewer on a personal computer and to change logging settings with CPU Module Logging Configuration Tool.

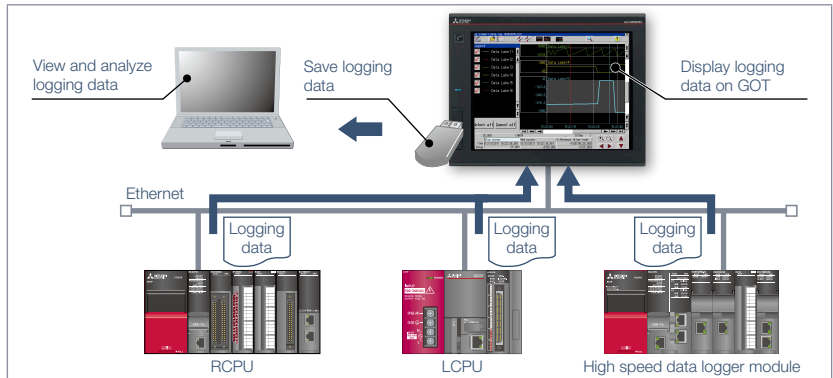

### Logging data can be obtained without opening a cabinet

The logging data can be copied to a USB memory device attached to a USB interface on the front (or the backside) of the GOT. It reduces the need to remove a memory card from a CPU or high speed data logger module to retrieve the logging data.

### Specification details and restrictions

\* For the necessary option devices, please refer to the "Function list" (page 148).

● **Target models** RCPU\*1, QCPU\*2, LCPU\*3, FX5CPU\*4, high speed data logger module (MELSEC iQ-R Series/Q Series), BOX data logger, CNC (C80, C70)

\*1 Supported by R01CPU, R02CPU, R04CPU, R08CPU, R16CPU, R32CPU, R120CPU, R04ENCPU, R08ENCPU, R16ENCPU, R32ENCPU, R120ENCPU only.

\*2 Supported by Q03UDVCP, Q04UDVCP, Q06UDVCP, Q13UDVCP, Q26UDVCP only.

\*3 Excluding L02SCPU, L02SCPU-P. \*4 Restrictions apply to the CPUs. For the details, please refer to the relevant product manual.

● **Supported connection types**\*1 Ethernet connection\*2

\*1 For the details of connectable models of each connection type, please refer to the "Connectable model list" (page 152).

\*2 R01CPU, R02CPU, R04CPU, R08CPU, R16CPU, R32CPU, R120CPU, QCPU, and LCPU are supported via the built-in Ethernet port; R04ENCPU, R08ENCPU, R16ENCPU, R32ENCPU, and R120ENCPU are supported via the port CPU P1.

### Recommended industries

|            |              |             |
|------------|--------------|-------------|
| Automotive | SEMICON, LCD | Electronics |
| F & B      | Pharma       | Plant       |

### Supported GOT types

|      |      |         |
|------|------|---------|
| GT27 | GT25 | GT23    |
| GT21 | GS21 | SoftGOT |

### Supported devices


|       |       |          |
|-------|-------|----------|
| PLC   | Servo | Inverter |
| Robot | CNC   |          |




Support maintenance work

# In case of PLC error

## Backup/Restoration function

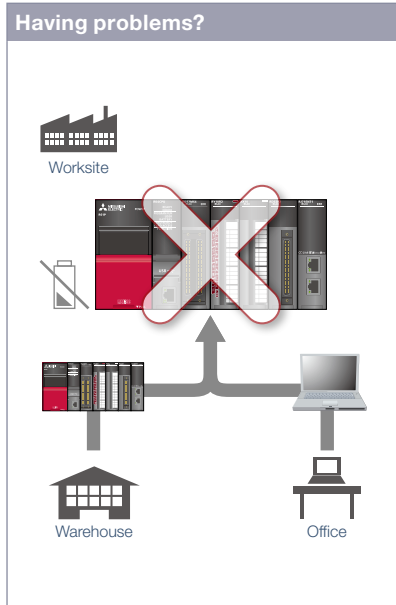

Programmable controller error! The battery is dead! I need to go to the warehouse to get another device and a personal computer to write programs.

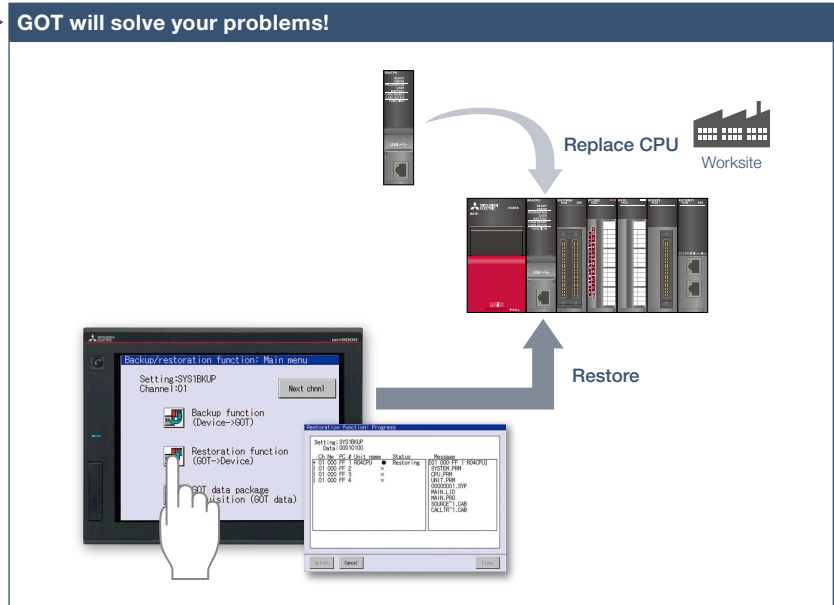


There is no need for a personal computer on the production floor. Simply use the GOT to write sequence programs to the controller and you can quickly recover the problem.

### Function features

Backup or restore the programs and parameters of programmable controller CPUs or other devices to or from the GOT's SD memory card or USB memory. With a backup of data in the GOT, there's no need to use a personal computer when replacing the industrial devices such as the programmable controller CPU. All replacement and restoration can be completed with just the GOT.

\* Excluding GT2103-PMBLS

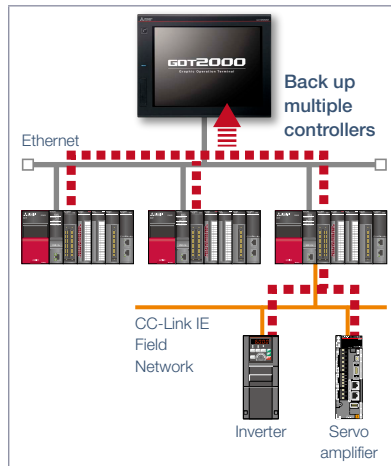

### Back up multiple controllers/ Automatic backup

Besides making backup of multiple controllers connected on Ethernet, you can specify a trigger device, a day of the week, and time for automatic backup to reduce the time needed to back up each controller separately.

\* Not supported by GT21 and GS21.

### Specification details and restrictions

\* For the necessary option devices, please refer to the "Function list" (page 148).

● **Target models** RCPU<sup>\*1</sup>, QCPU (Q mode) (excluding Q12PRHCPU, Q25PRHCPU), LCPU, FX5CPU, FXCPU, motion CPU (MELSEC iQ-R Series/Q Series (SV13/SV22 only))<sup>\*1</sup>, robot controller (FR Series (CR800-R (R16RTCPU), CR800-D), F Series (CR750-Q (Q172DRCPU), CR751-Q (Q172DRCPU), CR750-D, CR751-D), SQ Series CRnQ-700 (Q172DRCPU), SD Series CRnD-700)<sup>\*1</sup>, CNC (C80, C70)<sup>\*1</sup>, inverter (FREQROL-A800/A800Plus/F800 Series)<sup>\*1\*2</sup>, servo amplifier (MR-J4-□GF)<sup>\*1\*2</sup>

<sup>\*1</sup> Excluding R08SFPCU, R16SFPCU, R32SFPCU, R120SFPCU, R08PSFPCU, R16PSFPCU, R32PSFPCU, R120PSFPCU. Not supported by GT21 and GS21.

<sup>\*2</sup> Supported only when the GOT and the programmable controller (RCPU, QCPU, LCPU) are connected via Ethernet and the programmable controller (RCPU, QCPU, LCPU) and the inverter/servo amplifier are connected via the CC-Link IE Field Network.

● **Supported connection types<sup>\*1</sup>** Ethernet connection<sup>\*2</sup>, direct CPU connection, CC-Link IE Field Network connection<sup>\*3</sup>, serial communication connection, bus connection

<sup>\*1</sup> For the details of connectable models of each connection type, please refer to the "Connectable model list" (page 152).

<sup>\*2</sup> When the CC-Link IE Field Network Ethernet adapter module is used, the Backup/Restoration function cannot be used.

<sup>\*3</sup> The connection type between the programmable controller and the inverter/servo amplifier.

● **Target data** Programs, parameters, device comments, device initial values, file registers, etc.

### Recommended industries

|            |              |             |
|------------|--------------|-------------|
| Automotive | SEMICON, LCD | Electronics |
| F & B      | Pharma       | Plant       |

### Supported GOT types

|       |       |         |
|-------|-------|---------|
| GT27  | GT25  | GT23    |
| GT21* | GS21* | SoftGOT |

### Supported devices


|     |       |          |
|-----|-------|----------|
| PLC | Servo | Inverter |
|     | Robot | CNC      |

\* Excluding some models or restrictions apply to some functions. For the details, refer to the function descriptions above.

# Check the PLC module status

Upgraded

## System launcher function

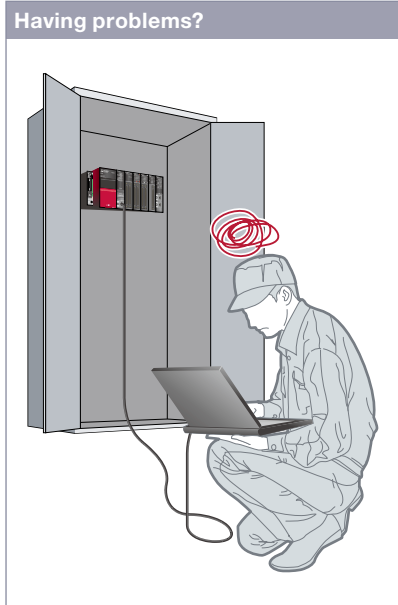

Having problems?

GOT will solve your problems!

**System configuration diagram**

Icons show the module status. You can check the module with an error at a glance.

**Extended function list screen**

You can start the extended functions that are supported by the module.

Select module

Programmable controller CPU

- PLC diagnostics
- Device monitor
- Sequence program monitor (Ladder)
- Sequence program monitor (SFC)
- Backup/Restore
- iQSS utility

Motion controller

- R motion monitor
- R motion monitor (parameter setting)
- Drive recorder
- System launcher (servo network)**

\* See details on page 49

Can I check the status of the programmable controller system without a personal computer?

A graphical configuration diagram indicates module statuses. When you touch a module the extended function list is shown and you can carry out maintenance work efficiently.

### Function features


The programmable controller system can easily be checked on GOT without a personal computer at the worksite.

### Starting extended function quickly

When you touch a module in the system configuration diagram, the list of extended functions available to the module is shown.


### Example of system launcher (servo network)

\* See details on page 49

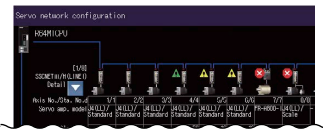

### Checking module product information NEW

The product information such as production number obtained from modules can be checked in a list.

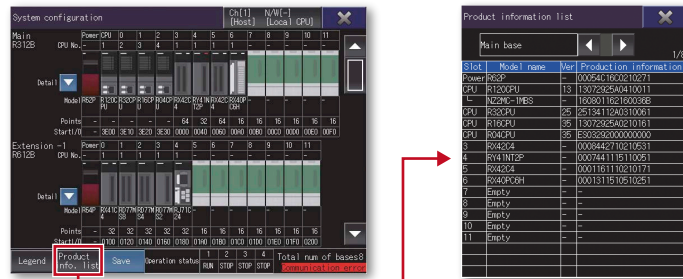

### Online module change function

GOT can direct a programmable controller to execute the online module change. (The applicable modules are listed below in this page.)

### Specification details and restrictions

● **Target models** RCPUCPU, QCPUCPU (Q mode), LCPUCPU, motion CPU (MELSEC iQ-R Series/Q Series), CNC (C80, C70), robot controller (FR Series (CR800-R (R16RTCPU), CR800-Q (Q172DSRCPU)), F Series (CR750-Q (Q172DRCPU), CR751-Q (Q172DRCPU)), SQ Series CRnQ-700 (Q172DRCPU))

● **Supported connection types\*** Ethernet connection\*, direct CPU connection, serial communication connection, CC-Link IE Controller Network connection, CC-Link IE Field Network connection, CC-Link connection, bus connection, MELSECNET connection

\*1 For the details of connectable models of each connection type, please refer to the "Connectable model list" (page 152).

\*2 When the CC-Link IE Field Network Ethernet adapter module is used, the system launcher function cannot be used.

● **Extended functions that can be started from the system launcher** Device monitor, sequence program monitor (iQ-R ladder/Ladder), sequence program monitor (SFC), network monitor, R motion monitor, Q motion monitor, intelligent module monitor, backup/restoration\*, motion SFC monitor, CNC monitor 2, CNC monitor, CNC data I/O, CNC machining program edit, iQSS utility, CC-Link IE Field Network diagnostics, drive recorder, system launcher (servo network), servo amplifier graph


\*1 The CPU number setting is not transferred. Only the channel of the connected controller is in its selected state.

● **Modules applicable to online module change** QCPUCPU (Q mode) input/output/I/O module, analog input/output module, temperature input/temperature control module, loop control module, pulse input module

### Recommended industries



### Supported GOT types




### Supported devices



# Graphically monitor the network status




## ■ CC-Link IE Field Network diagnostics

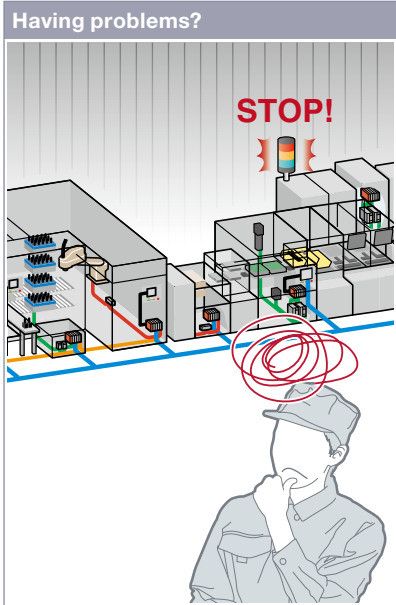

A problem occurred but it might take time to solve it in the large scale system.

### GOT will solve your problems!

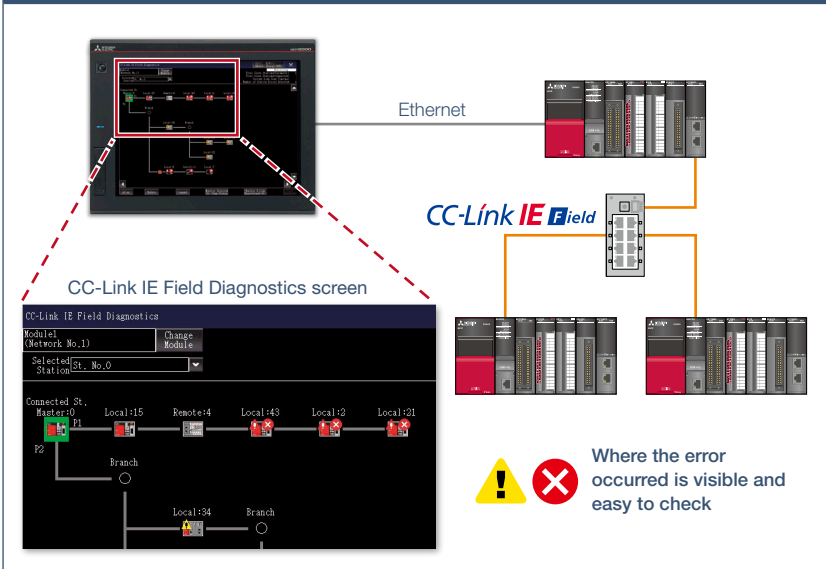

Even in a large scale system that has a complex network configuration, the network status can be checked graphically so that line troubles and module errors can be identified quickly.


### Function features

GOT can be used to check the devices in the CC-Link IE Field Network and identify the error in the network at a glance. If a problem occurs, you can quickly check where the error occurs and reduce downtime.

### Checking event history

This window displays the history of network events and the event details. The event history can be output to a CSV file and used for trouble analysis in your office.


\* Not available when the connection destination is an RCPU or FX5CPU.

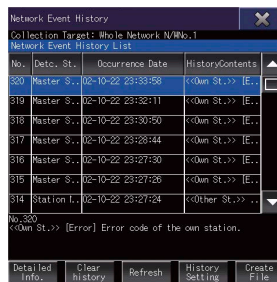

Network event history window

### Checking communication status of modules

The communication status can be checked for modules that are selected in the CC-Link IE Field Diagnostics screen. MAC address and IP address can also be checked.

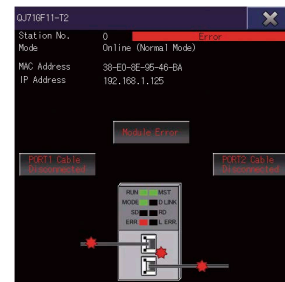

Communication status monitor window


### Specification details and restrictions

- **Target models** RCPU, QCPU (Q mode), LCPU, FX5CPU, C Controller (MELSEC iQ-R Series/Q Series)
  - **Supported connection types**\*1 Ethernet connection\*2, direct CPU connection\*3, serial communication connection\*4
- \*1 For the details of connectable models of each connection type, please refer to the "Connectable model list" (page 152).  
 \*2 Connection to the Ethernet interface module of a programmable controller is not supported.  
 \*3 RCPU and FX5CPU do not support direct CPU connection.  
 \*4 FX5CPU does not support serial communication connection.


### Recommended industries



### Supported GOT types



### Supported devices



# Easy debugging



Support system  
startup/  
adjustment

## FA transparent function



It's bothersome to open the cabinet every time I setup or adjust the device. For the safety reason, I don't want to open the cabinet and change cable connections.



Without opening the cabinet and by only connecting a personal computer to the front USB interface on the GOT, you can use the GOT as a transparent gateway to enable programming, startup, and adjustment of industrial devices.


### Function features

By connecting a personal computer to the front USB interface on the GOT, you can use the GOT as a transparent gateway to enable programming, startup, and adjustment of industrial devices. Users do not have to bother with opening the electrical cabinet or changing cable connections.

### Transferring data via a programmable controller

Transfer data from a personal computer to the GOT2000 with a programmable controller acting as a gateway. Changing project data during startup or maintenance is now easier than ever.

\* Not supported by GT21 and GS21.

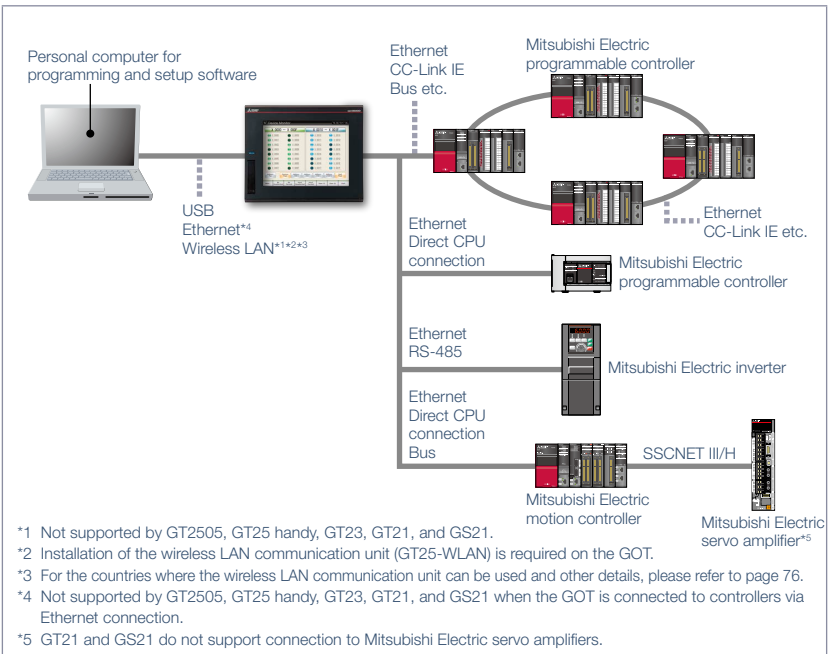

\*1 Not supported by GT2505, GT25 handy, GT23, GT21, and GS21.  
 \*2 Installation of the wireless LAN communication unit (GT25-WLAN) is required on the GOT.  
 \*3 For the countries where the wireless LAN communication unit can be used and other details, please refer to page 76.  
 \*4 Not supported by GT2505, GT25 handy, GT23, GT21, and GS21 when the GOT is connected to controllers via Ethernet connection.  
 \*5 GT21 and GS21 do not support connection to Mitsubishi Electric servo amplifiers.

### Specification details and restrictions

● Supported devices, connection types, and compatible software For the details, please refer to the relevant product manual.

### Recommended industries

|            |              |             |
|------------|--------------|-------------|
| Automotive | SEMICON, LCD | Electronics |
| F & B      | Pharma       | Plant       |

### Supported GOT types

|       |       |         |
|-------|-------|---------|
| GT27  | GT25* | GT23*   |
| GT21* | GS21* | SoftGOT |

### Supported devices

|       |       |          |
|-------|-------|----------|
| PLC   | Servo | Inverter |
| Robot | CNC   |          |

\* Restrictions apply to some functions. For the details, refer to the function descriptions above.

# Check status of industrial devices



Support  
maintenance  
work

## Device monitor function


Having problems?



How can I check the status of industrial devices without a personal computer?


GOT will solve your problems!

Entry monitor

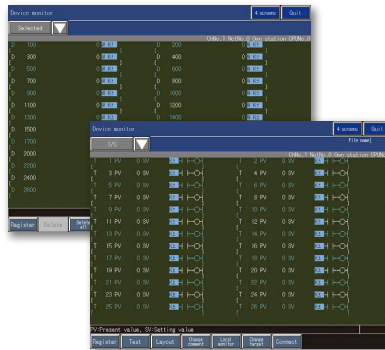

T/C (timer, counter) monitor

Batch monitor

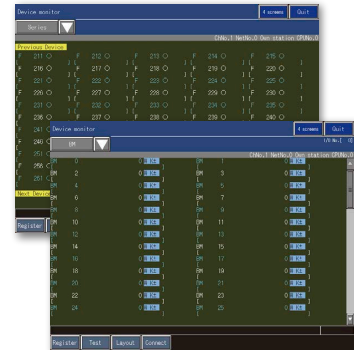

BM (buffer memory) monitor

GOT can be used to monitor or change device values of programmable controllers, motion controllers, robot controllers, or CNCs. The function is useful for starting up devices.

\* For the details of supported devices and connection types, please refer to the relevant product manual.

### Recommended industries

- Automotive
- SEMICON, LCD
- Electronics
- F & B
- Pharma
- Plant

### Supported GOT types


- GT27
- GT25
- GT23
- GT21
- GS21
- SoftGOT

### Supported devices

- PLC
- Servo
- Inverter
- Robot
- CNC

## Network monitor function


Having problems?

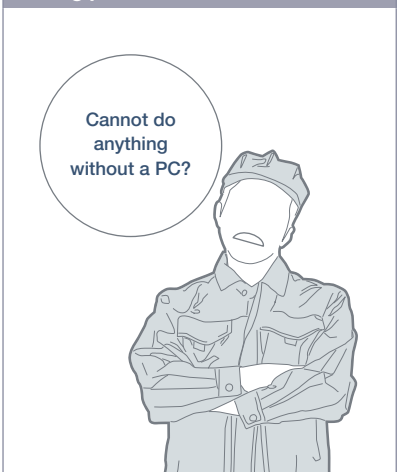


Can I check the network status without a personal computer?

GOT will solve your problems!

Network monitor

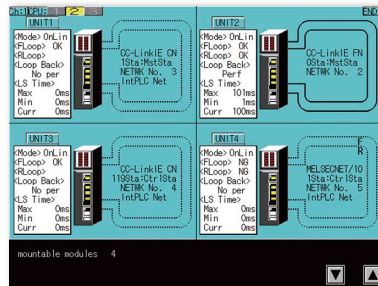

Communication status monitor

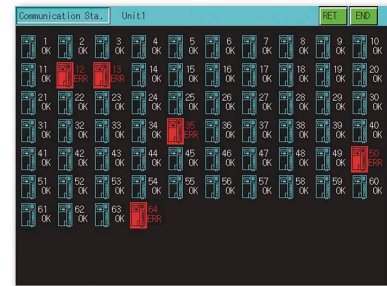

The network monitor function enables the GOT to monitor and display the status of the CC-Link IE Controller Network, CC-Link IE Field Network, MELSECNET/H network, and MELSECNET/10 network.

\* For the details of supported devices and connection types, please refer to the relevant product manual.

### Recommended industries

- Automotive
- SEMICON, LCD
- Electronics
- F & B
- Pharma
- Plant

### Supported GOT types

- GT27
- GT25
- GT23
- GT21
- GS21
- SoftGOT

### Supported devices


- PLC
- Servo
- Inverter
- Robot
- CNC

# Easily identify the cause of alarms



Support maintenance work

## Alarm function

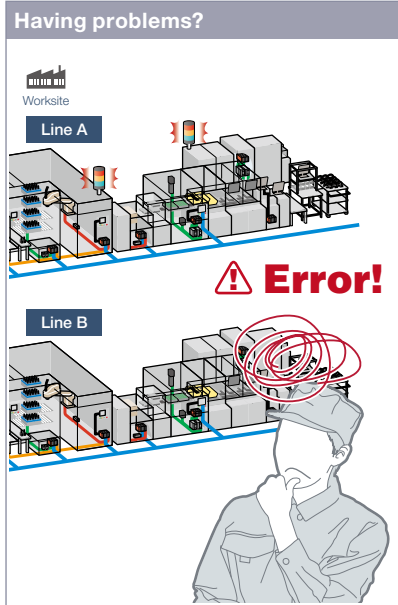

An error occurred! How can I identify the location and quickly recover the problem?

## GOT will solve your problems!

**User alarm**

- Step 1 Line "A" stops
- Step 2 Device "A" error
- Step 3 Tank 1 out of material
- Step 4 Troubleshooting

Alarms are displayed with a station No. and CPU No. in the list grouped by system or level. It helps you to identify the location where the error occurred in a large system, leading to quick troubleshooting.

### Function features

GOT displays communication errors (system alarms) of controllers and user-created alarms (user alarms).

### Easily identify the cause of alarms

#### [System alarm]

System alarms are displayed with additional information such as channel No., network No., station No., CPU No., screen No., and object ID. It helps you to identify the controller in which the error occurred and the cause of the alarm.

\* Not supported by GT21 and GS21.

### Alarms grouped by system or level

#### [User alarm]

Alarms are displayed in the list grouped by system or level or all alarms are displayed in one list. You can easily check the detailed information of multiple alarms even in a large system, leading to quick troubleshooting.

### Backup of alarm logs during power failure

#### [System alarm/User alarm]

Alarm log data can be saved to a built-in SRAM even when the power supply has failed.

\* Not supported by GT21 and GS21.

### Interaction with other functions [User alarm]

Use of the alarm function combined with the logging and graph helps you to check the status when the alarm occurred and the status of the error found in the graph.

### Interaction of user alarm and historical trend graph

Select an alarm from the list, and press the [Specified Jump] button

Display the alarm of the specified time

Display the graph recorded when the alarm occurred

Locate a cursor at the position of the error found in the graph, and press the [Specified Jump] button

\* For the necessary option devices, please refer to the "Function list" (page 148).

### Recommended industries

|            |              |             |
|------------|--------------|-------------|
| Automotive | SEMICON, LCD | Electronics |
| F & B      | Pharma       | Plant       |

### Supported GOT types

|       |       |         |
|-------|-------|---------|
| GT27  | GT25  | GT23    |
| GT21* | GS21* | SoftGOT |

### Supported devices

|       |       |          |
|-------|-------|----------|
| PLC   | Servo | Inverter |
| Robot | CNC   |          |

\* Restrictions apply to some functions. For the details, refer to the function descriptions above.




# Quick troubleshooting at worksite




Upgraded

## Document display function

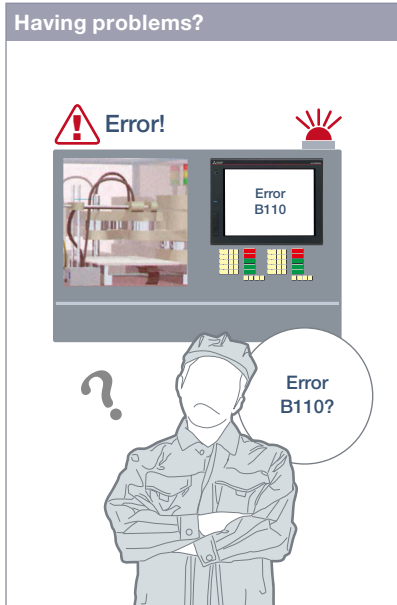

How can I recover from errors?

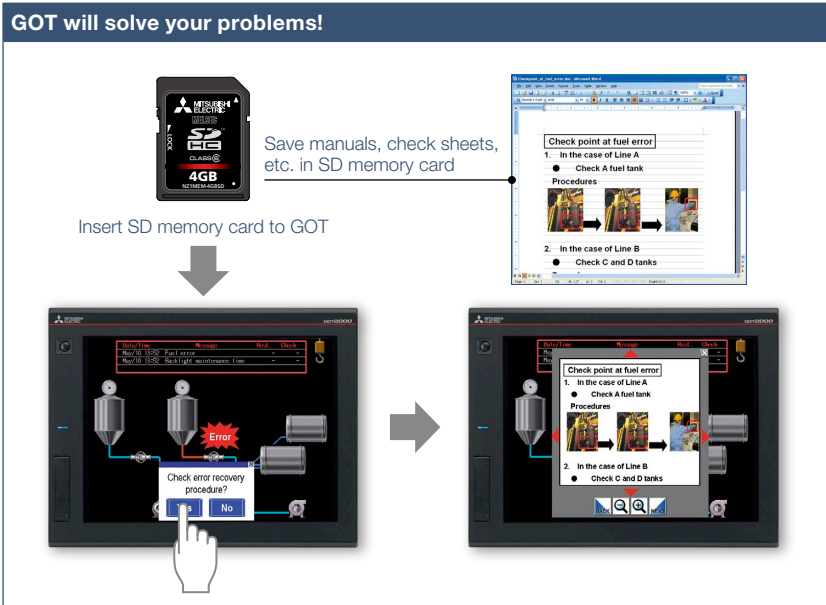

GOT displays manuals or check sheets with instructions on how to restore the system, which reduces the downtime.

### Function features

GOT displays various kinds of documents such as manuals. You can switch between pages, scroll, and zoom in/out a page for smooth viewing. Entering a page number easily displays the specified page among multiple pages in the manual.

### Indirect specification of document ID or page number


You can switch displayed documents on one screen just by changing the document ID or the page number with objects such as touch switch or numerical input.

### Viewing PDF files directly

PDF files can be viewed directly on GOT. With bookmark display and keyword searches, you can instantly check the information you want.

### Bookmark display and keyword searches of PDF files

Document display screen

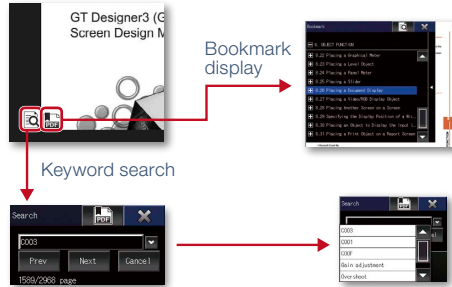

Display the "Bookmark" window and move to the page you want to display from "Bookmark"

Display the search window and enter a keyword to move to a page containing the keyword

### Specifying initial display page with keyword **NEW**

By specifying the initial display page with a keyword, the specified page automatically appears when using the document display function.

### Supporting network drive **NEW**

The network drive can be used as the save destination for the document files to display. Data can be saved without considering the capacity limit.

\* For the details, please refer to page 86.

### Specification details and restrictions

\* For the necessary option devices, please refer to the "Function list" (page 148).

● **Supported file formats** PDF file, DocumentConverter output file\*1 (doc, xls, ppt, pdf, jpg, bmp)

\*1 Documents should be converted using DocumentConverter that is included in GT Works3.

### Recommended industries

|            |              |             |
|------------|--------------|-------------|
| Automotive | SEMICON, LCD | Electronics |
| F & B      | Pharma       | Plant       |

### Supported GOT types

|      |      |         |
|------|------|---------|
| GT27 | GT25 | GT23    |
| GT21 | GS21 | SoftGOT |

### Supported devices


|     |       |          |
|-----|-------|----------|
| PLC | Servo | Inverter |
|     | Robot | CNC      |

# Quick troubleshooting from your office



Support maintenance work

## GOT diagnostics function

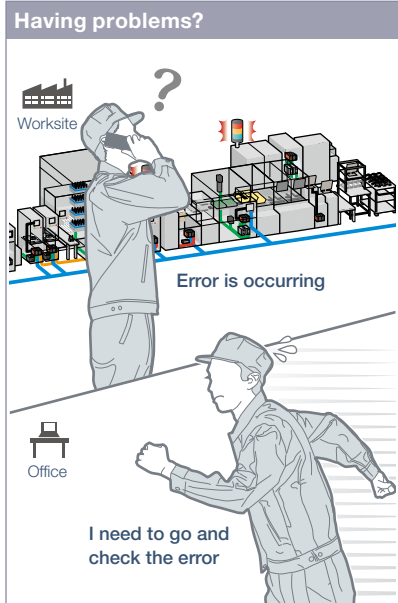

An error occurred at the worksite. I need to go and check the error quickly.

You do not need to visit the worksite. The status of GOT and CPU can be monitored using GT Works3 at your office. Check the error cause and corrective actions in detail, and you can solve the problem quickly.

### Function features

Without having manuals, you can use GT Works3 and check the cause and corrective actions of system alarms\* and script errors.

\* Not supported by GT21 and GS21.


### Checking system alarms\*

GOT errors, CPU errors, net work errors, and corrective actions can be checked. Without using GX Works3/GX Works2, quickly check errors using GT Works3.

\* Not supported by GT21 and GS21.

### Checking script errors

The error cause and corrective actions of GOT script programs can also be checked, thus enabling efficient work of program fix and machine setup.

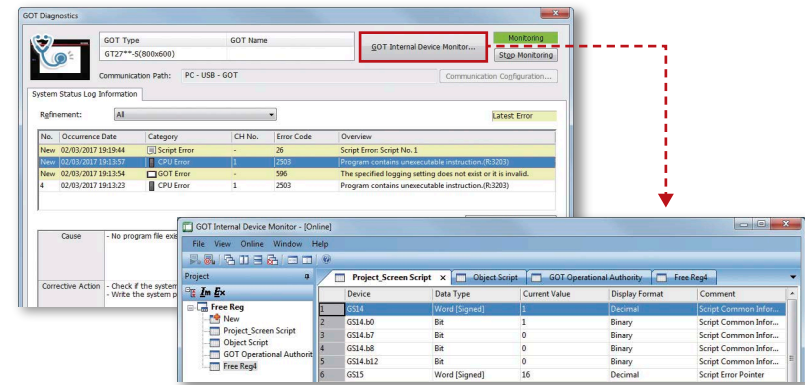

### GOT internal device monitor

On GT Works3, you can monitor the GOT internal devices and change the device values as necessary.

### Specification details and restrictions

● **Display contents** System alarms\*1 (GOT errors, CPU errors, network errors), script errors (project script, screen script, object script)

\*1 Not supported by GT21 and GS21.

### Recommended industries

- Automotive
- SEMICON, LCD
- Electronics
- F & B
- Pharma
- Plant

### Supported GOT types

- GT27
- GT25
- GT23
- GT21\*
- GS21\*
- SoftGOT

### Supported devices


- PLC
- Servo
- Inverter
- Robot
- CNC

\* Restrictions apply to some functions. For the details, refer to the function descriptions above.


# Support various international standards



## Compatible with environmental standards

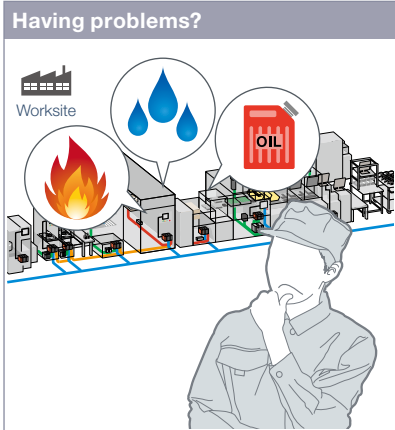

I want to use an HMI which is designed to be safely used in hazardous locations.

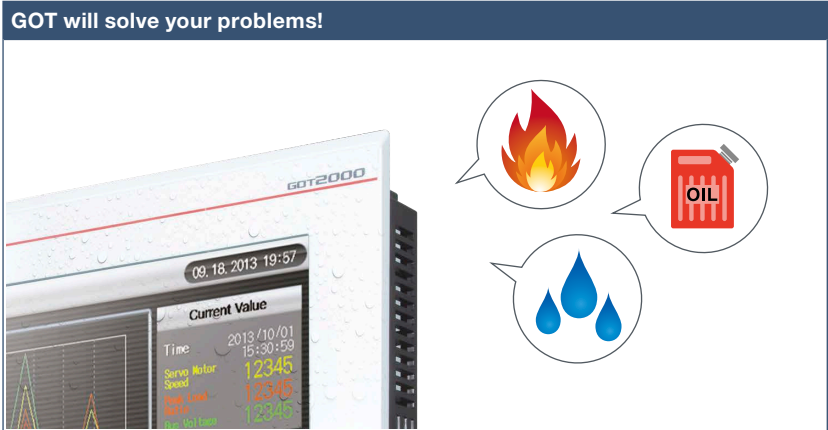


GOT has been approved as the environmentally-resistant equipment, which means that the GOT can be used in various locations.

### Function features

GOT is acceptable for use in hazardous locations classified by various safety standards (Class I, Division 2 [the United States, Canada], ATEX [Europe], KCs [Korea]).

Since GOT conforms to water, dust, and oil-proof IP67F standard, it is acceptable for use in areas where water or oil are present.

\* GT25 rugged model conforms to IP66F.

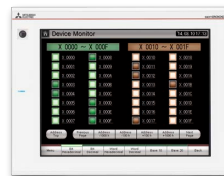

#### Approved use in hazardous locations

GOT complies with safety standards of the United States, Canada, Europe, and Korea. (White model only)



#### Water, dust, and oil-proof

IP67F for the front surface. GOT is acceptable for use in areas where water or oil are present.

\* GT25 rugged model conforms to IP66F.

### Approval standards list (as of December 2019)

\* For the latest information, please refer to the Mitsubishi Electric Factory Automation Global website ([www.MitsubishiElectric.com/fa/](http://www.MitsubishiElectric.com/fa/)).

O: Supported x: Not supported

| Approval standards |   |                    | Standard model<br>(panel color: black) | White model<br>(panel color: white) |                            | GT25<br>open frame model     | GT25 wide model<br>GT25 rugged model<br>GT21 wide model    |
|--------------------|---|--------------------|--|-------------------------------------|----------------------------|------------------------------|--|
| Mark               | Overview  | Country/<br>Region | GT27/GT25<br>GT23/GT21/GS21            | GT27□□-□TWA<br>GT25□□-□TWA          | GT27□□-□TWD<br>GT25□□-□TWD | GT25□□F-□TNA<br>GT25□□F-□TND | GT2510-WXT□D<br>GT2507-WT□D<br>GT2507T-WTBD<br>GT2107-WT□D |
| CE                 | EMC Directive harmonized standards,<br>Low Voltage Directive harmonized standards,<br>RoHS Directive harmonized standards | Europe             | ○                                      | ○                                   | ○                          | ○                            | ○  |
| Ex                 | ATEX Directive harmonized standards*1   | Europe             | x                                      | x                                   | ○                          | x                            | x  |
| UL                 | Safety standards<br>Class I, Division 2   | United States      | ○                                      | ○                                   | ○                          | ○                            | ○  |
| cUL                | Safety standards<br>Class I, Division 2   | Canada             | x                                      | ○                                   | ○                          | x                            | x  |
| KC                 | EMC standards   | Korea              | ○                                      | ○                                   | ○                          | ○                            | ○  |
| KCs                | Safety standards*1  | Korea              | x                                      | x                                   | ○                          | x                            | x  |

\*1 To comply with ATEX directive and KCs regulation, there are some restrictions. Please refer to the specification details and restrictions below.

#### Specification details and restrictions

- **Class I, Division 2** This classification means that the equipment has been approved for use in Class I, Division 2 hazardous locations.
- **ATEX directive and KCs regulation** GOT is acceptable for use in hazardous locations classified by these safety standards. To comply with the ATEX directive and KCs regulation, protective sheet and special fitting in the "Product list" are required separately. (Only protective sheet is required for GT2508-VTWD.) Communication units and option units cannot be used. When using these units, GOT does not comply with the standards. For the details, please refer to the Technical Bulletin "GOT2000 Series in Compliance with the ATEX Directive and KCs Certification Requirements" (No. GOT-A-0101) on the Mitsubishi Electric Factory Automation Global website.
- **IP67F** To conform to IP67F, close the USB environmental protection cover by pushing in the [PUSH] mark or [PULL] mark firmly to lock the cover\*1. Note that the structure does not guarantee protection in all users' environments. The GOT may not be used in certain environments where it is subjected to splashing oil or chemicals for a long period of time or soaked in oil mist.

\*1 Open frame models conform to IP67F with the environmental protection sheet attached.

# Wireless communication between GOT and PC



## Wireless LAN communication unit

**Having problems?**

**GOT will solve your problems!**

How do I connect GOT and a personal computer without using a cable?

The wireless LAN connection between GOT and a personal computer is supported. Project data transfer, FA transparent function, GOT Mobile function, and other functions can be used.

- \*1 Installation of the wireless LAN communication unit (GT25-WLAN) is required on the GOT.
- \*2 Not supported by GT2505, GT23, GT21, and GS21 because the wireless LAN communication unit cannot be installed on these models.
- \*3 Access point mode is supported by GT Works3 Ver.1.144A or later. No access point is required separately for direct communication between GOT and mobile devices.

**Specification details and restrictions**

\* For the necessary option devices, please refer to the "Function list" (page 148).

- **Use in wireless LAN connection** Data transfer in the wireless LAN communication may not be as stable as that in the cable communication. A packet loss may occur depending on the surrounding environment and installation location. Make sure to check that it operates properly before using.
- **Country applicable to wireless LAN communication unit** The wireless LAN communication unit with hardware version A can be used only in Japan. The unit with hardware version B or later can be used in Japan (Japan Radio Law), the United States (FCC standards), the EU member states, Switzerland, Norway, Iceland, and Liechtenstein (RE Directive). The unit with hardware version D or later can be used in Japan, the United States, the EU member states, Switzerland, Norway, Iceland, Liechtenstein, China (excluding Hong Kong, Macau, Taiwan), and Korea.

**Recommended industries**

- Automotive
- SEMICON, LCD
- Electronics
- F & B

**Supported GOT types**

- GT27
- GT25\*
- GT23
- GT21
- GS21
- SoftGOT

\* Excluding GT2505. For the details, refer to the function descriptions above.

# Design secure network configuration



## Ethernet communication unit

**Having problems?**

**GOT will solve your problems!**

I want to separate the network for security reason.

Two Ethernet ports physically separate the information system network in the office from the control system network at the production site; therefore the network architecture is more reliable and secure.

- \* Installation of the Ethernet communication unit (GT25-J71E71-100) is required on the GOT.
- \* GT25 wide models have two Ethernet ports as standard so that the Ethernet communication unit is not required.
- \* Not supported by GT2505, GT23, GT21, and GS21 because the Ethernet communication unit cannot be installed on these models.

**Specification details and restrictions**

\* For the necessary option devices, please refer to the "Function list" (page 148).

- **To use Ethernet communication unit** To use the Ethernet communication unit, the BootOS version Z or later is required. Because the unit cannot be used depending on the connection destination, please refer to the GOT2000 Series Connection Manual.

**Recommended industries**

- Automotive
- SEMICON, LCD
- Electronics
- F & B
- Pharma
- Plant

**Supported GOT types**

- GT27
- GT25\*
- GT23
- GT21
- GS21
- SoftGOT

\* Excluding GT2505. For the details, refer to the function descriptions above.

# Implement the sound notification system easily




Support system design

## ■ Sound output function



How can I check the equipment status from a remote location?

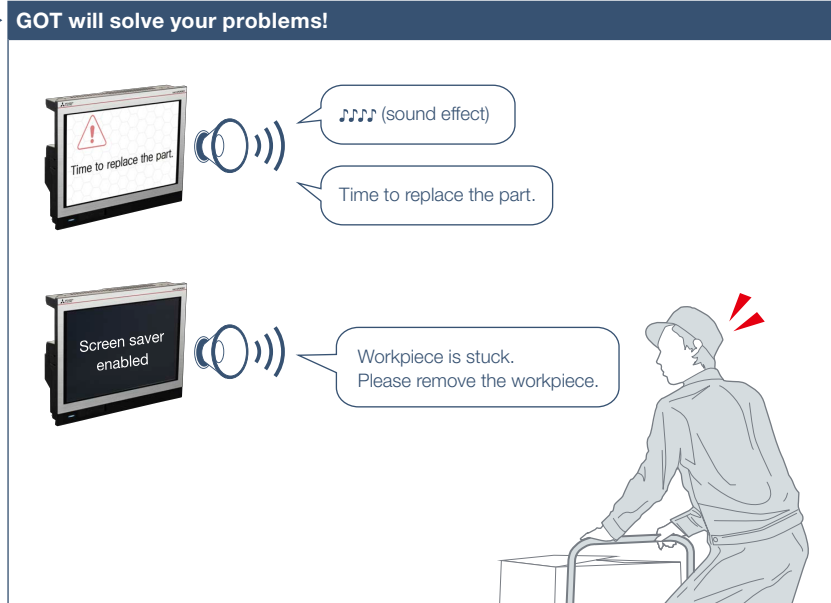

GOT can be used to output sound data. Outputting a notification sound can reliably convey the information to the operators who are working away from the GOT. It is also usable while screen saver is active.

### Function features

The sound can be output\* from the audio equipment such as a speaker that is connected to GOT. The sound can be played when the trigger action or time action conditions are satisfied or touch switches are touched.

\* GT25 wide models have a built-in sound output interface so that the sound output unit (GT15-SOUT) is not required. The unit is required for other models.

\* Not supported by GT2505.

\* To output sound, it is required to create sound files.

### Sound files can be created easily (See page 118)

There are three types of sound files: messages, sound effects, and melodies. Messages can easily be created by using the speech synthesis function\* (page 118). Sound effects and melodies are included in GT Works3 so that you can reduce time for system design.

\* GT Works Text to Speech License (SW1DND-GTVO-M) is required separately.

#### Sound files

| Message                         | Sound effect                    |
|---------------------------------|---------------------------------|
| Create from arbitrary text      | More than 50 files are included |
| <b>Melody</b>                   |                                 |
| More than 10 files are included |                                 |

### Cancel or mute the sound while it is being played back

After checking the situation, you can stop or mute the sound while it is being played back so that you do not need to worry about annoying other operators.



### Specification details and restrictions

\* For the necessary option devices, please refer to the "Function list" (page 148).

- **Unit installation** GT25 wide models have a built-in sound output interface so that the sound output unit (GT15-SOUT) is not required. The unit is required for other models.
- **Sound file specifications** Sound file format: WAV format, sampling frequency: 8.000 kHz/16.000 kHz, channel number: 1 channel (monaural)
- **Applicable plug** Ø3.5 stereo mini-plug (3-prong)

### Recommended industries

|            |              |             |
|------------|--------------|-------------|
| Automotive | SEMICON, LCD | Electronics |
| F & B      | Pharma       | Plant       |

### Supported GOT types


|      |       |         |
|------|-------|---------|
| GT27 | GT25* | GT23    |
| GT21 | GS21  | SoftGOT |

\* Excluding GT2505. For the details, refer to the function descriptions above.

# Record/Playback videos to see what happened at worksite




## Multimedia function

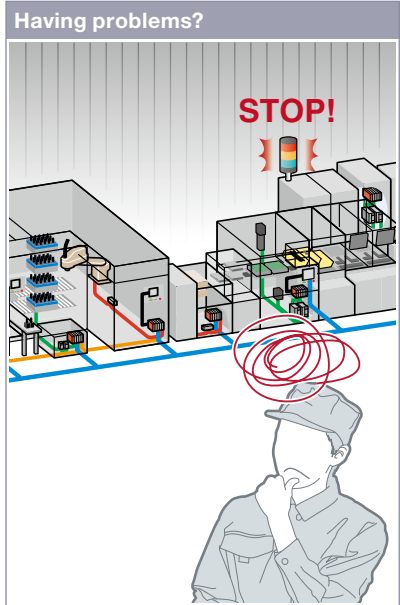

Production line has stopped due to machine errors! It's difficult to identify the cause of the error on the unattended line.

### GOT will solve your problems!

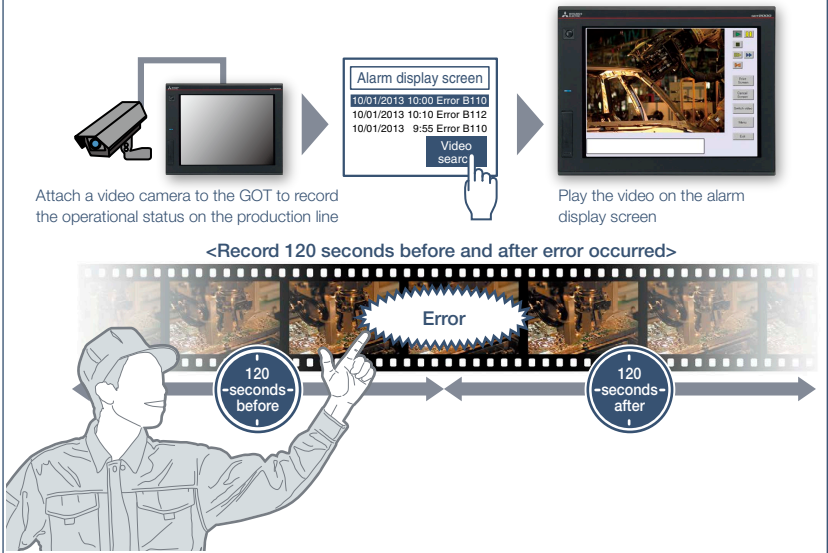


GOT records the operational status on the production line and plays back the recorded video image. Visual clarity of the image helps you to analyze the cause of the error.

### Function features

GOT displays and records the image taken by a video camera connected to the multimedia unit and plays back the saved video image.

To set the timing of recording, you can use a device of a controller as a trigger.

- \* Excluding GT2705.
- \* Multimedia unit (GT27-MMR-Z) and CF card are required.

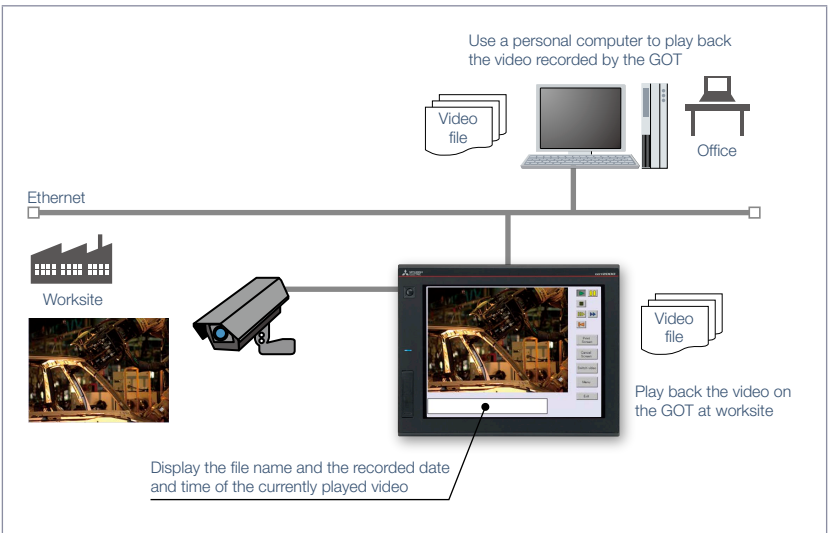

### Specification details and restrictions

\* For the necessary option devices, please refer to the "Function list" (page 148).

#### Recording specifications

**Before-after event recording** This allows the recording of a total of 240 seconds of images, including 120 seconds before and after a system error occurs. (When event trigger device turns on).

**Standard mode** This allows two types of recording modes: Recording size VGA (640 × 480), frame rate maximum 15fps; Recording size QVGA (320 × 240), frame rate maximum 30fps.

**Long-time mode** This allows the recording for long hours of approximately two days. Recording size QVGA (320 × 240), frame rate 15fps.

**Unit installation** One of the following units can be installed: multimedia unit, video input unit, digital video output unit, RGB input unit, video/RGB input unit, or RGB output unit.

### Recommended industries

- Automotive
- SEMICON, LCD
- Electronics
- F & B
- Pharma

### Supported GOT types

- GT27\*
- GT25
- GT23
- GT21
- GS21
- SoftGOT

### Supported devices

- PLC
- Servo
- Inverter
- Robot
- CNC

\* Excluding GT2705. For the details, refer to the function descriptions above.


# Monitor worksite using video images



Support system design

Upgraded

## Video display/RGB display/Video output function

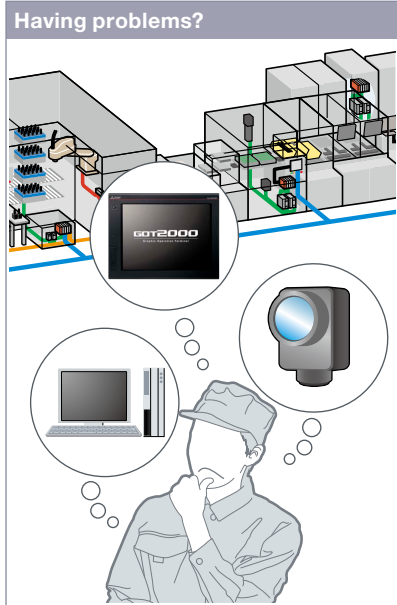

There is not enough space for multiple monitors at the worksite.

### Function features

GOT acts as a monitor to display images which are recorded by a video camera or saved in a personal computer.


\* Excluding GT2705.

### Video input

Input images of up to 4 video cameras can be simultaneously displayed on the GOT. You can zoom in or zoom out the images and save the GOT images (hard copy images).

\* Video input unit (GT27-V4-Z) or video/RGB input unit (GT27-V4R1-Z) is required.

## GOT will solve your problems!

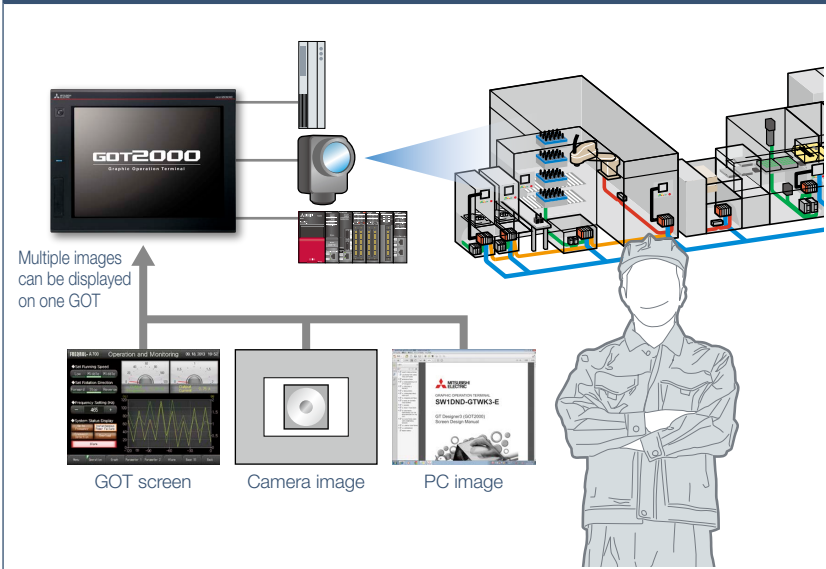

GOT acts as a monitor to display images which are recorded by a video camera or saved in a personal computer, and thus there is no need to have additional monitors.

### RGB input\*1

RGB images can be displayed on the GOT. Simultaneous display of two screens is also possible\*2. You can use various effects for the images such as rotation, and gesture operations can be used for zooming in/out (400%) and scrolling objects\*2.

\*1 RGB input unit (GT27-R2) or video/RGB input unit (GT27-V4R1-Z) is required.

\*2 Supported by GT27-R2 only.

### RGB output

The GOT screen can be displayed on a commercially available large display even when the backlight of the GOT is off.

\* RGB output unit (GT27-ROUT) is required.

### HDMI output **NEW**

Connect an HDMI compatible monitor and display GOT screens on the large monitor. Since the GOT screen can be displayed on a large monitor, it is recommended for ANDON applications.

\* Digital video output unit (GT27-VHOUT) is required.



By creating a base screen larger than the resolution of GOT, high resolution screen that fits the external monitor can be displayed. (For the details, see page 88)

### Specification details and restrictions

\* For the necessary option devices, please refer to the "Function list" (page 148).

- **Unit installation** One of the following units can be installed: multimedia unit, video input unit, digital video output unit, RGB input unit, video/RGB input unit, RGB output unit
- **Applicable peripheral devices** For the details, please refer to the Technical Bulletin No. GOT-A-0064 on the Mitsubishi Electric Factory Automation Global website ([www.MitsubishiElectric.com/fa/](http://www.MitsubishiElectric.com/fa/)).

### Recommended industries

|            |              |             |
|------------|--------------|-------------|
| Automotive | SEMICON, LCD | Electronics |
| F & B      | Pharma       | Plant       |

### Supported GOT types

|       |      |         |
|-------|------|---------|
| GT27* | GT25 | GT23    |
| GT21  | GS21 | SoftGOT |

\* Excluding GT2705. For the details, refer to the function descriptions above.


### Supported devices

|     |       |          |
|-----|-------|----------|
| PLC | Servo | Inverter |
|     | Robot | CNC      |

# Quick changeover

Upgraded

## Recipe function

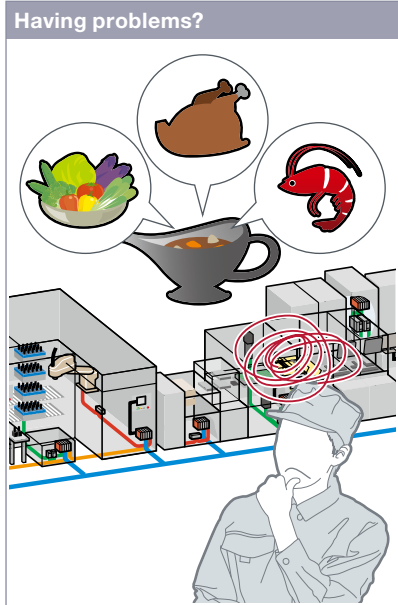

### GOT will solve your problems!

|          |                 | D2000 | D2001 | D2002 |
|----------|-----------------|-------|-------|-------|
| Record 1 | Vegetable curry | 300   | 0     | 0     |
| Record 2 | Chicken curry   | 0     | 300   | 0     |
| Record 3 | Seafood curry   | 0     | 0     | 150   |

How can I change the recipe information such as material blend and machine conditions?

GOT saves recipe information for individual product. You can select a recipe to be written to the programmable controller, which achieves the quick changeover for the production line.

### Function features

GOT saves the recipe information (device values) such as material blend and machine conditions. You can change the recipe on the GOT and write it to a programmable controller to quickly perform the changeover.

### Easy changeover

Changing recipes (changeover) is easy on a user-created screen\*1 or on the utility screen.

### Checking record values before recipe change

Without writing records to programmable controllers, record values can be checked and changed. By overwriting a recipe file with the changes, the changed values can be written to devices in programmable controllers. (Recipe special control)  
\* Not supported by GT21 and GS21.

| Change recipes in the utility screen                         | Change recipes from user-created screens*1   |   |
|--|--|---|
|  | Recipe operation window  | Recipe display (record list)  |
|  |  |   |
| Secured by setting passwords to activate the utility screen. | Without creating recipe change screen, recipes can be changed by using a standard recipe operation window. | Record selection screen can be created by the users. Various functions and designs are available. |

### Recipe function can be used without data storage **NEW**

Data storage or SRAM user area can be specified as the save destination of recipe data.

\*1 Changing recipes on a user-created screen is not supported by GT21 and GS21.

### Specification details and restrictions

\* For the necessary option devices, please refer to the "Function list" (page 148).

- Supported device formats Bit, BIN, BCD, Real, String
- Supported formats of recipe file conversion CSV file, Unicode® text file

### Recommended industries

|            |              |             |
|------------|--------------|-------------|
| Automotive | SEMICON, LCD | Electronics |
| F & B      | Pharma       | Plant       |

### Supported GOT types

|       |       |         |
|-------|-------|---------|
| GT27  | GT25  | GT23    |
| GT21* | GS21* | SoftGOT |

### Supported devices

|       |       |          |
|-------|-------|----------|
| PLC   | Servo | Inverter |
| Robot | CNC   |          |

\* Restrictions apply to some functions. For the details, refer to the function descriptions above.



# Support recipe setting (record) selection



Support system operation

## ■ Recipe display (record list)

**Having problems?**

Can I select a recipe from the list?

I want to select recipe by name, not by number.

**GOT will solve your problems!**

GT Works3

Create the list from the recipe setting dialog

Select your favorite style from the preset list and easily create appropriate screen!


Easy to view recipe display

How can I change recipes easily on a user-created screen?

Recipe names (record names) are displayed in a list format on GOT. Sort or narrow down the list and easily change recipes on GOT.

### Function features


Create the recipe display (record list) easily just by selecting required items in GT Works3. Colors, line styles, and borders can be changed as you need.

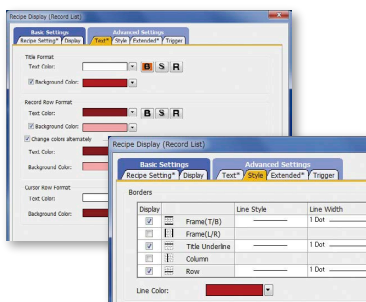

Colors, line styles, and borders can be changed as you need!

### Read and write records

Just select a record and touch a switch on GOT and you can easily read or write records.

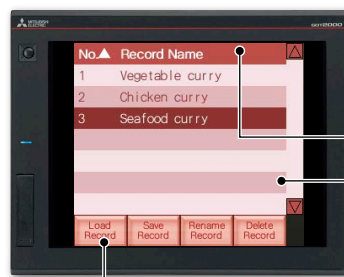

Touch switches for various recipe operations

### Change display order of records

Records can be sorted by record number or record name by touching the column header.

### Change or delete record names

Change record names or delete records by specifying the record name using numerical input.

Touch and sort records

Scroll the list by gesture operation

### Specification details and restrictions

- **Customizable settings** Text color, background color, cursor color, ruled line color, line type, line width, show/hide scrollbar, etc.
  - **Functions that can be used with recipe display (record list) object** Read/write records, delete records, verify records, change/sort/filter record names, export/import recipe data
  - **How to obtain sample screens** Sample screens are included in GT Works3. For the details, please contact your local sales office.
- The sample screens are supported by the following GT Works3 versions: Ver.1.155M or later.

### Recommended industries

- Automotive
- SEMICON, LCD
- Electronics
- F & B
- Pharma
- Plant

### Supported GOT types

- GT27
- GT25
- GT23
- GT21
- GS21
- SoftGOT


### Supported devices

- PLC
- Servo
- Inverter
- Robot
- CNC


# Increase efficiency of maintenance work



## Writing resource data

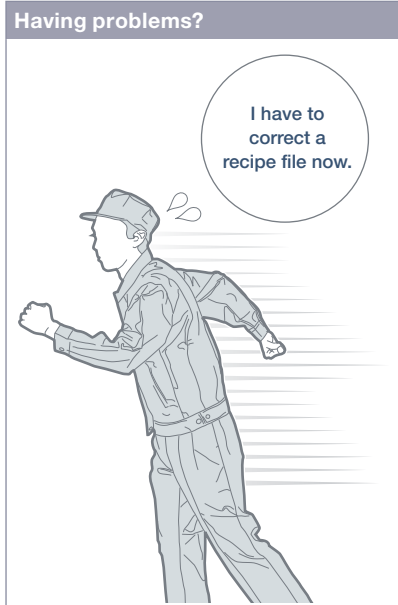

How can I correct recipe files in GOT without visiting the worksite?

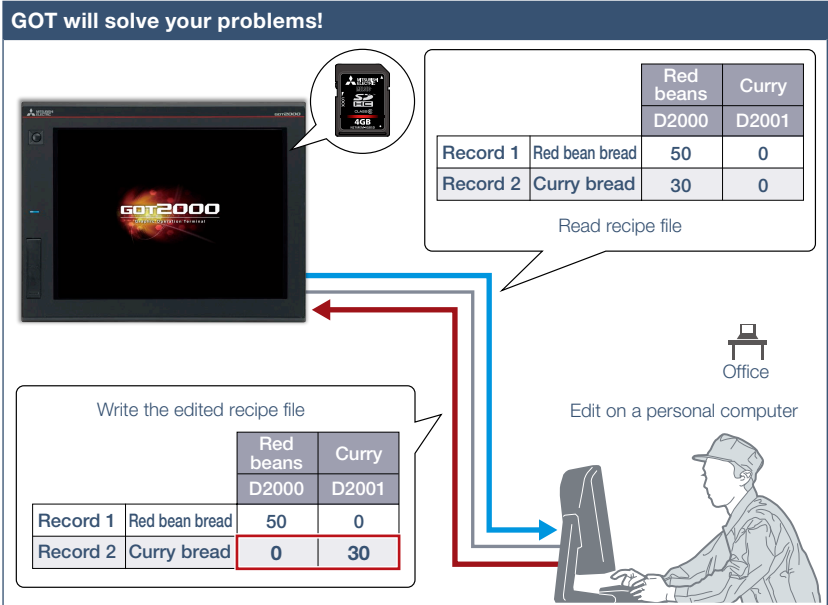


Recipe files read from GOT can be edited and written back to an SD memory card in the GOT. Without ejecting the SD memory card, you can read, edit, and write recipe files in your office.

### Function features

Resource data (alarm log file, recipe file, logging file, operation log file, image file, and so on) can be written to GOT. There is no need to eject and insert an SD memory card.

### Easy to edit the public folder of the GOT Mobile function

PDF and other files can be directly written to the public folder of the GOT Mobile function. Updating the public folder is easy as well.

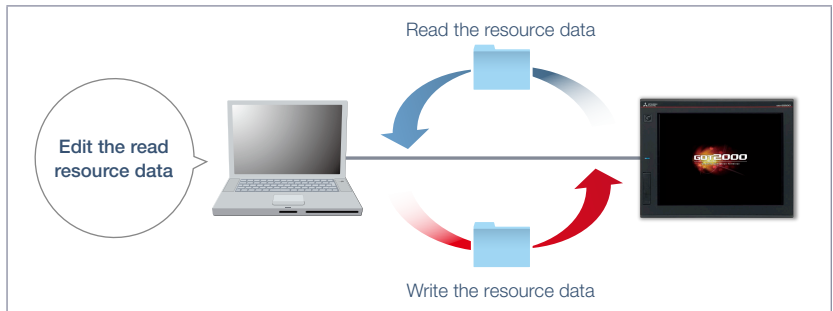

### Specification details and restrictions

● **Transferable resource data** The data that can be transferred differ depending on the GOT model. In addition, the resource data cannot be written depending on the data type. For the details, please refer to the GT Designer3 (GOT2000) Screen Design Manual.

### Recommended industries

|            |              |             |
|------------|--------------|-------------|
| Automotive | SEMICON, LCD | Electronics |
| F & B      | Pharma       | Plant       |

### Supported GOT types

|      |      |         |
|------|------|---------|
| GT27 | GT25 | GT23    |
| GT21 | GS21 | SoftGOT |


### Supported devices

|     |       |          |
|-----|-------|----------|
| PLC | Servo | Inverter |
|     | Robot | CNC      |




# Protect valuable assets

## Various security functions

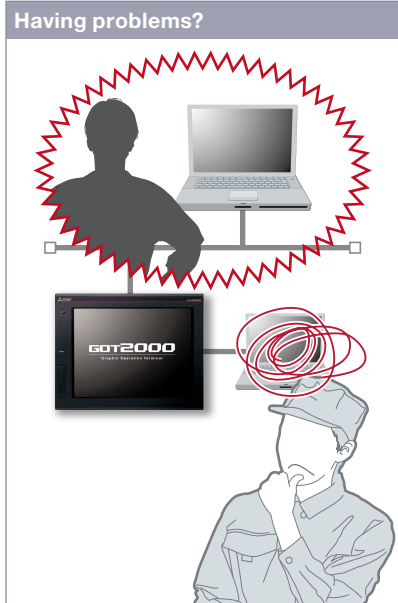

I know the importance of security functions to protect valuable assets, but how can I do...?

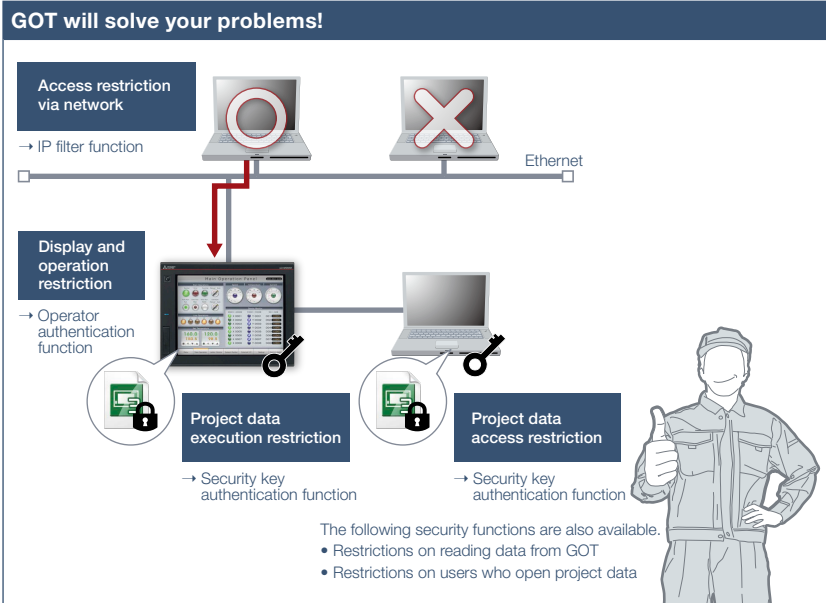

To protect customers' assets, GOT offers enhanced security functions such as access restriction on project data and access restriction via network.

### Function features

Security key authentication function and IP filter function offer enhanced security.

### Prevent data alteration and duplication [Security key authentication function]



On the GOTs and personal computers without registered security keys, the project data cannot be opened and executed, which protects your techniques (know-how) from information leaks.

\* Not supported by GT21 and GS21.



### Reduce risk of unauthorized access through network [IP filter function]

Registering the IP address of the device which can access the GOT restricts the access from unauthorized devices.

### Security key authentication function

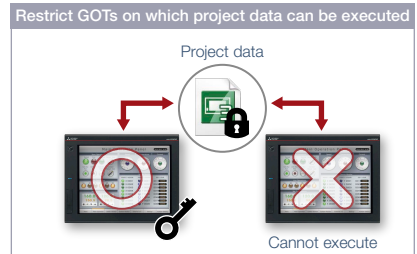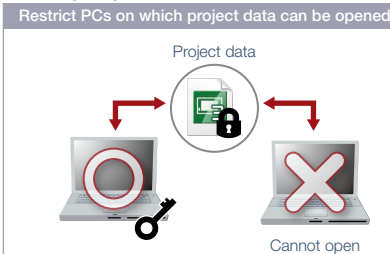

### IP filter function

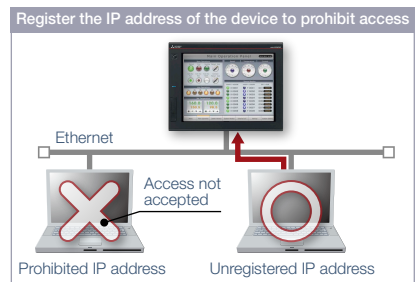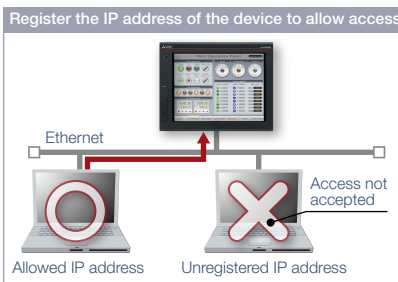

### Recommended industries

|            |              |             |
|------------|--------------|-------------|
| Automotive | SEMICON, LCD | Electronics |
| F & B      | Pharma       | Plant       |

### Supported GOT types

|       |       |         |
|-------|-------|---------|
| GT27  | GT25  | GT23    |
| GT21* | GS21* | SoftGOT |

### Supported devices

|     |       |          |
|-----|-------|----------|
| PLC | Servo | Inverter |
|     | Robot | CNC      |


\* Restrictions apply to some functions. For the details, refer to the function descriptions above.

# Identify error cause based on history information



Upgraded

## Operation log function

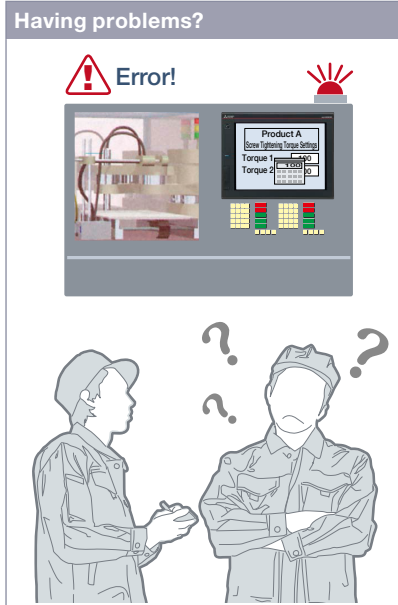

### GOT will solve your problems!

**Operation log list**

Check the brief information of the log

**Detailed information**

Check the detailed information of the log

for more details...

An error occurred due to improper operations, but I do not exactly know why the error occurred...

GOT records all the operations performed by operators. Checking the recorded operation history helps you to identify and analyze the cause of the error occurred due to improper operations, leading to making improvements, preventing recurrence, and enhancing traceability.


### Function features

GOT records the operation information, such as the “what, when, and how” of an operation performed, in chronological order in an SD memory card or USB memory.

Use of the operation log function combined with the operator authentication function (page 85) records additional information of “who” performed the operation.

### Coordination with user-created management systems NEW

The operation log records not only the operator names that are used in the operator authentication function but also the character strings stored in an external device. It is easy to coordinate your own user management system and the GOT's operation log.

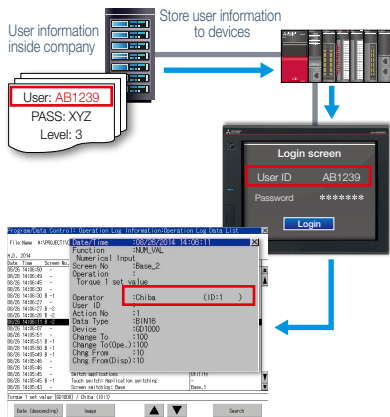


### Easy management for operation log file

You can copy and delete an operation log file created by the operation log function and change a file name on GOT without using a personal computer. The operation log file can be converted into a CSV file or Unicode® text file so that the file can be checked on the personal computer.

### Quick check of operation log file

You can select a log from the operation log list and check the detailed information. Screen images also help you to identify the improper operation.

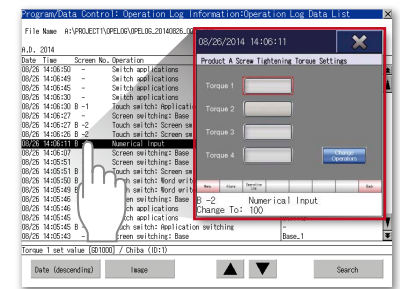

\* For the necessary option devices, please refer to the “Function list” (page 148).

### Recommended industries

- Automotive
- SEMICON, LCD
- Electronics
- F & B
- Pharma
- Plant

### Supported GOT types

- GT27
- GT25
- GT23
- GT21
- GS21
- SoftGOT

### Supported devices


- PLC
- Servo
- Inverter
- Robot
- CNC

# Security with password management



Support system  
operation

## Operator authentication function

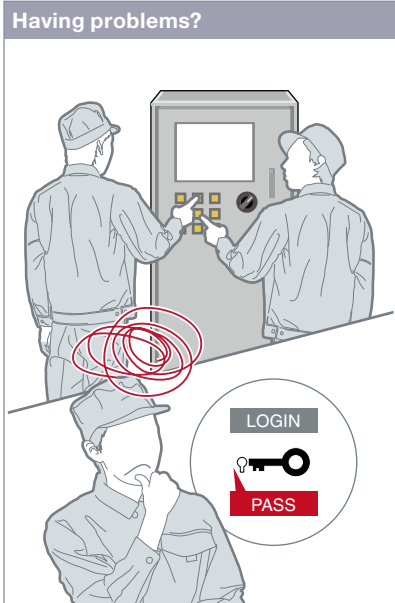

How can I restrict the unauthorized operators?

### Function features


Setting the operation authority and the viewing authority achieves “enhanced security” and allows “access management per operator”. Use of the operator authentication function combined with the operation log function (page 84) enables you to check the “who, what, when, and how” of an operation performed.

### Enhanced password security

By setting password requirements (the minimum number of characters and the character types), you can set more advanced passwords. It is possible to prompt a password change at the initial login or notify the password expiration date in advance (1 day to 30 days).

\* Not supported by GT21 and GS21.

## GOT will solve your problems!

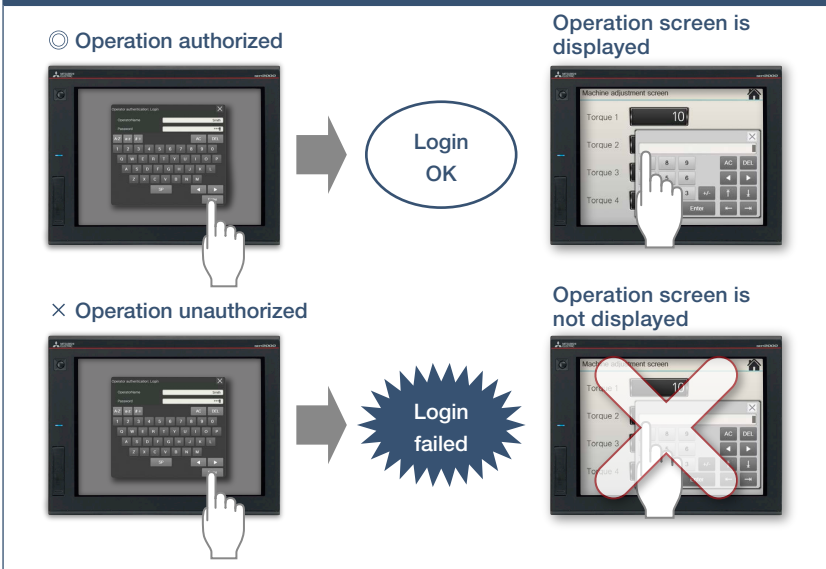

Operator name and password enable the secure login management in a large-scale worksite, providing the flexibility of setting the operation authority per worksite or operator. In addition, the login management can be performed by an external authentication device such as RFID.

### How to authenticate the operator

**Method ①**

Input an operator name and password for login

**Method ②**

Use an ID card or ID tag for login

Use of method ① combined with method ② is acceptable. Secure login management is achieved even when an external authentication device has failed.

### Settings for operation authority

Set the authority to allow John Smith to adjust “Torque 1” and “Torque 2”.

John Smith can adjust “Torque 1” and “Torque 2”.

John Smith cannot adjust “Torque 3”.

\* For the necessary option devices, please refer to the “Function list” (page 148).

### Recommended industries

|            |              |             |
|------------|--------------|-------------|
| Automotive | SEMICON, LCD | Electronics |
| F & B      | Pharma       | Plant       |

### Supported GOT types

|       |       |         |
|-------|-------|---------|
| GT27  | GT25  | GT23    |
| GT21* | GS21* | SoftGOT |

\* Restrictions apply to some functions. For the details, refer to the function descriptions above.

### Supported devices



|     |       |          |
|-----|-------|----------|
| PLC | Servo | Inverter |
|     | Robot | CNC      |

# Saving files in network drive



NEW

## Network drive

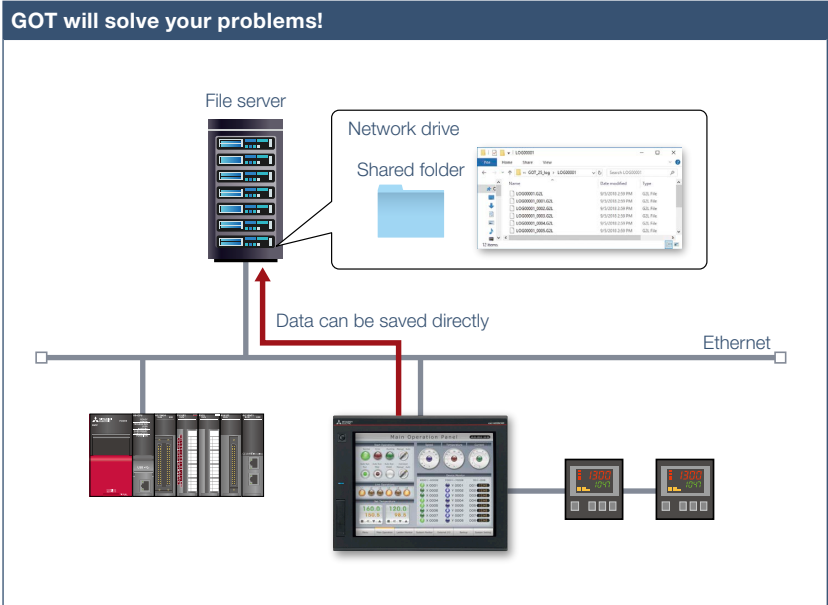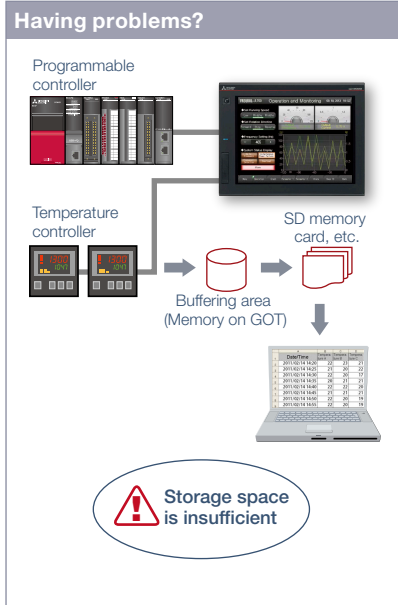

As the size of the logging files and other data saved in the GOT increases, the memory capacity soon becomes insufficient.


Since GOT files can be saved directly to the shared folder on the file server (personal computer) connected by Ethernet, data can be accumulated without considering the capacity limit.

### Function features

The network drive can be used as the save destination for the GOT files. By setting the shared folder on the file server (personal computer) connected by Ethernet as the network drive, the files can be saved directly to the shared folder from the GOT. Use the external storage to accumulate data without considering the capacity limit.

### Saving all data to file server

Since files can be saved directly to the file server from multiple GOTs, you can view necessary data just by accessing the server.

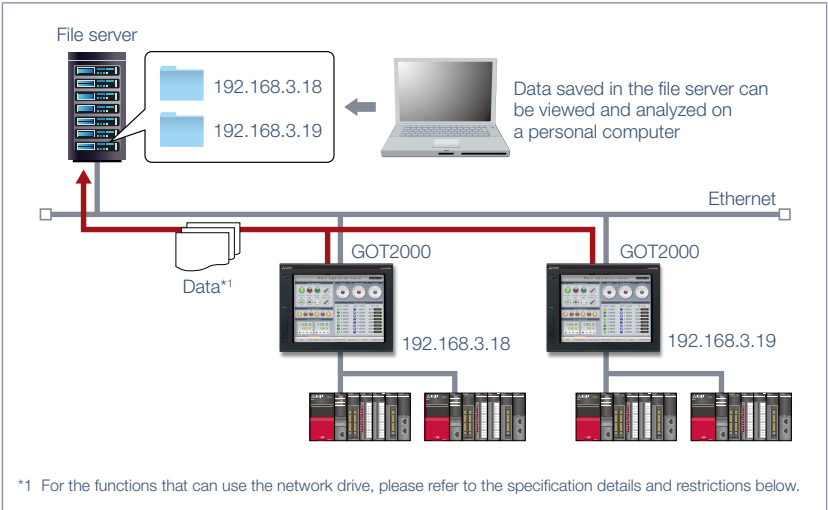

\*1 For the functions that can use the network drive, please refer to the specification details and restrictions below.

### Specification details and restrictions

- **File server** File servers must support the file sharing function (SMB or CIFS). For recommended file servers, please refer to the relevant product manual.
- **Functions that can use network drive** Document display, logging, hard copy, file printing, report, file transfer function (FTP transfer), file transfer function (GOT internal transfer), file management function
- **Using network drive on multiple GOTs** When the file save destination setting is common to multiple GOTs, select [Separate destinations for each GOT] in the setting dialog for the function using the network drive. A folder named as the GOT's IP address is created automatically and the files can be prevented from being overwritten.

### Recommended industries

|            |              |             |
|------------|--------------|-------------|
| Automotive | SEMICON, LCD | Electronics |
| F & B      | Pharma       | Plant       |

### Supported GOT types

|      |      |         |
|------|------|---------|
| GT27 | GT25 | GT23    |
| GT21 | GS21 | SoftGOT |

### Supported devices

|     |       |          |
|-----|-------|----------|
| PLC | Servo | Inverter |
|     | Robot | CNC      |



Support system operation

# Printing stored data all at once

Upgraded

## ■ Printing hard copies and reports



How can I make the printer ready and then print data all at once?

### Function features

The hard copy data captured while running GOT or the collected report data can be printed.

### Supported printer\*1

- Serial printer
- PictBridge-compatible printer\*2
- Ethernet printer\*3 **NEW**

\*1 For the supported printer models, please refer to the Technical Bulletin No. GOT-A-0064 on the Mitsubishi Electric Factory Automation Global website.

\*2 Not supported by GT2505, GT25 wide, GT25 handy, GT25 rugged, GT23, GT21, and GS21.

\*3 Supported by GT2104-R and GT2103-PMBD among GT21.



Files created in the hard copy function or report function can be printed on a printer. When printing reports, the data can be temporarily stored in an SD memory card or other data storage and printed all at once.

### Printing reports at an arbitrary timing

The timing to output reports is as follows. Triggers to output data can be set for each report screen.

### GT27 model, GT25 model, GT23 model

- When trigger condition is satisfied **NEW**  
Stores the collected data into a temporary file, and collectively outputs the data to a report when the output trigger condition is satisfied.
- At the time of data collection (only when using a serial printer)  
Outputs the collected data to a report simultaneously with data collection.

### GT21 model, GS21 model

- At the time of data collection (only when using a serial printer)
- When one page's worth of data is collected (only when using an Ethernet printer)

### SoftGOT

- When trigger condition is satisfied **NEW**

\* For the necessary option devices, please refer to the "Function list" (page 148).

### Recommended industries

|            |              |             |
|------------|--------------|-------------|
| Automotive | SEMICON, LCD | Electronics |
| F & B      | Pharma       | Plant       |

### Supported GOT types

|       |       |         |
|-------|-------|---------|
| GT27  | GT25* | GT23*   |
| GT21* | GS21* | SoftGOT |

### Supported devices

|     |       |          |
|-----|-------|----------|
| PLC | Servo | Inverter |
|     | Robot | CNC      |

\* Restrictions apply to some functions. For the details, refer to the function descriptions above.


# More information on a single screen




NEW

## Base screen size expansion


**Having problems?**




I want to check the information on another screen at the same time.



**GOT will solve your problems!**



Scroll the screen and view other parts of the screen



Can I check all necessary information on one screen without switching screens?

A base screen that is larger than the resolution of GOT can be created and displayed. By displaying the information that used to be separated in multiple base screens, operation can be performed while viewing the whole image.


### Function features

A base screen that is larger than the resolution of GOT can be created and displayed. The screen of expanded size can easily be scrolled by using swipe gestures or the scroll bars.

\* Supported by SoftGOT only when using the SoftGOT-GOT link function.

### Example)


Displaying an expanded base screen (1600 × 960) on GT27-V (640 × 480)

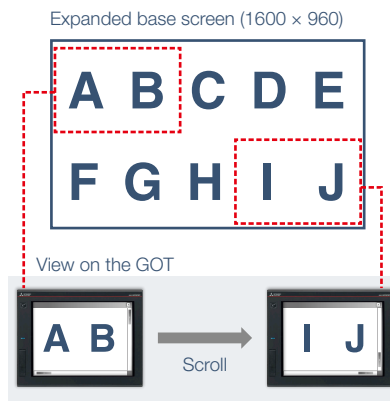

### Operation while viewing the whole image

The navigation window can be displayed on GOT to indicate the current position on the base screen. The window is semi-transparent and displayed in small size to help you view the whole image during operation.

The window display can be changed depending on the setting (always display, do not display, or display while swiping/ touching the screen).

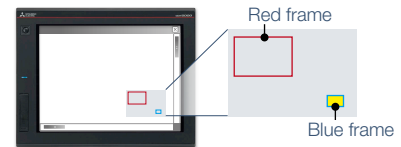

Red frame: Indicates the area currently displayed on the GOT.

Blue frame: Indicates the position of the object where the cursor is located. The frame appears when the cursor moves to any object that is hidden from view. The area enclosed in the frame blinks in yellow.

### Specification details and restrictions

- **Graphics setting** GOT Graphic Ver.2 must be selected.
- **Restrictions of other functions** This function cannot be used with the screen gesture function.

### Recommended industries

|            |              |             |
|------------|--------------|-------------|
| Automotive | SEMICON, LCD | Electronics |
| F & B      | Pharma       | Plant       |

### Supported GOT types

|      |      |          |
|------|------|----------|
| GT27 | GT25 | GT23     |
| GT21 | GS21 | SoftGOT* |

### Supported devices

|     |       |          |
|-----|-------|----------|
| PLC | Servo | Inverter |
|     | Robot | CNC      |

\* Restrictions apply to some functions. For the details, refer to the function descriptions above.






# Quickly change comments

NEW

## Changing comments without using GT Designer3

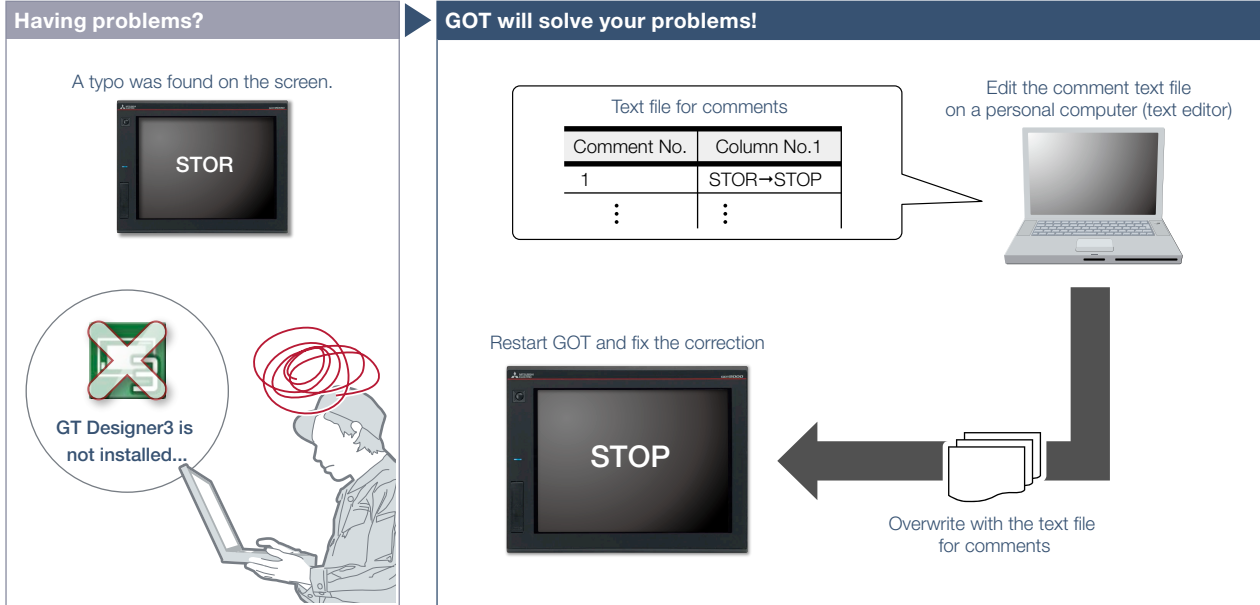

After starting operation, a typo was found on the screen. I need to correct it but there is no personal computer here that has GT Designer3 installed.


Even if GT Designer3 is not installed on the personal computer, comments can be edited and the changes can be reflected to GOT immediately. It helps to apply minor changes to comments without editing the project data.

### Function features

The GOT can display comments by reading a comment text file from the installed data storage. After changing a comment, overwrite the comment text file in the data storage and restart the GOT to display the new comment.

\* To display comments from a text file, configure the relevant settings in the project data. For the details, please refer to the GT Designer3 (GOT2000) Screen Design Manual.

\* USB memory or SD memory card is required.

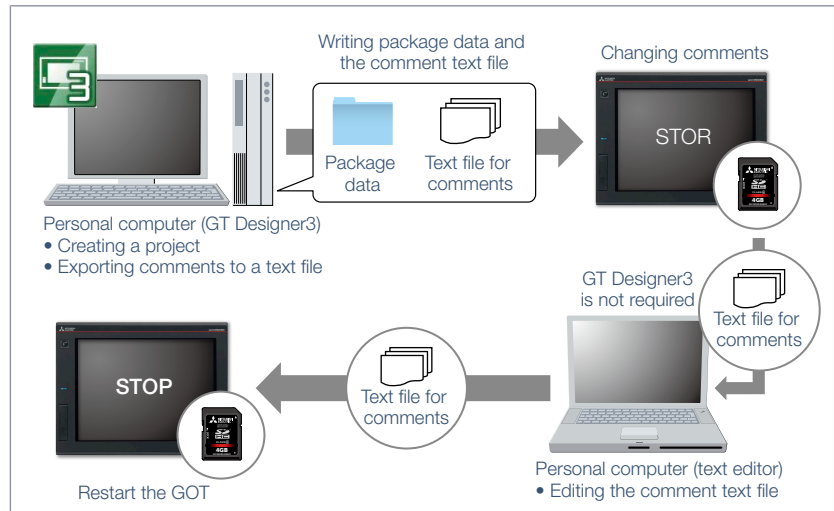

### Specification details and restrictions

● **Influence on the GOT startup time** When this function is used, the GOT reads a comment text file at startup, resulting in a longer startup time. To minimize the increase of the startup time, enable this function only for the comment group in which comments may be changed.

● **Font restrictions** Windows® fonts and HQ fonts are not usable to display the comments of a text file. Even if a Windows® font or HQ font is specified in the object setting dialog, the GOT displays the comments in a standard font.

### Recommended industries

|            |              |             |
|------------|--------------|-------------|
| Automotive | SEMICON, LCD | Electronics |
| F & B      | Pharma       | Plant       |

### Supported GOT types

|      |      |         |
|------|------|---------|
| GT27 | GT25 | GT23    |
| GT21 | GS21 | SoftGOT |

### Supported devices

|     |       |          |
|-----|-------|----------|
| PLC | Servo | Inverter |
|     | Robot | CNC      |

# Support FDA 21 CFR Part 11




## Regarding FDA 21 CFR Part 11 support



How can I support FDA 21 CFR Part 11 easily?

### GOT will solve your problems!

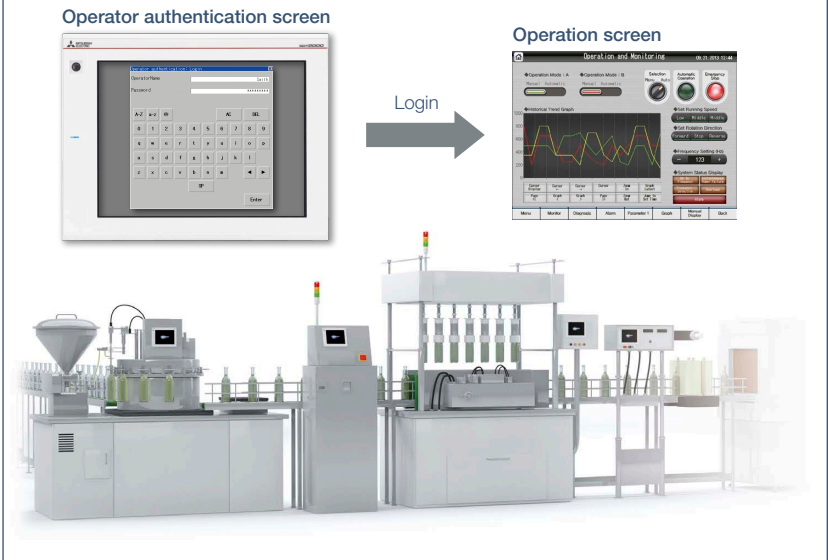

GOT can be used to make your system meet the requirements of FDA 21 CFR Part 11.

\* The users must construct an appropriate system for the compliance with the FDA 21 CFR Part 11. For the details, please refer to the Technical Bulletin No. GOT-A-0077 on the Mitsubishi Electric Factory Automation Global website.

### Function features

GOT can be used to support FDA 21 CFR Part 11, the standards about electronic data recording of the traceability information, which is required in the food and pharmaceutical industries. Sample screens are available for helping you configure systems.

### GOT functions related to FDA 21 CFR Part 11


- (1) **Managing users who access the GOT**  
Operator authentication and security level setting
- (2) **Managing screen data**  
User management, access control
- (3) **Completeness of data**  
Network drive, FTP client, FTP server
- (4) **Security and viewing of data**  
Operation log, alarm, logging, recipe
- (5) **Audit trail**  
Operation log
- (6) **Validation of data and operations**  
Verification (GT Designer3 function)
- (7) **System development, operation, and management**  
Security level setting

### Access management per operator

The operator authentication function enables management of users who can login to GOT. (For details, see page 85.)

\* To prevent impersonations, user accounts should be managed thoroughly by the users.

### Operator authentication screen

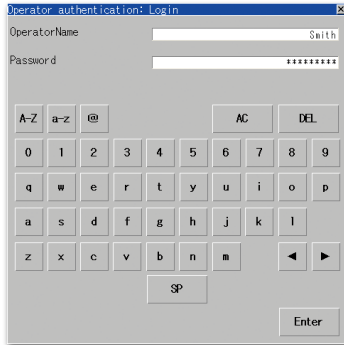

Input an operator name and password for login


### Recording audit trails (histories for the follow-up survey later)

Audit trails can be recorded and operated by setting the operation log appropriately. (For details, see page 84.)

- <Information required to be recorded>
- Time stamp
  - User name of the logged-in operator
  - Description and details of the operation performed by the operator (logs before and after the data change)

### Operation log list

Operator names stored in programmable controller devices can be used, thus enabling interaction with user management systems.

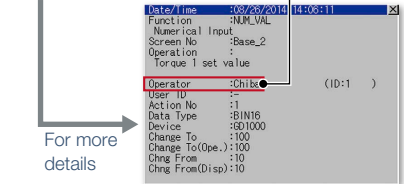

For more details

### Specification details and restrictions

- **Range of supporting FDA 21 CFR Part 11** The range that GOT can support the regulation is limited. For the details, please refer to the Technical Bulletin No. GOT-A-0077 on the Mitsubishi Electric Factory Automation Global website ([www.MitsubishiElectric.com/fa/](http://www.MitsubishiElectric.com/fa/)).
- **How to obtain sample screens** Sample screens are included in GT Works3. For the details, please contact your local sales office. The sample screens are supported by the following GT Works3 versions: Ver.1.152J or later.

### Recommended industries

- F & B
- Pharma

### Supported GOT types

- GT27
- GT25
- GT23
- GT21
- GS21
- SoftGOT




Support system operation

# Easy data collection


Upgraded

## Logging & Graph/List

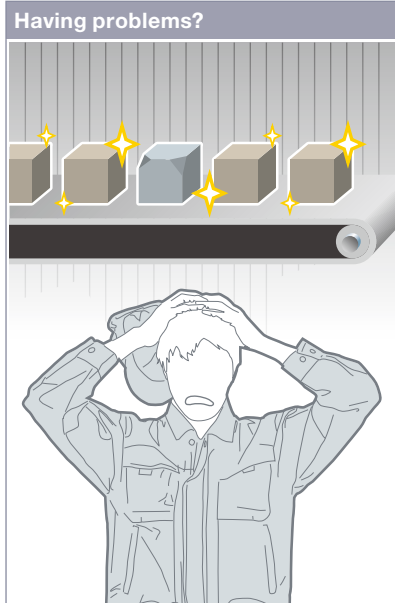

Defective product... I need to quickly identify the cause of errors.

### GOT will solve your problems!

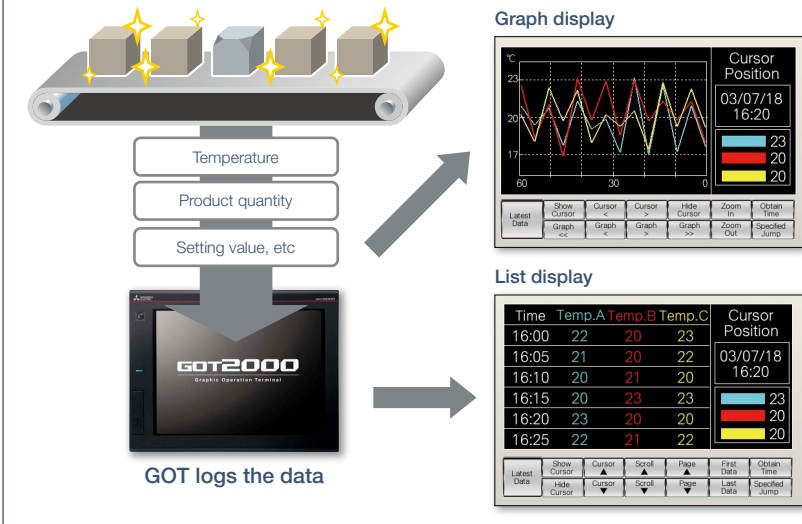

GOT collects the data from programmable controllers and temperature controllers (logging\*) and displays the collected data in a graph and list. You can check the data which was collected when an error occurred to identify and analyze the cause of the error.

\* Excluding GT2103-PMBLS.

### Function features

GOT collects the data from programmable controllers and temperature controllers and displays the collected data in a graph and list. The logging data can be saved in a built-in SRAM\* even when the power supply has failed.

\* Not supported by GT21 and GS21.

### Analyze data on personal computer

The logging data can be converted into a CSV file or Unicode® text file and saved to an SD memory card or USB memory so that the data can be displayed on a personal computer.

### Historical trend graph

The data collected by the logging function is displayed in a graph in chronological order. Scrolling the graph and specifying the time make it easier to check the necessary data.

### Historical data list


The data collected by the logging function is displayed in a list. Specifying the time in the list displays the historical trend graph of the specified time.

### Supporting network drive **NEW**

The network drive can be used as the save destination for logging files. Data can be saved without considering the capacity limit.

\* Not supported by GT23, GT21, and GS21.

\* For the details, please refer to page 86.

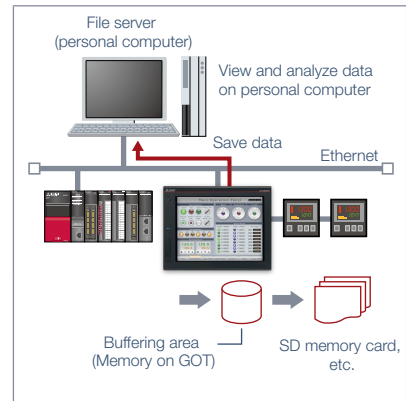

### Specification details and restrictions

● Supported device formats Bit, BIN, BCD, Real, String

\* For the necessary option devices, please refer to the "Function list" (page 148).

### Recommended industries

|            |              |             |
|------------|--------------|-------------|
| Automotive | SEMICON, LCD | Electronics |
| F & B      | Pharma       | Plant       |

### Supported GOT types

|       |       |         |
|-------|-------|---------|
| GT27  | GT25  | GT23    |
| GT21* | GS21* | SoftGOT |

### Supported devices


|     |       |          |
|-----|-------|----------|
| PLC | Servo | Inverter |
|     | Robot | CNC      |

\* Restrictions apply to some functions. For the details, refer to the function descriptions above.

# Simple touch operations


## Gesture function

**Having problems?**

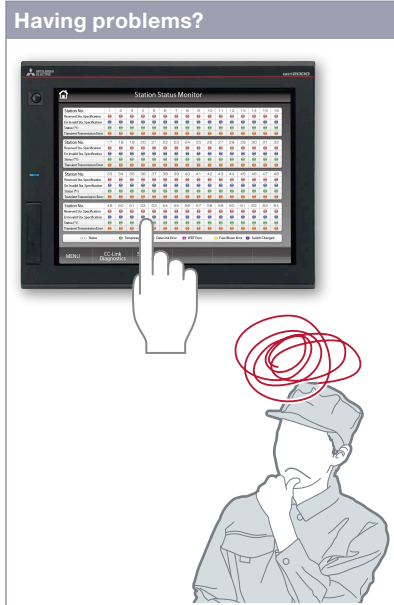


**GOT will solve your problems!**


**Zoom**



**Easier operation on a magnified screen**

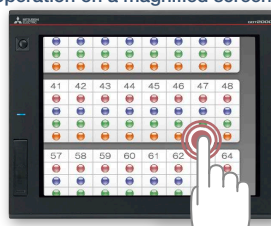

**Scroll**

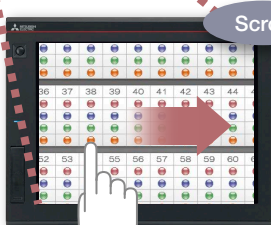


It's hard to touch small parts on the screen!

Zoom in to easily operate small and hard to reach switches. After zooming in, scroll the display to show the area you want to operate.

### Function features

In addition to touch operations, gesture operations are now available on the GOT in the same way as on tablet or mobile terminals.

**Scroll**

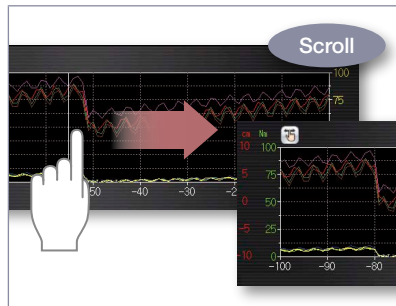

#### Object gesture

Specify an object to be enlarged, scrolled or flicked.



#### 2-point press operation

To prevent accidental operations, press 2 points simultaneously and enable the touch operation.

### Specification details and restrictions

● **Objects applicable to the object gesture function** Historical data list display, alarm display (user), alarm display (system), simple alarm display, historical trend graph, document display, video/RGB display object\*1

\*1 Not supported by GT2705.

### Recommended industries

- Automotive
- SEMICON, LCD
- Electronics
- F & B
- Pharma
- Plant

### Supported GOT types

- GT27\*
- GT25
- GT23
- GT21
- GS21
- SoftGOT

### Supported devices

- PLC
- Servo
- Inverter
- Robot
- CNC



\* Restrictions apply to some functions. For the details, refer to the function descriptions above.



Support system design

# Easy interaction with database

## MES interface function

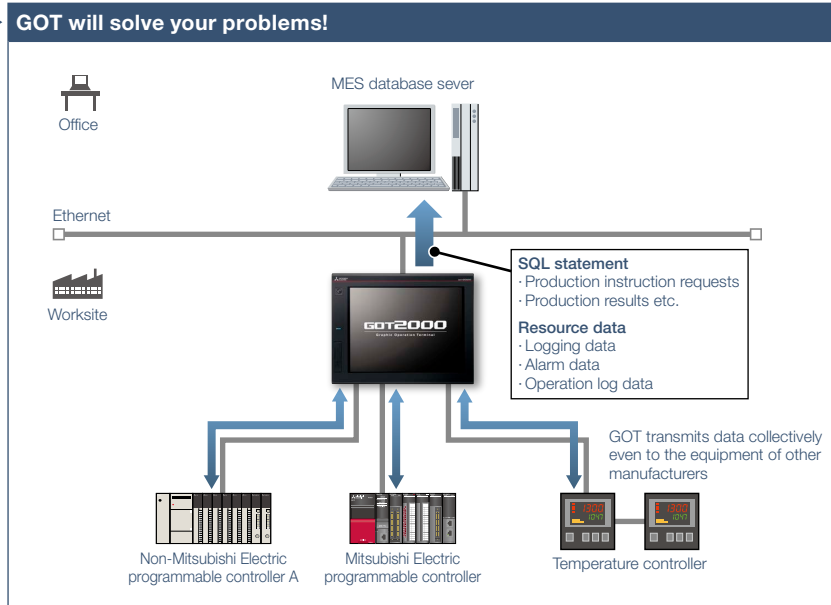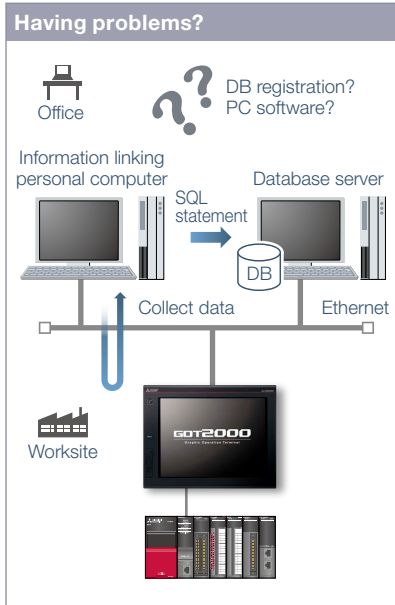

How can I analyze the production site information and increase production efficiency? Does it take time to construct the system?

GOT communicates with the MES database server without a personal computer and programs and sends the data such as production instruction requests and production results. Storing the resource data such as alarm history and logging data to a database enhances traceability.

### Function features

The GOT uses SQL statements\*1 to transmit data from the connected industrial devices to a database server.\*2

\*1 Communication actions can be selected from SELECT, Multi-SELECT, UPDATE, INSERT, or DELETE.

\*2 A separate license (GT25-MESIFKEY) is required.

### Transferring data of various devices collectively

GOT transmits data collectively to an MES database server by collecting data from various devices of different types and manufacturers. Collecting data in the GOT makes it easy to transmit data to the database.

### Resource data send function

The resource data collected in the GOT buffering area or an SD memory card can be sent to a database. The alarm information of GOT can be stored and managed in the database.

### Easy communication without programming

Communication with databases is configured in GT Works3 without any programming.

### Unicode® support for tag data type

Unicode® character strings can be used as the data type of collected data (device data). Multiple languages including Chinese are supported and there is no need to worry about character codes.



#### <MES (Manufacturing Execution System)>

The manufacturing execution system (MES) is a system that controls and manages production processes at a worksite in order to optimize quality, productivity, delivery date, and cost.

#### Specification details and restrictions

\* For the necessary option devices, please refer to the "Function list" (page 148).

- **Function list** · DB interface function (resource data send function / tag function / trigger buffering function / trigger monitoring function / SQL text transmission function / arithmetic processing function / program execution function / DB buffering function) · Diagnosis function · DB server function (ODBC connection function / connection setting function / log output function)
- **Usable databases** Please refer to the GOT2000 Series MES Interface Function Manual.

#### Recommended industries

|            |              |             |
|------------|--------------|-------------|
| Automotive | SEMICON, LCD | Electronics |
| F & B      | Pharma       | Plant       |

#### Supported GOT types

|      |      |         |
|------|------|---------|
| GT27 | GT25 | GT23    |
| GT21 | GS21 | SoftGOT |

#### Supported devices

|     |       |          |
|-----|-------|----------|
| PLC | Servo | Inverter |
|     | Robot | CNC      |


# Support management of on-site data



Support system operation


Upgraded

## File manager function

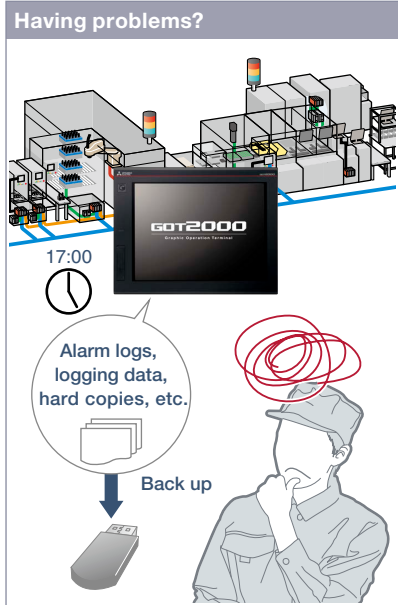

How can I make backup of alarm and logging data? It's bothersome to back up data separately.

## GOT will solve your problems!

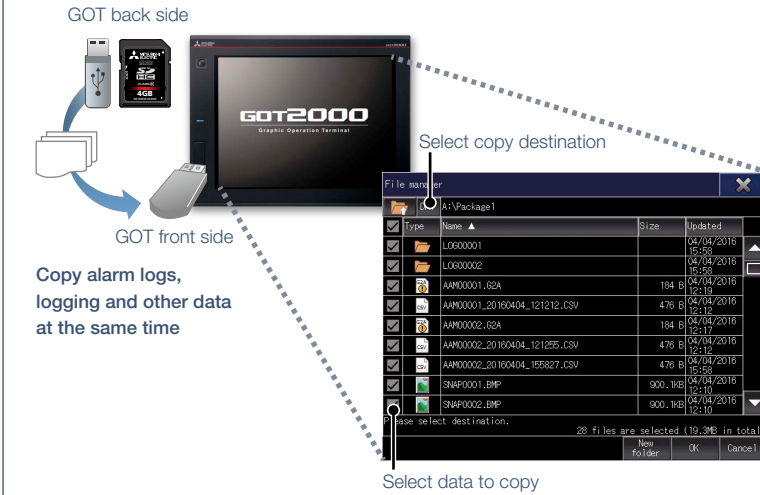

Folders and files are shown in a list on a graphical screen so that it is easy to copy them as needed.

### Function features

Check the folders and files that are stored on the GOT's SD memory card or USB memory, and copy or delete them in the list.

### Graphical list display

File types can be identified with icons at a glance.

### Supporting network drive NEW

Since the GOT files can be directly copied or moved to the network drive, data can be backed up easily.

\* Supported by GT27, GT25.  
\* For the details, please refer to page 86.


### Various file operations

Copy, delete, move, rename, or create files and folders. Multiple selection of files and folders is also possible. Files can be operated also in mobile screens using the GOT Mobile function

NEW

### Checking available space in drives

Easily check available space in the drives. It is useful when saving cumulative data such as logging and hard copies.

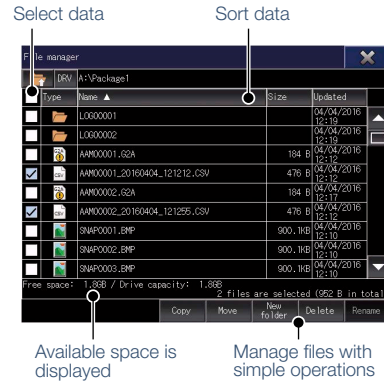

\* For the necessary option devices, please refer to the "Function list" (page 148)

### Recommended industries

- Automotive
- SEMICON, LCD
- Electronics
- F & B
- Pharma

### Supported GOT types

- GT27
- GT25
- GT23\*
- GT21
- GS21
- SoftGOT

\* Restrictions apply to some functions. For the details, refer to the function descriptions above.

### Supported devices

- PLC
- Servo
- Inverter
- Robot
- CNC


# Send and retrieve files between GOT and PC

Upgraded

## File transfer function



How can I check daily production results?

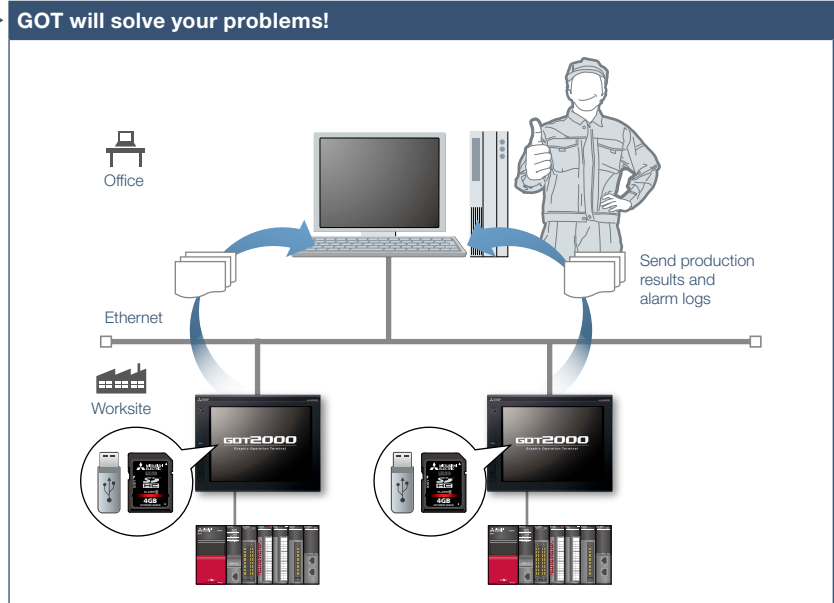

By using GOT, production results can be stored on the GOT's SD memory card or USB memory and sent to a personal computer or the USB memory on the front face of GOT. The GOT can also receive production instructions from the personal computer.

### Function features

Files stored on the GOT's SD memory card or USB memory can be transferred easily. Network drive can be used as the transfer destination **NEW**.

### FTP transfer


By using GOT, files stored on the GOT's SD memory card or USB memory can be sent to or received from an FTP server (personal computer). File transfer triggers (sampling, bit rise, etc.) can be used to set file transfer timing.

\* Supported by GT2107-W, GT2104-R, and GT2103-PMBD among GT21 models.

### GOT internal transfer

Files stored on the SD memory card or USB memory connected to the back side of GOT can be transferred to the USB memory on the front face of the GOT so that data can be obtained easily.


\* Not supported by GT21 and GS21.

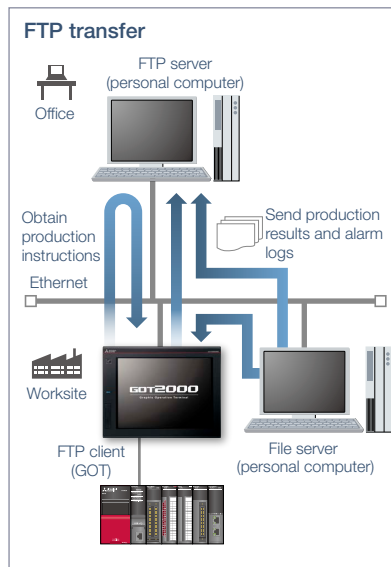

### File transfer using a network drive **NEW**

The GOT data stored in a file server (personal computer) connected by Ethernet can be transferred to an FTP server (personal computer), or the data can be directly transferred between the GOT and the file server (personal computer).

\* Not supported by GT23, GT21, and GS21. For the details, see page 86.

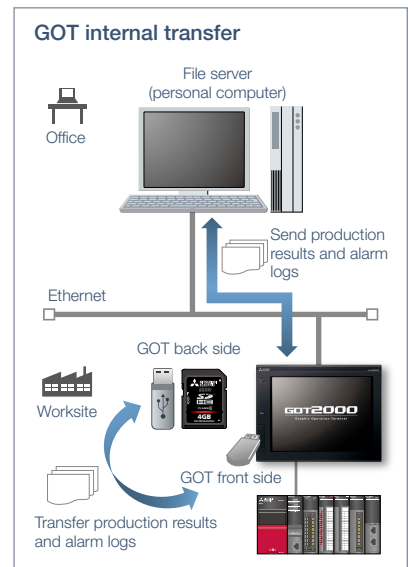

\* For the necessary option devices, please refer to the "Function list" (page 148)

### Recommended industries

|            |              |             |
|------------|--------------|-------------|
| Automotive | SEMICON, LCD | Electronics |
| F & B      | Pharma       | Plant       |

### Supported GOT types

|       |       |         |
|-------|-------|---------|
| GT27  | GT25  | GT23*   |
| GT21* | GS21* | SoftGOT |

### Supported devices



|     |       |          |
|-----|-------|----------|
| PLC | Servo | Inverter |
|     | Robot | CNC      |

\* Excluding some models or restrictions apply to some functions. For the details, refer to the function descriptions above.

# Various controllers and connection types



## Multi-channel function/Device data transfer function

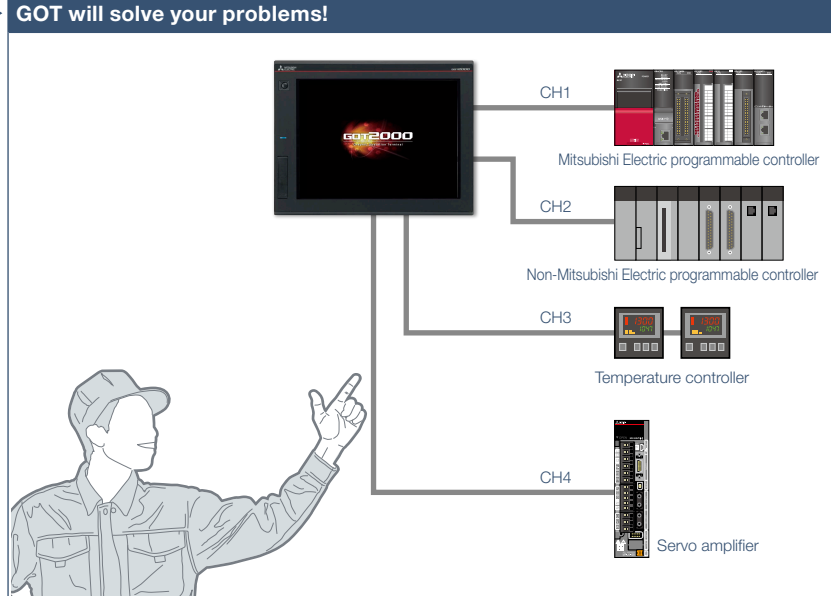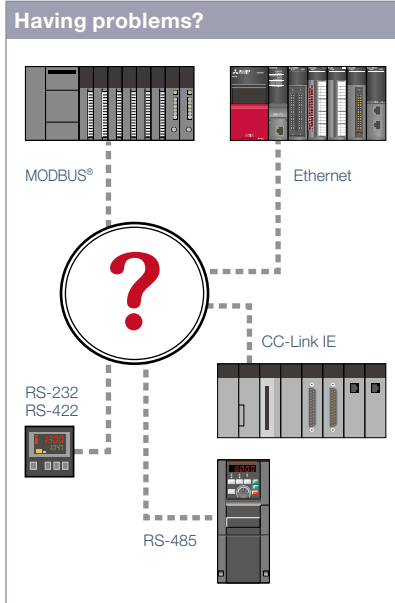

How can I connect various industrial devices in various connection types?

GOT supports various industrial devices and connection types. With the multi-channel function, four channels of industrial devices can be monitored on a single GOT.

### Function features

GOT supports various industrial devices and connection types. With the multi-channel function and the device data transfer function, multiple types of industrial devices of different manufacturers can be monitored.

\* Excluding GT2103-PMBS

### <Supported connection types>

Ethernet, RS-232, RS-422/485, CC-Link IE Controller Network, CC-Link IE Field Network, CC-Link, Bus, MELSECNET/H\*, MODBUS®



\* Including MELSECNET/10 mode.

### Multi-channel function

Up to four channels\* of industrial devices (programmable controller, servo, inverter, temperature controller, etc.) can be monitored with one GOT.


\* Up to 2 channels on GT23, GT21, and GS21.

### <Typical applications>

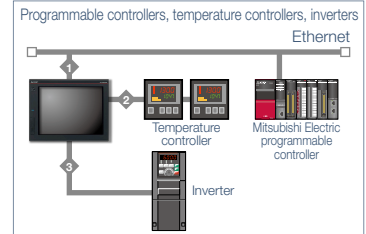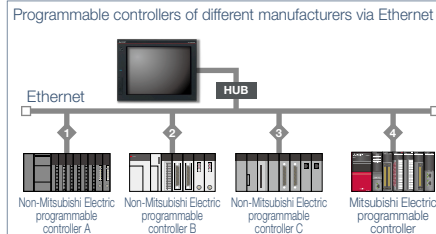

### Device data transfer function

Using GT Works3, simply set source devices, destination devices, and triggers and you can transfer device data between industrial devices.

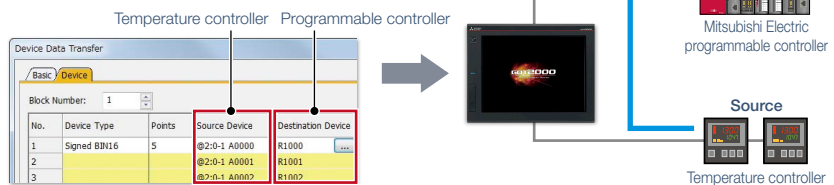

### Specification details and restrictions

- **Various peripherals** External devices (operation panels, switches, lamps, etc.), two-dimensional code readers, barcode readers, RFID readers, IC card readers, speakers, video cameras, displays (RGB output), personal computers (RGB input), serial printers, PictBridge compatible printers
- **Multi-channel function** Supported connection types, channel numbers, and functions vary depending on the GOT type. For the details, please refer to the relevant product manual or the "Connectable model list" (page 152).

### Recommended industries

- Automotive
- SEMICON, LCD
- Electronics
- F & B
- Pharma
- Plant

### Supported GOT types

- GT27
- GT25
- GT23\*
- GT21\*
- GS21\*
- SoftGOT

### Supported devices

- PLC
- Servo
- Inverter
- Robot
- CNC


\* Excluding some models or restrictions apply to some functions. For the details, refer to the function descriptions above.





# Support CNC maintenance

## Interaction function with CNCs

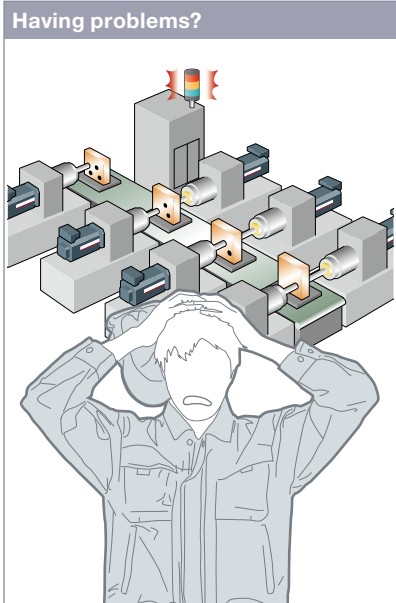


Having problems?


GOT will solve your problems!




Alarm screen (CNC monitor 2)

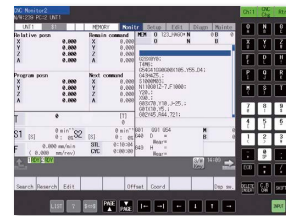

Monitor screen (CNC monitor 2)

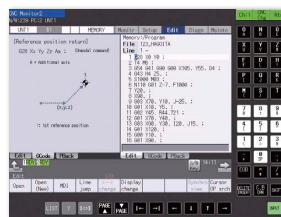

Edit screen (CNC monitor 2)

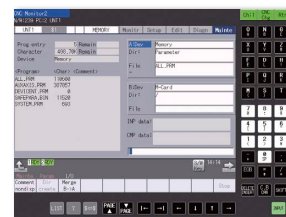

Input/Output screen (CNC monitor 2)

“NC alarm” occurred on a GOT!  
How can I maintain the system quickly?

Use a GOT to monitor or check alarms of a CNC. When an NC alarm occurs, there's no need to use a personal computer when modifying programs and you can quickly recover the system.

### Function features

A GOT can be used to display various monitors and make settings of a CNC connected to the GOT.

\* CNC monitor/CNC machining program edit/CNC data I/O functions are supported by GOTs with a resolution of SVGA or higher.

\* Not supported by GT25 wide models.

### CNC monitor 2 function (CNC C80)


The function enables monitoring and operation of the standard screens (monitor, setup, edit, diagnosis, and maintenance) of the C80 Series CNC connected to the GOT. You can also use this function to input/output data or edit machining program of the CNC C80.

### CNC monitor function (CNC C70)

The function enables the alarm diagnosis, position display monitor, tool compensation/parameter setting, or program monitor of a CNC C70 connected to the GOT.

### CNC machining program edit function (CNC C70)

Machining programs and MDI programs of a CNC C70 connected with the GOT can be edited.

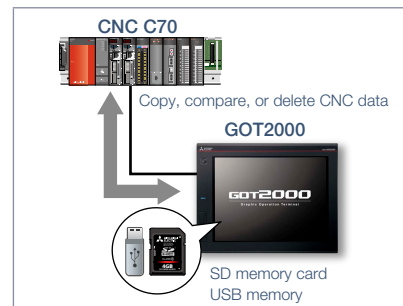

### CNC data I/O function (CNC C70)

Machining programs and parameters can be copied, compared, or deleted in a CNC C70 connected with the GOT.

### Specification details and restrictions

\* For the necessary option devices, please refer to the “Function list” (page 148).

● **Target models** CNC (C80, C70)

● **Supported connection types** Ethernet connection (DISPLAY I/F connection only)\*1, bus connection\*2

\*1 The CNC data I/O function cannot be used with CNC C70 when CC-Link IE Field Network Ethernet adapter module is used.

\*2 Supported by CNC C70 only.

● **Target data**

**CNC monitor 2 function** The target data is the same as that of the CNC monitor function, the CNC machining program edit function, and the CNC data I/O function.

**CNC monitor function** Alarm diagnosis, position display, tool compensation/parameter setting, program

**CNC machining program edit function** Machining program, MDI program

**CNC data I/O function** Machining program, parameter, tool offset data, workpiece offset data, common variable, maintenance data, cycle monitor data

### Recommended industries

Automotive Electronics

### Supported GOT types

GT27\* GT25\* GT23  
GT21 GS21 SoftGOT

### Supported devices

PLC Servo Inverter  
Robot CNC

\* Excluding some models. For the details, refer to the function descriptions above.

# Support iQSS-compatible devices



## iQSS utility function

**Having problems?**

iQSS-compatible devices such as AnyWireASLINK

**GOT will solve your problems!**

**GOT2000**

Check if AnywireASLINK sensors are disconnected and quickly take corrective actions as needed.

Connect an SD memory card or USB memory that stores the iQSS-compatible device information to the GOT

iQSS-compatible devices such as AnyWireASLINK

How can I check the status of AnyWireASLINK without a personal computer?


Check the status of iQSS-compatible devices such as AnyWireASLINK and the parameter information on the GOT without a personal computer.

### Function features

Just enable the iQSS utility function to automatically generate monitoring screens. There is no need to create monitoring screens for every sensor and thus you can reduce time for startup, operation, and maintenance of the sensor system.




For the details, please refer to the iQ Sensor Solution catalog (L(NA)16029ENG).

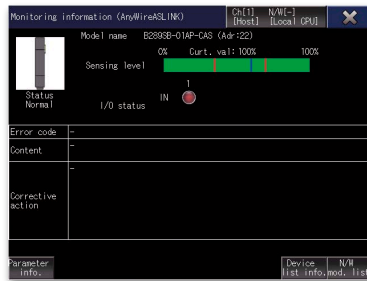

### Monitoring information screen

The status, sensing level, I/O status of the device being monitored can be checked in this screen.

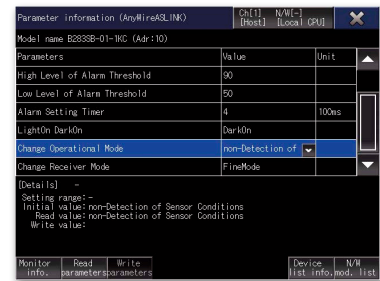

### Parameter information screen

The list of parameters and the details of the device being monitored can be displayed. Parameters can be changed in this screen.

### Specification details and restrictions

\* For the necessary option devices, please refer to the "Function list" (page 148).

- **Target models** RCPUCPU, QCPU (Q mode), LCPUCPU
- **Supported connection types\*** Ethernet connection<sup>2</sup>, direct CPU connection<sup>3</sup>, serial communication connection, CC-Link IE Controller Network connection<sup>5</sup>, CC-Link IE Field Network connection<sup>4</sup>, CC-Link connection, bus connection<sup>5</sup>, MELSECNET connection<sup>5</sup>
- \*1 For the details of connectable models of each connection type, please refer to the "Connectable model list" (page 152).
- \*2 L02SCPU or L02SCPU-P cannot be used.
- \*3 When connecting the GOT with the LCPUCPU, use L6ADP-R2.
- \*4 Cannot be used to connect a Q00JCPU, Q00CPU, Q01CPU, Q02CPU, Q02HCPU, Q06HCPU, Q12HCPU or Q25HCPU.
- \*5 RCPUCPU and LCPUCPU are not supported.

### Recommended industries

|            |              |             |
|------------|--------------|-------------|
| Automotive | SEMICON, LCD | Electronics |
| F & B      | Pharma       | Plant       |

### Supported GOT types

|      |      |         |
|------|------|---------|
| GT27 | GT25 | GT23    |
| GT21 | GS21 | SoftGOT |

### Supported devices

|     |       |          |
|-----|-------|----------|
| PLC | Servo | Inverter |
|     | Robot | CNC      |

# Easy IoT application to the equipment

NEW

**e-F@ctory Starter Package (free of charge sample project)**



Support maintenance work



Support system startup/adjustment



Support system operation

**Having problems?**

How can I use the collected data?

What should we do to add IoT functions?

To add IoT functions to the shop floor, what do we have to do in the first place?

**GOT will solve your problems!**

Sample project

MELSEC iQ-R series

GOT2000 Graphic Operation Terminal

Clear graphic display of analysis results

Simple analysis from collected equipment information

Remote monitoring with GT SoftGOT2000

GT SoftGOT2000

By adding a programmable controller (MELSEC iQ-R Series) and GOT to the existing equipment, IoT function systems can be easily developed.

## Function features

e-F@ctory Starter Package is a sample project for the MELSEC iQ-R Series programmable controllers and GOT2000 that realizes “visualization” and “simple analysis” on the shop floor. It is possible to add IoT functions to the equipment just by making basic settings such as device assignment and parameter setting.



For the details, please refer to the e-F@ctory Starter Package leaflet (E001ENG).

## Low-cost installation

Installation cost can be reduced because it is not necessary to create sequence program and screen data from scratch. A large lineup of functions that focus on management, maintenance, and improvement of equipment are available.

### Management function screen



### Improvement function screen



\* Screen images are subject to change without notice.

## Specification details and restrictions

- **Target models** MELSEC iQ-R Series, MELSEC iQ-F Series\*, GOT2000 Series, GT SoftGOT2000 \*1 Some functions are not supported.
- **Lineup of project data** MELSEC iQ-R Series project data, GOT2000 Series SVGA (800 × 600) project data (By changing the GOT type, data can be used for other models.)
- **Lineup of provided functions** Equipment operation monitoring solution (dashboard, production counting, process capability index (histogram), operational status monitor, cylinder & cycle time measurement monitor, error sign inspection, error stop action, equipment trouble Pareto chart, control chart (Xbar-R), loss time analysis, intensity management)

## Recommended industries

|            |              |             |
|------------|--------------|-------------|
| Automotive | SEMICON, LCD | Electronics |
| F & B      | Pharma       | Plant       |

## Supported GOT types

|      |      |         |
|------|------|---------|
| GT27 | GT25 | GT23    |
| GT21 | GS21 | SoftGOT |

## Supported devices

|     |       |          |
|-----|-------|----------|
| PLC | Servo | Inverter |
|     | Robot | CNC      |

# Support screen design



## Standard screen samples




**GOT will solve your problems!**

**Trend graph display (7 patterns)**  
Displays the data collected with the logging function in a trend graph

**Counter display (4 patterns)**  
Monitors or resets counters for the data such as production volume and tool use

Now we have HMIs but it's hard to design screens from scratch.


Standard screens are grouped into 17 categories by purpose. Frequently used screens are available as sample screens.

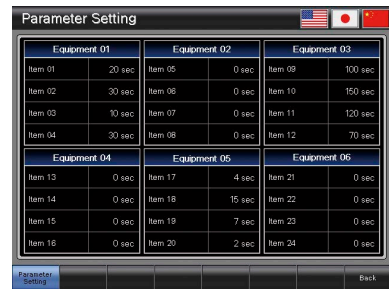

**Parameter setting (3 patterns)**  
Displays set items and enables input of set values for various parameters




**Manual operation (6 patterns)**  
Executes ON/OFF operations of signals (bit devices)

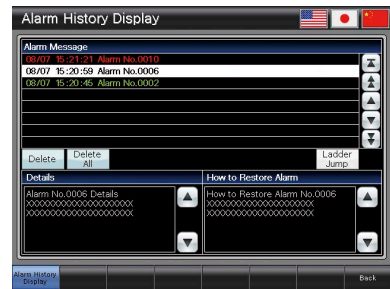


**Alarm history (2 patterns)**  
Displays alarms in the history format and enables checking of the details and recovery methods of a selected alarm

## Function samples


These are sample screens that you can feel GOT2000 recommended functions.

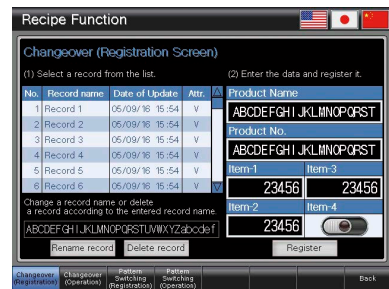

**Recipe**  
Provides samples to use the recipe function easily

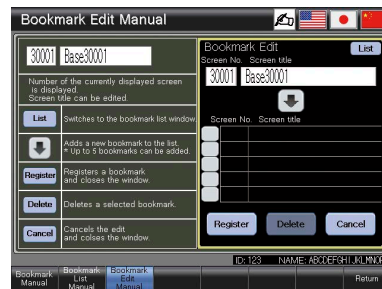

**Screen bookmark**  
Provides the list to bookmark screens. You can register frequently-used screens and switch between the screens in the list.

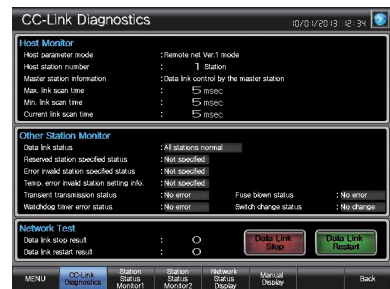

**CC-Link network monitor**  
Displays the CC-Link network status (host station, other stations, errors, etc.)

### Specification details and restrictions

- **Other standard screen samples** I/O signal display, numerical data display, start-up condition display, operation ready signal display, interlock display, interlock setting, machine selection setting, alarm frequency display, alarm status display, current alarm display, home position return, cycle time display
- **Other function samples** GOT Mobile function (Andon, remote controller), alarm function (level, sort), alarm function (hierarchy), device monitor function, Kana-Kanji conversion function, AnyWireASLINK network monitor function, how to comply with FDA 21 CFR Part 11, PDF search external control function, etc.
- **How to obtain sample screens** Sample screens are included in GT Works3. For the details, please contact your local sales office.
- **Supported language** English, Japanese, Chinese (Simplified)


# Support connection with industrial devices



Support system design

## ■ Connection samples

The lineup of samples for non-Mitsubishi industrial devices has been expanded! These are sample screens for monitoring current values of connected devices, setting parameters, etc.

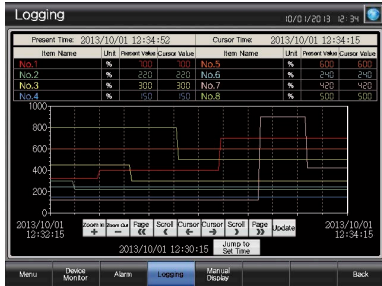


### Mitsubishi Electric programmable controller

- MELSEC iQ-R Series R08CPU
- MELSEC iQ-F Series FX5U-32MCPU
- MELSEC-L Series L06CPU
- MELSEC-Q Series Q06UDEHCPU
- MELSEC-F Series FX3U-16MCPU




### Mitsubishi Electric servo amplifier

- MELSERVO-J4 Series MR-J4-A(-RJ)
- MELSERVO-J4 Series MR-J4-B(-RJ)
- MELSERVO-J4 Series MR-J4W2-B
- MELSERVO-J4 Series MR-J4W3-B
- MELSERVO-J3 Series MR-J3-A
- MELSERVO-JE Series MR-JE-B

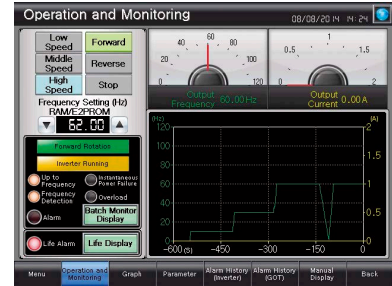


### Mitsubishi Electric inverter

- FREQROL-A800 Series FR-A820-15K  
FR-A820-0.4K-E1  
FR-A820-0.4K-GF  
FR-F820-15K  
FR-F820-0.75K-E1  
FR-F720P-0.75K  
FR-E710W-0.1K  
FR-D710W-0.1K

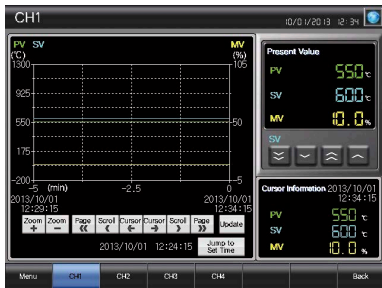


### Mitsubishi Electric temperature controller

- MELSEC-Q Series Q64TCTTN
- MELSEC-L Series L60TCTT

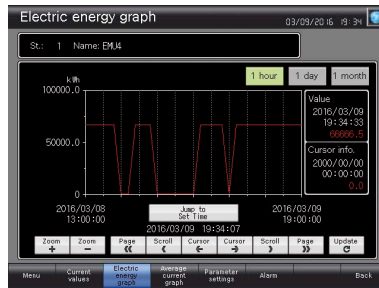

### Mitsubishi Electric other devices

- Motion controller
- Simple Motion module
- Industrial robot
- Energy measuring unit EcoMonitorLight/ Electric multi-measuring instrument etc.

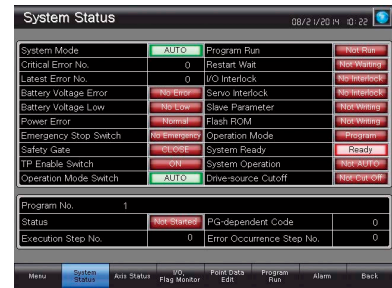

### Non-Mitsubishi Electric industrial devices


- Robot controller
- Stepping motor
- Network signal tower
- Temperature controller etc.

## ■ iQSS related samples

These are sample screens to connect to iQSS-compatible devices.





AnyWireASLINK network monitor function

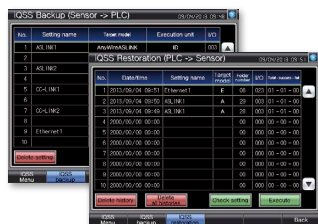

iQSS backup/restoration (PLC↔sensor) function

## ■ Using sample screens


In the GT Works3 menu, select [Screen] → [New] → [Utilize Data].

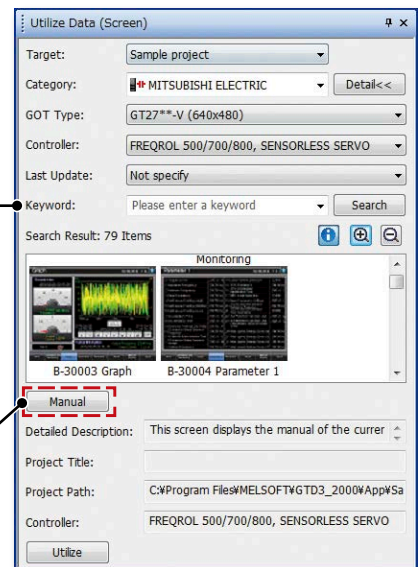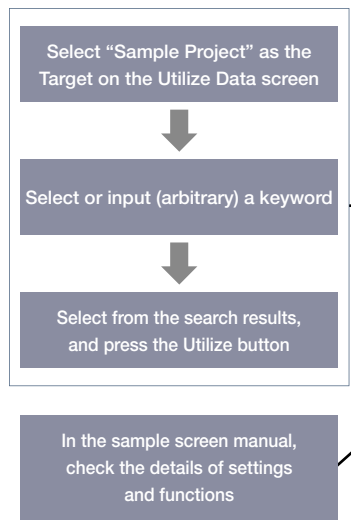

# FA Integrated Engineering Software

# MELSOFT iQ Works

MELSOFT iQ Works is an integrated software suite consisting of GX Works3, MT Works2, GT Works3, RT ToolBox3\*1 and FR Configurator2, which are programming software for each respective product. Integration is further enhanced with MELSOFT Navigator as the central system configuration incorporating an easy-to-use, graphical user interface with additional project-sharing features such as system labels and parameters. The advantages of this powerful integrated software suite are that system design is made much easier with a substantial reduction in repetitious tasks, cutting down on errors while helping to reduce the overall TCO.

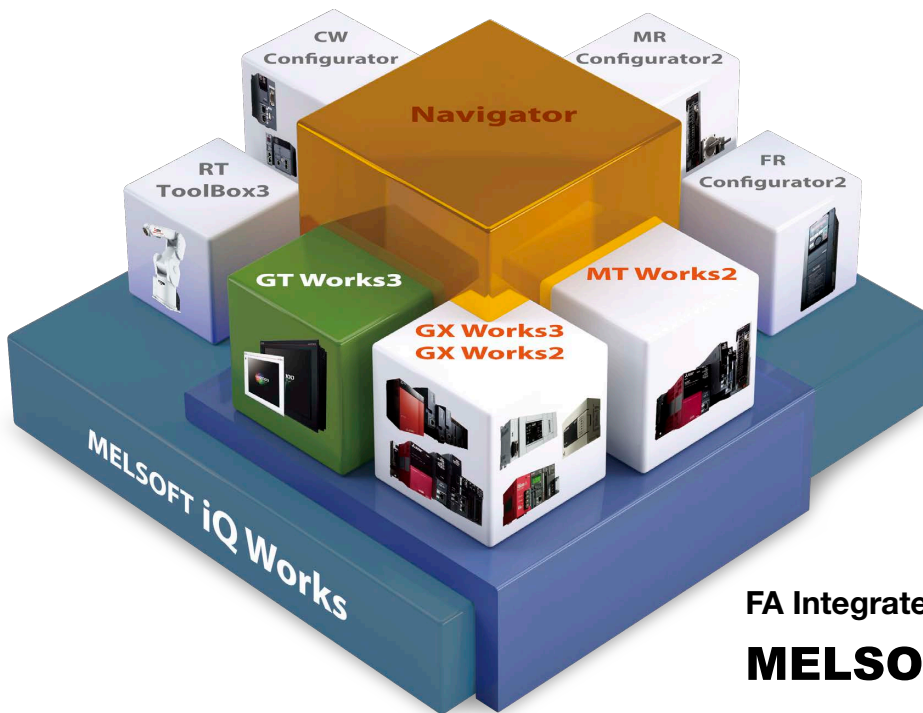

## FA Integrated Engineering Software

# MELSOFT iQ Works

### System management software

#### MELSOFT Navigator

System level graphic-based configuration tool that simplifies the system design by providing a visual representation of the system. System management features such as system-wide parameterization, labels and block reading of project data are also included.

### Programmable controller engineering software

#### MELSOFT GX Works3

GX Works3 is the latest generation of programming and maintenance software offered by Mitsubishi Electric specifically designed for the MELSEC iQ-R Series control system. It includes many new features such as graphic-based system configuration, integrated motion control setup, multiple language support, providing an intuitive engineering environment solution.

### HMI/GOT screen design software

#### MELSOFT GT Works3

This integrated software is used to create professional screen designs for GOTs. Developed with the concepts of simplicity, sleekness, and user-friendliness in mind, this is a powerful tool that pushes boundaries and delivers endless design possibilities.

### Motion controller engineering software

#### MELSOFT MT Works2

This motion control design and maintenance software includes intuitive graphic-based programming together with a digital oscilloscope simulator.

### Robot engineering software

#### MELSOFT RT ToolBox3\*1

### Inverter setup software

#### MELSOFT FR Configurator2

### C Controller setting and monitoring tool


#### MELSOFT CW Configurator

### Servo setup software

#### MELSOFT MR Configurator2

\*1 RT ToolBox3 mini (simplified version) will be installed if iQ Works product ID is used. When RT ToolBox3 (with simulation function) is required, please purchase RT ToolBox3.

MELSOFT Navigator

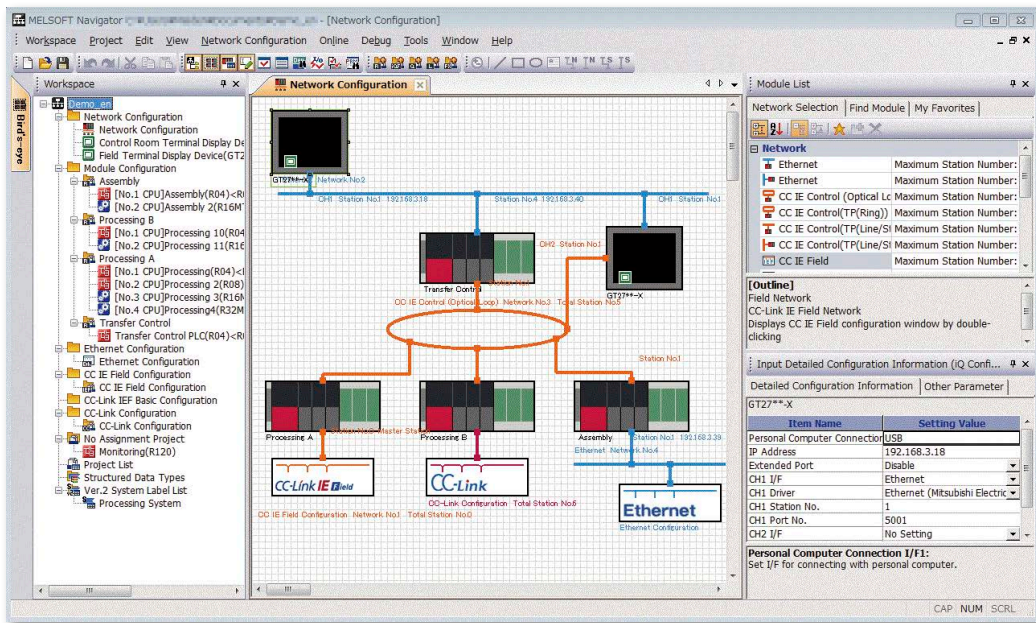

**MELSOFT Navigator enables interaction with iQ Works**


**Share labels among projects**

Labels can be shared among GX Works3, MT Works2, and GT Works3 so that if the device assignment is changed in one project, the changes are automatically applied to other projects.


**No need to set parameters for each tool\*2**

The information set in the system configuration diagram can be applied in a batch to each program in GX Works3, GX Works2, MT Works2, and GT Works3. There is no more need to start up each software and check the consistency.


\*2 Detailed parameters must be set with each tool.

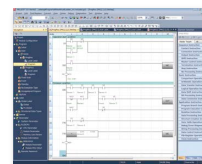

Programmable Controller Engineering Software MELSOFT GX Works3

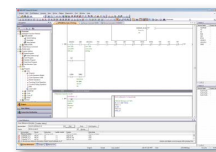


Programmable Controller Engineering Software MELSOFT GX Works2

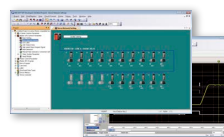

Motion Controller Engineering Software MELSOFT MT Works2




HMI/GOT Screen Design Software MELSOFT GT Works3

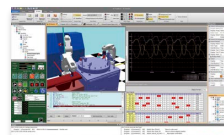

Robot Engineering Software MELSOFT RT ToolBox3\*1



Inverter Setup Software MELSOFT FR Configurator2

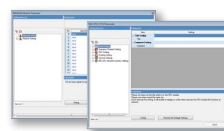

C Controller Setting and Monitoring Tool MELSOFT CW Configurator




Servo Setup Software MELSOFT MR Configurator2

\*1 RT ToolBox3 mini (simplified version) will be installed if iQ Works product ID is used. When RT ToolBox3 (with simulation function) is required, please purchase RT ToolBox3.

# HMI/GOT Screen Design Software

# MELSOFT GT Works3

## Easily create professional screens!

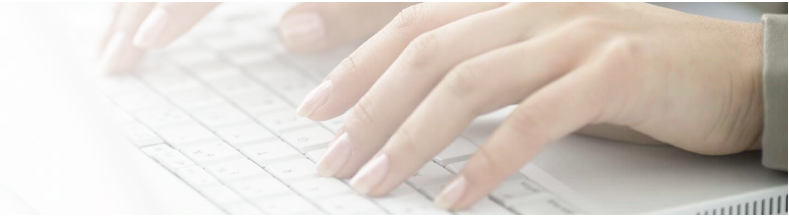

Easily manage project data

Work tree

Easily create stylish screens

GOT Graphic Ver.2 **NEW** P.108

The screenshot displays the MELSOFT GT Works3 software interface. On the left, a 'Project' tree shows a hierarchical view of the project structure, including 'System', 'Screen', and 'Project Information'. Below it, the 'Property' window shows details for a 'Graphical Meter' object, such as 'Device: GD20131' and 'Data Type: Signed BIN'. The main workspace shows a preview of an HMI screen titled 'BRIDGE' with various gauges and a map. At the bottom, the 'Data Browser' window lists project items, and the 'Device Search' window shows search results for devices like 'GB40'.

| Item            | Screen | Monitor Devi... | Data Type     | Group No. | Comment No. |
|-----------------|--------|-----------------|---------------|-----------|-------------|
| Line            | B-2002 |                 |               |           |             |
| Polygon         | B-2002 |                 |               |           |             |
| Graphical Meter | B-2002 | GD20137         | Signed BIN 16 |           |             |
| Rectangle       | B-2002 | GD20131         | Signed BIN 16 |           |             |
| PNG             | B-2002 |                 |               |           |             |
| Table           | B-2002 |                 |               |           |             |

| Device | Screen | Function       | ID/No. | Data Type | Network |
|--------|--------|----------------|--------|-----------|---------|
| GB40   | B-201  | Script Trigger | 1      | Bit       |         |
| GB40   | B-103  | Script Trigger | 1      | Bit       |         |

Easily check the settings

Data browser

P.111

Quickly search devices and labels

Device search **NEW**

P.112



■ Reduce screen creation time

- Utilize data (Screens)..... **Upgraded** 106
- Utilize data (Projects)..... 107
- Automatic scaling when changing GOT type..... **Upgraded** 107
- Script parts..... **NEW** 107

■ Support screen creation

- GOT Graphic Ver.2..... **NEW** 108
- Label/Global label..... **Upgraded** 110
- Data browser..... 111
- Screen image list (thumbnail display)..... **Upgraded** 111
- Alarm display (user/system)..... **Upgraded** 112
- Device search..... **NEW** 112
- Reflecting [Comment Group No.],  
[Comment No.], [Part No.] to objects..... **NEW** 113
- Template..... 113
- e-Manual..... 114

■ Easily create stylish screens

- Align..... 115
- Graphical meter..... **Upgraded** 115
- Logo text..... **Upgraded** 115

■ Support debugging

- Simulator..... 116
- Data verification..... 116
- Data check list..... 117


■ Support startup work

- Data transfer (batch write to multiple GOTs)..... **Upgraded** 117

■ Support globalization

- Speech synthesis function..... 118
- Language switching..... 118
- FA Term Translation Tool..... 119

Screen design tips movie (Japanese) ▶

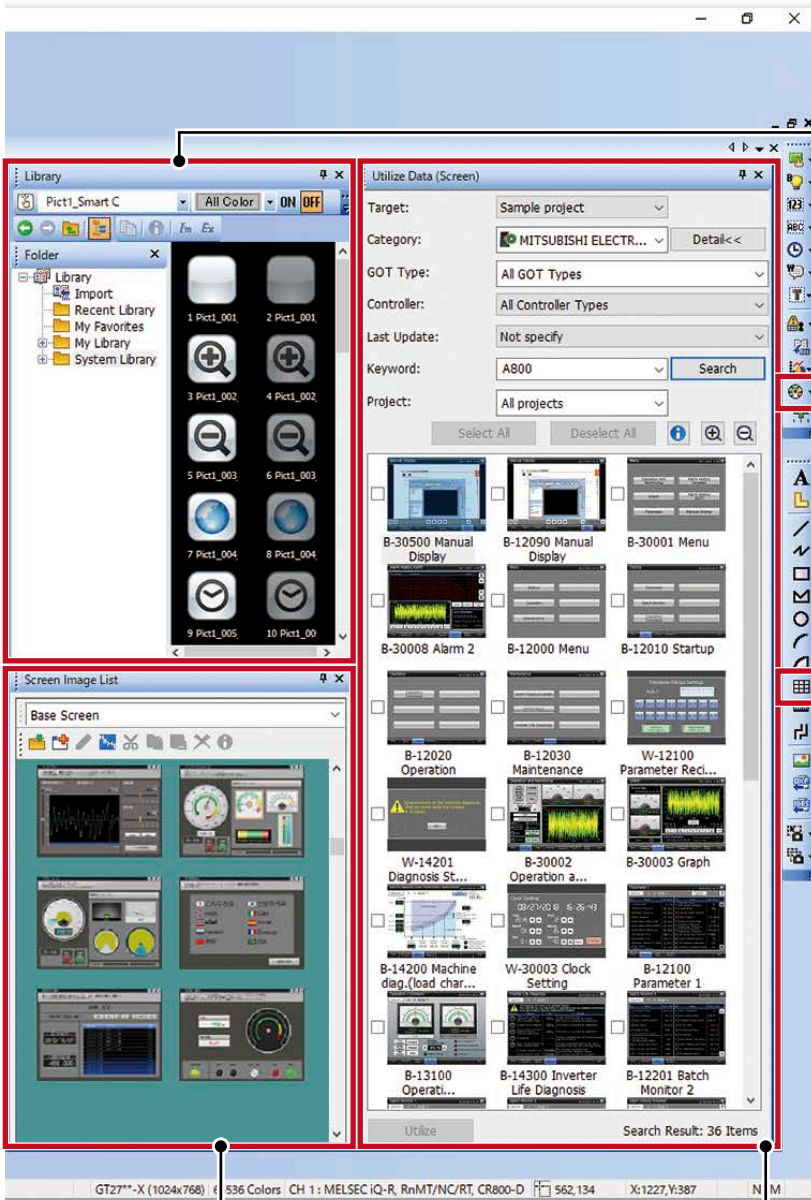

Easily create stylish screens  
**Library**

Create stylish, clear meters  
**Graphical meter P.115**

Easily create tables  
**Table**

Quickly display screen thumbnails  
**Screen image list Upgraded P.111**

Search by keywords and effectively use data  
**Utilize data (Screens) Upgraded P.106**


# Reduce screen creation time

Upgraded


## ■ Utilize data (Screens)

Individual screens can be utilized from past projects and sample projects. Select screens to utilize, then drag and drop to launch the utilization wizard. Just by following simple step, screen data can easily be utilized.

Easy searches from category lists

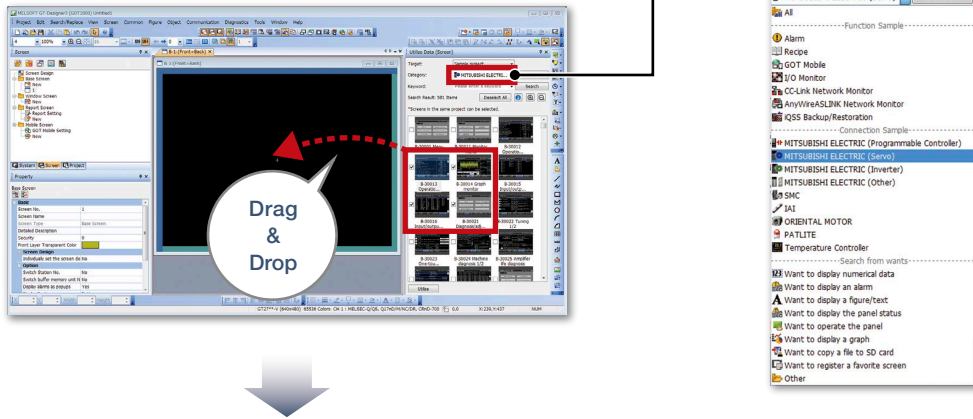


### Utilization wizard

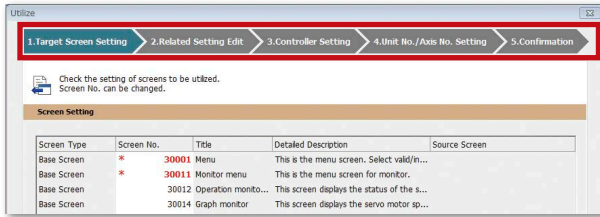


### Simple step navigation


1. Target screen setting  
The screen number is displayed in red if it is used in the project being edited.

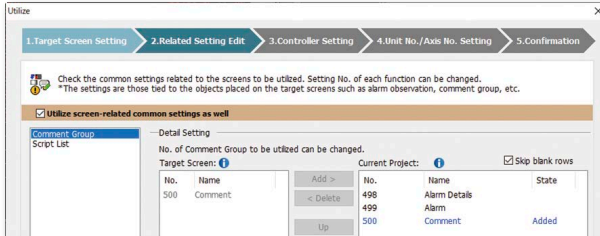

2. Editing related settings  
Comment groups and scripts related to the target screen can also be utilized at the same time.

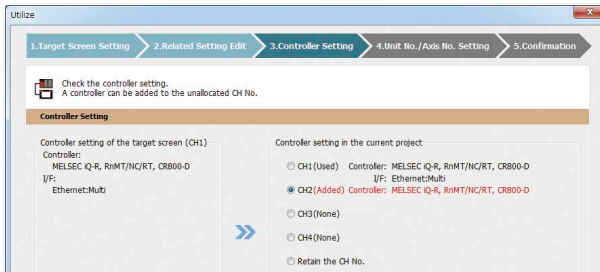

3. Controller setting  
Target screen controller settings can be assigned to an empty channel in the currently editing project.

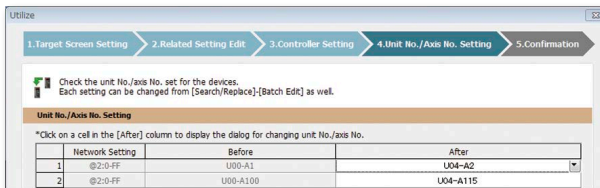

4. Unit No./Axis No. setting  
When utilizing screens whose system configuration is different, you can easily change the unit No. and the axis No. of the target screen.

5. Checking setting contents

## ■ Utilize data (Projects)

When creating a new project, search through the existing projects to find any existing projects that may be reused. Keyword search helps narrow down the search.

**Specify search range**  
Select "Sample Project" to reuse a sample project.

**Select or input a keyword**  
Select a prepared keyword or input an arbitrary keyword.

**Search results are displayed**

**Choose the applicable project from the search result**

Procedure: [Project] → [Utilize Data]

### Upgraded

## ■ Automatic scaling when changing GOT type

More objects are automatically scaled when changing to GOT types with different resolutions. It is now easier than ever to utilize screens of different resolutions, making the work process more efficient.

**Target objects:** Alarm display, simple alarm display, system alarm display, historical data list display, data list display, recipe display (record list)

When changing the GOT type resolution from VGA to SVGA

**Previously**

**NEW** Increased usability

Before change (VGA)

After change (SVGA)

The alarm display and historical data list display are also automatically enlarged. No need for size adjustments!

Procedure: [Common] → [GOT Type Setting] → [Perform Automatic Scaling on the positions/sizes of figures and objects] → [Option]

### NEW

## ■ Script parts

Make scripts into objects and use them as script parts. The following operations are available, improving operability.

- Copying and pasting to another screen, grouping, registering to the library, adding to a template

# Support screen creation

**NEW**


## GOT Graphic Ver.2

### Screen design

Screen design can be selected from various designs by theme. Simply select your favorite design from presets to change all screen backgrounds at once. You can keep screen design consistent across the entire project and reduce steps in the process. In addition, the screen design can be customized to create favorite design.

#### Pre-installed screen designs


Select one of the screen designs pre-installed in GT Designer3. You can easily set a screen design without paying attention to the setting items. Each screen can be customized individually.

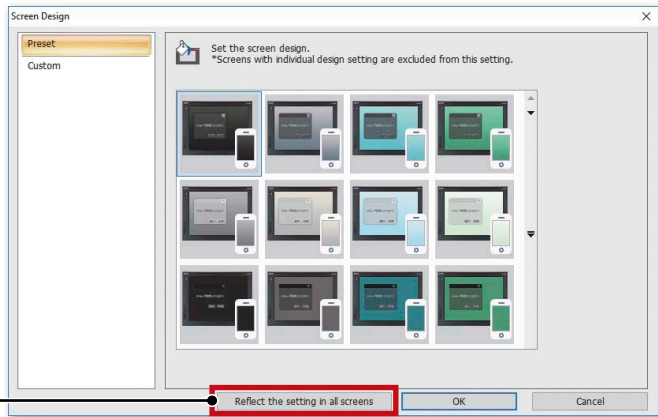

Change the design for all screens at once




#### Customized screen designs

Customize a screen design. You can customize the background color, design of window screens, and other settings of a screen design selected from the pre-installed screen designs.

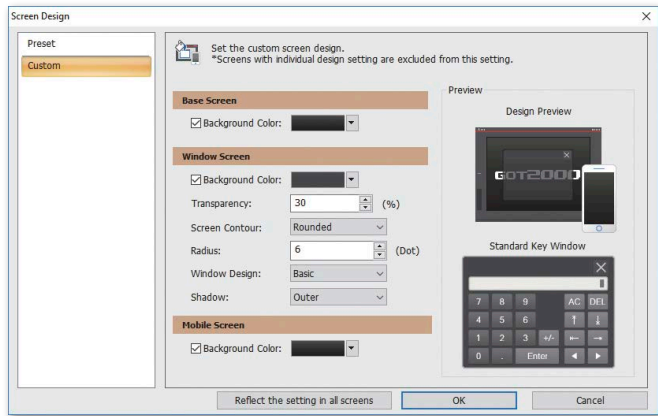


### Contour shapes of window screens

Both square and rounded contours are available for window screens. The radius can be adjusted for rounded contours.

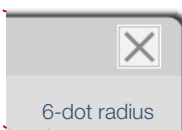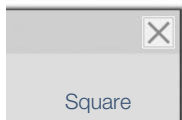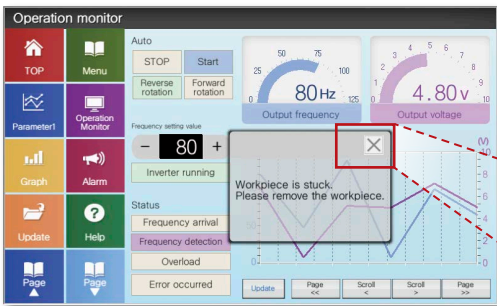


Set your desired radius in one dot increments

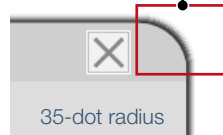


### Transparent window screen and alarm popup display

The background color transparency can be changed in window screens. You can check and control the window screen while viewing the overall image of the base screen. Alarm popups turn transparent as well so that they do not block the base screen underneath.

Configure the transparency of the window screen

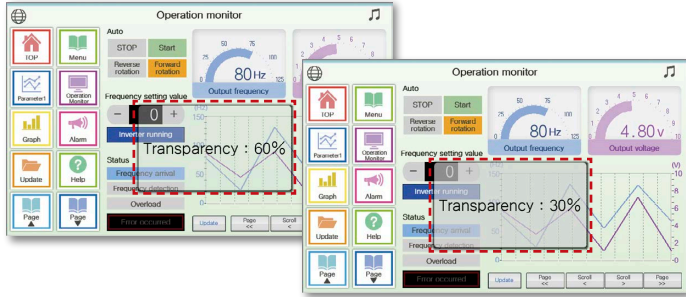

Transparent alarm popup display

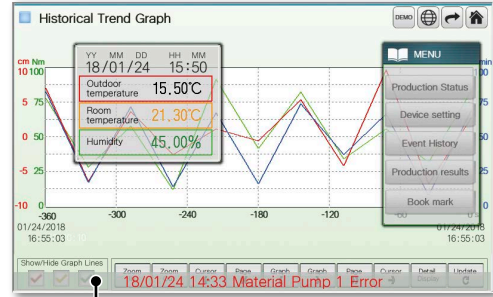

Alarm popup

### Stylish system key window


Multiple system key windows are available for your screen design. Select a preset that fits your screen design to use a matching numeric keypad. The key window is made transparent when moved so that you can check the screen underneath.

\* Not supported by GT21 and GS21.



### Figure antialiasing

Antialiasing is available for figure contours in addition to on-screen text. Overall screen display is smoother for stress-free, stylish screen design.

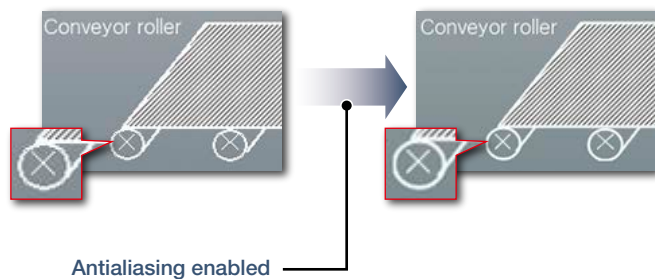

Antialiasing enabled

Procedure: [Common] → [GOT Type Setting] → Graphics Setting [GOT Graphic Ver.2]


# Support screen creation

Upgraded


## Label/Global label

### Label

Instead of using devices, use label names to create easy-to-understand project data efficiently. Not only Mitsubishi Electric programmable controller devices, but also non-Mitsubishi Electric controller devices and GOT internal devices can be assigned to labels. Labels can be used in GT Works3. In addition, labels can be imported from GX Works3, GX Works2, and MT Developer2.

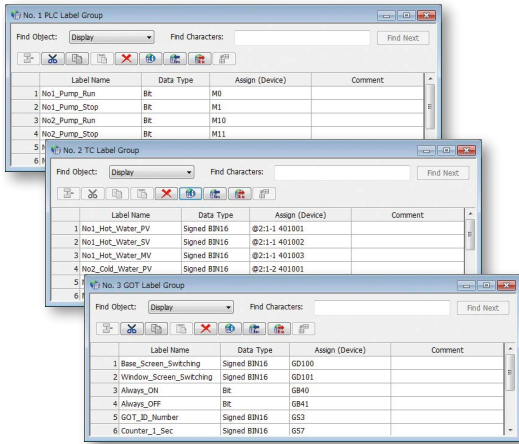

1 Set label names and assign devices

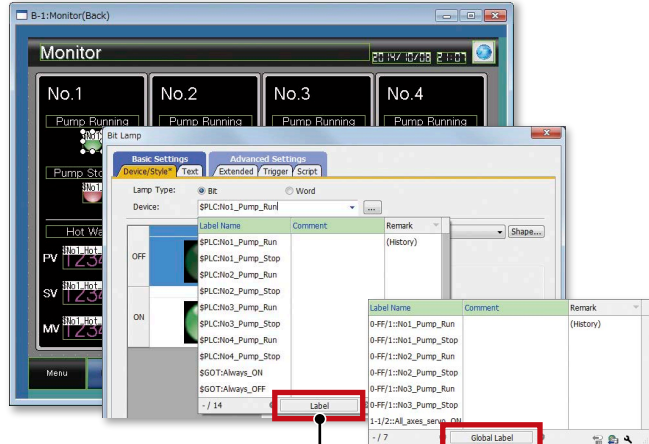

2 Select a label name when setting objects (Direct input is also possible.)

Select a type

Procedure: [Common] → [Label] → [New Label Group]


### Global label

Global labels are used for connection to RCPUs or motion CPUs (MELSEC iQ-R Series) only. By using global labels, you can create the project data without paying attention to the actual devices. To use global labels of GX Works3 and MT Developer2, import them to GT Designer3.


Global labels for RCPUs (GX Works3) are useful since they can be imported from the project data at a time.

Global labels for motion CPUs (MT Developer2) are imported from CSV files.

\* Not supported by GT21 and GS21.

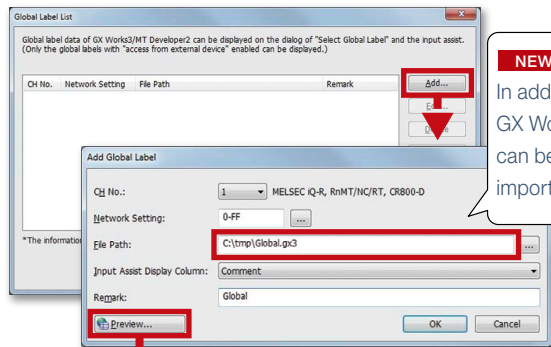

**NEW**  
In addition to CSV files, GX Works3 project data can be specified to import global labels.

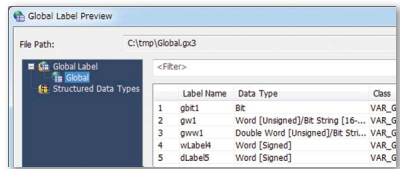


**NEW**  
Global labels and structure data can be checked with preview before importing.

Procedure: [Project] → [Import Other Data] → [Global Label]


### Notifying change of global labels **NEW**

Check if there is a change in the GX Works3 project or CSV file specified when global labels are imported with the following methods.

- Notification icon in the status bar




- [Select Global Label] dialog, [Global Label Reference] dialog

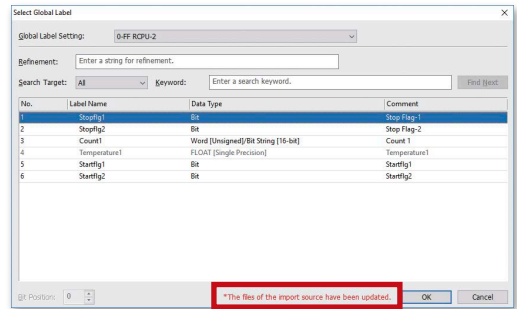

## Data browser


The data browser shows a list of objects used in the project. The settings can be edited directly on the browser or by opening the setting dialog. You can easily identify any duplicate data and no longer have to open multiple screens.

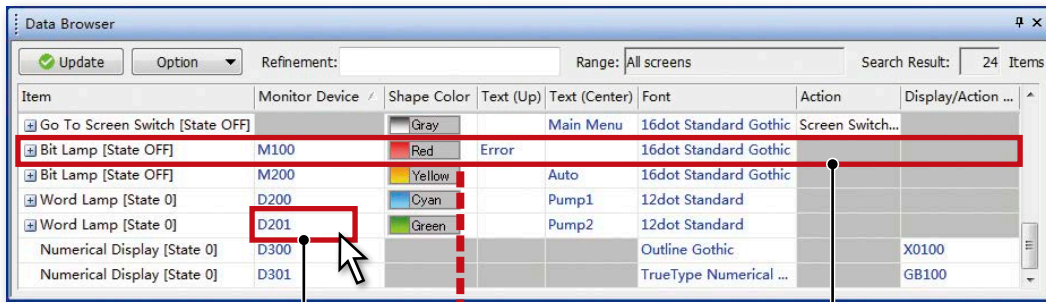

Directly edit on the list, or edit from the setting dialog.

Double-click

After selecting a line, the tree can be expanded with Shift + [+] key.

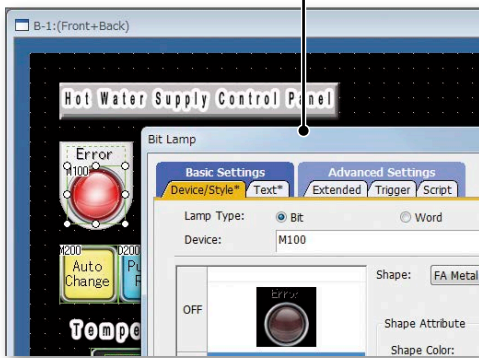


- **Display targets**  
Figures, objects, screen scripts, screen trigger actions
- **Editable details**  
Directly edit devices and text, etc.  
Change devices, text, colors, and figures in a batch  
Change action settings, fonts, and figures  
Change range settings of numerical displays and other objects  
Copy/paste multiple cells  
Sort and narrow down items by using devices/keywords  
Interchange columns with drag & drop

Procedure: [View] → [Docking Window] → [Data Browser]  
Shortcut key: Ctrl + E

### Upgraded

## Screen image list (thumbnail display)

Created screens can be displayed and checked in the screen image list window as thumbnails. By viewing the screen image list, it is easy to look for the screen you need. It is convenient to copy or delete screens on the window.

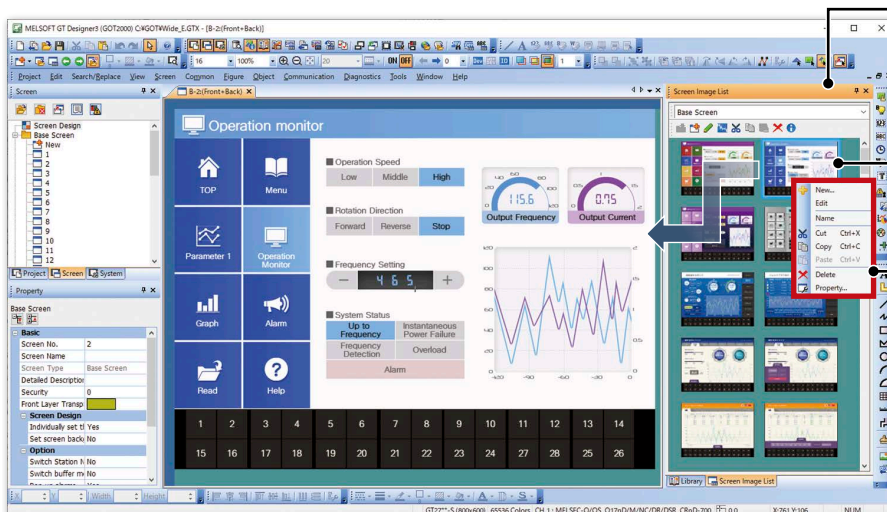

Greatly improved speed to display screen images **NEW**

\* Settings are required to speed up the display. For the details, please refer to the relevant product manual.

Double-click a screen on the window and display it on the screen editor

Copy or delete the screen on the window

Procedure: [Display] → [Docking Window] → [Screen Image List]

# Support screen creation

Upgraded

## Alarm display (user/system)

The alarm display lists the collected user alarms or system alarms\*. When placing an alarm display, operation switches are arranged at the same time. There is no need to select operation switches for the alarm display separately, thus reducing time for screen design.

\*1 GT21 and GS21 do not support the system alarm function.

GT27/GT25/GT23/GT2107-W/  
GT2104-R/GS21

| OCCURRED       | COMMENT | REST. | CHECK |
|----------------|---------|-------|-------|
| 10/18/19 11:40 |         | 11:40 | 11:40 |
| 10/18/19 11:40 |         | 11:40 | 11:40 |
| 10/18/19 11:40 |         | 11:40 | 11:40 |
| 10/18/19 11:40 |         | 11:40 | 11:40 |
| 10/18/19 11:40 |         | 11:40 | 11:40 |
| 10/18/19 11:40 |         | 11:40 | 11:40 |
| 10/18/19 11:40 |         | 11:40 | 11:40 |
| 10/18/19 11:40 |         | 11:40 | 11:40 |
| 10/18/19 11:40 |         | 11:40 | 11:40 |
| 10/18/19 11:40 |         | 11:40 | 11:40 |
| 10/18/19 11:40 |         | 11:40 | 11:40 |
| 10/18/19 11:40 |         | 11:40 | 11:40 |
| 10/18/19 11:40 |         | 11:40 | 11:40 |
| 10/18/19 11:40 |         | 11:40 | 11:40 |
| 10/18/19 11:40 |         | 11:40 | 11:40 |

|            |      |           |            |       |
|------------|------|-----------|------------|-------|
| Cursor ON  | Up   | Check     | Delete     | Save  |
| Cursor OFF | Down | Check all | Delete all | Reset |

GT2103-P

| OCCURRED       | COMMENT | REST. |
|----------------|---------|-------|
| 19/10/18 11:44 |         | 11:44 |
| 19/10/18 11:44 |         | 11:44 |
| 19/10/18 11:44 |         | 11:44 |
| 19/10/18 11:44 |         | 11:44 |
| 19/10/18 11:44 |         | 11:44 |
| 19/10/18 11:44 |         | 11:44 |

Operation switches are arranged at the same time


Procedure: [Object] → [Alarm Display] → [Alarm Display (User)/Alarm Display (System)]

NEW

## Device search


Search the current project for devices, labels, or tags. By quickly checking the device use status, you can identify which functions use the found devices, and change the related settings. Keyword search narrows down the search results.

Search by device

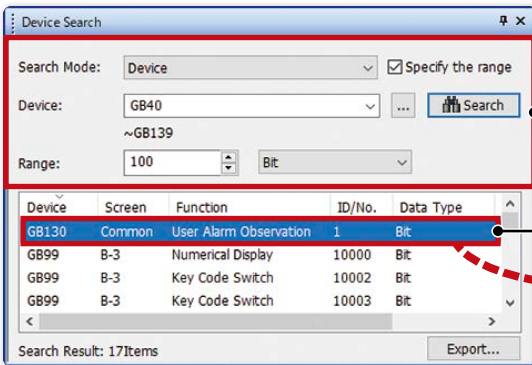

Set details of search conditions


Double-click to jump to the device setting (jump to Common Settings is also possible)

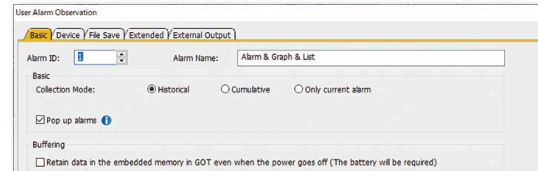


Quickly display the search results.

Search without worrying about device type and data length.

Search all devices when the [Device] field is empty

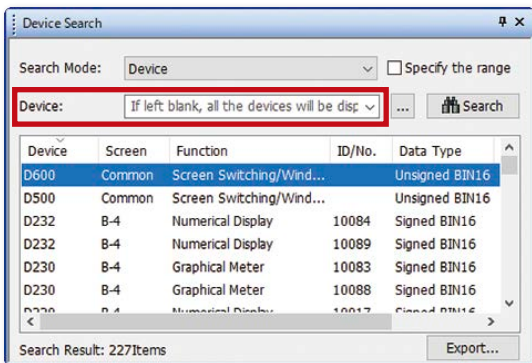

Search by keyword is also available

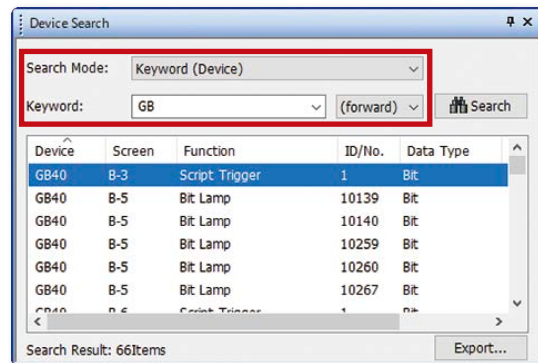

Procedure: [Search/Replace] → [Device Search]

Shortcut key: Ctrl + F




**NEW**

### Reflecting [Comment Group No.], [Comment No.], [Part No.] to objects


When changing comment group No., comment No., or part No., the number being set to objects are changed accordingly.

In the [Option] dialog, select whether or not to reflect the change to the object settings when changing the numbers.

Changing comment No.

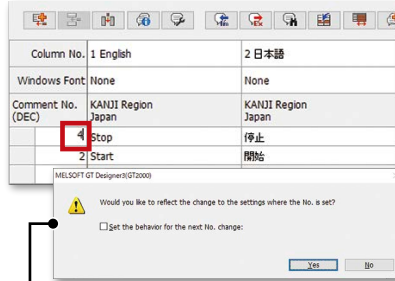

Display the confirmation message whether to reflect the change.  
(Settings are made in the [Option] dialog)

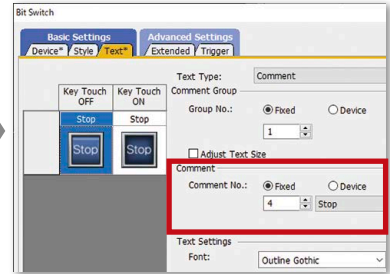


Reflect the change to the object where the comment is used.

### Template

Customize each template to the desired look-and-feel, ranging from color options to device selection. Attributes such as devices and colors can be set for each template.

You can easily change devices and colors by associating each object with the template's attribute.

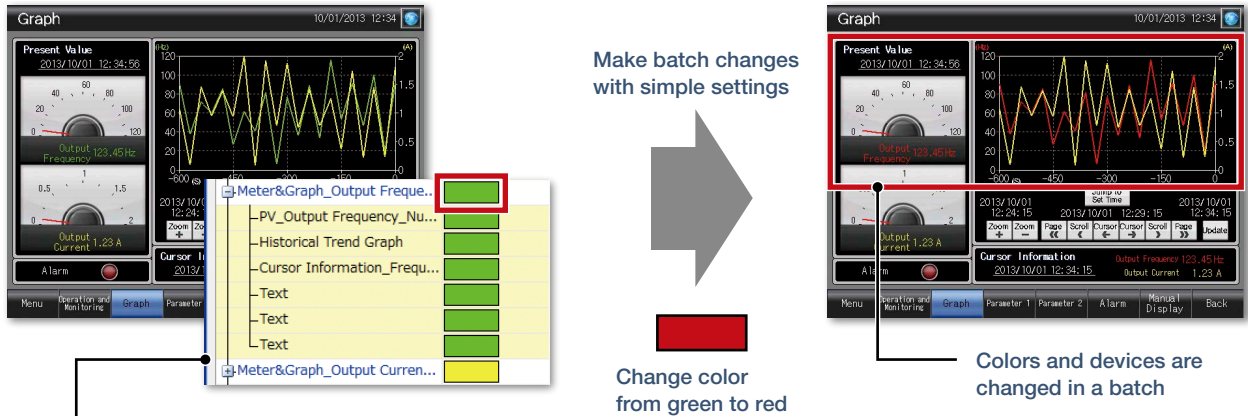

- Template attributes (color)**
- Historical trend graph line color
  - Text color
  - Numerical display value color
  - ...

- **Items that can be registered in templates**  
Figures, Objects
- **Attributes that can be registered and changed in templates**  
Device (Bit, Word), Numerical value, Text, Color, Figure, Font, Text size

**•Selecting from library**

**Procedure:** [View] → [Docking Window] → [Library List (Template)]

**Shortcut key:** Alt + F9

**•Creating template**

**Procedure:** Select object → Right-click → [Template Registration] → [Register to Template]

# Support screen creation

## e-Manual

e-Manual is the Mitsubishi Electric FA Electrical Document Manual with a dedicated viewer (e-Manual Viewer). Useful functions are included such as keyword search of multiple manuals, saving your favorites, saving memos, and others.

Concept movie

Windows® version


Tablet version




### Quickly confirm with F1 key

Press the F1 key in GT Works3 and jump to e-Manual for the dialog being edited! Quickly check setting methods and other information!

GT Works3

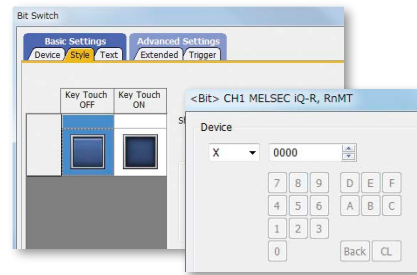

e-Manual

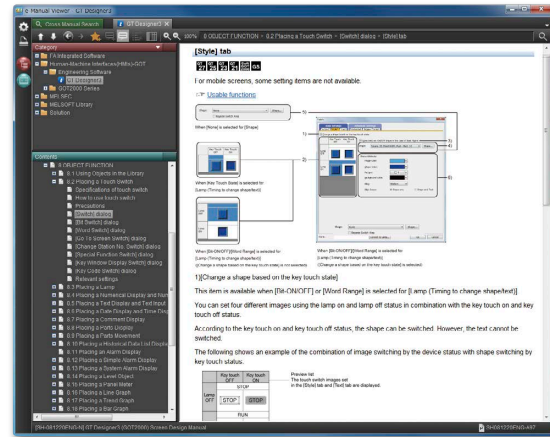

### Easy to view, easy to use!

Easy to view contents, easy to use, useful functions help you access manuals efficiently. Quickly search for the information you need.



**Cross Manual Search**  
Search required information from multiple manuals by keyword. You can get to the information you need without opening manuals one by one.

**Bookmark**  
Bookmark frequently used manuals and pages and you can check the information quickly.

**Note**  
Take a memo, such as know-how, and add it to the manual and you can customize manuals as you like.

**Procedure:** [Help] → [GT Designer3 Help]  
**Shortcut key:** F1

\* For the details, please contact your local sales office.

### Specification details and restrictions

#### <GOT manuals available in e-Manual>

- **Manual name** GOT2000 Series User's Manual (Hardware), GOT2000 Series User's Manual (Utility), GOT2000 Series User's Manual (Monitor), GT Designer3 (GOT2000) Screen Design Manual

#### <e-Manual Viewer Windows® version>

- **Supported OS** Microsoft® Windows® 10, Microsoft® Windows® 8.1, Microsoft® Windows® 8, Microsoft® Windows® 7, Microsoft® Windows Vista®, Microsoft® Windows® XP
- **How to obtain e-Manual** e-Manual is included in GT Works3 Ver.1.155M or later. For the details, please contact your local sales office.

#### <e-Manual Viewer tablet version>

- **Supported OS** Android™ 4.3/4.4/5.0, iOS 8.1 or later
- **How to obtain e-Manual** e-Manual is available for download from application distribution sites. (Search by "Mitsubishi Electric e-manual")



Tablet version (Android™)  
\* Japanese site




Tablet version (iOS)  
\* Japanese site

# Easily create stylish screens

## Align


Selected figures and objects are aligned to the anchored figure or object according to the specified alignment type.

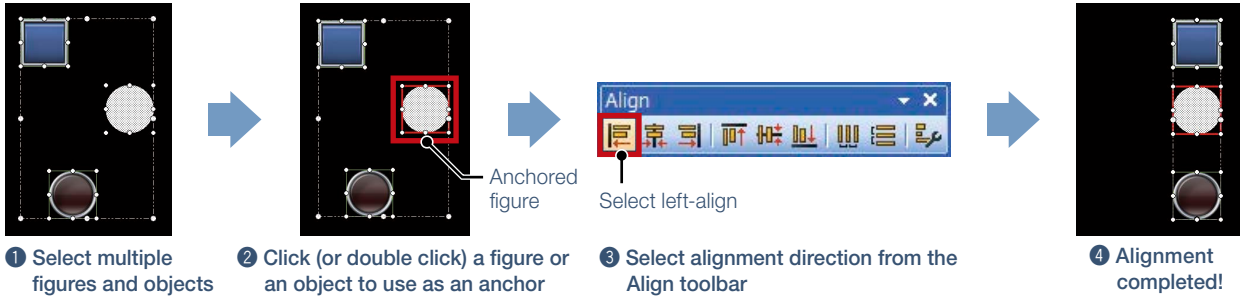


## Graphical meter

Just select a meter from the preset list and you can create stylish, clear meters. The position and angle of scales can be adjusted by mouse operation and the shape and design can be changed easily. Warning color display indicates the machine status clearly.

Select from the toolbar

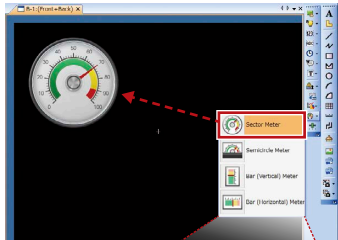

Select meter shape

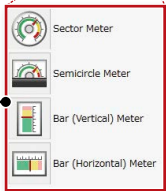


Select from the preset list



The list includes various choices

Easy to adjust settings by mouse operation

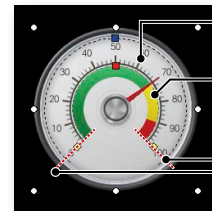

Adjust scale position

Adjust warning color display position

Adjust start/end angle of the meter




Procedure: [Object] → [Graphical Meter]

Upgraded

## Logo text

The background of the logo text can be made transparent.

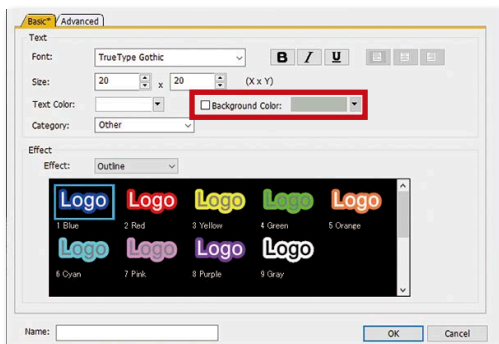

Previously



NEW




Uncheck the [Background Color] checkbox to make the background of the text transparent.

# Support debugging

## ■ Simulator

Since the operation of the project data can be confirmed on the personal computer, the program can be efficiently debugged while making changes on the screen. Even if hardware is not available, the operations can be confirmed with a personal computer and sequence programs. The screen images can be printed and saved, and easily used when creating specifications and operation manuals.

\* GX Works3, GX Works2, GX Simulator, or MT Works2 is required separately. (It varies depending on the CPU to simulate.)

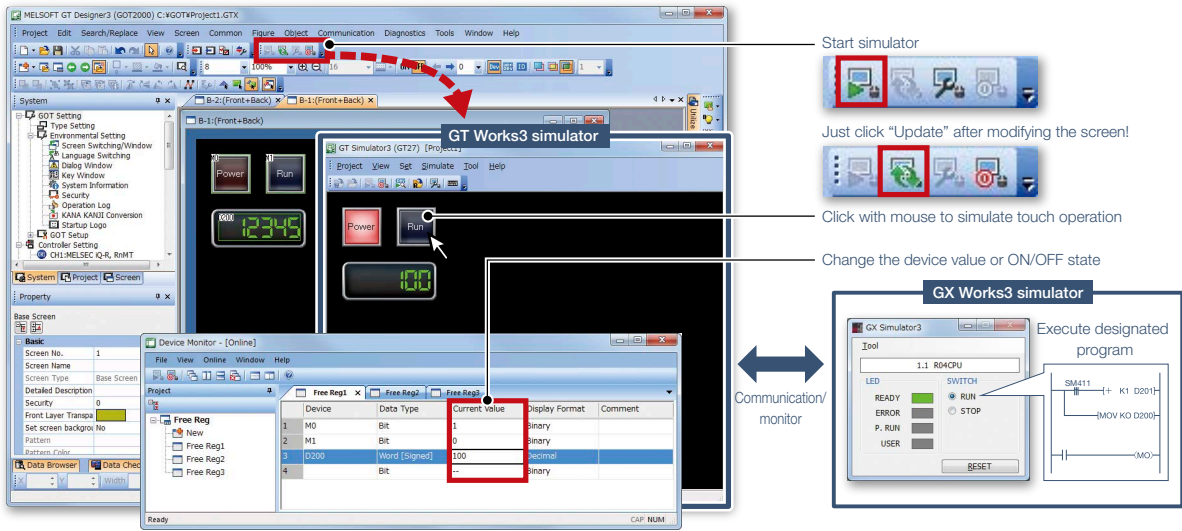


Procedure: [Tools] → [Simulator] → [Activate]  
 Shortcut key: Ctrl + F10

## ■ Data verification

Verify the project data and check the results for each screen/object.

From the Verify Result window, you can jump to the target object or can narrow down results by items such as the screen type. This function enables you to check differences and modify the data quickly even if the project data includes many screens.

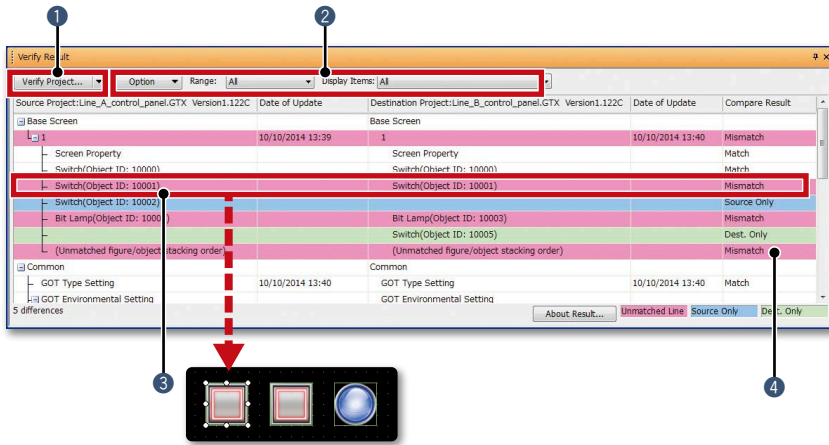


- 1 Verify Project (verifying the project being edited against one in a personal computer) and GOT Verification (verifying the project being edited against one in the GOT) are available.
- 2 Export of verified results and refinement by items such as screen type are possible.
- 3 Double-click on an error or warning line to jump to the corresponding object.
- 4 The background color of a row varies according to the type of a difference.  
 Pink: The item exists in both projects and the data are not matched  
 Blue: The item exists only in the source project  
 Green: The item exists only in the destination project

- Project verification  
 Procedure: [Project] → [Verify Data]
- Verification with GOT  
 Procedure: [Communication] → [Verify GOT] \* In the Verify Result dialog, select [Output to Verify Result (window)] to display the above Verify Result window.

## Data check list

The touch switch quantity and overlapping state, object quantity and illegal devices are checked and the results are displayed as a list. Double-click on an error or warning line to jump to the corresponding object. Quickly identify errors and warning objects.

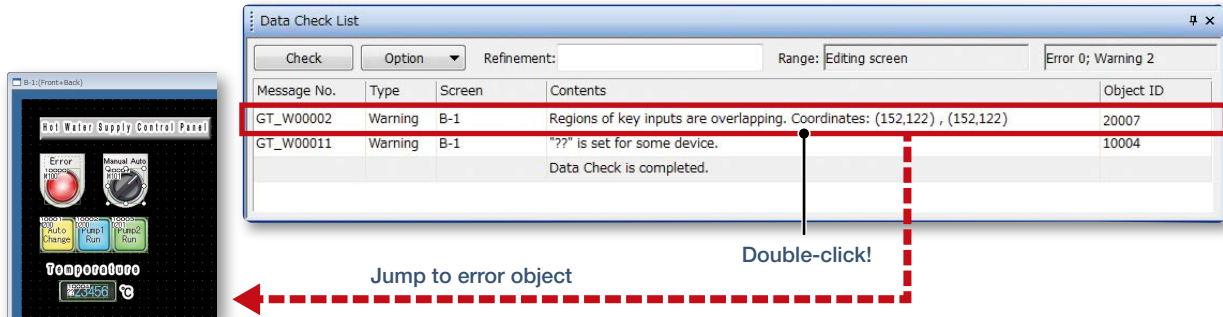

Procedure: [View] → [Docking Window] → [Data Check List]

# Support startup work




Upgraded

## Data transfer (batch write to multiple GOTs)

Single package data (project data, communication drivers, etc.) can be installed on multiple GOTs connected via Ethernet at once. (Maximum 256 GOTs)

Batch installation on multiple GOTs reduces data transfer time and prevents data update omission. When multiple GOTs share the same project data on a large equipment, this feature reduces screen correction and update tasks.

\* Supported by GT2107-W, GT2104-R, and GT2103-PMBD among GT21 models.

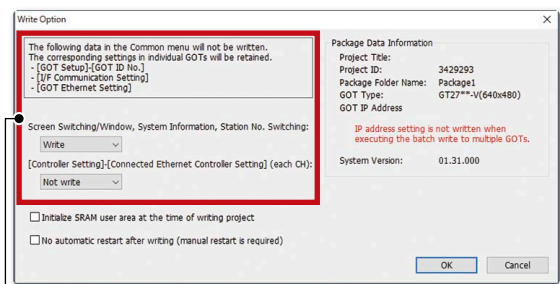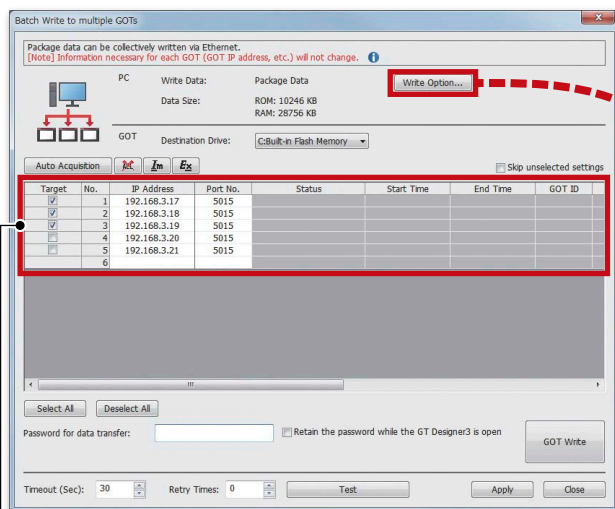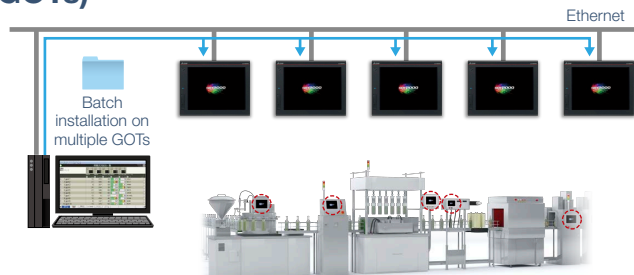

Set whether to write the following settings.

- Screen Switching/Window, System Information, Station No. Switching
- [Connected Ethernet Controller Setting] in the [Controller Setting] (each channel)

If [Not write] is selected, settings in each target GOT remain unchanged.

The GOT identification information including the GOT IP address are automatically acquired, and the target to perform batch installation can be selected.


Procedure: [Communication] → [Batch Write to multiple GOTs]

# Support globalization

## Speech synthesis function


Just enter arbitrary text in GT Works3 to create a sound file. It is easy to create a sound file of a message that is needed to output sound on GOT. The speaker (female/male), language, speed, pitch, and volume of the voice can be set. Messages can be created in 6 languages and you can create the sound notification system in multiple languages.

### Supported language

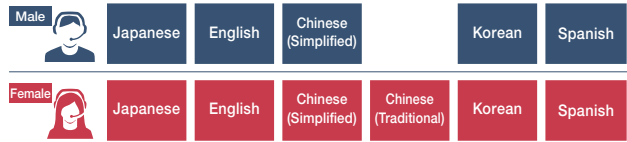

\* To register or update messages, GT Works Text to Speech License (SW1DND-GTVO-M) is required.

### Image of creating a sound file (message)

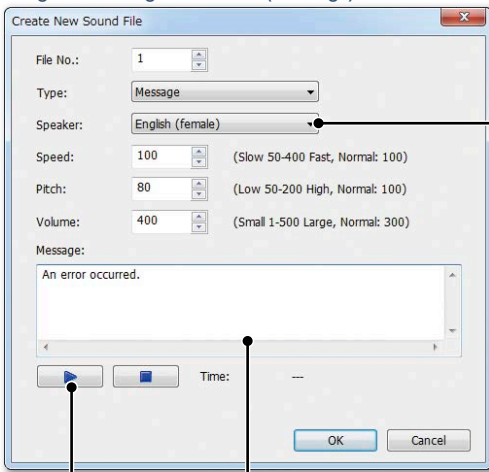

Select language and speaker (male/female)

Playback and check the sound

Enter an arbitrary message



Procedure: [Common] → [Sound] → [Sound File List]

## Language switching


Create comments of different languages, save them in separate columns, and you can switch languages easily just by switching column numbers. In addition, the character strings of switches and lamps can easily be converted from the Text or Text Figures into Comments. This makes it easy to upgrade screens to display multiple languages.

### Comment group


| Column No.        | 1 English          | 2 Japanese                     | 3 Chinese |
|-------------------|--------------------|--------------------------------|-----------|
| Windows Font      | Arial              | MS UI Gothic                   | MingLIU   |
| Comment No. (DEC) | KANJI Region Japan | KANJI Region China (GB)-Mincho |           |
| 1 Menu            | メニュー               | 菜单                             |           |
| 2 Monitor         | モニター               | 监视                             |           |
| 3 Diagnosis       | 診断                 | 诊断                             |           |
| 4 Alarm           | アラーム               | 报警                             |           |
| 5 Reset           | リセット               | 复位                             |           |

Register text to comment group!



Add comments for language switching!

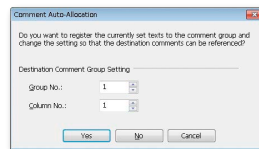

### Text

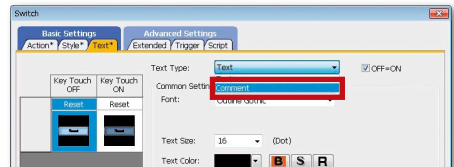

### Text figure

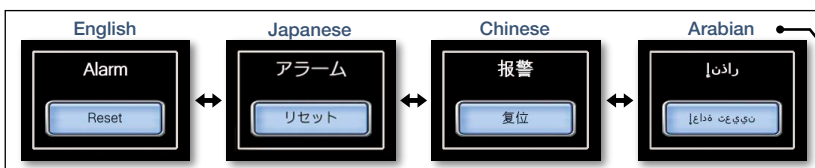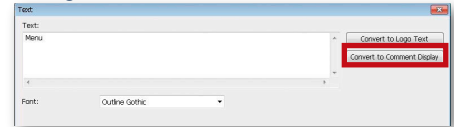

Various languages are supported because Windows fonts can be used for comment groups.

Comment group for easy language switching!

Procedure: [Common] → [GOT Environmental Setting] → [Language Switching]

## ■ FA Term Translation Tool

This is the software to translate comments (words, sentences) that are used in MELSOFT applications including GT Works3. The software uses the FA Term Translation Dictionary provided by Mitsubishi Electric. You can use the software even when your computer is not connected to the Internet. In addition, it is possible to create your own dictionary and switch dictionaries depending on your needs. The software supports creation of multiple language screens.

| No. | Before:English                          | After:Japanese          | Error Contents | Register to User Dictionary |
|-----|---|-------------------------|----------------|-----------------------------|
| 1   | Stop the line.                          | ラインを停止します。              |                | <input type="checkbox"/>    |
| 2   | Initialize input/output setting para... | 入出力設定パラメータ(RAM)を初期化し... |                | <input type="checkbox"/>    |
| 3   | Initialize expansion setting paramet... | 拡張設定パラメータ(ROM)を初期化し...  |                | <input type="checkbox"/>    |
| 4   | Capacity of input/output setting par... | 入出力設定パラメータ(RAM)の容量が...  |                | <input type="checkbox"/>    |
| 5   | "Remote:" Order from others beco...     | 「リモート」:他からの指令が有効になり...  |                | <input type="checkbox"/>    |

① Copy comments to translate (e.g. from GT Works3) and paste them to the FA Term Translation Tool window


② Translated results are displayed

③ Check a checkbox to save it to the dictionary

④ Copy the comments translated with FA Term Translation Tool and paste them to where you want to use them (e.g. GT Works3).

⑤ It is easy to create language switching screens.

### GT Works3

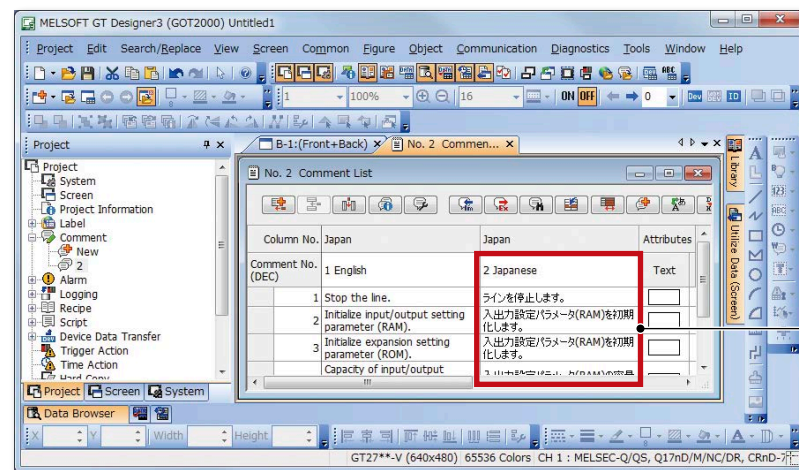

### Starting FA Term Translation Tool

Procedure: Windows menu → [MELSOFT] → [FATranslator] → [FA Term Translation Tool]

#### Specification details and restrictions

- Compatible language
  - Japanese → English, Chinese (Simplified), Chinese (Traditional)
  - English → Japanese
  - Chinese (Simplified) → Japanese
  - Chinese (Traditional) → Japanese
- Supported OS (Japanese version, English version)
  - Microsoft® Windows® 10
  - Microsoft® Windows® 8.1
  - Microsoft® Windows® 8
  - Microsoft® Windows® 7

#### ● About this tool

Translation by FA Term Translation Tool is a mechanical translation. Use this tool as a tool to support translation.

#### ● How to obtain this tool

This tool is included in the MITSUBISHI ELECTRIC FA Library DVD-ROM of GT Works3 Version 1.130L or later. For the details, please contact your local sales office.

## e-F@ctory solves customers' issues and concerns by enabling visualization and analysis that lead to improvements and increase availability at production sites.

e-F@ctory is the Mitsubishi Electric solution for improving the performance of any manufacturing enterprise by enhancing productivity, and reducing the maintenance and operations costs together with seamless information flow throughout the plant.

e-F@ctory helps to reduce the overall TCO\* and is achieved in the following four areas:

\* TCO: Total Cost of Ownership

### Reduce energy costs

#### Energy saving solution

Modern manufacturing depends much on reducing energy costs as a way to realize an efficient manufacturing enterprise. e-F@ctory supports this by allowing visualization of real-time energy usage, helping to reduce the overall energy consumption.

### Integrate FA and IT systems at low cost

#### Edge-computing (FA-IT information connection)

e-F@ctory solutions provide direct connectivity from the shop floor to enterprise, such as Manufacturing Execution System (MES) without requiring a gateway computer. This enables leaner operations, improved yield, and efficient management of the supply chain.

### Reduce development, production, and maintenance costs

#### iQ Platform

The iQ Platform minimizes costs at all phases of the automation life cycle by improving development times, enhancing productivity, reducing maintenance costs, and making information more easily accessible. Integration is at the heart of the iQ Platform, with a highly intelligent controller platform as the core, combined with a seamless communication network and an integrated engineering environment.



### Reduce setup and maintenance costs

#### iQ Sensor Solution


Easily setup and maintain various types of sensors. Maintenance and design costs can be reduced as compatible iQSS partner sensors can be managed together.







FA integrated solutions reduce total cost

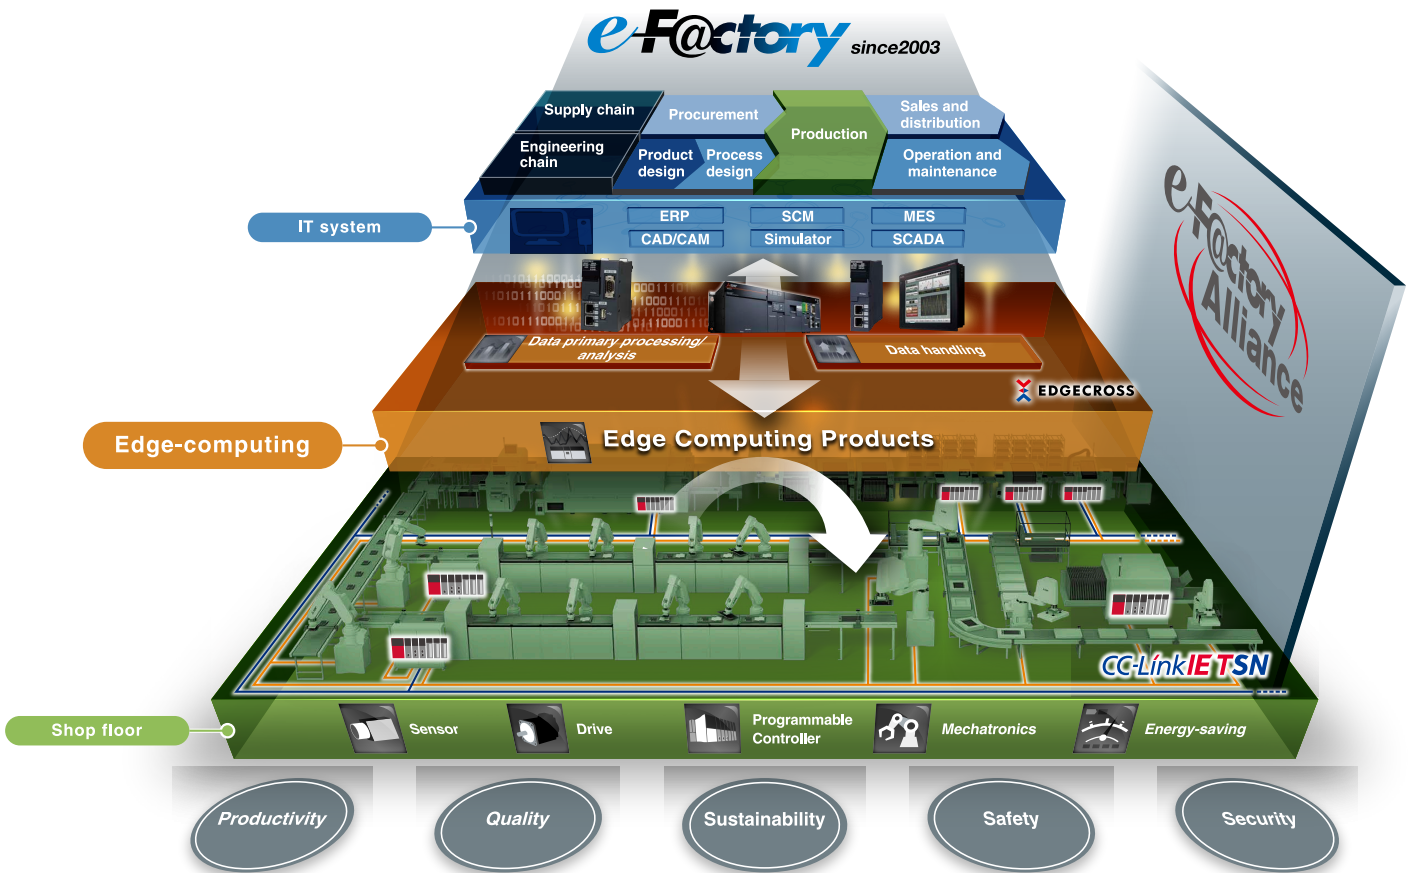

Overall production information is captured in addition to energy information, enabling the realization of efficient production and energy use (energy savings).

**Best-in-class solutions across the ecosystem**

**e-F@ctory Alliance**

The e-F@ctory Alliance is an ecosystem offering best-in-class solutions by combining products between Mitsubishi Electric and its various partners. Close collaboration with such partners broaden the choices for the customer and realize the best solution possible.




# Related materials Various catalogs and leaflets are available.

## ■ Extensive lineup and solutions for various applications




GOT2000 Series Wide Model  
L(NA)08461ENG

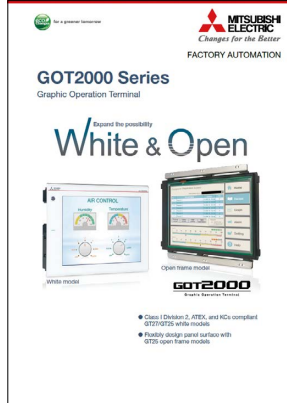


GOT2000 Series White & Open  
L(NA)08414ENG



GOT2000 Series Rugged Model  
L(NA)08555ENG

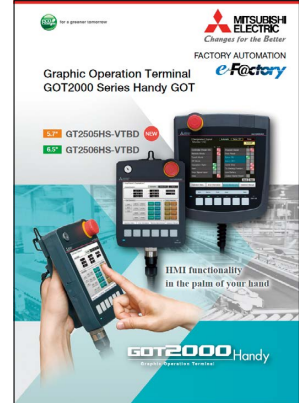


GOT2000 Series Handy GOT  
L(NA)08506ENG

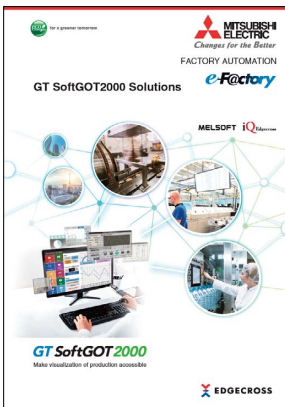

GT SoftGOT2000 Solutions  
L(NA)08606ENG



Monitoring Control System Solutions  
L(NA)08577ENG

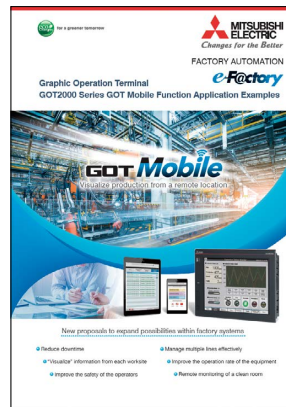

GOT2000 Series GOT Mobile Function  
Application Examples  
L(NA)08464ENG



FA Application Package  
iQ Monozukuri Process Remote  
Monitoring  
L(NA)08674ENG


## ■ GOT SIMPLE Series catalogs




GOT SIMPLE Series\*  
L(NA)08649ENG (D700 Version)  
L(NA)08676ENG (CS80 Version)



Simple Solution Catalog\*  
L(NA)08602ENG (D700 Version)  
L(NA)08355ENG (CS80 Version)

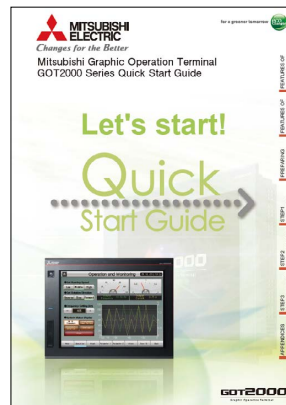

GOT2000 Series Quick Start Guide  
L(NA)08311ENG

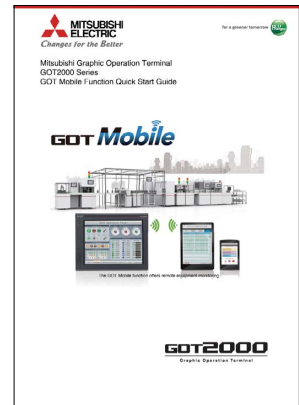


GOT Mobile Function  
Quick Start Guide  
L(NA)08385ENG

\* The inverter model in the catalog differs depending on the catalog number.

## ■ GOT2000 First Guide

# Specifications, Product List, Support INDEX

|   |     |
|---|-----|
| ■ General specifications                            |     |
| Performance specifications                          |     |
| Power supply specifications                         |     |
| GT27 model.....                                     | 124 |
| GT25 model.....                                     | 126 |
| GT25 wide model/GT25 handy GOT ...                  | 128 |
| GT25 rugged model.....                              | 130 |
| GT23 model.....                                     | 132 |
| GT21 wide model/GT21 model .....                    | 134 |
| GS21 model.....                                     | 136 |
| ■ External dimensions                               |     |
| Panel cut dimensions                                |     |
| GT27 model/GT25 model .....                         | 138 |
| GT25 open frame model .....                         | 139 |
| GT25 wide model.....                                | 140 |
| GT25 handy GOT .....                                | 140 |
| GT25 rugged model.....                              | 141 |
| GT23 model.....                                     | 141 |
| GT21 wide model.....                                | 142 |
| GT21 model.....                                     | 142 |
| GS21 model.....                                     | 143 |
| Communication cable.....                            | 144 |
| ■ Operating environment                             |     |
| MELSOFT GT Works3 Version1 .....                    | 146 |
| GT SoftGOT2000 Version1 .....                       | 147 |
| ■ Function list .....                               | 148 |
| ■ Connectable model list                            |     |
| GOT2000/GOT SIMPLE .....                            | 152 |
| GT SoftGOT2000 Version1 .....                       | 165 |
| ■ Compatibility with<br>conventional products ..... | 171 |
| ■ Product list .....                                | 172 |
| ■ Support   |     |
| Global support .....                                | 182 |
| Approval standards .....                            | 183 |
| ■ Related products .....                            | 184 |

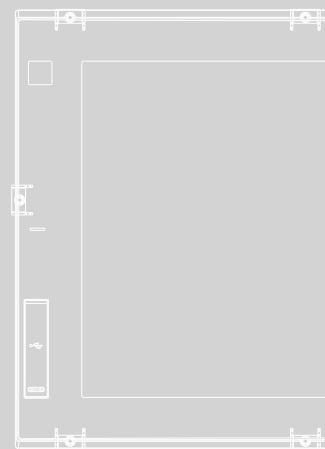

# Specifications

## GT27 model

### General specifications

| Item  | Specifications  |  |                              |                           |              |                                       |   |
|---|---|--|------------------------------|---------------------------|--------------|---------------------------------------|---|
| Operating ambient temperature *1  | 0 °C to 55 °C *2  | *1 Includes the temperature inside the enclosure of the control panel to which the GOT is installed.   |                              |                           |              |                                       |   |
| Storage ambient temperature   | -20 °C to 60 °C   | *2 When any of the following units or option is mounted, the maximum operating ambient temperature must be 5 °C lower than the one described in the general specifications: multimedia unit (GT27-MMR-Z), MELSECNET/H communication unit (GT15-J71LP23-25, GT15-J71BR13), CC-Link communication unit (GT15-J61BT13), protective cover for oil. |                              |                           |              |                                       |   |
| Operating ambient humidity  | 10% RH to 90% RH, non-condensing  |  |                              |                           |              |                                       |   |
| Storage ambient humidity  | 10% RH to 90% RH, non-condensing  |  |                              |                           |              |                                       |   |
| Vibration resistance  | Compliant with JIS B 3502 and IEC 61131-2   | Frequency  | Acceleration                 | Half amplitude            | Sweep count  | 10 times in each X, Y, or Z direction |   |
|   |   | Under intermittent vibration   | 5 to 8.4 Hz<br>8.4 to 150 Hz | —<br>9.8 m/s <sup>2</sup> | 3.5 mm<br>—  |                                       | — |
|   |   | Under continuous vibration   | 5 to 8.4 Hz<br>8.4 to 150 Hz | —<br>4.9 m/s <sup>2</sup> | 1.75 mm<br>— |                                       |   |
|   |   |  |                              |                           |              |                                       |   |
| Shock resistance  | Compliant with JIS B 3502 and IEC 61131-2 (147 m/s <sup>2</sup> (15G), 3 times in each X, Y, or Z direction)  |  |                              |                           |              |                                       |   |
| Operating atmosphere *6   | No greasy fumes, corrosive gas, flammable gas, excessive conductive dust, and direct sunlight (as well as at storage)   |  |                              |                           |              |                                       |   |
| Operating altitude *3   | 2000 m or less  |  |                              |                           |              |                                       |   |
| Installation location   | Inside control panel  |  |                              |                           |              |                                       |   |
| Overvoltage category *4   | II or less  |  |                              |                           |              |                                       |   |
| Pollution degree *5   | 2 or less   |  |                              |                           |              |                                       |   |
| Cooling method  | Self-cooling  |  |                              |                           |              |                                       |   |
| Grounding   | Grounding with a ground resistance of 100 Ω or less by using a ground cable that has a cross-sectional area of 2 mm <sup>2</sup> or more. If impossible, connect the ground cable to the control panel. |  |                              |                           |              |                                       |   |
| Operate and store the GOT in environments without direct sunlight, high temperature, dust, humidity, and vibrations.  |   |  |                              |                           |              |                                       |   |
| For the status of conforming to various standards and laws (CE, ATEX, UL/cUL, Class I Division 2, EAC, KC, KCs, and maritime certifications [ABS/DNV/GL/LR/NK/RINA]), please refer to the Mitsubishi Electric Factory Automation Global website ( <a href="http://www.MitsubishiElectric.com/fa/">www.MitsubishiElectric.com/fa/</a> ). |   |  |                              |                           |              |                                       |   |

### Performance specifications

| Item   | Specifications   |  |  |  |
|--|--|--|--|--|
|  | GT2715-XTBA<br>GT2715-XTBD   | GT2712-STBA<br>GT2712-STBD   | GT2712-STWA<br>GT2712-STWD   | GT2710-STBA<br>GT2710-STBD                 |
| Display section *1 *2                              | Display device   | TFT color LCD  |  |  |
|  | Screen size  | 15"  | 12.1"  | 10.4"                                      |
|  | Resolution   | XGA: 1024 × 768 dots   | SVGA: 800 × 600 dots   |  |
|  | Display size   | 304.1(11.97) (W) × 228.1(8.98) (H) mm(inch)  | 246(9.69) (W) × 184.5(7.26) (H) mm(inch)   | 211.2(8.31) (W) × 158.4(6.24) (H) mm(inch) |
|  | Number of displayed characters   | 16-dot standard font: 64 characters × 48 lines (two-byte characters)<br>12-dot standard font: 85 characters × 64 lines (two-byte characters) | 16-dot standard font: 50 characters × 37 lines (two-byte characters)<br>12-dot standard font: 66 characters × 50 lines (two-byte characters) |  |
|  | Display color  | 65536 colors   |  |  |
|  | Brightness adjustment  | 32 levels  |  |  |
|  | Backlight  | LED (not replaceable)  |  |  |
| Backlight life *4                                  | Approx. 60000 h (operating ambient temperature: 25 °C, display intensity: 50%) |  |  |  |
| Touch panel *3 *11                                 | Type   | Analog resistive film  |  |  |
|  | Key size   | Minimum 2 × 2 dots *9 (per key)  |  |  |
|  | Simultaneous press   | Up to two points   |  |  |
|  | Life   | 1 million touches or more (operating force: 0.98 N or less)  |  |  |
| Panel color  | Black  | White  | Black  | Black                                      |
| Human sensor                                       | Detection length   | 1 m  |  |  |
|  | Detection temperature  | Temperature difference between human body and ambient air: 4 °C or higher  |  |  |
| User memory  | User memory capacity   | Memory for storage (ROM) *12: 57 MB<br>Memory for operation (RAM): 128 MB  |  |  |
|  | Life (number of write times)   | 100000 times   |  |  |
| Built-in clock precision                           | ±90 seconds/month (ambient temperature: 25 °C)                                 |  |  |  |
| Battery  | Data to be backed up   | GT11-50BAT lithium battery   |  |  |
|  | Life   | SRAM data, clock data, system status log data<br>Approx. 5 years (ambient temperature: 25 °C)  |  |  |
| Built-in interface                                 | RS-232   | 1 channel Transmission speed: 115200, 57600, 38400, 19200, 9600, 4800 bps Connector shape: D-sub 9-pin (male)                                |  |  |
|  | RS-422/485   | 1 channel Transmission speed: 115200, 57600, 38400, 19200, 9600, 4800 bps Connector shape: D-sub 9-pin (female)                              |  |  |
|  | Ethernet   | 1 channel Data transfer method: 100BASE-TX, 10BASE-T Connector shape: RJ-45 (modular jack)   |  |  |
|  | USB (host)   | 2 channels (front face, rear face)   | 1 channel (rear face)  | 2 channels (front face, rear face)         |
|  | USB (device)   | 1 channel (front face)   | 1 channel (rear face)  | 1 channel (front face)                     |
|  | SD memory card *12   | USB version: USB 2.0 (High-Speed 480 Mbps), Connector shape: USB Mini-B<br>1 channel, SDHC compliant (maximum 32 GB)                         |  |  |
|  | Extension interface *7   | For installing a communication unit or an option unit  |  |  |
|  | Auxiliary extension interface  | For installing an option unit  |  |  |
| Side interface                                     | For installing a communication unit  |  |  |  |
| Buzzer output                                      | Single tone (tone and tone length adjustable)<br>2 colors (blue and orange)    |  |  |  |
| POWER LED  | 2 colors (blue and orange)   |  |  |  |
| Protective structure *5                            | Front: IP67F *6 *9 Inside control panel: IP2X                                  |  |  |  |
| Safety standards, radio laws (as of December 2019) | CE, UL, cUL, EAC, KC   |  | CE, ATEX *10, UL, cUL, Class I Division 2, EAC, KC, KCs *10  | CE, UL, cUL, EAC, KC                       |
| External dimensions                                | 397(15.63) (W) × 300(11.81) (H) × 60(2.36) (D) mm(inch)                        | 316(12.44) (W) × 246(9.69) (H) × 52(2.05) (D) mm(inch)   | 303(11.93) (W) × 218(8.58) (H) × 52(2.05) (D) mm(inch)   |  |
| Panel cut dimensions                               | 383.5(15.10) (W) × 282.5(11.12) (H) mm(inch)                                   | 302(11.89) (W) × 228(8.98) (H) mm(inch)  |  | 289(11.38) (W) × 200(7.87) (H) mm(inch)    |
| Weight (excluding a fitting)                       | 4.5(9.9) kg(lb)  | 2.4(5.3) kg(lb)  |  | 2.1(4.6) kg(lb)                            |
| Compatible software package                        | GT Works3 Version1.225K or later   |  |  |  |

\*1 As a characteristic of liquid crystal display panels, bright dots (always lit) and dark dots (never lit) may appear on the panel. Since liquid crystal display panels comprise a great number of display elements, the appearance of bright and dark dots cannot be reduced to zero. Individual differences in liquid crystal display panels may cause differences in color, uneven brightness and flickering. Note that these phenomena are characteristics of liquid crystal display panels and it does not mean the products are defective or damaged.

\*2 Flickering may occur due to vibration, shock, or the display colors.

\*3 When a stylus is used, the touch panel has a life of 100 thousand touches. The stylus must satisfy the following specifications.  
• Material: polyacetal resin • Tip radius: 0.8 mm or more

\*4 To prevent the display section from burning in and lengthen the backlight life, enable the screen save function and turn off the backlight.

\*5 Note that the structure does not guarantee protection in all users' environments. The GOT may not be used in certain environments where it is subjected to splashing oil or chemicals for a long period of time or soaked in oil mist.

Power supply specifications

| Item   | Specifications  |                            |   |                            |   |  |   |                            |   |              |   |
|--|---|----------------------------|---|----------------------------|---|--|---|----------------------------|---|--------------|---|
|  | GT2715-XTBA   | GT2712-STBA<br>GT2712-STWA | GT2710-STBA<br>GT2710-VTBA<br>GT2710-VTWA | GT2708-STBA<br>GT2708-VTBA | GT2715-XTBD   | GT2712-STBD<br>GT2712-STWD   | GT2710-STBD<br>GT2710-VTBD<br>GT2710-VTWD | GT2708-STBD<br>GT2708-VTBD | GT2705-VTBD   |              |   |
| Power supply voltage                         | 100 V AC to 240 V AC (+10%, -15%)   |                            |   |                            | 24 V DC (+25%, -20%)  |  |   |                            |   |              |   |
| Power supply frequency                       | 50 Hz/60 Hz (±5%)   |                            |   |                            |   |  |   |                            |   |              |   |
| Power consumption                            | Under the maximum load  | 51 W or less               | 44 W or less                              | 41 W or less               | 41 W or less  | 48 W or less   | 45 W or less                              | 42 W or less               | 39 W or less  | 30 W or less |   |
|  | Main unit   | 25 W                       | 19 W                                      | 17 W                       | 15 W  | 23 W   | 18 W                                      | 15 W                       | 13 W  | 7 W          |   |
|  | Main unit (backlight OFF)   | 10 W                       | 10 W                                      | 10 W                       | 10 W  | 8 W  | 8 W                                       | 8 W                        | 8 W   | 5 W          |   |
| Inrush current                               | 40 A or less (3 ms, ambient temperature: 25 °C, under the maximum load)   |                            |   |                            | 60 A or less (2 ms, ambient temperature: 25 °C, under the maximum load) |  |   |                            | 5 A or less (20 ms, ambient temperature: 25 °C, under the maximum load) |              | 69 A or less (1 ms, ambient temperature: 25 °C, under the maximum load) |
| Permissible instantaneous power failure time | 20 ms or less (100 V AC or more)  |                            |   |                            | 10 ms or less   |  |   |                            |   |              |   |
| Noise immunity                               | Noise voltage: 1500 Vp-p, noise width: 1 μs, measured by a noise simulator with noise frequency ranging from 25 Hz to 60 Hz |                            |   |                            |   | Noise voltage: 500 Vp-p, noise width: 1 μs, measured by a noise simulator with noise frequency ranging from 25 Hz to 60 Hz |   |                            |   |              |   |
| Withstand voltage                            | 1500 V AC for 1 minute across power terminals and earth   |                            |   |                            |   |  |   |                            |   |              |   |
| Insulation resistance                        | 500 V DC across power terminals and earth, 10 MΩ or more by an insulation resistance tester                                 |                            |   |                            |   |  |   |                            |   |              |   |

| Item   | Specifications   |   |  |                                    |  |
|--|--|---|--|------------------------------------|--|
|  | GT2710-VTBA<br>GT2710-VTBD   | GT2710-VTWA<br>GT2710-VTWD  | GT2708-STBA<br>GT2708-STBD   | GT2708-VTBA<br>GT2708-VTBD         | GT2705-VTBD  |
| Display section<br>*1 *2                           | TFT color LCD  |   |  |                                    |  |
|  | 10.4"  |   | 8.4"   |                                    | 5.7"   |
|  | VGA: 640 × 480 dots  |   | SVGA: 800 × 600 dots   |                                    | VGA: 640 × 480 dots  |
|  | 211.2(8.31) (W) × 158.4(6.24) (H) mm(inch)                                     |   | 170.9(6.73) (W) × 128.2(5.05) (H) mm(inch)                           |                                    | 115.2(4.54) (W) × 86.4(3.40) (H) mm(inch)                            |
|  | 16-dot standard font: 40 characters × 30 lines (two-byte characters)           |   | 16-dot standard font: 50 characters × 37 lines (two-byte characters) |                                    | 16-dot standard font: 40 characters × 30 lines (two-byte characters) |
|  | 12-dot standard font: 53 characters × 40 lines (two-byte characters)           |   | 12-dot standard font: 66 characters × 50 lines (two-byte characters) |                                    | 12-dot standard font: 53 characters × 40 lines (two-byte characters) |
|  | 65536 colors   |   |  |                                    |  |
|  | 32 levels  |   |  |                                    |  |
|  | LED (not replaceable)  |   |  |                                    |  |
|  | Approx. 60000 h (operating ambient temperature: 25 °C, display intensity: 50%) |   |  |                                    |  |
| Touch panel<br>*3 *11                              | Analog resistive film  |   |  |                                    |  |
|  | Minimum 2 × 2 dots <sup>19</sup> (per key)                                     |   |  |                                    |  |
|  | Up to two points   |   |  |                                    |  |
|  | 1 million touches or more (operating force: 0.98 N or less)                    |   |  |                                    |  |
| Panel color  | Black  | White   | Black  |                                    |  |
| Human sensor                                       | —  |   |  |                                    |  |
| User memory  | Memory for storage (ROM) <sup>112</sup> : 57 MB                                |   |  |                                    | Memory for storage (ROM) <sup>112</sup> : 32 MB                      |
|  | Memory for operation (RAM): 128 MB   |   |  |                                    | Memory for operation (RAM): 80 MB                                    |
| Built-in clock precision                           | 100000 times   |   |  |                                    |  |
|  | ±90 seconds/month (ambient temperature: 25 °C)                                 |   |  |                                    |  |
| Battery  | GT11-50BAT lithium battery   |   |  |                                    |  |
|  | SRAM data, clock data, system status log data                                  |   |  |                                    |  |
|  | Approx. 5 years (ambient temperature: 25 °C)                                   |   |  |                                    |  |
| Built-in interface                                 | RS-232   | 1 channel Transmission speed: 115200, 57600, 38400, 19200, 9600, 4800 bps Connector shape: D-sub 9-pin (male)   |  |                                    |  |
|  | RS-422/485   | 1 channel Transmission speed: 115200, 57600, 38400, 19200, 9600, 4800 bps Connector shape: D-sub 9-pin (female) |  |                                    |  |
|  | Ethernet   | 1 channel Data transfer method: 100BASE-TX, 10BASE-T Connector shape: RJ-45 (modular jack)                      |  |                                    |  |
|  | USB (host)   | 2 channels (front face, rear face)  | 1 channel (rear face)  | 2 channels (front face, rear face) |  |
|  | USB (device)   | USB version: USB 2.0 (High-Speed 480 Mbps), Connector shape: USB-A  |  |                                    |  |
|  |  | 1 channel (front face)  | 1 channel (rear face)  | 1 channel (front face)             |  |
|  | SD memory card <sup>12</sup>   | USB version: USB 2.0 (High-Speed 480 Mbps), Connector shape: USB Mini-B   |  |                                    |  |
|  | Extension interface <sup>17</sup>  | 1 channel, SDHC compliant (maximum 32 GB)   |  |                                    |  |
| Auxiliary extension interface                      | For installing a communication unit or an option unit                          |   |  |                                    |  |
| Side interface                                     | For installing an option unit  |   |  |                                    |  |
| Buzzer output                                      | For installing a communication unit  |   |  |                                    |  |
| POWER LED  | Single tone (tone and tone length adjustable)                                  |   |  |                                    |  |
| Protective structure <sup>15</sup>                 | 2 colors (blue and orange)   |   |  |                                    |  |
| Safety standards, radio laws (as of December 2019) | CE, UL, cUL, EAC, KC   |   | CE, UL, cUL, EAC, KC   |                                    |  |
| External dimensions                                | 303(11.93) (W) × 218(8.58) (H) × 52(2.05) (D) mm(inch)                         |   | 241(9.49) (W) × 194(7.64) (H) × 52(2.05) (D) mm(inch)                |                                    | 167(6.57) (W) × 139(5.47) (H) × 60(2.36) (D) mm(inch)                |
| Panel cut dimensions                               | 289(11.38) (W) × 200(7.87) (H) mm(inch)  |   | 227(8.94) (W) × 176(6.93) (H) mm(inch)                               |                                    | 153(6.02) (W) × 121(4.76) (H) mm(inch)                               |
| Weight (excluding a fitting)                       | 2.1(4.6) kg(lb)  |   | 1.5(3.3) kg(lb)  |                                    | 1.0(2.2) kg(lb)  |
| Compatible software package                        | GT Works3 Version1.225K or later   |   |  |                                    |  |

\*6 To conform to IP67F, close the USB environmental protection cover by pushing the [PUSH] mark firmly. (The GOT conforms to IP2X when the USB environmental protection cover is open.)

\*7 When using a GT2705-VTBD with multiple devices such as extension units, a barcode reader, and an RFID controller, the total amount of current must be within the maximum amount of current supplied by the GT2705-VTBD. For the details, please refer to the relevant manual of the GOT2000 Series.

\*8 The minimum size of a key that can be arranged. To ensure safe use of the product, the following settings are recommended.  
• Key size: 16 × 16 dots or larger • Distance between keys: 16 dots or more

\*9 The suffix "F" of IP67F is a symbol that indicates protection rate against oil. It is described in the Appendix of Japanese Industrial Standard JIS C 0920.

\*10 ATEX and KCs are supported by GT2712-STWD and GT2710-VTWD (24 V DC power supply type) only.

\*11 Repeatedly touching the outer edge of the actual display area may cause the product to fail.

\*12 While writing data to the memory for storage (ROM) or an SD memory card, if GOT is powered off, the data may be corrupted which may cause the GOT to stop operating.

# Specifications

## GT25 model

\* For the specifications of GT25 wide models, GT25 handy GOT, and GT25 rugged model, please refer to pages 128 to 131.

### General specifications

| Item                             | Specifications  |   |
|----------------------------------|---|---|
| Operating ambient temperature *1 | 0 °C to 55 °C *2 *7   |   |
| Storage ambient temperature      | -20 °C to 60 °C   |   |
| Operating ambient humidity       | 10% RH to 90% RH, non-condensing *8   |   |
| Storage ambient humidity         | 10% RH to 90% RH, non-condensing *8   |   |
| Vibration resistance             | Compliant with JIS B 3502 and IEC 61131-2   |   |
|                                  | Under intermittent vibration  | Frequency: 5 to 8.4 Hz, Acceleration: —, Half amplitude: 3.5 mm, Sweep count: 10 times in each X, Y, or Z direction |
|                                  | Under continuous vibration  | Frequency: 5 to 8.4 Hz, Acceleration: —, Half amplitude: 1.75 mm, Sweep count: —                                    |
|                                  | Under intermittent vibration  | Frequency: 8.4 to 150 Hz, Acceleration: 9.8 m/s <sup>2</sup> , Half amplitude: —, Sweep count: —                    |
| Shock resistance                 | Compliant with JIS B 3502 and IEC 61131-2 (147 m/s <sup>2</sup> (15G), 3 times in each X, Y, or Z direction)  |   |
| Operating atmosphere *6          | No greasy fumes, corrosive gas, flammable gas, excessive conductive dust, and direct sunlight (as well as at storage)   |   |
| Operating altitude *3            | 2000 m or less  |   |
| Installation location            | Inside control panel  |   |
| Overvoltage category *4          | II or less  |   |
| Pollution degree *5              | 2 or less   |   |
| Cooling method                   | Self-cooling  |   |
| Grounding                        | Grounding with a ground resistance of 100 Ω or less by using a ground cable that has a cross-sectional area of 2 mm <sup>2</sup> or more. If impossible, connect the ground cable to the control panel. |   |

- \*1 Includes the temperature inside the enclosure of the control panel to which the GOT is installed.
- \*2 When any of the following units or option is mounted, the maximum operating ambient temperature must be 5°C lower than the one described in the general specifications: MELSECNET/H communication unit (GT15-J71LP23-25, GT15-J71BR13), CC-Link communication unit (GT15-J61BT13), protective cover for oil.
- \*3 Do not use or store the GOT under a pressure higher than the atmospheric pressure at altitude 0 m. Doing so may cause a malfunction. Air purging by applying pressure to the control panel may create clearance between the surface sheet and the touch panel. This may cause the touch panel to be not sensitive enough or the sheet to come off.
- \*4 This indicates the section of the power supply to which the equipment is assumed to be connected between the public electrical power distribution network and the machinery within the premises. Category II applies to equipment that is supplied with power from fixed facilities. The withstand surge voltage for the equipment with the rated voltage up to 300 V is 2500 V.
- \*5 This indicates the occurrence rate of conductive material in an environment where a device is used. Pollution degree 2 indicates an environment where only non-conductive pollution occurs normally and a temporary conductivity caused by condensation shall be expected depending on the conditions.
- \*6 Some models have ANSI/ISA 12.12.01 approval for use in Class I, Division 2 (ANSI/ISA 12.12.01, C22.2 No.213-M1987) hazardous locations. For applicable GOT models, please refer to the Mitsubishi Electric Factory Automation Global website ([www.MitsubishiElectric.com/fa/](http://www.MitsubishiElectric.com/fa/)).
- \*7 When GT2505-VTBD is installed vertically, the operating ambient temperature must be between 0 °C and 50 °C.
- \*8 If the ambient temperature of GT2505-VTBD exceeds 40 °C, the absolute humidity must not exceed 90% RH at 40 °C.

Operate and store the GOT in environments without direct sunlight, high temperature, dust, humidity, and vibrations.  
 For the status of conforming to various standards and laws (CE, ATEX, UL/cUL, Class I Division 2, EAC, KC, KCs, and maritime certifications [ABS/DNV GL/LR/NK/RINA]), please refer to the Mitsubishi Electric Factory Automation Global website ([www.MitsubishiElectric.com/fa/](http://www.MitsubishiElectric.com/fa/)).

### Performance specifications

| Item   | Specifications   |   |  |  |   |
|--|--|---|--|--|---|
|  | GT2512-STBA<br>GT2512-STBD   | GT2512F-STNA<br>GT2512F-STND  | GT2510-VTBA<br>GT2510-VTBD   | GT2510-VTWA<br>GT2510-VTWD                             | GT2510F-VTNA<br>GT2510F-VTND                      |
| Display section *1 *2                              | TFT color LCD  |   |  |  |   |
|  | 12.1"  |   | 10.4"  |  |   |
|  | SVGA: 800 × 600 dots   |   | VGA: 640 × 480 dots  |  |   |
|  | 246(9.69) (W) × 184.5(7.26) (H) mm(inch)   |   | 211.2(8.31) (W) × 158.4(6.24) (H) mm(inch)   |  |   |
|  | 16-dot standard font: 50 characters × 37 lines (two-byte characters)<br>12-dot standard font: 66 characters × 50 lines (two-byte characters) |   | 16-dot standard font: 40 characters × 30 lines (two-byte characters)<br>12-dot standard font: 53 characters × 40 lines (two-byte characters) |  |   |
|  | 65536 colors   |   |  |  |   |
|  | 32 levels  |   |  |  |   |
|  | LED (not replaceable)  |   |  |  |   |
| Touch panel *3 *12                                 | Approx. 60000 h (operating ambient temperature: 25 °C, display intensity: 50%)   |   |  |  |   |
|  | Analog resistive film  |   |  |  |   |
|  | Minimum 2 × 2 dots *9 (per key)  |   |  |  |   |
|  | Not available *5 (Only 1 point can be touched.)  |   |  |  |   |
| Panel color  | Black  | —   | Black  | White  | —   |
| User memory  | Memory for storage (ROM) *13: 32 MB  |   |  |  |   |
|  | Memory for operation (RAM): 80 MB  |   |  |  |   |
| Built-in clock precision                           | 100000 times   |   |  |  |   |
| Battery  | ±90 seconds/month (ambient temperature: 25 °C)   |   |  |  |   |
|  | GT11-50BAT lithium battery   |   |  |  |   |
|  | Data to be backed up   | SRAM data, clock data, system status log data   |  |  |   |
| Built-in interface                                 | Life: Approx. 5 years (ambient temperature: 25 °C)   |   |  |  |   |
|  | RS-232   | 1 channel Transmission speed: 115200, 57600, 38400, 19200, 9600, 4800 bps Connector shape: D-sub 9-pin (male)   |  |  |   |
|  | RS-422/485   | 1 channel Transmission speed: 115200, 57600, 38400, 19200, 9600, 4800 bps Connector shape: D-sub 9-pin (female) |  |  |   |
|  | Ethernet   | 1 channel Data transfer method: 100BASE-TX, 10BASE-T Connector shape: RJ-45 (modular jack)                      |  |  |   |
|  | USB (host)   | 2 channels (front face, rear face)  | 1 channel (rear face)  | 2 channels (front face, rear face)                     | 1 channel (rear face)                             |
|  | USB (device)   | USB version: USB 2.0 (High-Speed 480 Mbps), Connector shape: USB-A  |  |  |   |
|  | SD memory card *13   | 1 channel (front face)  | 1 channel (front face)   | 1 channel (front face)                                 | 1 channel (rear face)                             |
|  | Extension interface  | USB version: USB 2.0 (High-Speed 480 Mbps), Connector shape: USB Mini-B   |  |  |   |
| Buzzer output                                      | 1 channel, SDHC compliant (maximum 32 GB)  |   |  |  |   |
| POWER LED  | For installing a communication unit or an option unit  |   |  |  |   |
| Protective structure *6                            | For installing a communication unit  |   |  |  |   |
|  | Single tone (tone and tone length adjustable)  |   |  |  |   |
| Safety standards, radio laws (as of December 2019) | 2 colors (blue and orange)   |   |  |  |   |
|  | Front: IP67F *7 *10<br>Inside control panel: IP2X  | Front: IP67F *8 *10<br>Inside control panel: IP2X   | Front: IP67F *7 *10<br>Inside control panel: IP2X  | Front: IP67F *10<br>Inside control panel: IP2X         | Front: IP67F *8 *10<br>Inside control panel: IP2X |
| External dimensions                                | CE, UL, cUL, EAC, KC   |   |  |  |   |
| Panel cut dimensions                               | CE, ATEX *11, UL, cUL, Class I Division 2, EAC, KC, KCs *11  |   |  |  |   |
| Weight (excluding a fitting)                       | 316(12.44) (W) × 246(9.69) (H) × 52(2.05) (D) mm(inch)   | 311(12.24) (W) × 237(9.33) (H) × 54(2.13) (D) mm(inch)  | 303(11.93) (W) × 218(8.58) (H) × 52(2.05) (D) mm(inch)   | 298(11.73) (W) × 209(8.23) (H) × 54(2.13) (D) mm(inch) |   |
| Compatible software package                        | 302(11.89) (W) × 228(8.98) (H) mm(inch)  | 269(10.59) (W) × 214(8.43) (H) mm(inch)   | 289(11.38) (W) × 200(7.87) (H) mm(inch)  | 234(9.21) (W) × 187(7.36) (H) mm(inch)                 |   |
|  | 2.4(5.3) kg(lb)  |   | 2.1(4.6) kg(lb)  |  |   |
|  | GT Works3 Version 1.225K or later  |   |  |  |   |

- \*1 As a characteristic of liquid crystal display panels, bright dots (always lit) and dark dots (never lit) may appear on the panel. Since liquid crystal display panels comprise a great number of display elements, the appearance of bright and dark dots cannot be reduced to zero. Individual differences in liquid crystal display panels may cause differences in color, uneven brightness and flickering. Note that these phenomena are characteristics of liquid crystal display panels and it does not mean the products are defective or damaged.
- \*2 Flickering may occur due to vibration, shock, or the display colors.
- \*3 When a stylus is used, the touch panel has a life of 100 thousand touches. The stylus must satisfy the following specifications.
  - Material: polyacetal resin
  - Tip radius: 0.8 mm or more
- \*4 To prevent the display section from burning in and lengthen the backlight life, enable the screen save function and turn off the backlight.
- \*5 If you touch two points or more simultaneously on the touch panel, a touch switch near the touched points may operate unexpectedly. Do not touch two points or more simultaneously on the touch panel.
- \*6 Note that the structure does not guarantee protection in all users' environments. The GOT may not be used in certain environments where it is subjected to splashing oil or chemicals for a long period of time or soaked in oil mist.

Power supply specifications

| Item   | Specifications   |                             |                             |   |                             |                             |  |               |
|--|--|-----------------------------|-----------------------------|---|-----------------------------|-----------------------------|--|---------------|
|  | GT2512-STBA<br>GT2512F-STNA  | GT2510-VTBA<br>GT2510F-VTNA | GT2508-VTBA<br>GT2508F-VTNA | GT2512-STBD<br>GT2512F-STND   | GT2510-VTBD<br>GT2510F-VTND | GT2508-VTBD<br>GT2508F-VTND | GT2505-VTBD  |               |
| Power supply voltage                         | 100 V AC to 240 V AC (+10%, -15%)  |                             |                             | 24 V DC (+25%, -20%)  |                             |                             | 24 V DC (+10%, -15%)   |               |
| Power supply frequency                       | 50 Hz/60 Hz (±5%)  |                             |                             |   |                             |                             |  |               |
| Power consumption                            | Under the maximum load   | 35 W or less                | 34 W or less                | 31 W or less  | 37 W or less                | 33 W or less                | 31 W or less   | 8.4 W or less |
|  | Main unit  | 14 W                        | 12 W                        | 11 W  | 13 W                        | 10 W                        | 8 W  | 4.3 W         |
|  | Main unit (backlight OFF)  | 7 W                         | 7 W                         | 7 W   | 6 W                         | 6 W                         | 6 W  | 2.6 W         |
| Inrush current                               | 60 A or less<br>(2 ms, ambient temperature: 25 °C, under the maximum load)   |                             |                             | 5 A or less<br>(20 ms, ambient temperature: 25 °C, under the maximum load)  |                             |                             | 42 A or less<br>(2 ms, ambient temperature: 25 °C, under the maximum load)   |               |
| Permissible instantaneous power failure time | 20 ms or less (100 V AC or more)   |                             |                             | 10 ms or less   |                             |                             |  |               |
| Noise immunity                               | Noise voltage: 1500 Vp-p, noise width: 1 μs,<br>measured by a noise simulator with noise frequency ranging from 25 Hz to 60 Hz |                             |                             | Noise voltage: 500 Vp-p, noise width: 1 μs,<br>measured by a noise simulator with noise frequency ranging from 25 Hz to 60 Hz |                             |                             | Noise voltage: 1000 Vp-p,<br>noise width: 1 μs,<br>measured by a noise simulator with noise frequency ranging from 30 Hz to 100 Hz |               |
| Withstand voltage                            | 1500 V AC for 1 minute across power terminals and earth  |                             |                             | 350 V AC for 1 minute across power terminals and earth  |                             |                             | 500 V AC for 1 minute across power terminals and earth   |               |
| Insulation resistance                        | 500 V DC across power terminals and earth, 10 MΩ or more by an insulation resistance tester                                    |                             |                             |   |                             |                             |  |               |

| Item   | Specifications  |   |   |   |
|--|---|---|---|---|
|  | GT2508-VTBA<br>GT2508-VTBD                            | GT2508-VTWA<br>GT2508-VTWD                                  | GT2508F-VTNA<br>GT2508F-VTND                          | GT2505-VTBD   |
| Display section<br>*1 *2                           | TFT color LCD   |   |   |   |
|  | Screen size   |   |   | 8.4"  |
|  | Resolution  |   |   |   |
|  | Display size  |   |   | 170.9(6.73) (W) × 128.2(5.05) (H) mm(inch)              |
|  | Number of displayed characters                        |   |   |   |
|  | Display color   |   |   |   |
|  | Brightness adjustment                                 |   |   |   |
|  | Backlight   |   |   |   |
| Touch panel<br>*3 *12                              | Type  |   |   |   |
|  | Key size  |   |   |   |
|  | Simultaneous press                                    |   |   |   |
|  | Life  |   |   |   |
| Panel color  | Black   | White   | —   | Black   |
| User memory  | User memory capacity                                  |   |   |   |
|  | Life (number of write times)                          |   |   |   |
| Built-in clock precision                           | ±90 seconds/month (ambient temperature: 25 °C)        |   |   |   |
| Battery  | Data to be backed up                                  |   |   |   |
|  | Life  |   |   |   |
| Built-in interface                                 | RS-232  |   |   |   |
|  | RS-422/485  |   |   |   |
|  | Ethernet  |   |   |   |
|  | USB (host)  |   | 1 channel (rear face)                                 |   |
|  | USB (device)  |   |   |   |
|  | SD memory card *13                                    |   | 1 channel, SDHC compliant (maximum 32 GB)             |   |
|  | Extension interface                                   |   |   |   |
| Buzzer output                                      | Single tone (tone and tone length adjustable)         |   |   |   |
| POWER LED  | 2 colors (blue and orange)                            |   |   |   |
| Protective structure *6                            | Front: IP67F *7 *10<br>Inside control panel: IP2X     | Front: IP67F *10<br>Inside control panel: IP2X              | Front: IP67F *8 *10<br>Inside control panel: IP2X     | Front: IP67F *7 *10<br>Inside control panel: IP2X       |
| Safety standards, radio laws (as of December 2019) | CE, UL, cUL, EAC, KC                                  | CE, ATEX *11, UL, cUL, Class I Division 2, EAC, KC, KCs *11 | CE, UL, cUL, EAC, KC                                  |   |
| External dimensions                                | 241(9.49) (W) × 194(7.64) (H) × 52(2.05) (D) mm(inch) |   | 236(9.29) (W) × 185(7.28) (H) × 54(2.13) (D) mm(inch) | 164(6.46) (W) × 139(5.47) (H) × 53.5(2.11) (D) mm(inch) |
| Panel cut dimensions                               | 227(8.94) (W) × 176(6.93) (H) mm(inch)                |   | 194(7.64) (W) × 158(6.22) (H) mm(inch)                | 153(6.02) (W) × 121(4.76) (H) mm(inch)                  |
| Weight (excluding a fitting)                       | 1.5(3.3) kg(lb)                                       |   |   | 0.6(1.3) kg(lb)   |
| Compatible software package                        | GT Works3 Version1.225K or later                      |   |   |   |

\*7 To conform to IP67F, close the USB environmental protection cover by pushing the [PUSH] mark or the [PULL] mark firmly. (The GOT conforms to IP2X when the USB environmental protection cover is open.)  
 \*8 To conform to IP67F attach the environmental protection sheet.  
 \*9 The minimum size of a key that can be arranged. To ensure safe use of the product, the following settings are recommended.  
 • Key size: 16 × 16 dots or larger • Distance between keys: 16 dots or more  
 \*10 The suffix "F" of IP67F is a symbol that indicates protection rate against oil. It is described in the Appendix of Japanese Industrial Standard JIS C 0920.  
 \*11 ATEX and KCs are supported by GT2510-VTWD and GT2508-VTWD (24 V DC power supply type) only.  
 \*12 Repeatedly touching the outer edge of the actual display area may cause the product to fail.  
 \*13 While writing data to the memory for storage (ROM) or an SD memory card, if GOT is powered off, the data may be corrupted which may cause the GOT to stop operating.

# Specifications

## GT25 wide model/GT25 handy GOT

### General specifications

| Item                             | Specifications  |                              |                |                      |                |                                       |
|----------------------------------|---|------------------------------|----------------|----------------------|----------------|---------------------------------------|
|                                  | GT25 wide model   |                              | GT25 handy GOT |                      |                |                                       |
| Operating ambient temperature *1 | 0 °C to 55 °C *5  |                              | 0 °C to 40 °C  |                      |                |                                       |
| Storage ambient temperature      | -20 °C to 60 °C   |                              |                |                      |                |                                       |
| Operating ambient humidity       | 10% RH to 90% RH, non-condensing  |                              |                |                      |                |                                       |
| Storage ambient humidity         | 10% RH to 90% RH, non-condensing  |                              |                |                      |                |                                       |
| Vibration resistance             | Compliant with JIS B 3502 and IEC 61131-2   | Under intermittent vibration | Frequency      | Acceleration         | Half amplitude | 10 times in each X, Y, or Z direction |
|                                  |   |                              | 5 to 8.4 Hz    | —                    | 3.5 mm         |                                       |
|                                  |   | Under continuous vibration   | 8.4 to 150 Hz  | 9.8 m/s <sup>2</sup> | —              | —                                     |
|                                  |   |                              | 5 to 8.4 Hz    | —                    | 1.75 mm        | —                                     |
| 8.4 to 150 Hz                    | 4.9 m/s <sup>2</sup>  | —                            | —              | —                    |                |                                       |
| Shock resistance                 | Compliant with JIS B 3502 and IEC 61131-2 (147 m/s <sup>2</sup> (15G), 3 times in each X, Y, or Z direction)  |                              |                |                      |                |                                       |
| Operating atmosphere             | No greasy fumes, corrosive gas, flammable gas, excessive conductive dust, and direct sunlight (as well as at storage)   |                              |                |                      |                |                                       |
| Operating altitude *2            | 2000 m or less  |                              |                |                      |                |                                       |
| Installation location            | Inside control panel  |                              | —              |                      |                |                                       |
| Overvoltage category *3          | II or less  |                              |                |                      |                |                                       |
| Pollution degree *4              | 2 or less   |                              |                |                      |                |                                       |
| Cooling method                   | Self-cooling  |                              |                |                      |                |                                       |
| Grounding                        | Grounding with a ground resistance of 100 Ω or less by using a ground cable that has a cross-sectional area of 2 mm <sup>2</sup> or more. If impossible, connect the ground cable to the control panel. |                              |                |                      |                |                                       |

- \*1 Includes the temperature inside the enclosure of the control panel to which the GOT is installed. (GT25 wide model)
- \*2 Do not use or store the GOT under a pressure higher than the atmospheric pressure at altitude 0 m. Doing so may cause a malfunction. Air purging by applying pressure to the control panel may create clearance between the surface sheet and the touch panel. This may cause the touch panel to be not sensitive enough or the sheet to come off.
- \*3 This indicates the section of the power supply to which the equipment is assumed to be connected between the public electrical power distribution network and the machinery within the premises. Category II applies to equipment that is supplied with power from fixed facilities. The withstand surge voltage for the equipment with the rated voltage up to 300 V is 2500 V.
- \*4 This indicates the occurrence rate of conductive material in an environment where a device is used. Pollution degree 2 indicates an environment where only non-conductive pollution occurs normally and a temporary conductivity caused by condensation shall be expected depending on the conditions.
- \*5 When a protective cover for oil is mounted on the GOT, the maximum operating ambient temperature must be 5°C lower than the one described in the general specifications.

Operate and store the GOT in environments without direct sunlight, high temperature, dust, humidity, and vibrations.

For the status of conforming to various standards and laws (CE, ATEX, UL/cUL, Class I Division 2, EAC, KC, KCs, and maritime certifications [ABS/BNV/DNV GL/LR/NK/RINA]), please refer to the Mitsubishi Electric Factory Automation Global website ([www.MitsubishiElectric.com/fa/](http://www.MitsubishiElectric.com/fa/)).

### Performance specifications

| Item  | Specifications  |                       |  |             |
|---|---|-----------------------|--|-------------|
|   | GT25 wide model   |                       |  |             |
|   | GT2510-WXTBD  | GT2510-WXTSD          | GT2507-WTBD  | GT2507-WTSD |
| Display section *1 *2                                       | TFT color LCD   |                       |  |             |
|   | 10.1" widescreen  |                       | 7" widescreen  |             |
|   | WXGA: 1280 × 800 dots   |                       | WVGA: 800 × 480 dots   |             |
|   | 216.96(8.54) (W) × 135.6(5.34) (H) mm(inch)   |                       | 152.40(6.00) (W) × 91.44(3.60) (H) mm (inch)   |             |
|   | 16-dot standard font: 80 characters × 50 lines (two-byte characters)<br>12-dot standard font: 106 characters × 66 lines (two-byte characters) |                       | 16-dot standard font: 50 characters × 30 lines (two-byte characters)<br>12-dot standard font: 66 characters × 40 lines (two-byte characters) |             |
|   | 65536 colors  |                       |  |             |
|   | 32 levels   |                       |  |             |
|   | LED (not replaceable)   |                       |  |             |
|   | Approx. 50000 h (operating ambient temperature: 25°C, display intensity: 50%)   |                       |  |             |
|   | Touch panel *3 *11  | Analog resistive film |  |             |
| Minimum 2 × 2 dots *8 (per key)                             |   |                       |  |             |
| Not available *5 (Only 1 point can be touched.)             |   |                       |  |             |
| 1 million touches or more (operating force: 0.98 N or less) |   |                       |  |             |
| Panel color   | Black   | Silver *10            | Black  | Silver *10  |
| User memory   | Memory for storage (ROM) *12: 32 MB<br>Memory for operation (RAM): 128 MB   |                       |  |             |
|   | 100000 times  |                       |  |             |
| Built-in clock precision                                    | ±90 seconds/month (ambient temperature: 25 °C)  |                       |  |             |
| Battery   | GT11-50BAT lithium battery  |                       |  |             |
|   | SRAM data, clock data, system status log data<br>Approx. 5 years (ambient temperature: 25 °C)   |                       |  |             |
| Built-in interface  | 1 channel Transmission speed: 115200, 57600, 38400, 19200, 9600, 4800 bps Connector shape: D-sub 9-pin (male)                                 |                       |  |             |
|   | 1 channel Transmission speed: 115200, 57600, 38400, 19200, 9600, 4800 bps Connector shape: D-sub 9-pin (female)                               |                       |  |             |
|   | 2 channel Data transfer method: 100BASE-TX, 10BASE-T Connector shape: RJ-45 (modular jack)  |                       |  |             |
|   | 1 channel (rear face)   |                       |  |             |
|   | USB version: USB 2.0 (High-Speed 480 Mbps), Connector shape: USB-A  |                       |  |             |
|   | 1 channel (front face)  |                       |  |             |
|   | USB version: USB 2.0 (High-Speed 480 Mbps), Connector shape: USB Mini-B   |                       |  |             |
|   | 1 channel, SDHC compliant (maximum 32 GB)   |                       |  |             |
|   | For installing a wireless LAN communication unit  |                       |  |             |
|   | 1 channel, WAV format (16 bits, 8.000 kHz/16.000 kHz, monoral)<br>applicable plug: Φ3.5 stereo mini-plug (3-prong)                            |                       |  |             |
| Buzzer output   | Single tone (tone and tone length adjustable)   |                       |  |             |
| POWER LED   | 2 colors (blue and orange)  |                       |  |             |
| Protective structure *6                                     | Front: IP67F *7 *9 Inside control panel: IP2X   |                       |  |             |
| Safety standards, radio laws (as of December 2019)          | CE, UL, cUL, EAC, KC  |                       |  |             |
| External dimensions   | 252(9.92) (W) × 194(7.64) (H) × 48(1.89) (D) mm(inch)   |                       | 189(7.44) (W) × 142(5.59) (H) × 48(1.89) (D) mm(inch)  |             |
| Panel cut dimensions  | 243.5(9.59) (W) × 185.5(7.30) (H) mm(inch)  |                       | 180.5(7.11) (W) × 133.5(5.26) (H) mm(inch)   |             |
| Weight (excluding a fitting)                                | 1.2(2.6) kg(lb)   |                       | 0.75(1.7) kg(lb)   |             |
| Compatible software package                                 | GT Works3 Version1.225K or later  |                       |  |             |

- \*1 As a characteristic of liquid crystal display panels, bright dots (always lit) and dark dots (never lit) may appear on the panel. Since liquid crystal display panels comprise a great number of display elements, the appearance of bright and dark dots cannot be reduced to zero. Individual differences in liquid crystal display panels may cause differences in color, uneven brightness and flickering. Note that these phenomena are characteristics of liquid crystal display panels and it does not mean the products are defective or damaged.
- \*2 Flickering may occur due to vibration, shock, or the display colors.
- \*3 When a stylus is used, the touch panel has a life of 100 thousand touches. The stylus must satisfy the following specifications.
  - Material: polyacetal resin
  - Tip radius: 0.8 mm or more
- \*4 To prevent the display section from burning in and lengthen the backlight life, enable the screen save function and turn off the backlight.
- \*5 If you touch two points or more simultaneously on the touch panel, a touch switch near the touched points may operate unexpectedly. Do not touch two points or more simultaneously on the touch panel.
- \*6 Note that the structure does not guarantee protection in all users' environments. The GOT may not be used in certain environments where it is subjected to splashing oil or chemicals for a long period of time or soaked in oil mist.
- \*7 To conform to IP67F, close the USB environmental protection cover by pushing the [PULL] mark firmly. (The GOT conforms to IP2X when the USB environmental protection cover is open.)
- \*8 The minimum size of a key that can be arranged. To ensure safe use of the product, the following settings are recommended.
  - Key size: 16 × 16 dots or larger
  - Distance between keys: 16 dots or more
- \*9 The suffix "F" of IP67F is a symbol that indicates protection rate against oil. It is described in the Appendix of Japanese Industrial Standard JIS C 0920.



Power supply specifications

| Item   | Specifications   |                            |  |               |
|--|--|----------------------------|--|---------------|
|  | GT25 wide model  |                            | GT25 handy GOT   |               |
|  | GT2510-WXTBD<br>GT2510-WXTSD   | GT2507-WTBD<br>GT2507-WTSD | GT2506HS-VTBD  | GT2505HS-VTBD |
| Power supply voltage                         | 24 V DC (+25%, -20%)   |                            | 24 V DC (+10%, -15%)   |               |
| Power consumption                            | Under the maximum load   | 16 W or less               | 11.6 W or less   | 8.4 W or less |
|  | Main unit  | 9 W                        | —  |               |
|  | Main unit (backlight OFF)  | 5 W                        | 8.2 W  | 7.0 W         |
| Inrush current                               | 59 A or less (2 ms, ambient temperature: 25 °C, under the maximum load)  |                            | 30 A or less (2 ms, ambient temperature: 25 °C, under the maximum load)  |               |
| Permissible instantaneous power failure time | 5 ms or less   |                            |  |               |
| Noise immunity                               | Noise voltage: 500 Vp-p, noise width: 1 μs, measured by a noise simulator with noise frequency ranging from 25 Hz to 60 Hz |                            | Noise voltage: 1000 Vp-p, noise width: 1 μs, measured by a noise simulator with noise frequency ranging from 30 Hz to 100 Hz |               |
| Withstand voltage                            | 350 V AC for 1 minute across power terminals and earth   |                            | 500 V DC for 1 minute across power terminals and earth   |               |
| Insulation resistance                        | 500 V DC across power terminals and earth, 10 MΩ or more by an insulation resistance tester                                |                            |  |               |

| Item   | Specifications  |  |  |
|--|---|--|--|
|  | GT25 handy GOT  |  |  |
|  | GT2506HS-VTBD   |  | GT2505HS-VTBD  |
| Display section<br>*1 *2                           | Display device  | TFT color LCD  |  |
|  | Screen size   | 6.5"   | 5.7"   |
|  | Resolution  | VGA: 640 x 480 dots  |  |
|  | Display size  | 132.5(5.22) (W) x 99.4(3.91) (H) mm(inch)  | 115.2(4.54) (W) x 86.4(3.40) (H) mm(inch)  |
|  | Number of displayed characters  | 16-dot standard font: 40 characters x 30 lines (two-byte characters)<br>12-dot standard font: 53 characters x 40 lines (two-byte characters)   |  |
|  | Display color   | 65536 colors   |  |
|  | Brightness adjustment   | 32 levels  |  |
|  | Backlight   | LED (not replaceable)  |  |
| Touch panel<br>*3 *11                              | Backlight life *4   | Approx. 40000 h (operating ambient temperature: 25 °C, display intensity: 50%)   | Approx. 60000 h (operating ambient temperature: 25 °C, display intensity: 50%)   |
|  | Type  | Analog resistive film  |  |
|  | Key size  | Minimum 2 x 2 dots *8 (per key)  |  |
|  | Simultaneous press  | Not available *5 (Only 1 point can be touched.)  |  |
| Panel color  | Life  | 1 million touches or more (operating force: 0.98 N or less)  |  |
|  |   | Black  |  |
| Switch   | Operation switch  | 6 switches (6 contacts/common), N/O contact, Maximum rating 10 mA/24 V DC, Life: 1000000 times, 6 green LEDs (lighting control from display section)   | 6 switches (6 contacts/common), N/O contact, Maximum rating 10 mA/24 V DC, Life: 1000000 times   |
|  | Grip switch   | 1 switch (single wiring) (IDEC HE3B-M2PB), Enable switch (deadman switch) 3-position system of OFF ↔ ON ↔ OFF, 2 N/O contacts, Maximum rating 1 A/24 V DC (resistance load), Maximum rating 0.3 A/24 V DC (induction load), Life: 100000 times, 1 green LED (lighting control from display section)  |  |
|  | Emergency stop switch   | 1 switch (single wiring) (IDEC XA1E-BV303R), 3 N/C contacts, Maximum rating 1 A/24 V DC (resistance load), Maximum rating 0.3 A/24 V DC (induction load), Life: 100000 times   |  |
|  | Keylock switch (2-position switch)  | 1 switch (single wiring) (IDEC AS6M-2KT1PB), 2-notch type (Manual stop at each position/A key can be inserted and removed on only the left side./ On the right side, a key cannot be removed./Two keys are provided.), 2-position, Maximum rating 1 A/24 V DC (resistance load), Maximum rating 0.3 A/24 V DC (induction load), Life: 100000 times |  |
|  | User memory   | User memory capacity   | Memory for storage (ROM) *12: 32 MB<br>Memory for operation (RAM): 80 MB   |
| Life (number of write times)                       |   | 100000 times   |  |
| Built-in clock precision                           | ±90 seconds/month (ambient temperature: 25 °C)  |  |  |
| Battery  | GT15-BAT lithium battery  |  | GT11-50BAT lithium battery   |
|  | Data to be backed up  | SRAM data, clock data, system status log data  |  |
| Built-in interface                                 | Life  | Approx. 5 years (ambient temperature: 25 °C)   |  |
|  | RS-232  | RS-232 or RS-422/485, 1 channel (Select one channel. RS-422/485 is set as the factory default.)<br>Transmission speed: 115200, 57600, 38400, 19200, 9600, 4800 bps<br>Connector shape: Square 42 pins (male)   | RS-232 or RS-422, 1 channel (Select one channel from RS-232, RS-422, or Ethernet. Ethernet is set as the factory default.)<br>Transmission speed: 115200, 57600, 38400, 19200, 9600, 4800 bps<br>Connector shape: Round 32 pins (male) |
|  | RS-422/485 *14  |  |  |
|  | Ethernet  | 1 channel (Select one channel from RS-232, RS-422, or Ethernet. Ethernet is set as the factory default.)<br>Data transfer method: 100BASE-TX, 10BASE-T<br>Connector shape: Square 42 pins (male)   |  |
|  | USB (host)  | 1 channel (top face)<br>USB version: USB 2.0 (High-Speed 480 Mbps), Connector shape: USB-A   |  |
|  | USB (device)  | 1 channel (top face)<br>USB version: USB 2.0 (High-Speed 480 Mbps), Connector shape: USB Mini-B  |  |
|  | SD memory card *12  | 1 channel, SDHC compliant (maximum 32 GB)  |  |
| Buzzer output                                      | Single tone (tone and tone length adjustable)   |  |  |
| POWER LED  | 2 colors (blue and orange)  |  |  |
| Protective structure *6                            | IP65F *9*13 (When an external cable is connected. The rating is not applied to the relay connector side of the external cable.) |  |  |
| Safety standards, radio laws (as of December 2019) | CE, UL, cUL, EAC, KC  |  |  |
| External dimensions                                | 201(7.91) (W) x 230(9.06) (H) x 97(3.82) (D) mm(inch)<br>(excluding projections such as the emergency stop switch)              | 145(5.71) (W) x 185(7.28) (H) x 79.3(3.12) (D) mm(inch)<br>(excluding projections such as the emergency stop switch)   |  |
| Weight   | 1.2(2.6) kg(lb) (GOT main unit only)  | 0.79(1.7) kg(lb) (GOT main unit only)  |  |
| Compatible software package                        | GT Works3 Version1.225K or later  |  |  |

\*10 The lower part of the panel including the USB environmental protection cover is black.

\*11 Repeatedly touching the outer edge of the actual display area may cause the product to fail.

\*12 While writing data to the memory for storage (ROM) or an SD memory card, if GOT is powered off, the data may be corrupted which may cause the GOT to stop operating.

\*13 The rating is not applied when the interface environment protection cover or the environmental protection back cover is removed.

\*14 GT2505HS-VTBD supports RS-422 only.

# Specifications

## GT25 rugged model

### General specifications

| Item   | Specifications *5   |   |                            |                       |                |                                       |  |
|--|---|---|----------------------------|-----------------------|----------------|---------------------------------------|--|
| Operating ambient temperature *1   | -20 °C to 65 °C   | *1 Includes the temperature inside the enclosure of the control panel to which the GOT is installed.  |                            |                       |                |                                       |  |
| Storage ambient temperature  | -30 °C to 75 °C   | *2 Do not use or store the GOT under a pressure higher than the atmospheric pressure at altitude 0 m. Doing so may cause a malfunction. Air purging by applying pressure to the control panel may create clearance between the surface sheet and the touch panel. This may cause the touch panel to be not sensitive enough or the sheet to come off. |                            |                       |                |                                       |  |
| Operating ambient humidity   | 10% RH to 90% RH, non-condensing  |   |                            |                       |                |                                       |  |
| Storage ambient humidity   | 10% RH to 90% RH, non-condensing  |   |                            |                       |                |                                       |  |
| Vibration resistance   | Compliant with IEC 60068-2-6  | Under intermittent vibration  | Frequency                  | Acceleration          | Half amplitude | Sweep count                           | *3 This indicates the section of the power supply to which the equipment is assumed to be connected between the public electrical power distribution network and the machinery within the premises. Category II applies to equipment that is supplied with power from fixed facilities. The withstand surge voltage for the equipment with the rated voltage up to 300 V is 2500 V.        |
|  |   | 5 to 8.4 Hz   | 8.4 to 150 Hz              | 19.6 m/s <sup>2</sup> | —              | 10 times in each X, Y, or Z direction |  |
|  |   |   | Under continuous vibration | 5 to 8.4 Hz           | —              | 7.0 mm                                |  |
|  |   | 8.4 to 150 Hz   | 19.6 m/s <sup>2</sup>      | —                     | —              | —                                     |  |
| Shock resistance   | IEC 60068-2-27 (392 m/s <sup>2</sup> (40G), 3 times in each X, Y, or Z direction)   |   |                            |                       |                |                                       | *4 This indicates the occurrence rate of conductive material in an environment where a device is used. Pollution degree 2 indicates an environment where only non-conductive pollution occurs normally and a temporary conductivity caused by condensation shall be expected depending on the conditions.  |
| Operating atmosphere   | No greasy fumes, corrosive gas, flammable gas, excessive conductive dust, and direct sunlight (as well as at storage)   |   |                            |                       |                |                                       | *5 Communication units and options usable with the rugged model can be used in the environment described in the general specifications of the rugged model. However, when a protective cover for oil is mounted on the GOT, the operating ambient temperature must be -20°C to 50°C. For using peripheral devices to be connected to the GOT, please refer to the relevant product manual. |
| Operating altitude *2  | 2000 m or less  |   |                            |                       |                |                                       |  |
| Installation location  | Inside control panel  |   |                            |                       |                |                                       |  |
| Overvoltage category *3  | II or less  |   |                            |                       |                |                                       |  |
| Pollution degree *4  | 2 or less   |   |                            |                       |                |                                       |  |
| Cooling method   | Self-cooling  |   |                            |                       |                |                                       |  |
| Grounding  | Grounding with a ground resistance of 100 Ω or less by using a ground cable that has a cross-sectional area of 2 mm <sup>2</sup> or more. If impossible, connect the ground cable to the control panel. |   |                            |                       |                |                                       |  |
| Operate and store the GOT in environments without direct sunlight, high temperature, dust, humidity, and vibrations.   |   |   |                            |                       |                |                                       |  |
| For the status of conforming to various standards and laws (CE, ATEX, UL/cUL, Class I Division 2, EAC, KC, KCs, and maritime certifications [ABS/BV/DNV GL/LR/NK/RINA]), please refer to the Mitsubishi Electric Factory Automation Global website ( <a href="http://www.MitsubishiElectric.com/fa/">www.MitsubishiElectric.com/fa/</a> ). |   |   |                            |                       |                |                                       |  |

### Performance specifications

| Item   | Specifications  |  |
|--|---|--|
| GT2507T-WTSD                                       |   |  |
| Display section *1 *2                              | Display device  | TFT color LCD  |
|  | Screen size   | 7" widescreen  |
|  | Resolution  | WVGA: 800 × 480 dots   |
|  | Display size  | 152.40(6.00) (W) × 91.44(3.60) (H) mm (inch)   |
|  | Number of displayed characters                        | 16-dot standard font: 50 characters × 30 lines (two-byte characters)<br>12-dot standard font: 66 characters × 40 lines (two-byte characters) |
|  | Display color   | 65536 colors   |
|  | Brightness adjustment                                 | 32 levels  |
|  | Backlight   | LED (not replaceable)  |
|  | Backlight life *4                                     | Approx. 50000 h (operating ambient temperature: 25°C, display intensity: 50%)  |
| Touch panel *3 *9                                  | Type  | Analog resistive film  |
|  | Key size  | Minimum 2 × 2 dots *7 (per key)  |
|  | Simultaneous press                                    | Not available *5 (Only 1 point can be touched.)  |
|  | Life  | 1 million touches or more (operating force: 0.98 N or less)  |
| Panel color  | Silver  |  |
| User memory  | User memory capacity                                  | Memory for storage (ROM) *10: 32 MB<br>Memory for operation (RAM): 128 MB  |
|  | Life (number of write times)                          | 100000 times   |
| Built-in clock precision                           | ±90 seconds/month (ambient temperature: 25 °C)        |  |
| Battery  | Data to be backed up                                  | GT11-50BAT lithium battery<br>SRAM data, clock data, system status log data  |
|  | Life  | Approx. 5 years (ambient temperature: 25 °C)   |
| Built-in interface                                 | RS-232  | 1 channel Transmission speed: 115200, 57600, 38400, 19200, 9600, 4800 bps Connector shape: D-sub 9-pin (male)                                |
|  | RS-422/485  | 1 channel Transmission speed: 115200, 57600, 38400, 19200, 9600, 4800 bps Connector shape: D-sub 9-pin (female)                              |
|  | Ethernet  | 2 channel Data transfer method: 100BASE-TX, 10BASE-T Connector shape: RJ-45 (modular jack)   |
|  | USB (host)  | 1 channel (rear face)<br>USB version: USB 2.0 (High-Speed 480 Mbps), Connector shape: USB-A  |
|  | USB (device)  | 1 channel (rear face)<br>USB version: USB 2.0 (High-Speed 480 Mbps), Connector shape: USB Mini-B   |
|  | SD memory card *10                                    | 1 channel, SDHC compliant (maximum 32 GB)  |
|  | Wireless LAN communication unit interface             | For installing a wireless LAN communication unit   |
|  | Sound output interface                                | 1 channel, WAV format (16 bits, 8.000 kHz/16.000 kHz, monoral)<br>applicable plug: Φ3.5 stereo mini-plug (3-prong)                           |
| Buzzer output                                      | Single tone (tone and tone length adjustable)         |  |
| POWER LED  | 2 colors (blue and orange)                            |  |
| Protective structure *6                            | Front: IP66F *8, IP67F *8 Inside control panel: IP2X  |  |
| Safety standards, radio laws (as of December 2019) | CE, UL, cUL, EAC, KC                                  |  |
| External dimensions                                | 214(8.43) (W) × 158(6.22) (H) × 55(2.17) (D) mm(inch) |  |
| Panel cut dimensions                               | 197(7.76) (W) × 141(5.55) (H) mm(inch)                |  |
| Weight (excluding a fitting)                       | 1.2(2.6) kg(lb)                                       |  |
| Compatible software package                        | GT Works3 Version 1.225K or later                     |  |

\*1 As a characteristic of liquid crystal display panels, bright dots (always lit) and dark dots (never lit) may appear on the panel. Since liquid crystal display panels comprise a great number of display elements, the appearance of bright and dark dots cannot be reduced to zero. Individual differences in liquid crystal display panels may cause differences in color, uneven brightness and flickering. Note that these phenomena are characteristics of liquid crystal display panels and it does not mean the products are defective or damaged.

\*2 Flickering may occur due to vibration, shock, or the display colors.

\*3 When a stylus is used, the touch panel has a life of 100 thousand touches. The stylus must satisfy the following specifications.  
• Material: polyacetal resin • Tip radius: 0.8 mm or more

\*4 To prevent the display section from burning in and lengthen the backlight life, enable the screen save function and turn off the backlight.

\*5 If you touch two points or more simultaneously on the touch panel, a touch switch near the touched points may operate unexpectedly. Do not touch two points or more simultaneously on the touch panel.

\*6 Note that the structure does not guarantee protection in all users' environments. The GOT may not be used in certain environments where it is subjected to splashing oil or chemicals for a long period of time or soaked in oil mist.

\*7 The minimum size of a key that can be arranged. To ensure safe use of the product, the following settings are recommended.  
• Key size: 16 × 16 dots or larger • Distance between keys: 16 dots or more

\*8 The suffix "F" of IP66F and IP67F is a symbol that indicates protection rate against oil. It is described in the Appendix of Japanese Industrial Standard JIS C 0920.

\*9 Repeatedly touching the outer edge of the actual display area may cause the product to fail.

\*10 While writing data to the memory for storage (ROM) or an SD memory card, if GOT is powered off, the data may be corrupted which may cause the GOT to stop operating.

**Power supply specifications**

| Item   |                           | Specifications  |
|--|---------------------------|---|
|  |                           | GT2507T-WTSD  |
| Power supply voltage                         |                           | 24 V DC (+25%, -20%)  |
| Power consumption                            | Under the maximum load    | 17 W or less  |
|  | Main unit                 | 11 W  |
|  | Main unit (backlight OFF) | 7 W   |
| Inrush current                               |                           | 59 A or less (2 ms, ambient temperature: 25 °C, under the maximum load)   |
| Permissible instantaneous power failure time |                           | 5 ms or less  |
| Noise immunity                               |                           | Noise voltage: 500 Vp-p, noise width: 1 μs,<br>measured by a noise simulator with noise frequency ranging from 25 Hz to 60 Hz |
| Withstand voltage                            |                           | 350 V AC for 1 minute across power terminals and earth  |
| Insulation resistance                        |                           | 500 V DC across power terminals and earth, 10 MΩ or more by an insulation resistance tester                                   |

# Specifications

## GT23 model

### General specifications

| Item  | Specifications  |   |
|---|---|---|
| Operating ambient temperature *1                                      | 0 °C to 55 °C *6  |   |
| Storage ambient temperature   | -20 °C to 60 °C   |   |
| Operating ambient humidity  | 10% RH to 90% RH, non-condensing *2   |   |
| Storage ambient humidity  | 10% RH to 90% RH, non-condensing *2   |   |
| Vibration resistance  | Compliant with JIS B 3502 and IEC 61131-2   |   |
|   | Under intermittent vibration  | Frequency: 5 to 8.4 Hz, Acceleration: —, Half amplitude: 3.5 mm, Sweep count: 10 times in each X, Y, or Z direction |
|   | Under continuous vibration  | 8.4 to 150 Hz, Acceleration: 9.8 m/s <sup>2</sup> , Half amplitude: —   |
|   |   | 5 to 8.4 Hz, Acceleration: —, Half amplitude: 1.75 mm, Sweep count: —   |
| 8.4 to 150 Hz, Acceleration: 4.9 m/s <sup>2</sup> , Half amplitude: — |   |   |
| Shock resistance  | Compliant with JIS B 3502 and IEC 61131-2 (147 m/s <sup>2</sup> (15G), 3 times in each X, Y, or Z direction)  |   |
| Operating atmosphere  | No greasy fumes, corrosive gas, flammable gas, excessive conductive dust, and direct sunlight (as well as at storage)   |   |
| Operating altitude *3   | 2000 m or less  |   |
| Installation location   | Inside control panel  |   |
| Overvoltage category *4   | II or less  |   |
| Pollution degree *5   | 2 or less   |   |
| Cooling method  | Self-cooling  |   |
| Grounding   | Grounding with a ground resistance of 100 Ω or less by using a ground cable that has a cross-sectional area of 2 mm <sup>2</sup> or more. If impossible, connect the ground cable to the control panel. |   |

- \*1 Includes the temperature inside the enclosure of the control panel to which the GOT is installed.
- \*2 If the ambient temperature exceeds 40 °C, the absolute humidity must not exceed 90% RH at 40 °C.
- \*3 Do not use or store the GOT under a pressure higher than the atmospheric pressure at altitude 0 m. Doing so may cause a malfunction. Air purging by applying pressure to the control panel may create clearance between the surface sheet and the touch panel. This may cause the touch panel to be not sensitive enough or the sheet to come off.
- \*4 This indicates the section of the power supply to which the equipment is assumed to be connected between the public electrical power distribution network and the machinery within the premises. Category II applies to equipment that is supplied with power from fixed facilities. The withstand surge voltage for the equipment with the rated voltage up to 300 V is 2500 V.
- \*5 This indicates the occurrence rate of conductive material in an environment where a device is used. Pollution degree 2 indicates an environment where only non-conductive pollution occurs normally and a temporary conductivity caused by condensation shall be expected depending on the conditions.
- \*6 When a protective cover for oil is mounted on the GOT, the maximum operating ambient temperature must be 5°C lower than the one described in the general specifications.

Operate and store the GOT in environments without direct sunlight, high temperature, dust, humidity, and vibrations.

For the status of conforming to various standards and laws (CE, ATEX, UL/cUL, Class I Division 2, EAC, KC, KCs, and maritime certifications [ABS/DNV/GL/LR/NK/RINA]), please refer to the Mitsubishi Electric Factory Automation Global website ([www.MitsubishiElectric.com/fa/](http://www.MitsubishiElectric.com/fa/)).


### Performance specifications

| Item   | Specifications   |  |  |
|--|--|--|--|
|  | GT2310-VTBA<br>GT2310-VTBD   | GT2308-VTBA<br>GT2308-VTBD   |  |
| Display section *1 *2                              | Display device   | TFT color LCD  |  |
|  | Screen size  | 10.4"  |  |
|  | Resolution   | VGA: 640 x 480 dots  |  |
|  | Display size   | 211.2(8.31) (W) x 158.4(6.24) (H) mm(inch)   |  |
|  | Number of displayed characters   | 16-dot standard font: 40 characters x 30 lines (two-byte characters)<br>12-dot standard font: 53 characters x 40 lines (two-byte characters) |  |
|  | Display color  | 65536 colors   |  |
|  | Brightness adjustment  | 16 levels  |  |
|  | Backlight  | LED (not replaceable)  |  |
| Backlight life *4                                  | Approx. 50000 h (operating ambient temperature: 25 °C, display intensity: 50%) |  |  |
| Touch panel *3 *9                                  | Type   | Analog resistive film  |  |
|  | Key size   | Minimum 2 x 2 dots *7 (per key)  |  |
|  | Simultaneous press   | Not available *5 (Only 1 point can be touched.)  |  |
|  | Life   | 1 million touches or more (operating force: 0.98 N or less)  |  |
| Panel color  | Black  |  |  |
| User memory  | User memory capacity   | Memory for storage (ROM) *10: 9 MB<br>Memory for operation (RAM): 9 MB   |  |
|  | Life (number of write times)   | 100000 times   |  |
| Built-in clock precision                           | ±90 seconds/month (ambient temperature: 25 °C)                                 |  |  |
| Battery  | GT11-50BAT lithium battery (option)  |  |  |
|  | Data to be backed up   | SRAM data, clock data, system status log data  |  |
| Built-in interface                                 | Life   | Approx. 5 years (ambient temperature: 25 °C)   |  |
|  | RS-232   | 1 channel Transmission speed: 115200, 57600, 38400, 19200, 9600, 4800 bps Connector shape: D-sub 9-pin (male)                                |  |
|  | RS-422/485   | 1 channel Transmission speed: 115200, 57600, 38400, 19200, 9600, 4800 bps Connector shape: D-sub 9-pin (female)                              |  |
|  | Ethernet   | 1 channel Data transfer method: 100BASE-TX, 10BASE-T Connector shape: RJ-45 (modular jack)   |  |
|  | USB (host)   | 1 channel (rear face)<br>USB version: USB 1.1 (Full-Speed 12 Mbps), Connector shape: USB-A   |  |
|  | USB (device)   | 1 channel (rear face)<br>USB version: USB 1.1 (Full-Speed 12 Mbps), Connector shape: USB Mini-B  |  |
|  | SD memory card *10   | 1 channel, SDHC compliant (maximum 32 GB)  |  |
|  | Buzzer output  | Single tone (tone length adjustable)   |  |
| POWER LED  | 2 colors (blue and orange)   |  |  |
| Protective structure *6                            | Front: IP67F *8 Inside control panel: IP2X                                     |  |  |
| Safety standards, radio laws (as of December 2019) | CE, UL, cUL, EAC, KC   |  |  |
| External dimensions                                | 303(11.93) (W) x 218(8.58) (H) x 56(2.20) (D) mm(inch)                         | 241(9.49) (W) x 194(7.64) (H) x 56(2.20) (D) mm(inch)  |  |
| Panel cut dimensions                               | 289(11.38) (W) x 200(7.87) (H) mm(inch)  | 227(8.94) (W) x 176(6.93) (H) mm(inch)   |  |
| Weight (excluding a fitting)                       | 1.9(4.2) kg(lb)  | 1.5(3.3) kg(lb)  |  |
| Compatible software package                        | GT Works3 Version1.225K or later   |  |  |

- \*1 As a characteristic of liquid crystal display panels, bright dots (always lit) and dark dots (never lit) may appear on the panel. Since liquid crystal display panels comprise a great number of display elements, the appearance of bright and dark dots cannot be reduced to zero. Individual differences in liquid crystal display panels may cause differences in color, uneven brightness and flickering. Note that these phenomena are characteristics of liquid crystal display panels and it does not mean the products are defective or damaged.
- \*2 Flickering may occur due to vibration, shock, or the display colors.
- \*3 When a stylus is used, the touch panel has a life of 100 thousand touches. The stylus must satisfy the following specifications.
  - Material: polyacetal resin
  - Tip radius: 0.8 mm or more
- \*4 To prevent the display section from burning in and lengthen the backlight life, enable the screen save function and turn off the backlight.
- \*5 If you touch two points or more simultaneously on the touch panel, a touch switch near the touched points may operate unexpectedly. Do not touch two points or more simultaneously on the touch panel.
- \*6 Note that the structure does not guarantee protection in all users' environments. The GOT may not be used in certain environments where it is subjected to splashing oil or chemicals for a long period of time or soaked in oil mist.
- \*7 The minimum size of a key that can be arranged. To ensure safe use of the product, the following settings are recommended.
  - Key size: 16 x 16 dots or larger
  - Distance between keys: 16 dots or more
- \*8 The suffix "F" of IP67F is a symbol that indicates protection rate against oil. It is described in the Appendix of Japanese Industrial Standard JIS C 0920.
- \*9 Repeatedly touching the outer edge of the actual display area may cause the product to fail.
- \*10 While writing data to the memory for storage (ROM) or an SD memory card, if GOT is powered off, the data may be corrupted which may cause the GOT to stop operating.

Power supply specifications

| Item   | Specifications   |              |   |              |
|--|--|--------------|---|--------------|
|  | GT2310-VTBA  | GT2308-VTBA  | GT2310-VTBD   | GT2308-VTBD  |
| Power supply voltage                         | 100 V AC to 240 V AC (+10%, -15%)  |              | 24 V DC (+25%, -20%)  |              |
| Power supply frequency                       | 50 Hz/60 Hz (±5%)  |              |   |              |
| Power consumption                            | Under the maximum load   | 18 W or less | 11 W or less  | 11 W or less |
|  | Main unit  | 15 W         | 9 W   | 8 W          |
|  | Main unit (backlight OFF)  | 8 W          | 6 W   | 6 W          |
| Inrush current                               | 40 A or less<br>(4 ms, ambient temperature: 25 °C, under the maximum load)   |              | 40 A or less<br>(2 ms, ambient temperature: 25 °C, under the maximum load)  |              |
| Permissible instantaneous power failure time | 20 ms or less (100 V AC or more)   |              | 10 ms or less   |              |
| Noise immunity                               | Noise voltage: 1500 Vp-p, noise width: 1 μs,<br>measured by a noise simulator with noise frequency ranging from 25 Hz to 60 Hz |              | Noise voltage: 500 Vp-p, noise width: 1 μs,<br>measured by a noise simulator with noise frequency ranging from 25 Hz to 60 Hz |              |
| Withstand voltage                            | 1500 V AC for 1 minute across power terminals and earth  |              | 350 V AC for 1 minute across power terminals and earth  |              |
| Insulation resistance                        | 500 V DC across power terminals and earth, 10 MΩ or more by an insulation resistance tester                                    |              |   |              |

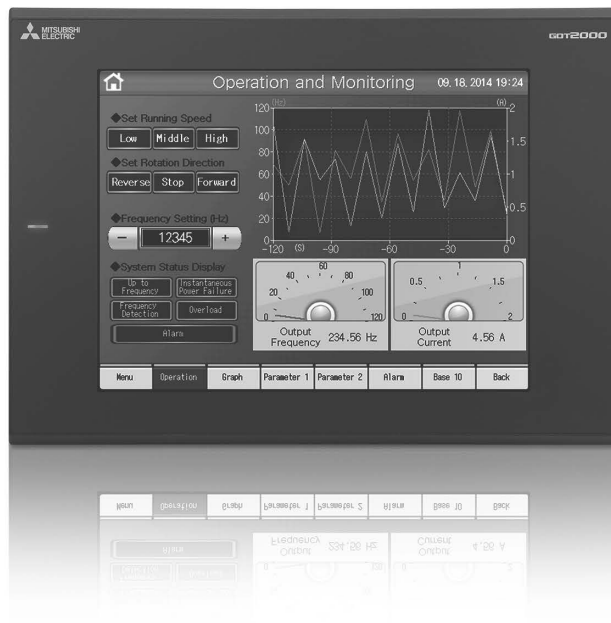

# Specifications

## GT21 wide model/GT21 model

### General specifications

| Item  | Specifications   |                              |                      |                      |                |                                       |
|---|--|------------------------------|----------------------|----------------------|----------------|---------------------------------------|
| Operating ambient temperature <sup>*1</sup> | 0 °C to 55 °C <sup>*7</sup> (horizontal installation), 0 °C to 50 °C (vertical installation)   |                              |                      |                      |                |                                       |
| Storage ambient temperature                 | -20 °C to 60 °C  |                              |                      |                      |                |                                       |
| Operating ambient humidity                  | 10% RH to 90% RH, non-condensing <sup>*2</sup>   |                              |                      |                      |                |                                       |
| Storage ambient humidity                    | 10% RH to 90% RH, non-condensing <sup>*2</sup>   |                              |                      |                      |                |                                       |
| Vibration resistance                        | Compliant with JIS B 3502 and IEC 61131-2  | Under intermittent vibration | Frequency            | Acceleration         | Half amplitude | Sweep count                           |
|   |  |                              | 5 to 8.4 Hz          | —                    | 3.5 mm         |                                       |
|   |  | Under continuous vibration   | 8.4 to 150 Hz        | 9.8 m/s <sup>2</sup> | —              | 10 times in each X, Y, or Z direction |
|   |  |                              | 5 to 8.4 Hz          | —                    | 1.75 mm        |                                       |
|   |  | 8.4 to 150 Hz                | 4.9 m/s <sup>2</sup> | —                    | —              |                                       |
| Shock resistance                            | Compliant with JIS B 3502 and IEC 61131-2 (147 m/s <sup>2</sup> (15G), 3 times in each X, Y, or Z direction)   |                              |                      |                      |                |                                       |
| Operating atmosphere                        | No greasy fumes, corrosive gas, flammable gas, excessive conductive dust, and direct sunlight (as well as at storage)  |                              |                      |                      |                |                                       |
| Operating altitude <sup>*3</sup>            | 2000 m or less   |                              |                      |                      |                |                                       |
| Installation location                       | Inside control panel   |                              |                      |                      |                |                                       |
| Overvoltage category <sup>*4</sup>          | II or less   |                              |                      |                      |                |                                       |
| Pollution degree <sup>*5</sup>              | 2 or less  |                              |                      |                      |                |                                       |
| Cooling method                              | Self-cooling   |                              |                      |                      |                |                                       |
| Grounding                                   | GT2107-W: Grounding with a ground resistance of 100 Ω or less by using a ground cable that has a cross-sectional area of 2 mm <sup>2</sup> or more. If impossible, connect the ground cable to the control panel.<br>GT2104, GT2103: Grounding with a ground resistance of 100 Ω or less by using a ground cable that has a cross-sectional area of 0.14 to 1.5 mm <sup>2</sup> (single wire), 0.14 to 1.0 mm <sup>2</sup> (stranded wire), or 0.25 to 0.5 mm <sup>2</sup> (rod terminal with an insulation sleeve). If impossible, connect the ground cable to the control panel. <sup>*6</sup> |                              |                      |                      |                |                                       |

- <sup>\*1</sup> Includes the temperature inside the enclosure of the control panel to which the GOT is installed.
- <sup>\*2</sup> If the ambient temperature exceeds 40 °C, the absolute humidity must not exceed 90% RH at 40 °C.
- <sup>\*3</sup> Do not use or store the GOT under a pressure higher than the atmospheric pressure at altitude 0 m. Doing so may cause a malfunction. Air purging by applying pressure to the control panel may create clearance between the surface sheet and the touch panel. This may cause the touch panel to be not sensitive enough or the sheet to come off.
- <sup>\*4</sup> This indicates the section of the power supply to which the equipment is assumed to be connected between the public electrical power distribution network and the machinery within the premises. Category II applies to equipment that is supplied with power from fixed facilities. The withstand surge voltage for the equipment with the rated voltage up to 300 V is 2500 V.
- <sup>\*5</sup> This indicates the occurrence rate of conductive material in an environment where a device is used. Pollution degree 2 indicates an environment where only non-conductive pollution occurs normally and a temporary conductivity caused by condensation shall be expected depending on the conditions.
- <sup>\*6</sup> 5 V DC type does not require grounding.
- <sup>\*7</sup> When a protective cover for oil is mounted on the GOT, the maximum operating ambient temperature must be 5°C lower than the one described in the general specifications.

Operate and store the GOT in environments without direct sunlight, high temperature, dust, humidity, and vibrations.

For the status of conforming to various standards and laws (CE, ATEX, UL/cUL, Class I Division 2, EAC, KC, KCs, and maritime certifications [ABS/BV/DNV/GL/LR/NK/RINA]), please refer to the Mitsubishi Electric Factory Automation Global website ([www.MitsubishiElectric.com/fa/](http://www.MitsubishiElectric.com/fa/)).

### Performance specifications

| Item   | Specifications   |  |  |
|--|--|--|--|
|  | GT21 wide model  |  |  |
|  | GT2107-WTBD  | GT2107-WTSD  |  |
| Display section <sup>*1 *2</sup>                   | Display device   | TFT color LCD  |  |
|  | Screen size  | 7" widescreen  |  |
|  | Resolution   | WVGA: 800 × 480 dots   |  |
|  | Display size   | 152.40(6.00) (W) × 91.44(3.60) (H) mm (inch)   |  |
|  | Number of displayed characters   | 16-dot standard font: 50 characters × 30 lines (two-byte characters)<br>12-dot standard font: 66 characters × 40 lines (two-byte characters) |  |
|  | Display color  | 65536 colors   |  |
|  | Brightness adjustment  | 32 levels  |  |
|  | Backlight  | LED (not replaceable)  |  |
| Backlight life <sup>*4</sup>                       | Approx. 50000 h (operating ambient temperature: 25 °C, display intensity: 50%) |  |  |
| Touch panel <sup>*3 *11</sup>                      | Type   | Analog resistive film  |  |
|  | Key size   | Minimum 2 × 2 dots <sup>*9</sup> (per key)   |  |
|  | Simultaneous press   | Not available <sup>*5</sup> (Only 1 point can be touched.)   |  |
|  | Life   | 1 million touches or more (operating force: 0.98 N or less)  |  |
| Panel color  | Black  | Silver <sup>*15</sup>  |  |
| User memory  | User memory capacity   | Memory for storage (ROM) <sup>*12</sup> : 15 MB  |  |
|  | Life (number of write times)   | 100000 times   |  |
| Built-in clock precision                           | ±45 seconds/month (ambient temperature: 25 °C)                                 |  |  |
| Battery  | GT11-50BAT lithium battery   |  |  |
|  | SPRAM data, clock data   |  |  |
|  | Life   | Approx. 5 years (ambient temperature: 25 °C)   |  |
| Built-in interface                                 | RS-232   | 1 channel Transmission speed: 115200, 57600, 38400, 19200, 9600, 4800 bps Connector shape: D-sub 9-pin (male)                                |  |
|  | RS-422/485   | 1 channel Transmission speed: 115200, 57600, 38400, 19200, 9600, 4800 bps Connector shape: D-sub 9-pin (female)                              |  |
|  | RS-422   | —  |  |
|  | Ethernet   | 1 channel Data transfer method: 100BASE-TX, 10BASE-T<br>Connector shape: RJ-45 (modular jack)  |  |
|  | USB (host)   | 1 channel (rear face)<br>USB version: USB 1.1 (Full-Speed 12 Mbps), Connector shape: USB-A   |  |
|  | USB (device)   | 1 channel (front face)<br>USB version: USB 1.1 (Full-Speed 12 Mbps), Connector shape: USB Mini-B   |  |
|  | SD memory card <sup>*12</sup>  | 1 channel, SDHC compliant (maximum 32 GB)  |  |
| Buzzer output                                      | Single tone (tone length adjustable)   |  |  |
| Protective structure <sup>*7</sup>                 | Front: IP67F <sup>*10 *14</sup> Inside control panel: IP2X                     |  |  |
| Safety standards, radio laws (as of December 2019) | CE, UL, cUL, EAC, KC   |  |  |
| External dimensions                                | 189(7.44) (W) × 142(5.59) (H) × 48(1.89) (D) mm(inch)                          |  |  |
| Panel cut dimensions                               | 180.5(7.11) (W) × 133.5(5.26) (H) mm(inch)                                     |  |  |
| Weight (excluding a fitting)                       | 0.7(1.54) kg(lb)   |  |  |
| Compatible software package                        | GT Works3 Version1.225K or later   |  |  |

- <sup>\*1</sup> As a characteristic of liquid crystal display panels, bright dots (always lit) and dark dots (never lit) may appear on the panel. Since liquid crystal display panels comprise a great number of display elements, the appearance of bright and dark dots cannot be reduced to zero. Individual differences in liquid crystal display panels may cause differences in color, uneven brightness and flickering. Note that these phenomena are characteristics of liquid crystal display panels and it does not mean the products are defective or damaged.
- <sup>\*2</sup> Flickering may occur due to vibration, shock, or the display colors.
- <sup>\*3</sup> When a stylus is used, the touch panel has a life of 100 thousand touches. The stylus must satisfy the following specifications.  
• Material: polyacetal resin • Tip radius: 0.8 mm or more
- <sup>\*4</sup> To prevent the display section from burning in and lengthen the backlight life, enable the screen save function and turn off the backlight.
- <sup>\*5</sup> If you touch two points or more simultaneously on the touch panel, a touch switch near the touched points may operate unexpectedly. Do not touch two points or more simultaneously on the touch panel.
- <sup>\*6</sup> The SD memory card unit (GT21-03SDCD), sold separately, needs to be mounted.
- <sup>\*7</sup> Note that the structure does not guarantee protection in all users' environments. The GOT may not be used in certain environments where it is subjected to splashing oil or chemicals for a long period of time or soaked in oil mist.
- <sup>\*8</sup> The dimension when the SD memory card unit (GT21-03SDCD) is mounted is 113(4.45) (W) × 74(2.91) (H) × 32(1.26) (D) mm(inch).
- <sup>\*9</sup> The minimum size of a key that can be arranged. To ensure safe use of the product, the following settings are recommended.  
• Key size: 16 × 16 dots or larger • Distance between keys: 16 dots or more (GT2107-WTBD, GT2107-WTSD)
- <sup>\*10</sup> The suffix "F" of IP67F is a symbol that indicates protection rate against oil. It is described in the Appendix of Japanese Industrial Standard JIS C 0920.
- <sup>\*11</sup> Repeatedly touching the outer edge of the actual display area may cause the product to fail.

Power supply specifications

| Item   | Specifications  |  |  |               |               |   |               |
|--|---|--|--|---------------|---------------|---|---------------|
|  | GT21 wide model   | GT21 model   |  |               |               |   |               |
|  | GT2107-WTBD<br>GT2107-WTSD  | GT2104-RTBD  | GT2103-PMBD  | GT2103-PMBDS  | GT2103-PMBDS2 | GT2103-PMBLS                            |               |
| Power supply voltage                         | 24 V DC (+10%, -15%)  |  |  |               |               | 5 V DC (+5%, -5%)<br>Power from the PLC |               |
| Power supply frequency                       | —   |  |  |               |               |   |               |
| Power consumption                            | Under the maximum load  | 11.3 W or less   | 4.4 W or less  | 2.6 W or less | 1.9 W or less | 2.2 W or less                           | 1.1 W or less |
|  | Main unit (backlight OFF)   | 7.0 W  | 2.9 W  | 2.0 W         | 1.3 W         | 1.6 W                                   | 0.7 W         |
| Inrush current                               | 35 A or less<br>(3 ms, ambient temperature:<br>25 °C, under the maximum<br>load)  | 18 A or less<br>(2 ms, ambient temperature:<br>25 °C, under the maximum<br>load) | 30 A or less<br>(1 ms, ambient temperature: 25 °C, under the maximum load) |               |               | —                                       |               |
| Permissible instantaneous power failure time | 5 ms or less  |  |  |               |               | —                                       |               |
| Noise immunity                               | Noise voltage: 1000 Vp-p, noise width: 1 μs,<br>measured by a noise simulator with noise frequency ranging from 30 Hz to 100 Hz |  |  |               |               |   |               |
| Withstand voltage                            | 500 V AC for 1 minute across power terminals and earth  |  |  |               |               | —                                       |               |
| Insulation resistance                        | 500 V DC across power terminals and earth, 10 MΩ or more by an insulation resistance tester                                     |  |  |               |               | —                                       |               |

| Item   | Specifications   |  |   |   |   |   |  |
|--|--|--|---|---|---|---|--|
|  | GT21 model   |  |   |   |   |   |  |
|  | GT2104-RTBD  | GT2103-PMBD  | GT2103-PMBDS  | GT2103-PMBDS2   | GT2103-PMBLS  |   |  |
| Display section <sup>*1 *2</sup>                   | Display device   | TFT color LCD  |   |   |   |   |  |
|  | Screen size  | 4.3"   |   |   |   |   |  |
|  | Resolution   | 480 × 272 dots   |   |   |   |   |  |
|  | Display size   | 95.0(3.74) (W) × 53.8(2.12) (H) mm(inch)   |   |   |   |   |  |
|  | Number of displayed characters   | 16-dot standard font: 30 characters × 17 lines (two-byte characters)<br>12-dot standard font: 40 characters × 22 lines (two-byte characters) | 16-dot standard font: 20 characters × 8 lines (two-byte characters)<br>12-dot standard font: 26 characters × 10 lines (two-byte characters) |   |   | — |  |
|  | Display color  | 65536 colors   |   |   |   |   |  |
|  | Brightness adjustment  | 32 levels  |   |   |   |   |  |
|  | Backlight  | LED (not replaceable)  | 5-color LED (white, green, pink, orange, red) (not replaceable)   |   |   |   |  |
| Backlight life <sup>*4</sup>                       | Approx. 50000 h (operating ambient temperature: 25 °C, display intensity: 50%) |  |   |   |   |   |  |
| Touch panel <sup>*3 *11</sup>                      | Type   | Analog resistive film  |   |   |   |   |  |
|  | Key size   | Minimum 2 × 2 dots <sup>*9</sup> (per key)   |   |   |   |   |  |
|  | Simultaneous press   | Not available <sup>*5</sup> (Only 1 point can be touched.)   |   |   |   |   |  |
|  | Life   | 1 million touches or more (operating force: 0.98 N or less)  |   |   |   |   |  |
| Panel color  | Black  |  |   |   |   |   |  |
| User memory  | User memory capacity   | Memory for storage (ROM) <sup>*12</sup> : 9 MB   | Memory for storage (ROM) <sup>*12</sup> : 3 MB  |   |   |   |  |
|  | Life (number of write times)   | 100000 times   |   |   |   |   |  |
| Built-in clock precision                           | ±45 seconds/month (ambient temperature: 25 °C)                                 | —  |   |   |   |   |  |
| Battery  |  | GT11-50BAT lithium battery   |   |   |   |   |  |
|  | Data to be backed up   | SRAM data, clock data  |   |   |   |   |  |
|  | Life   | Approx. 5 years (ambient temperature: 25 °C)   |   |   |   |   |  |
| Built-in interface                                 | RS-232   | 1 channel Transmission speed: 115200, 57600, 38400, 19200, 9600, 4800 bps Connector shape: 9-pin connector terminal block                    | —   | 1 channel Transmission speed: 115200, 57600, 38400, 19200, 9600, 4800 bps Connector shape: MINI-DIN 6-pin (female)        | 2 channels Transmission speed: 115200, 57600, 38400, 19200, 9600, 4800 bps Connector shape: 9-pin connector terminal block, MINI-DIN 6-pin (female) |   |  |
|  | RS-422/485   | 1 channel Transmission speed: 115200, 57600, 38400, 19200, 9600, 4800 bps Connector shape: 9-pin connector terminal block                    | 1 channel Transmission speed: 115200, 57600, 38400, 19200, 9600, 4800 bps Connector shape: 5-pin connector terminal block                   | 1 channel Transmission speed: 115200, 57600, 38400, 19200, 9600, 4800 bps Connector shape: 9-pin connector terminal block | —   |   |  |
|  | RS-422   | —  |   |   | 1 channel Transmission speed: 115200, 57600, 38400, 19200, 9600, 4800 bps Connector shape: 9-pin connector terminal block <sup>*13</sup>            |   |  |
|  | Ethernet   | 1 channel Data transfer method: 100BASE-TX, 10BASE-T Connector shape: RJ-45 (modular jack)   |   | —   |   |   |  |
|  | USB (device)   | 1 channel (rear face)<br>USB version: USB 1.1 (Full-Speed 12 Mbps), Connector shape: USB Mini-B  |   |   |   |   |  |
|  | SD memory card <sup>*12</sup>  | 1 channel, SDHC compliant (maximum 32 GB)  | 1 channel, SDHC compliant (maximum 32 GB) <sup>*6</sup>   |   |   | — |  |
| Buzzer output                                      | Single tone (tone length adjustable)   |  |   |   |   |   |  |
| Protective structure <sup>*7</sup>                 | Front: IP67F <sup>*10</sup> Inside control panel: IP2X                         |  |   |   |   |   |  |
| Safety standards, radio laws (as of December 2019) | CE, UL, cUL, EAC, KC   |  |   |   |   |   |  |
| External dimensions                                | 128(5.04) (W) × 102(4.02) (H) × 40(1.57) (D) mm(inch)                          | 113(4.45) (W) × 74(2.91) (H) × 32(1.26) (D) mm(inch)   | 113(4.45) (W) × 74(2.91) (H) × 27(1.06) (D) mm(inch) <sup>*8</sup>  |   | 113(4.45) (W) × 74(2.91) (H) × 27(1.06) (D) mm(inch)  |   |  |
| Panel cut dimensions                               | 118(4.65) (W) × 92(3.62) (H) mm(inch)  |  |   |   |   |   |  |
| Weight (excluding a fitting)                       | 0.4(0.88) kg(lb)   | 0.2(0.44) kg(lb)   |   |   | 0.18(0.40) kg(lb)   |   |  |
| Compatible software package                        | GT Works3 Version1.225K or later   |  |   |   |   |   |  |

\*12 While writing data to the memory for storage (ROM) or an SD memory card, if GOT is powered off, the data may be corrupted which may cause the GOT to stop operating.

\*13 Use a 3 m or shorter cable.

\*14 To conform to IP67F, close the USB environmental protection cover by pushing the [PULL] mark firmly. (The GOT conforms to IP2X when the USB environmental protection cover is open.)

\*15 The lower part of the panel including the USB environmental protection cover is black.

# Specifications

## GS21 model

### General specifications

| Item                             | Specifications  |                              |                      |                      |                |                                       |
|----------------------------------|---|------------------------------|----------------------|----------------------|----------------|---------------------------------------|
| Operating ambient temperature *1 | 0 °C to 50 °C   |                              |                      |                      |                |                                       |
| Storage ambient temperature      | -20 °C to 60 °C   |                              |                      |                      |                |                                       |
| Operating ambient humidity       | 10% RH to 90% RH, non-condensing *2   |                              |                      |                      |                |                                       |
| Storage ambient humidity         | 10% RH to 90% RH, non-condensing *2   |                              |                      |                      |                |                                       |
| Vibration resistance             | Compliant with IEC 61131-2  | Under intermittent vibration | Frequency            | Acceleration         | Half amplitude | Sweep count                           |
|                                  |   |                              | 5 to 8.4 Hz          | —                    | 3.5 mm         |                                       |
|                                  |   | Under continuous vibration   | 8.4 to 150 Hz        | 9.8 m/s <sup>2</sup> | —              | 10 times in each X, Y, or Z direction |
|                                  |   |                              | 5 to 8.4 Hz          | —                    | 1.75 mm        |                                       |
|                                  |   | 8.4 to 150 Hz                | 4.9 m/s <sup>2</sup> | —                    | —              |                                       |
| Shock resistance                 | Compliant with IEC 61131-2 (147 m/s <sup>2</sup> (15G), 3 times in each X, Y, or Z direction)   |                              |                      |                      |                |                                       |
| Operating atmosphere             | No greasy fumes, corrosive gas, flammable gas, excessive conductive dust, and direct sunlight (as well as at storage)   |                              |                      |                      |                |                                       |
| Operating altitude *3            | 2000 m or less  |                              |                      |                      |                |                                       |
| Installation location            | Inside control panel  |                              |                      |                      |                |                                       |
| Overvoltage category *4          | II or less  |                              |                      |                      |                |                                       |
| Pollution degree *5              | 2 or less   |                              |                      |                      |                |                                       |
| Cooling method                   | Self-cooling  |                              |                      |                      |                |                                       |
| Grounding                        | Grounding with a ground resistance of 100 Ω or less by using a ground cable that has a cross-sectional area of 2 mm <sup>2</sup> or more. If impossible, connect the ground cable to the control panel. |                              |                      |                      |                |                                       |

- \*1 Includes the temperature inside the enclosure of the control panel to which the GOT is installed.
- \*2 If the ambient temperature exceeds 40 °C, the absolute humidity must not exceed 90% RH at 40 °C.
- \*3 Do not use or store the GOT under a pressure higher than the atmospheric pressure at altitude 0 m. Doing so may cause a malfunction. Air purging by applying pressure to the control panel may create clearance between the surface sheet and the touch panel. This may cause the touch panel to be not sensitive enough or the sheet to come off.
- \*4 This indicates the section of the power supply to which the equipment is assumed to be connected between the public electrical power distribution network and the machinery within the premises. Category II applies to equipment that is supplied with power from fixed facilities. The withstand surge voltage for the equipment with the rated voltage up to 300 V is 2500 V.
- \*5 This indicates the occurrence rate of conductive material in an environment where a device is used. Pollution degree 2 indicates an environment where only non-conductive pollution occurs normally and a temporary conductivity caused by condensation shall be expected depending on the conditions.

Operate and store the GOT in environments without direct sunlight, high temperature, dust, humidity, and vibrations.

For the status of conforming to various standards and laws (CE, ATEX, UL/cUL, Class I Division 2, EAC, KC, KCs, and maritime certifications [ABS/BV/DNV GL/LR/NK/RINA]), please refer to the Mitsubishi Electric Factory Automation Global website ([www.MitsubishiElectric.com/fa](http://www.MitsubishiElectric.com/fa)).

### Performance specifications

| Item   | Specifications   |  |
|--|--|--|
|  | GS2110-WTBD  | GS2107-WTBD  |
| Display section *1 *2                              | Display device   | TFT color LCD  |
|  | Screen size  | 10" widescreen   |
|  | Resolution   | 7" widescreen  |
|  | Display size   | WVGA: 800 × 480 dots   |
|  | Number of displayed characters   | W222(8.74) × H132.5(5.22) [mm] (inch)  |
|  | Display color  | W154(6.06) × H85.9(3.38) [mm] (inch)   |
|  | Brightness adjustment  | 16-dot standard font: 50 characters × 30 lines (two-byte characters)<br>12-dot standard font: 66 characters × 40 lines (two-byte characters)         |
| Touch panel *3 *9                                  | Backlight *4   | 65536 colors   |
|  | Type   | 32 levels  |
|  | Key size   | LED (not replaceable)  |
|  | Simultaneous press   | Analog resistive film  |
| Panel color  | Life   | Minimum 2 × 2 dots *7 (per key)  |
|  | Life   | Not available *5 (Only 1 point can be touched.)  |
| User memory  | Flash memory (Internal): 9 MB  | 1 million touches or more (operating force: 0.98 N or less)  |
|  | User memory capacity   | Black  |
|  | Life (number of write times)   | Flash memory (Internal): 9 MB  |
| Built-in interface                                 | RS-232   | 100000 times   |
|  | RS-422   | 1 channel Transmission speed: 115200, 57600, 38400, 19200, 9600, 4800 bps Connector shape: D-sub 9-pin (male)  |
|  | Ethernet   | 1 channel Transmission speed: 115200, 57600, 38400, 19200, 9600, 4800 bps Connector shape: D-sub 9-pin (female)<br>Terminating resistor: 330 Ω fixed |
|  | USB (device)   | 1 channel Data transfer method: 100BASE-TX, 10BASE-T Connector shape: RJ-45 (modular jack)   |
|  | SD memory card *10   | 1 channel (rear face)  |
| Buzzer output                                      | USB version: USB 1.1 (Full-Speed 12 Mbps), Connector shape: USB Mini-B |  |
| Protective structure *6                            | 1 channel, SDHC compliant (maximum 32 GB)                              |  |
| Safety standards, radio laws (as of December 2019) | Single tone (tone length adjustable)                                   |  |
| External dimensions                                | Front: IP65F *8  |  |
| Panel cut dimensions                               | CE, UL, cUL, EAC, KC   |  |
| Weight (excluding a fitting)                       | 272(10.71) (W) × 214(8.43) (H) × 56(2.21) (D) mm(inch)                 |  |
| Compatible software package                        | 206(8.11) (W) × 155(6.11) (H) × 50(1.97) (D) mm(inch)                  |  |
|  | 191(7.52) (W) × 137(5.40) (H) mm(inch)                                 |  |
|  | 1.3(2.9) kg(lb)  |  |
|  | 0.9(2.0) kg(lb)  |  |
|  | GT Works3 Version1.225K or later *11                                   |  |

- \*1 As a characteristic of liquid crystal display panels, bright dots (always lit) and dark dots (never lit) may appear on the panel. Since liquid crystal display panels comprise a great number of display elements, the appearance of bright and dark dots cannot be reduced to zero. Individual differences in liquid crystal display panels may cause differences in color, uneven brightness and flickering. Note that these phenomena are characteristics of liquid crystal display panels and it does not mean the products are defective or damaged.
- \*2 Flickering may occur due to vibration, shock, or the display colors.
- \*3 When a stylus is used, the touch panel has a life of 100 thousand touches. The stylus must satisfy the following specifications.  
• Material: polyacetal resin • Tip radius: 0.8 mm or more
- \*4 To prevent the display section from burning in and lengthen the backlight life, enable the screen save function and turn off the backlight.
- \*5 If you touch two points or more simultaneously on the touch panel, a touch switch near the touched points may operate unexpectedly. Do not touch two points or more simultaneously on the touch panel.
- \*6 Note that the structure does not guarantee protection in all users' environments. The GOT may not be used in certain environments where it is subjected to splashing oil or chemicals for a long period of time or soaked in oil mist.
- \*7 The minimum size of a key that can be arranged. To ensure safe use of the product, the following settings are recommended.  
• Key size: 16 × 16 dots or larger • Distance between keys: 16 dots or more
- \*8 The suffix "F" of IP65F is a symbol that indicates protection rate against oil. It is described in the Appendix of Japanese Industrial Standard JIS C 0920.
- \*9 Repeatedly touching the outer edge of the actual display area may cause the product to fail.
- \*10 While writing data to the memory for storage (ROM) or an SD memory card, if GOT is powered off, the data may be corrupted which may cause the GOT to stop operating.
- \*11 When the software is earlier than GT Works3 Version1.215Z, installation of the GS installer is required.



## Power supply specifications

| Item   | Specifications  |                             |
|--|---|-----------------------------|
|  | GS2110-WTBD   | GS2107-WTBD                 |
| Power supply voltage                         | 24 V DC (+10%, -15%), ripple voltage 200 mV or less   |                             |
| Power consumption                            | Under the maximum load  | 7.6 W (317 mA/24 V) or less |
|  | Main unit (backlight OFF)   | 3.8 W (158 mA/24 V) or less |
| Inrush current                               | 17 A or less<br>(6 ms, ambient temperature 25°C, under the maximum load)                    |                             |
| Permissible instantaneous power failure time | Within 5 ms   |                             |
| Noise immunity                               | Conforms to IEC61000-4-4, 2 kV (power supply line)  |                             |
| Withstand voltage                            | 350 V AC for 1 minute across power terminals and earth                                      |                             |
| Insulation resistance                        | 500 V DC across power terminals and earth, 10 MΩ or more by an insulation resistance tester |                             |


# Specifications

## GT27 model/GT25 model

\* For the external dimensions and panel cut dimensions of GT25 wide models, GT25 handy GOT, and GT25 rugged model, please refer to pages 140 and 141.

### External dimensions


Unit: mm (inch)

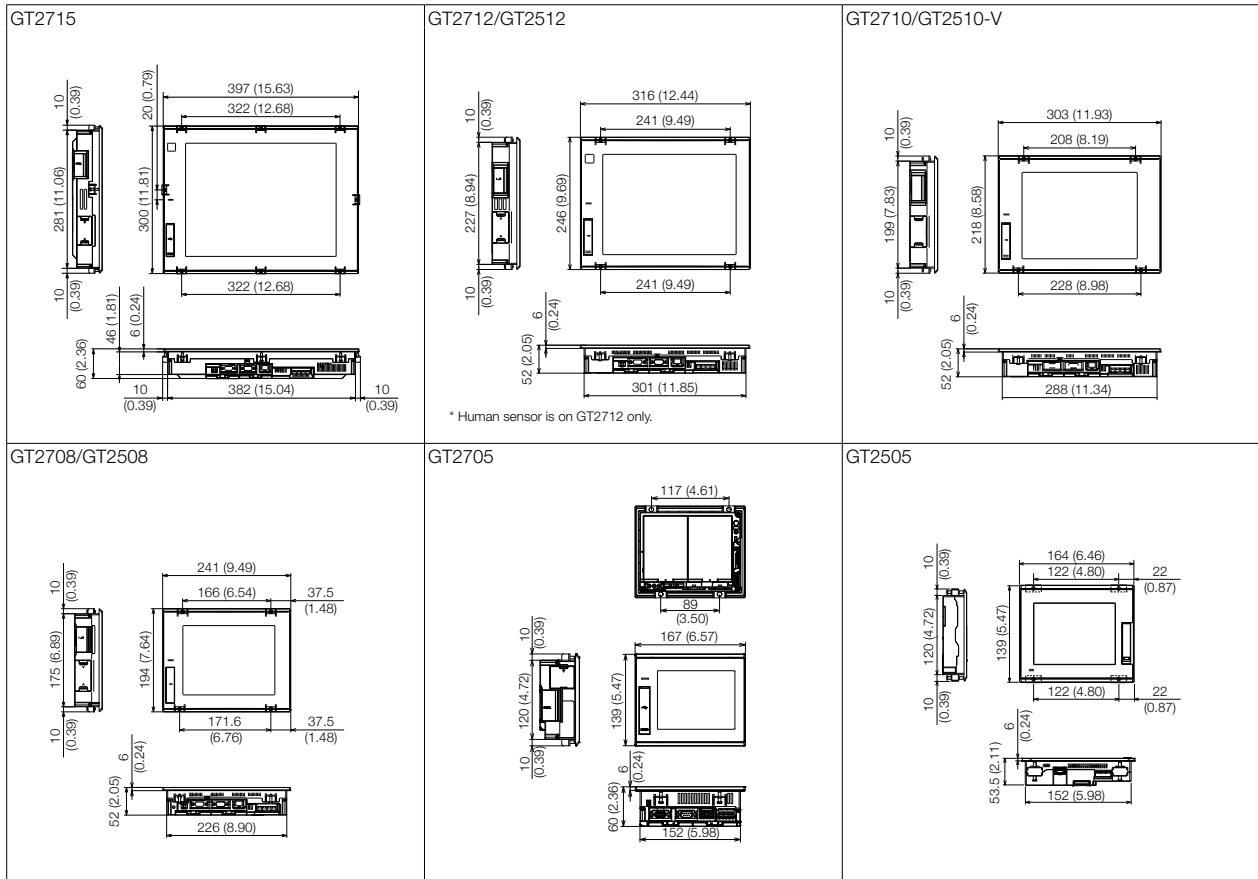

### Panel cut dimensions

Unit: mm (inch)

| Screen size | Model              | A                | B                | Remarks   |
|-------------|--------------------|------------------|------------------|---|
| 15"         | GT2715             | 383.5<br>(15.10) | 282.5<br>(11.12) | Same dimensions as GT1695, GT1595.                                  |
| 12.1"       | GT2712<br>GT2512   | 302<br>(11.89)   | 228<br>(8.98)    | Same dimensions as GT1685, GT1585, A985GOT.                         |
| 10.4"       | GT2710<br>GT2510-V | 289<br>(11.38)   | 200<br>(7.87)    | Same dimensions as GT167□, GT157□, GT1275, A97□GOT.                 |
| 8.4"        | GT2708<br>GT2508   | 227<br>(8.94)    | 176<br>(6.93)    | Same dimensions as GT166□, GT156□, GT1265.                          |
| 5.7"        | GT2705<br>GT2505   | 153<br>(6.02)    | 121<br>(4.76)    | Same dimensions as GT1655, GT155□, GT145□, GT115□, GT105□, F940GOT. |

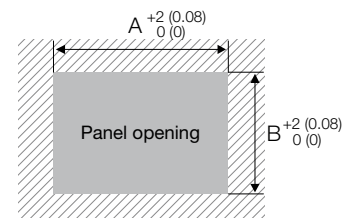


\* Panel thickness: 1.6 mm to 4 mm  
(0.06 inch to 0.16 inch)

**GT25 open frame model**

**External dimensions**

Unit: mm (inch)

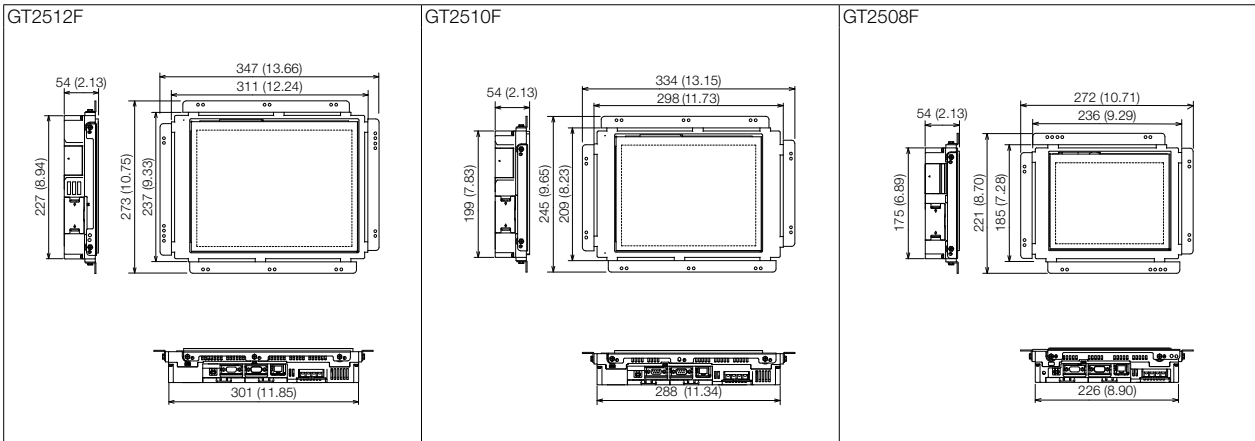

\* Install the fittings on the top and bottom, or the right and left of the GOT.

**Panel cut dimensions/Measurements based on the screen center**



Unit: mm (inch)

| Screen size | Model   | Panel cutting dimensions      |                                | Measurements based on the screen center |               |                                 |               |
|-------------|---------|-------------------------------|--------------------------------|---|---------------|---------------------------------|---------------|
|             |         | X                             | Y                              | X1                                      | X2            | Y1                              | Y2            |
| 12.1"       | GT2512F | 214(8.43)<br>(+2(0.08), 0(0)) | 269(10.59)<br>(+2(0.08), 0(0)) | 103(4.06)<br>(+2(0.08), 0(0))           | (111(4.37))   | 134.5(5.30)<br>(+1(0.04), 0(0)) | (134.5(5.30)) |
| 10.4"       | GT2510F | 187(7.36)<br>(+2(0.08), 0(0)) | 234(9.21)<br>(+2(0.08), 0(0))  | 89.5(3.52)<br>(+1(0.04), 0(0))          | (97.5(3.84))  | 117(4.61)<br>(+1(0.04), 0(0))   | (117(4.61))   |
| 8.4"        | GT2508F | 158(6.22)<br>(+2(0.08), 0(0)) | 194(7.64)<br>(+2(0.08), 0(0))  | 75.25(2.96)<br>(+1(0.04), 0(0))         | (82.75(3.26)) | 97.5(3.84)<br>(+1(0.04), 0(0))  | (96.5(3.80))  |

| Screen size | Model   | Distance between studs *   |                            |                          |                           |                           |
|-------------|---------|----------------------------|----------------------------|--------------------------|---------------------------|---------------------------|
|             |         | A1                         | A2                         | A3                       | B1                        | B2                        |
| 12.1"       | GT2512F | 98(3.86)±<br>0.15(0.01)    | 113(4.45)±<br>0.15(0.01)   | 7.5(0.30)±<br>0.15(0.01) | 75.5(2.97)±<br>0.15(0.01) | 79.5(3.13)±<br>0.15(0.01) |
| 10.4"       | GT2510F | 105.5(4.15)±<br>0.15(0.01) | 105.5(4.15)±<br>0.15(0.01) | 0(0)                     | 58(2.28)±<br>0.15(0.01)   | 58(2.28)±<br>0.15(0.01)   |
| 8.4"        | GT2508F | 64.5(2.54)±<br>0.15(0.01)  | 74.5(2.93)±<br>0.15(0.01)  | —                        | 58(2.28)±<br>0.15(0.01)   | 58(2.28)±<br>0.15(0.01)   |

| Screen size | Model   | Distance between studs *   |                            |                          |                          |                          |
|-------------|---------|----------------------------|----------------------------|--------------------------|--------------------------|--------------------------|
|             |         | C1                         | C2                         | C3                       | C4                       | C5                       |
| 12.1"       | GT2512F | 98(3.86)±<br>0.15(0.01)    | 113(4.45)±<br>0.15(0.01)   | 7.5(0.30)±<br>0.15(0.01) | 160(6.30)±<br>0.15(0.01) | 175(6.89)±<br>0.15(0.01) |
| 10.4"       | GT2510F | 105.5(4.15)±<br>0.15(0.01) | 105.5(4.15)±<br>0.15(0.01) | 0(0)                     | 161(6.34)±<br>0.15(0.01) | 161(6.34)±<br>0.15(0.01) |
| 8.4"        | GT2508F | 64.5(2.54)±<br>0.15(0.01)  | 74.5(2.93)±<br>0.15(0.01)  | —                        | 126(4.96)±<br>0.15(0.01) | 134(5.28)±<br>0.15(0.01) |

| Screen size | Model   | Distance between studs *   |                            |                           |                           |
|-------------|---------|----------------------------|----------------------------|---------------------------|---------------------------|
|             |         | D1                         | D2                         | D3                        | D4                        |
| 12.1"       | GT2512F | 128.5(5.06)±<br>0.15(0.01) | 132.5(5.22)±<br>0.15(0.01) | 75.5(2.97)±<br>0.15(0.01) | 79.5(3.13)±<br>0.15(0.01) |
| 10.4"       | GT2510F | 114.5(4.51)±<br>0.15(0.01) | 118.5(4.67)±<br>0.15(0.01) | 58(2.28)±<br>0.15(0.01)   | 58(2.28)±<br>0.15(0.01)   |
| 8.4"        | GT2508F | 104.5(4.11)±<br>0.15(0.01) | 104.5(4.11)±<br>0.15(0.01) | 58(2.28)±<br>0.15(0.01)   | 58(2.28)±<br>0.15(0.01)   |

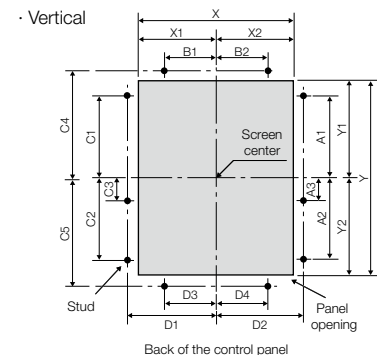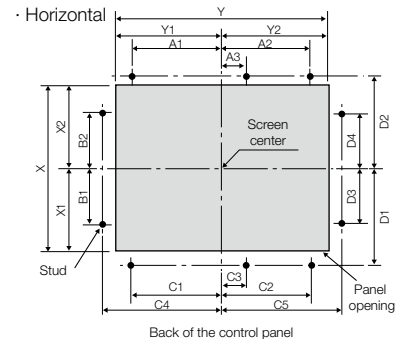

\* Panel thickness: 1.5 mm to 4 mm  
(0.06 inch to 0.16 inch)


\* To mount the GOT on the control panel, studs are necessary. Align the studs with the installation holes of the fittings, and install the studs. The fittings must be installed on the top and bottom, or the right and left of the GOT. For GT2512F, you are recommended to install the fittings on the long sides of the GOT.

# Specifications

## GT25 wide model

### External dimensions


Unit: mm (inch)

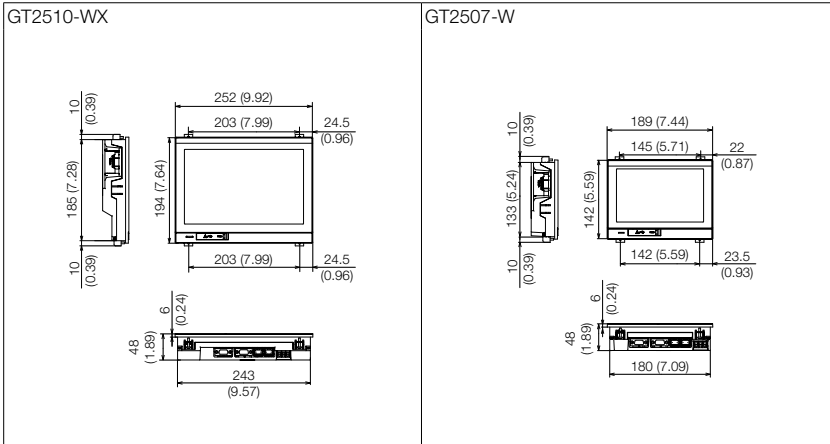

### Panel cut dimensions

Unit: mm (inch)

| Screen size      | Model     | A            | B            | Remarks |
|------------------|-----------|--------------|--------------|---------|
| 10.1" widescreen | GT2510-WX | 243.5 (9.59) | 185.5 (7.30) | —       |
| 7" widescreen    | GT2507-W  | 180.5 (7.11) | 133.5 (5.26) | —       |

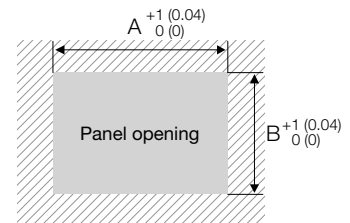


\* Panel thickness: 1.6 mm to 4 mm  
(0.06 inch to 0.16 inch)

## GT25 handy GOT

### External dimensions


Unit: mm (inch)

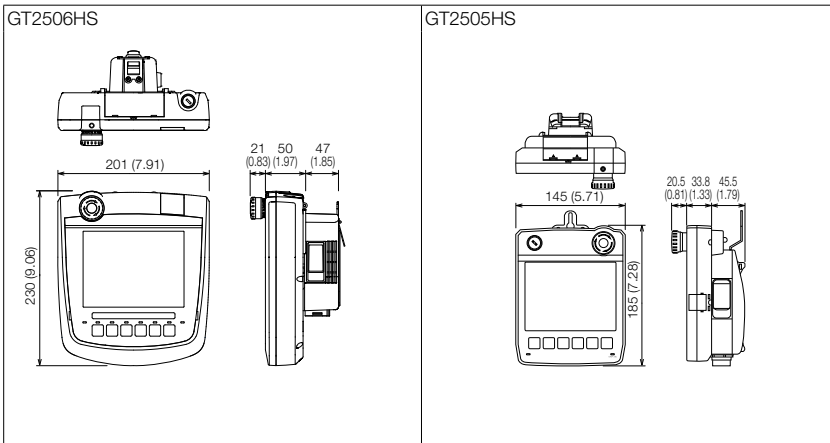

**GT25 rugged model**

**External dimensions**


Unit: mm (inch)

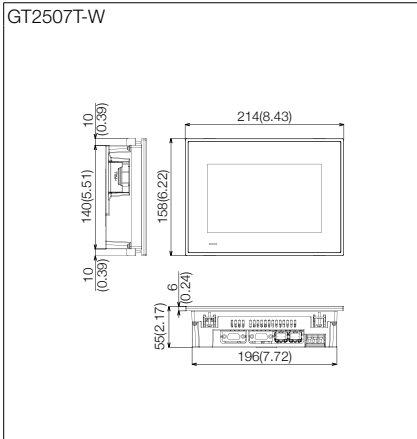

**Panel cut dimensions**

Unit: mm (inch)

| Screen size   | Model     | A             | B             | Remarks |
|---------------|-----------|---------------|---------------|---------|
| 7" widescreen | GT2507T-W | 197<br>(7.76) | 141<br>(5.55) | —       |

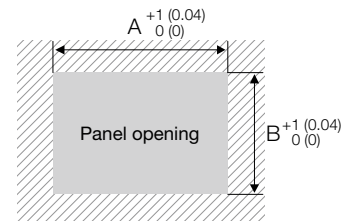


\* Panel thickness: 1.6 mm to 4 mm  
(0.06 inch to 0.16 inch)

**GT23 model**

**External dimensions**


Unit: mm (inch)

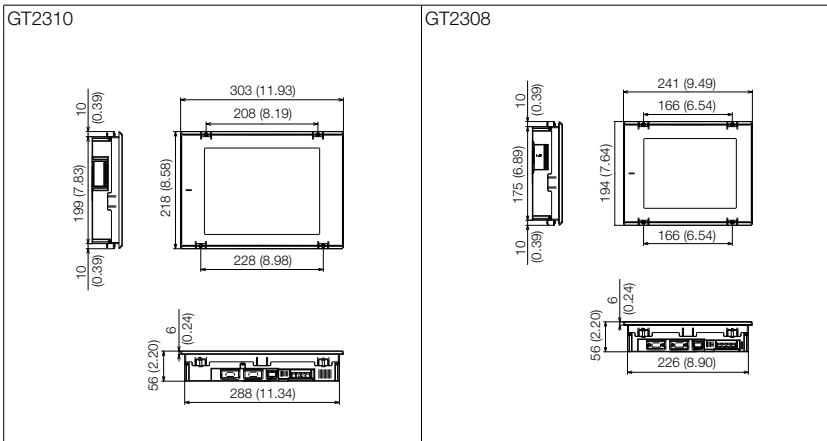

**Panel cut dimensions**

Unit: mm (inch)

| Screen size | Model  | A              | B             | Remarks   |
|-------------|--------|----------------|---------------|---|
| 10.4"       | GT2310 | 289<br>(11.38) | 200<br>(7.87) | Same dimensions as GT167□, GT157□, GT1275, A97□GOT. |
| 8.4"        | GT2308 | 227<br>(8.94)  | 176<br>(6.93) | Same dimensions as GT166□, GT156□, GT1265.          |

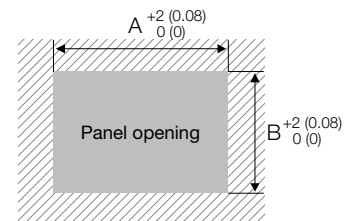

\* Panel thickness: 1.6 mm to 4 mm  
(0.06 inch to 0.16 inch)


# Specifications

## GT21 wide model

### External dimensions

Unit: mm (inch)


GT2107-W

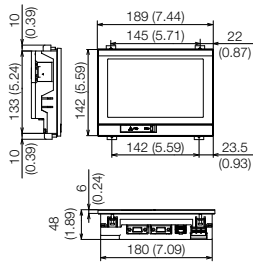

### Panel cut dimensions

Unit: mm (inch)

| Screen size   | Model    | A            | B            | Remarks |
|---------------|----------|--------------|--------------|---------|
| 7" widescreen | GT2107-W | 180.5 (7.11) | 133.5 (5.26) | —       |

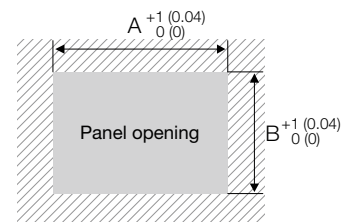


\* Panel thickness: 1.6 mm to 4 mm (0.06 inch to 0.16 inch)

## GT21 model


### External dimensions

Unit: mm (inch)


GT2104-RTBD

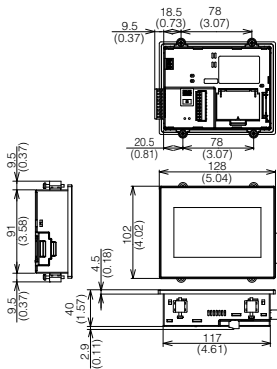

GT2103-PMBD

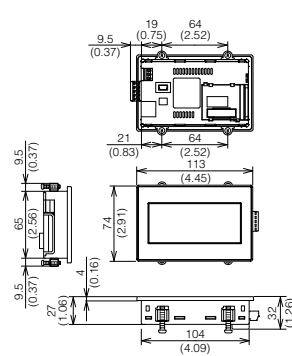


GT2103-PMBDS/GT2103-PMBDS2/GT2103-PMBLS

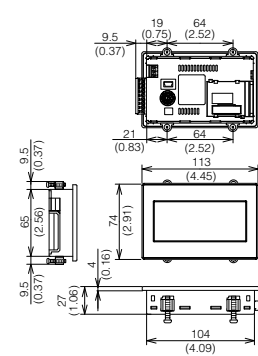

### Panel cut dimensions

Unit: mm (inch)

| Screen size | Model  | A          | B         | Remarks                    |
|-------------|--------|------------|-----------|----------------------------|
| 4.3"        | GT2104 | 118 (4.65) | 92 (3.62) | —                          |
| 3.8"        | GT2103 | 105 (4.13) | 66 (2.60) | Same dimensions as GT1020. |

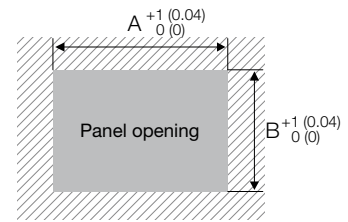


\* Panel thickness: 1 mm to 4 mm (0.04 inch to 0.16 inch)

**GS21 model**

**External dimensions**


Unit: mm (inch)

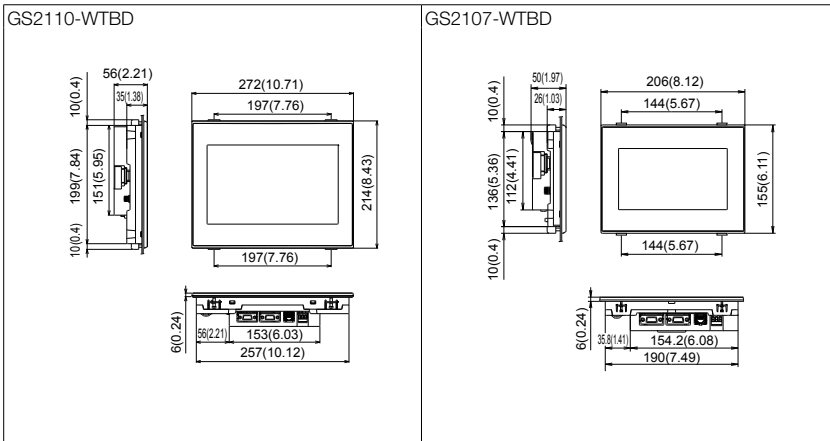

**Panel cut dimensions**

Unit: mm (inch)

| Screen size    | Model    | A              | B             | Remarks |
|----------------|----------|----------------|---------------|---------|
| 10" widescreen | GS2110-W | 258<br>(10.16) | 200<br>(7.88) | —       |
| 7" widescreen  | GS2107-W | 191<br>(7.52)  | 137<br>(5.40) | —       |

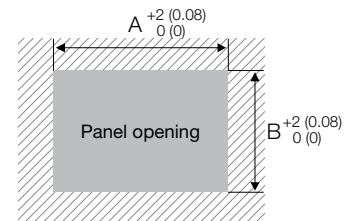

\* Panel thickness: 1.6 mm to 4 mm  
(0.06 inch to 0.16 inch)

# Specifications


## Communication cable

### External dimensions

#### RS-232 connection cable connector

| Cable model    | Cable length (m(ft.)) | External dimensions |
|----------------|-----------------------|---------------------|
| GT01-C30R2-6P  | 3(10)                 | (1)                 |
| GT01-C30R2-9S  | 3(10)                 | (2)                 |
| GT01-C30R2-25P | 3(10)                 | (3)                 |
| GT10-C30R2-6P  | 3(10)                 | (4)                 |

Unit: mm (inch)

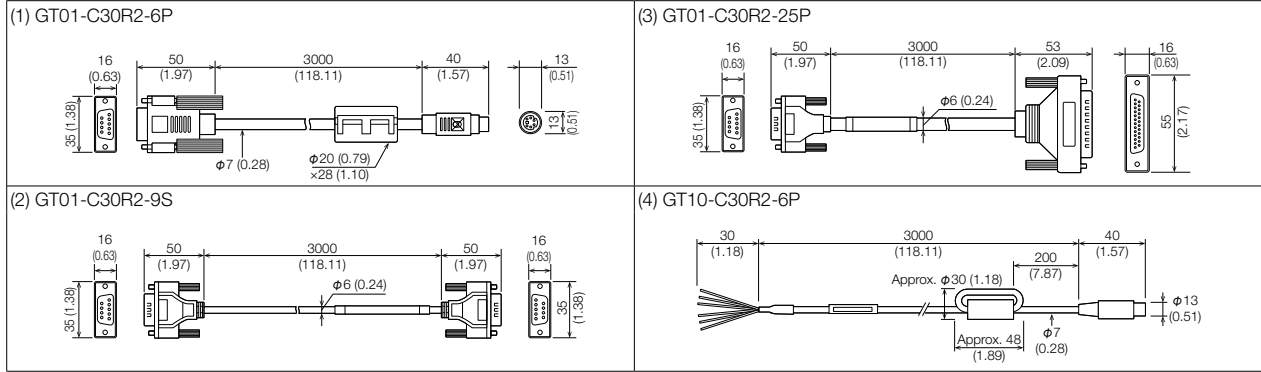


#### RS-422 connection cable connector

| Cable model    | Cable length (m(ft.))               | External dimensions |
|----------------|-------------------------------------|---------------------|
| GT16-C02R4-9S  | 0.2(0.7)                            | (1)                 |
| GT01-C30R4-25P | 3(10)                               | (2)                 |
| GT01-C□R4-25P  | 10(33), 20(66), 30(98)              | (3)                 |
| GT01-C□R4-8P   | 1(3), 3(10), 10(33), 20(66), 30(98) | (4)                 |
| GT10-C□R4-8P   | 1(3), 3(10), 10(33), 20(66), 30(98) | (5)                 |
| GT10-C□R4-25P  | 3(10), 10(33), 20(66), 30(98)       | (6)                 |

| Cable model    | Cable length (m(ft.))               | External dimensions |
|----------------|-------------------------------------|---------------------|
| GT21-C□R4-8P5  | 1(3), 3(10), 10(33), 20(66), 30(98) | (5)                 |
| GT21-C□R4-25P5 | 3(10), 10(33), 20(66), 30(98)       | (6)                 |
| GT10-C10R4-8PL | 1(3)                                | (7)                 |
| GT10-C□R4-8PC  | 1(3), 3(10), 10(33), 20(66), 30(98) | (8)                 |
| GT10-C02H-9SC  | 0.2(0.7)                            | (9)                 |

Unit: mm (inch)

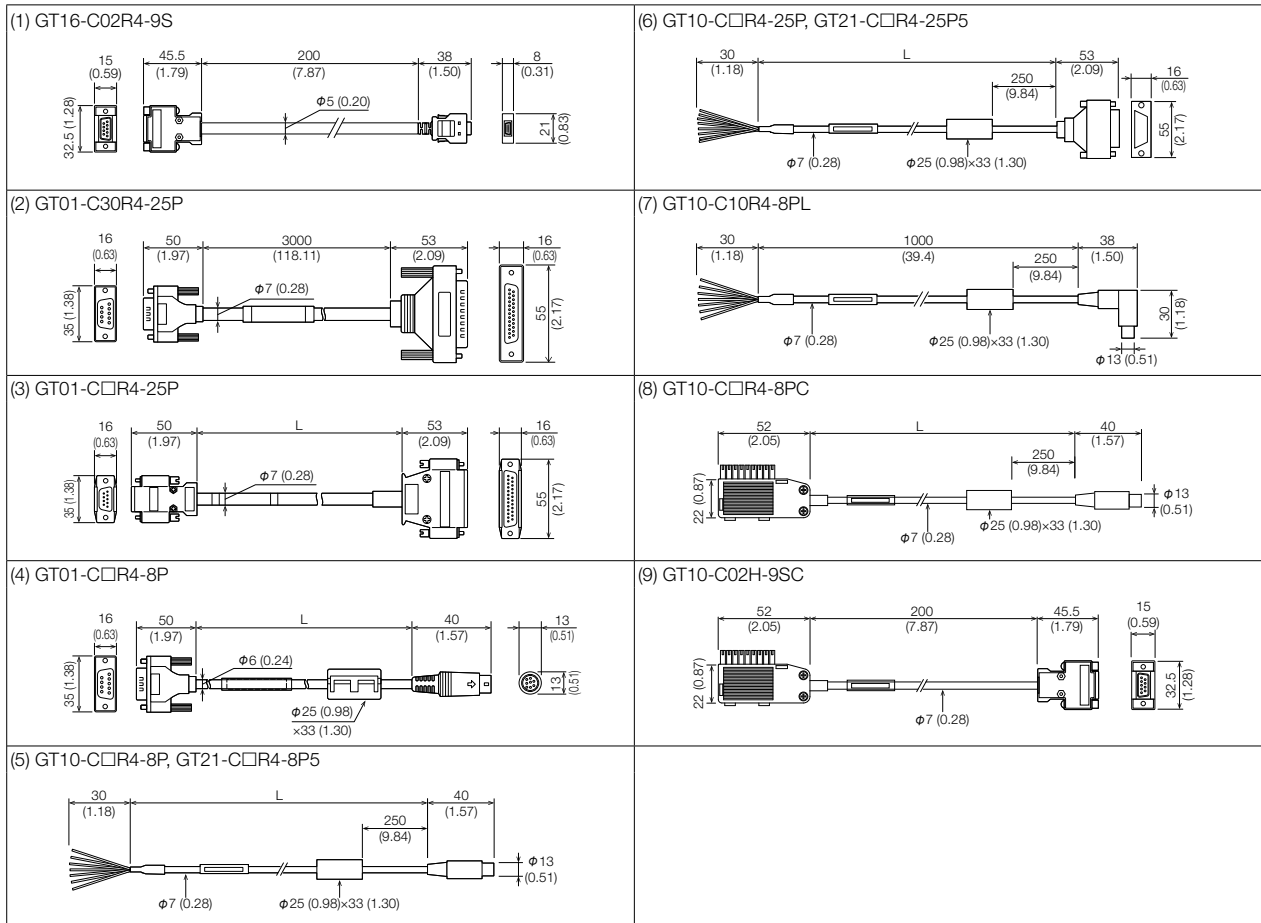




■ RS-485 terminal block conversion unit

| Cable model     | Cable length (m(ft.))    | External dimensions |
|-----------------|--------------------------|---------------------|
| FA-LTBGT2R4CBL□ | 0.5(1.6), 1(3.3), 2(6.6) | (1)                 |

Unit: mm (inch)








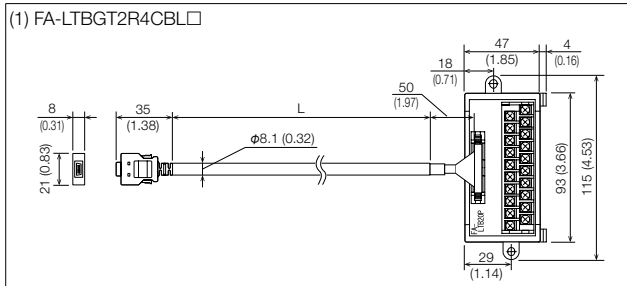


■ Connection cable for Handy GOT

| Cable model     | Cable length (m(ft.)) | External dimensions |
|-----------------|-----------------------|---------------------|
| GT16H-C□□□-42P  | 3(10), 6(20), 10(33)  | (1)                 |
| GT16H-C□□□-37PE | 3(10), 6(20), 10(33)  | (2)                 |
| GT14H-C□□□-42P  | 3(10), 6(20), 10(33)  | (3)                 |
| GT11H-C□□□-37P  | 3(10), 6(20), 10(33)  | (4)                 |

| Cable model     | Cable length (m(ft.)) | External dimensions |
|-----------------|-----------------------|---------------------|
| GT11H-C□□□      | 3(10), 6(20), 10(33)  | (5)                 |
| GT11H-C15R4-8P  | 15(49)                | (6)                 |
| GT11H-C15R4-25P | 15(49)                | (7)                 |
| GT11H-C15R2-6P  | 15(49)                | (8)                 |

Unit: mm (inch)

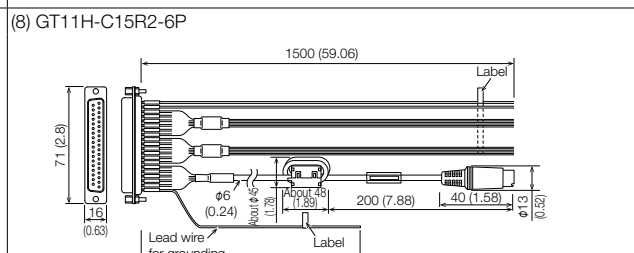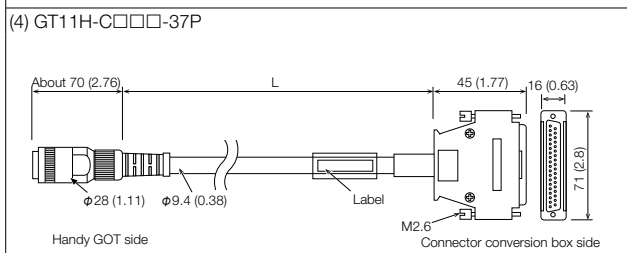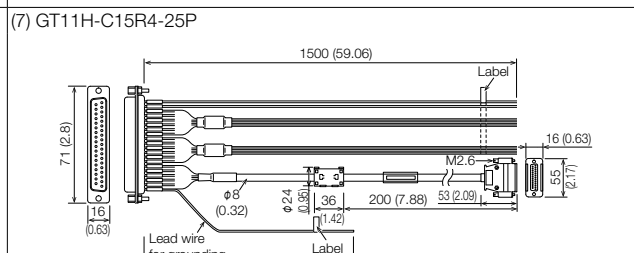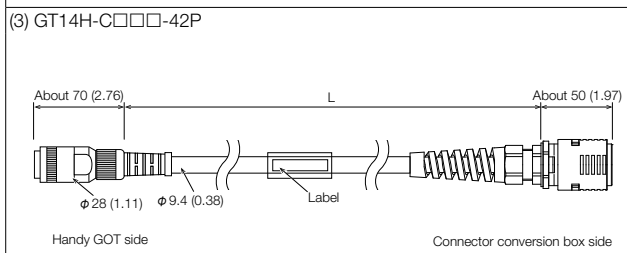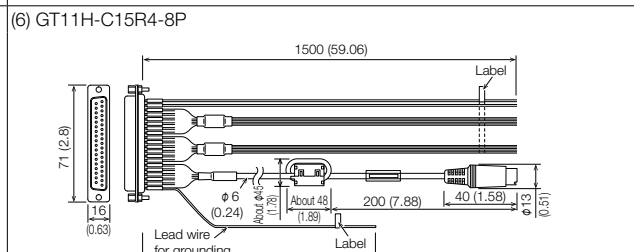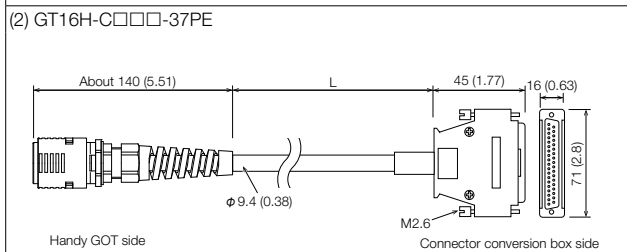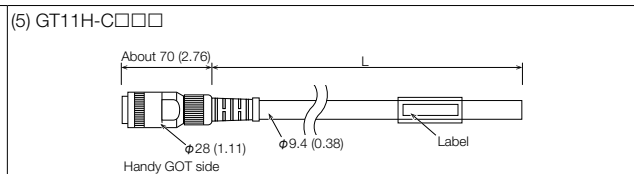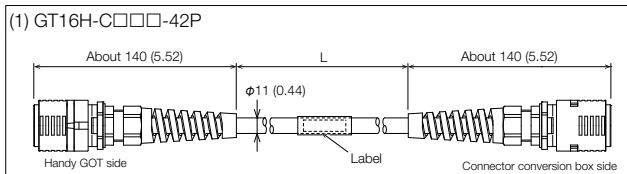

# Specifications

## Operating environment

### MELSOFT GT Works3 Version1 (English Version) operating environment

| Item   | Description   |
|--|---|
| Personal computer  | Personal computer that Windows® runs on.  |
| OS (English, Simplified Chinese, Traditional Chinese, Korean, or German version) | Microsoft® Windows® 10 (Enterprise, Pro) (64 bit/32 bit) <sup>*1 *3 *5 *7 *8 *9</sup><br>Microsoft® Windows® 10 (Home) (64 bit/32 bit) <sup>*1 *3 *5 *8 *9</sup><br>Microsoft® Windows® 10 (IoT Enterprise 2016 LTSC) (64 bit) (English OPK, or English OPK and a language pack for localization) <sup>*1 *3 *5 *7 *8 *9</sup><br>Microsoft® Windows® 8.1 (Enterprise, Pro) (64 bit/32 bit) <sup>*1 *3 *5 *6 *7</sup><br>Microsoft® Windows® 8.1 (64 bit/32 bit) <sup>*1 *3 *5 *6</sup><br>Microsoft® Windows® 8 (Enterprise, Pro) (64 bit/32 bit) <sup>*1 *3 *5 *6 *7</sup><br>Microsoft® Windows® 8 (64 bit/32 bit) <sup>*1 *3 *5 *6</sup><br>Microsoft® Windows® 7 (Enterprise, Ultimate, Professional) (64 bit/32 bit) <sup>*1 *3 *4 *5</sup><br>Microsoft® Windows® 7 (Home Premium) (64 bit/32 bit) <sup>*1 *3 *5</sup><br>Microsoft® Windows® 7 (Starter) (32 bit) <sup>*1 *3</sup><br>Microsoft® Windows Vista® (Enterprise, Ultimate, Business, Home Premium, Home Basic) (32 bit) Service Pack1 or later <sup>*1 *3</sup><br>Microsoft® Windows® XP (Professional, Home Edition) (32 bit) Service Pack3 or later <sup>*2 *3</sup> |
| CPU  | Intel® Core™2 Duo Processor 2.0 GHz or more recommended   |
| Memory   | For a 64-bit OS: 2 GB or more recommended<br>For a 32-bit OS: 1 GB or more recommended  |
| Display  | Resolution XGA (1024 × 768 dots) or higher  |
| Hard disk space  | For installation: 5 GB or more recommended<br>For execution: 512 MB or more recommended   |
| Display color  | High Color (16 bits) or higher  |
| Other hardware   | Use the hardware compatible with the above OS.<br>• For installation: mouse, keyboard, DVD-ROM drive<br>• For execution: mouse, keyboard<br>• For printing: printer<br>Use the following hardware when required.<br>• For simulation (only when outputting the buzzer sound): sound card, speaker   |
| Compatible GOT   | GOT2000 Series, GOT1000 Series  |
| Applicable software version  | GT Works3 Version 1.225K or later   |

- \*1 For installation, administrator privileges are required.  
For startup, the standard user or administrator account is required. To use GT Designer3 with another MELSOFT application that runs with administrator privileges, run GT Designer3 with administrator privileges.  
If you change any setting of the personal computer while GT Designer3 is running, the change will not be applied to GT Designer3.
- \*2 For installation, administrator privileges are required.
- \*3 The following functions are not supported.
  - Application start in Windows compatibility mode
  - Fast user switching
  - Change your desktop themes (fonts)
  - Remote desktop
  - DPI setting other than the normal size (For Windows® XP and Windows Vista®)
  - Setting the size of text and illustrations on the screen to any size other than [Small-100%] (For Windows® 10, Windows® 8.1, Windows® 8, and Windows® 7)
- \*4 Windows XP Mode is not supported.
- \*5 The touch feature is not supported.
- \*6 Modern UI Style is not supported.
- \*7 Hyper-V is not supported.
- \*8 Tablet mode is not supported.
- \*9 Unified Write Filter is not supported.



GT SoftGOT2000 Version1 (English Version) operating environment

| Item   | Description  |
|--|--|
| Personal computer  | Personal computer that Windows® runs on.<br>PPC-852-21G, and PPC-852-22F manufactured by CONTEC CO., LTD *9<br>MELIPC (MI5122-VW, MI3321G-W, MI3315G-W, MI2012-W, MI2012-W-CL) *15   |
| OS (English, Simplified Chinese, Traditional Chinese, Korean, or German version) | Microsoft® Windows Server® 2016 (Standard) (64 bit) *1 *3 *5 *7<br>Microsoft® Windows Server® 2012 (R2 Standard) (64 bit) *1 *3 *5 *6 *7<br>Microsoft® Windows Server® 2008 (R2 Enterprise, R2 Standard) (64 bit) *1 *3 *4 *5<br>Microsoft® Windows® 10 (Enterprise, Pro) (64 bit/32 bit) *1 *3 *5 *7<br>Microsoft® Windows® 10 (Home) (64 bit/32 bit) *1 *3 *5<br>Microsoft® Windows® 10 (IoT Enterprise 2019 LTSC) (64 bit) (English OPK, or English OPK and a language pack for localization) *1 *3 *5 *7 *12 *13<br>Microsoft® Windows® 10 (IoT Enterprise 2016 LTSB) (64 bit) (English OPK, or English OPK and a language pack for localization) *1 *3 *5 *7 *12 *13<br>Microsoft® Windows® 8.1 (Enterprise, Pro) (64 bit/32 bit) *1 *3 *5 *6 *7<br>Microsoft® Windows® 8.1 (64 bit/32 bit) *1 *3 *5 *6<br>Microsoft® Windows® 8 (Enterprise, Pro) (64 bit/32 bit) *1 *3 *5 *6 *7<br>Microsoft® Windows® 8 (64 bit/32 bit) *1 *3 *5 *6<br>Microsoft® Windows® 7 (Enterprise, Ultimate, Professional) (64 bit/32 bit) *1 *3 *4 *5<br>Microsoft® Windows® 7 (Home Premium) (64 bit/32 bit) *1 *3 *5<br>Microsoft® Windows® 7 (Starter) (32 bit) *1 *3<br>Microsoft® Windows Vista® (Enterprise, Ultimate, Business, Home Premium, Home Basic) (32 bit) Service Pack1 or later *1 *3<br>Microsoft® Windows® XP (Professional, Home Edition) (32 bit) Service Pack3 or later *2 *3<br>Microsoft® Windows® XP Embedded (32 bit) *2 *3 *8 |
| CPU  | Intel® Core™2 Duo Processor 2.0 GHz or more recommended  |
| Memory   | For a 64-bit OS: 2 GB or more recommended<br>For a 32-bit OS: 1 GB or more recommended   |
| Display  | Resolution XGA (1024 x 768 dots) or higher   |
| Hard disk space *10  | For installation: 5 GB or more recommended<br>For execution: 512 MB or more recommended  |
| Display color  | High Color (16 bits) or higher   |
| Hardware   | GT27-SGTKEY-U (license key (for USB port))   |
| Other software   | The following software is required to create the project data.<br>• GT Designer3 Version1.100E or later *11 *14<br>The following software is required for interaction with PX Developer.<br>• PX Developer Version1.40S or later<br>• GT Designer3 Version1.105K or later *11<br>The following software is required to connect with GX Simulator.<br>• GX Simulator Version5.00A or later<br>The following software is required to connect with GX Simulator2.<br>• GX Works2 Version1.12N or later<br>The following software is required to connect with GX Simulator3.<br>• GX Works3 Version1.007H or later<br>The following software is required to connect with MT Simulator2.<br>• MT Works2 Version1.70Y or later<br>The following software is required to use the OPC UA client connection.<br>• GT OPC UA Client *16  |
| Other hardware   | Use the hardware compatible with the above OS.<br>• For installation: mouse, keyboard, DVD-ROM drive<br>• For execution: mouse, keyboard<br>• For printing: printer<br>Prepare the following hardware if necessary.<br>• For execution (only when outputting buzzer sound or others): sound function, speaker  |

- \*1 Administrator authority is required for installing and using GT SoftGOT2000.  
To use GT SoftGOT2000 and other MELSOFT products in a single personal computer together, other MELSOFT products must also run with administrator authority.
- \*2 Administrator authority is required for installing and using GT SoftGOT2000.
- \*3 The following functions are not supported.
  - Application start in Windows compatibility mode
  - Fast user switching
  - Change your desktop themes (fonts)
  - Remote desktop
  - DPI setting other than the normal size (For Windows® XP and Windows Vista®)
  - Setting the size of text and illustrations on the screen to any size other than [Small-100%] (For Windows® 10, Windows® 8.1, Windows® 8, and Windows® 7)
- \*4 Windows XP Mode is not supported.
- \*5 Tapping and press-and-hold operation are the supported touch operation.  
The following operations cannot be performed with touch operation because operations such as flicking are not supported.
  - Simultaneous 2-point press on the touch switch
  - Moving the overlap window and key window by slide operation
 When [Allow press-and-hold of a mouse button to function as a right-click] is selected in the [Environment Setup] dialog of GT SoftGOT2000, the following operations also cannot be performed.
  - Touch switch operation with [Momentary] selected for [Action]
  - Touch switch operation with [ON] selected for [Delay]
  - Operation of the utility call key
- \*6 Modern UI Style is not supported.
- \*7 Hyper-V is not supported.
- \*8 For using the PPC-852-22F, GT SoftGOT2000 can be used on the PPC-852-22F with the OS preinstalled only.
- \*9 Refer to the manual of the PC CPU module to be used.
- \*10 When using GT Designer3 or PX Developer besides GT SoftGOT2000, additional free space is required.  
For the available space required when using GT Designer3, please refer to the GT Works3 operating environment.  
For the available space required when using monitor tool functions of PX Developer, please refer to the following manual.  
⇒ PX Developer Version □ Operating Manual (Monitor Tool)  
When using a user-created application, free space is required separately.
- \*11 Use GT Designer3 included in GT Works3 that contains GT SoftGOT2000.
- \*12 The following OSs are not supported.
  - Microsoft® Windows® 10 IoT Enterprise for Retail or Thin Client
  - Microsoft® Windows® 10 IoT Enterprise for Tablets
  - Microsoft® Windows® 10 IoT Enterprise for Small Tablets
- \*13 The environments that use the following lockdown features are not supported.
  - Unified Write Filter
  - Assigned Access
  - USB Filter
  - Layout Control
  - AppLocker
  - Shell Launcher
- \*14 To use the Edgexross interaction function, Version1.195D or later is required.
- \*15 Microsoft® Windows® 10 IoT Enterprise 2016 LTSB is preinstalled. For the specifications of the MELIPC, refer to the following.
  - MELIPC MI5000 Series User's Manual (Startup)
  - MELIPC MI3000 User's Manual
  - MI2012-W User's Manual
- \*16 To use the OPC UA client connection, use Windows® 7 or later.



# Specifications

## Function list

For the details of functions, supported controllers, and connection types, please refer to the relevant manual or Help of the GOT2000 Series.  
 ●: Supported —: Not supported

| Category                      | Function name   | Necessary devices *1                        | GT27  | GT25  | GT25 Wide           | GT25 Handy                       | GT25 Rugged         |   |
|-------------------------------|---|---|---|---|---------------------|----------------------------------|---------------------|---|
| Screen size                   | 15"   |   | ●   | —   | —                   | —                                | —                   |   |
|                               | 12.1"   |   | ●   | ●   | —                   | —                                | —                   |   |
|                               | 10.4"   |   | ●   | ●   | —                   | —                                | —                   |   |
|                               | 10.1" Wide  |   | —   | —   | ●                   | —                                | —                   |   |
|                               | 10" Wide  |   | —   | —   | —                   | —                                | —                   |   |
|                               | 8.4"  |   | ●   | ●   | —                   | —                                | —                   |   |
|                               | 7" Wide   |   | —   | —   | ●                   | —                                | ●                   |   |
|                               | 6.5"  |   | —   | —   | —                   | ●                                | —                   |   |
|                               | 5.7"  |   | ●   | ●   | —                   | ●                                | —                   |   |
|                               | 4.3"  |   | —   | —   | —                   | —                                | —                   |   |
|                               | 3.8"  |   | —   | —   | —                   | —                                | —                   |   |
|                               | Resolution  | WXGA 1280 × 800                             |   | —   | —                   | ●                                | —                   | — |
|                               |   | XGA 1024 × 768                              |   | ●   | —                   | —                                | —                   | — |
|                               |   | SVGA 800 × 600                              |   | ●   | ●                   | —                                | —                   | — |
|                               |   | WVGA 800 × 480                              |   | —   | —                   | ●                                | —                   | ● |
|                               |   | VGA 640 × 480                               |   | ●   | ●                   | —                                | ●                   | — |
|                               |   | Other                                       |   | —   | —                   | —                                | —                   | — |
|                               | Color   | 65536 colors                                |   | ●   | ●                   | ●                                | ●                   | ● |
|                               |   | Monochrome (black/white) 32 shade grayscale |   | —   | —                   | —                                | —                   | — |
| Hardware specifications       | Touch panel simultaneous press (2 points)   |   | ●   | —   | —                   | —                                | —                   |   |
|                               | Human sensor  |   | ● *10                                       | —   | —                   | —                                | —                   |   |
| Memory                        | Memory for storage (ROM)  |   | Other than below: 57 MB<br>GT2705: 32 MB    | 32 MB   | 32 MB               | 32 MB                            | 32 MB               |   |
|                               | Memory for operation (RAM)  |   | Other than below: 128 MB<br>GT2705: 80 MB   | 80 MB   | 128 MB              | 80 MB                            | 128 MB              |   |
| Interface                     | RS-232  |   | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | RS-422/485  |   | ●   | ●   | ●                   | GT2505HS supports<br>RS-422 only | ●                   |   |
|                               | Ethernet  | (Ethernet communication unit)               | 2 ports by installing<br>communication unit | 2 ports by installing<br>communication unit *17 | 2 ports as standard | ●                                | 2 ports as standard |   |
|                               | USB host  |   | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | USB device  |   | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | SD memory card interface  |   | ●   | ●   | ●                   | ●                                | ●                   |   |
| Figure/object functions       | Extension interface, Side interface,<br>Wireless LAN communication unit interface | Communication units, option units           | ● *11                                       | ● *11 *17                                       | ● *11               | —                                | ● *11               |   |
|                               | Human sensor  |   | ● *10                                       | —   | —                   | —                                | —                   |   |
| Screen design                 | Figure  |   | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | Logo text   |   | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | Outline font  |   | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | Touch switch  |   | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | Lamp  |   | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | Numerical display, Numerical input  |   | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | Text display, Text input  |   | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | Date display, Time display  | (Battery)                                   | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | Comment display   |   | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | Parts display   | (SD memory card or USB memory)              | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | Parts movement  | (SD memory card or USB memory)              | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | Historical data list display  | (SD memory card or USB memory)              | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | Simple alarm display  |   | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | System alarm display  |   | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | Alarm display (user)  | (SD memory card or USB memory, battery)     | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | Alarm display (system)  | (SD memory card or USB memory, battery)     | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | Recipe display (record list)  |   | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | Line graph  |   | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | Trend graph   |   | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | Bar graph   |   | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | Statistic bar graph   |   | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | Statistic pie graph   |   | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | Scatter graph   |   | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | Historical trend graph  | (SD memory card or USB memory)              | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | Graphical meter   |   | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | Level   |   | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | Panelmeter  |   | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | Slider  |   | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | Document display  | SD memory card                              | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | Script parts  |   | ●   | ●   | ●                   | ●                                | ●                   |   |
|                               | Functions performed on background of GOT  | Logging                                     | (SD memory card or USB memory, battery)     | ●   | ●                   | ●                                | ●                   | ● |
|                               |   | Recipe                                      | (SD memory card or USB memory, battery)     | ●   | ●                   | ●                                | ●                   | ● |
| Device data transfer          |   |   | ●   | ●   | ●                   | ●                                | ●                   |   |
| Trigger action                |   |   | ●   | ●   | ●                   | ●                                | ●                   |   |
| Time action                   |   | (SD memory card or USB memory)              | ●   | ●   | ●                   | ●                                | ●                   |   |
| Hard copy                     |   | File output                                 | (SD memory card or USB memory)              | ●   | ●                   | ●                                | —                   | ● |
|                               |   | Serial printer output                       |   | ●   | ●                   | ●                                | —                   | ● |
|                               |   | Ethernet printer output <b>NEW</b>          |   | ●   | ●                   | ●                                | ●                   | ● |
|                               |   | PictBridge printer output                   | Printer unit                                | ●   | ● *17               | —                                | —                   | — |
| Project script, Screen script |   |   | ●   | ●   | ●                   | ●                                | ●                   |   |
| Object script                 |   | ●   | ●   | ●   | ●                   | ●                                |                     |   |

\*1 Necessary units when using GT27, GT25, GT25 wide, GT25 handy, GT25 rugged, GT23, GT21 wide, GT21, or GS21 models are shown. Parenthesized devices are required depending on conditions of use.

\*2 Data is output to the printer that is recognized by the personal computer.

\*3 CSV files are saved in the virtual drive of the personal computer so that it is recommended to output the files to printers.

\*4 Only the GOTs with SVGA or higher resolution are supported.

\*5 Remote personal computer operation function (Ethernet) cannot be used. The following screens are displayed horizontally: utility screen, monitor and data management screens that are displayed from the utility screen (sequence program monitor, etc.), video camera images in the multimedia and video display functions. For the details of other GOT operations when placed vertically, please refer to the relevant product manual or Help.

\*6 Excluding GT2103-PMBLS.

\*7 GT2104-RTBD only.

# Specifications

For the details of functions, supported controllers, and connection types, please refer to the relevant manual or Help of the GOT2000 Series.  
 ●: Supported —: Not supported

| Category                      | Function name   | Necessary devices *1                        | GT23                                    | GT21 Wide                               | GT21                                       | GS21             | GT SoftGOT2000   |      |   |
|-------------------------------|---|---|---|---|--|------------------|--|------|---|
| Hardware specifications       | Screen size   | 15"   | —                                       | —                                       | —  | —                |  |      |   |
|                               |   | 12.1"                                       | —                                       | —                                       | —  | —                |  |      |   |
|                               |   | 10.4"                                       | ●                                       | —                                       | —  | —                |  |      |   |
|                               |   | 10.1" Wide                                  | —                                       | —                                       | —  | —                |  |      |   |
|                               |   | 10" Wide                                    | —                                       | —                                       | —  | ●                |  |      |   |
|                               |   | 8.4"  | ●                                       | —                                       | —  | —                |  |      |   |
|                               |   | 7" Wide                                     | —                                       | —                                       | ●  | —                |  |      |   |
|                               |   | 6.5"  | —                                       | —                                       | —  | ●                |  |      |   |
|                               |   | 5.7"  | —                                       | —                                       | —  | —                |  |      |   |
|                               |   | 4.3"  | —                                       | —                                       | ●  | —                |  |      |   |
|                               | 3.8"  | —   | —                                       | —                                       | ●  |                  |  |      |   |
|                               | Resolution  | WXGA 1280 × 800                             | —                                       | —                                       | —  | —                | Flexible resolution<br>640 to 1920<br>×<br>480 to 1200 |      |   |
|                               |   | XGA 1024 × 768                              | —                                       | —                                       | —  | —                |  |      |   |
|                               |   | SVGA 800 × 600                              | —                                       | —                                       | —  | —                |  |      |   |
|                               |   | WVGA 800 × 480                              | —                                       | ●                                       | —  | ●                |  |      |   |
|                               |   | VGA 640 × 480                               | ●                                       | —                                       | —  | —                |  |      |   |
|                               |   | Other                                       | —                                       | —                                       | GT2104-R: 480 × 272<br>GT2103-P: 320 × 128 | —                |  |      |   |
|                               | Color   | 65536 colors                                | —                                       | ●                                       | ●  | ●                | ●  |      |   |
|                               |   | Monochrome (black/white) 32 shade grayscale | —                                       | —                                       | —  | ●                | —  |      |   |
|                               |   | Touch panel simultaneous press (2 points)   | —                                       | —                                       | —  | —                | —  |      |   |
|                               | Human sensor  | —   | —                                       | —                                       | —  | —                |  |      |   |
| Memory                        | Memory for storage (ROM)  | —   | 9 MB                                    | 15 MB                                   | GT2104-R: 9 MB<br>GT2103-P: 3 MB           | 9 MB             | 57 MB  |      |   |
|                               | Memory for operation (RAM)  | —   | 9 MB                                    | —                                       | —  | —                | —  |      |   |
| Interface                     | RS-232  | —   | ●                                       | ●                                       | ● *20                                      | ●                | ● *12  |      |   |
|                               | RS-422/485  | —   | ●                                       | ●                                       | ● *20                                      | ●<br>RS-422 only | ● *12  |      |   |
|                               | Ethernet  | (Ethernet communication unit)               | ●                                       | ●                                       | ● *20                                      | ●                | ● *11  |      |   |
|                               | USB host  | —   | ●                                       | ●                                       | —  | —                | ● *13  |      |   |
|                               | USB device  | —   | ●                                       | ●                                       | ●  | ●                | —  |      |   |
|                               | SD memory card interface  | —   | ●                                       | ●                                       | ● *14                                      | ●                | ● *13  |      |   |
|                               | Extension interface, Side interface,<br>Wireless LAN communication unit interface | Communication units, option units           | —                                       | —                                       | —  | —                | ● *11  |      |   |
| Screen design                 | Figure/object functions   | Figure                                      | ●                                       | ●                                       | ●  | ●                | ●  |      |   |
|                               |   | Logo text                                   | ●                                       | ●                                       | ●  | ●                | ●  |      |   |
|                               |   | Outline font                                | ●                                       | ●                                       | —  | —                | ●  |      |   |
|                               |   | Touch switch                                | ●                                       | ●                                       | ●  | ●                | ●  |      |   |
|                               |   | Lamp  | ●                                       | ●                                       | ●  | ●                | ●  |      |   |
|                               |   | Numerical display, Numerical input          | ●                                       | ●                                       | ●  | ●                | ●  |      |   |
|                               |   | Text display, Text input                    | ●                                       | ●                                       | ●  | ●                | ●  |      |   |
|                               |   | Date display, Time display                  | (Battery)                               | ●                                       | ●  | ●                | ●  | ●    |   |
|                               |   | Comment display                             | —                                       | ●                                       | ●  | ●                | ●  | ●    |   |
|                               |   | Parts display                               | (SD memory card or USB memory)          | ●                                       | ●  | ● *16            | ●  | ●    |   |
|                               |   | Parts movement                              | (SD memory card or USB memory)          | ●                                       | ●  | ● *16            | ●  | ●    |   |
|                               |   | Historical data list display                | (SD memory card or USB memory)          | ●                                       | ●  | ● *16            | ●  | ●    |   |
|                               |   | Simple alarm display                        | —                                       | ●                                       | ●  | ●                | ●  | ●    |   |
|                               |   | System alarm display                        | —                                       | ●                                       | —  | —                | —  | ●    |   |
|                               |   | Alarm display (user)                        | (SD memory card or USB memory, battery) | ●                                       | ●  | ● *16            | ●  | ●    |   |
|                               |   | Alarm display (system)                      | (SD memory card or USB memory, battery) | ●                                       | —  | —                | —  | ●    |   |
|                               |   | Recipe display (record list)                | —                                       | ●                                       | ●  | ●                | ●  | ●    |   |
|                               |   | Line graph                                  | —                                       | ●                                       | ●  | ●                | ●  | ●    |   |
|                               |   | Trend graph                                 | —                                       | ●                                       | ●  | ●                | ●  | ●    |   |
|                               |   | Bar graph                                   | —                                       | ●                                       | ●  | ●                | ●  | ●    |   |
|                               |   | Statistic bar graph                         | —                                       | ●                                       | ●  | ●                | ●  | ●    |   |
|                               |   | Statistic pie graph                         | —                                       | ●                                       | ●  | ●                | ●  | ●    |   |
|                               |   | Scatter graph                               | —                                       | ●                                       | ●  | ●                | ●  | ●    |   |
|                               |   | Historical trend graph                      | (SD memory card or USB memory)          | ●                                       | ●  | ● *16            | ●  | ●    |   |
|                               |   | Graphical meter                             | —                                       | ●                                       | ●  | ●                | ●  | ●    |   |
|                               |   | Level                                       | —                                       | ●                                       | ●  | ●                | ●  | ●    |   |
|                               |   | Panelmeter                                  | —                                       | ●                                       | ●  | ●                | ●  | ●    |   |
|                               |   | Slider                                      | —                                       | ●                                       | ●  | ●                | ●  | ●    |   |
|                               |   | Document display                            | SD memory card                          | —                                       | —  | —                | —  | ●    |   |
|                               |   | Script parts                                | —                                       | ●                                       | ●  | ●                | ●  | ●    |   |
|                               |   | Functions performed on background of GOT    | Logging                                 | (SD memory card or USB memory, battery) | ●  | ●                | ● *16  | ●    | ● |
|                               |   |   | Recipe                                  | (SD memory card or USB memory, battery) | ●  | ●                | ● *16  | ●    | ● |
|                               |   |   | Device data transfer                    | —                                       | ●  | ●                | ●  | ●    | ● |
| Trigger action                | —   |   | ●                                       | ●                                       | ●  | ●                | ●  |      |   |
| Time action                   | (SD memory card or USB memory)  |   | ●                                       | ●                                       | ●  | ●                | ●  |      |   |
| Hard copy                     | File output   |   | (SD memory card or USB memory)          | ●                                       | ●  | ● *16            | ●  | ● *2 |   |
|                               | Serial printer output   |   | —                                       | ●                                       | ●  | ● *16            | ●  | —    |   |
|                               | Ethernet printer output <b>NEW</b>  |   | —                                       | ●                                       | ●  | ● *15            | ●  | —    |   |
|                               | PictBridge printer output   |   | Printer unit                            | —                                       | —  | —                | —  | ● *2 |   |
| Project script, Screen script | —   |   | ●                                       | ●                                       | ●  | ●                | ●  |      |   |
| Object script                 | —   | ●   | —                                       | —                                       | —  | ●                |  |      |   |

\*8 Excluding GT2705-VTBD.

\*9 To use multiple units such as extension units, barcode readers, or RFID controllers with a GT2705-VTBD, the total current consumption of the units should be less than the value that the GT2705-VTBD can provide. For the details, please refer to the relevant manual of the GOT2000 Series.

\*10 GT2715-XTBA, GT2715-XTBD, GT2712-STBA, GT2712-STBD, GT2712-STWA, GT2712-STWD only.

\*11 For the applicable communication units and option units, please refer to "Connectable model list" (page 152), "Product list" (page 172), and the relevant product manual.

\*12 Use the standard interface of the personal computer.

\*13 When using functions that require a USB memory or SD memory card, a virtual drive in the personal computer is used.

\*14 GT2103-PMBD, GT2103-PMBDS, and GT2103-PMBDS2 require an SD memory card unit (GT21-03SDCC) separately. GT2103-PMBLS does not allow for SD memory cards.

\*15 GT2104-RTBD, GT2103-PMBD only.

\*16 On GT2103-PMBLS, only the functions that do not require SD memory card can be used.

\*17 Excluding GT2505-VTBD.

\*18 GT25 wide models have a built-in sound output interface so that the sound output unit is not required.

\*19 GT2505HS-VTBD supports the function with Ethernet connection only.

\*20 GT21 has different interfaces depending on the model. For the details, please refer to the performance specifications on pages 134 and 135.

\*21 Only Ethernet, OPC UA client, and microcomputer connections are supported.

# Specifications

## Function list

For the details of functions, supported controllers, and connection types, please refer to the relevant manual or Help of the GOT2000 Series.  
 ●: Supported —: Not supported

| Category                             | Function name  | Necessary devices *1                     | GT27                                       | GT25   | GT25 Wide                                    | GT25 Handy                                      | GT25 Rugged                                  |      |
|--------------------------------------|--|--|--|--|--|---|--|------|
| Screen design                        | Barcode function                                       |  | ●  | ●  | ●  | —   | ●  |      |
|                                      | RFID function  |  | ●  | ●  | ●  | —   | ●  |      |
|                                      | GOT Mobile function                                    | License, (SD memory card)                | ●  | ●  | ●  | —   | ●  |      |
|                                      | VNC server function                                    | License                                  | ●  | ●  | ●  | ●   | ●  |      |
|                                      | Remote personal computer operation function (Ethernet) | License                                  | ●  | ●  | ●  | ●   | ●  |      |
|                                      | Remote personal computer operation function (serial)   | RGB input unit or Video/RGB input unit   | ●*8  | —  | —  | —   | —  |      |
|                                      | Video display function                                 | Video input unit or Video/RGB input unit | ●*8  | —  | —  | —   | —  |      |
|                                      | RGB display function                                   | RGB input unit or Video/RGB input unit   | ●*8  | —  | —  | —   | —  |      |
|                                      | Multimedia function                                    | Multimedia unit, CF card                 | ●*8  | —  | —  | —   | —  |      |
|                                      | External I/O function                                  | External I/O unit                        | ●  | ●*17   | —  | —   | —  |      |
|                                      | Operation panel function                               | External I/O unit                        | ●  | ●*17   | —  | —   | —  |      |
|                                      | Video output function                                  | HDMI output <b>NEW</b>                   | Digital video output unit                  | ●*8  | —  | —   | —  | —    |
|                                      |  | RGB output                               | RGB output unit                            | ●*8  | —  | —   | —  | —    |
|                                      | Report function  | File output <b>NEW</b>                   | (SD memory card or USB memory)             | ●  | ●  | ●   | ●  | ●    |
|                                      |  | Serial printer output                    | (SD memory card or USB memory)             | ●  | ●  | ●   | —  | ●    |
|                                      |  | Ethernet printer output <b>NEW</b>       | (SD memory card or USB memory)             | ●  | ●  | ●   | ●  | ●    |
|                                      |  | PictBridge printer output                | SD memory card or USB memory, printer unit | ●  | ●*17   | —   | —  | —    |
|                                      |  | Sound output function                    | Sound output unit *18                      | ●  | ●*17   | ●*18  | —  | ●*18 |
|                                      | Server function, Client function                       |  | ●  | ●  | ●  | ●   | ●  |      |
|                                      | Mail send function                                     |  | ●  | ●  | ●  | ●   | ●  |      |
|                                      | Network drive function <b>NEW</b>                      |  | ●  | ●  | ●  | ●   | ●  |      |
|                                      | FTP server function                                    | (SD memory card or USB memory)           | ●  | ●  | ●  | ●   | ●  |      |
|                                      | File transfer function (FTP transfer)                  | SD memory card or USB memory             | ●  | ●  | ●  | ●   | ●  |      |
|                                      | File transfer function (GOT internal transfer)         | SD memory card or USB memory             | ●  | ●  | ●  | ●   | ●  |      |
|                                      | MES interface function                                 | License, (SD memory card)                | ●  | ●  | ●  | ●   | ●  |      |
|                                      | Wireless LAN function                                  | Wireless LAN communication unit          | ●  | ●*17   | —  | —   | —  |      |
|                                      | USB mouse, USB keyboard                                |  | ●  | ●  | ●  | ●   | ●  |      |
|                                      | GOT functions  | Base screen                              |  | ●  | ●  | ●   | ●  | ●    |
|                                      |  | Overlap window                           |  | ●  | ●  | ●   | ●  | ●    |
|                                      |  | Superimpose window                       |  | ●  | ●  | ●   | ●  | ●    |
|                                      |  | Dialog window                            |  | ●  | ●  | ●   | ●  | ●    |
|                                      |  | Mobile screen                            |  | ●  | ●  | ●   | ●  | ●    |
| Key window                           |  |  | ●  | ●  | ●  | ●   | ●  |      |
| Language switching                   |  |  | ●  | ●  | ●  | ●   | ●  |      |
| System information                   |  |  | ●  | ●  | ●  | ●   | ●  |      |
| Operator authentication function     |  | (SD memory card or USB memory)           | ●  | ●  | ●  | ●   | ●  |      |
| Operation log                        |  | SD memory card or USB memory             | ●  | ●  | ●  | ●   | ●  |      |
| Startup logo                         |  |  | ●  | ●  | ●  | ●   | ●  |      |
| KANA KANJI conversion                |  |  | ●  | ●  | ●  | ●   | ●  |      |
| FA transparent                       |  |  | ●  | ●  | ●  | ●   | ●  |      |
| SoftGOT-GOT link                     |  | License key                              | ●  | ●  | ●  | ●   | ●  |      |
| Backup/Restoration                   |  | SD memory card or USB memory             | ●  | ●  | ●  | ●   | ●  |      |
| Multi-channel function               |  |  | ●*9<br>4 channels<br>(Up to 3 units)       | ●<br>4 channels<br>(Up to 3 units *17)                                     | ●<br>4 channels<br>(No units can be mounted) | ●*19<br>4 channels<br>(No units can be mounted) | ●<br>4 channels<br>(No units can be mounted) |      |
| Station No. switching                |  |  | ●  | ●  | ●  | ●   | ●  |      |
| GOT network interaction              |  |  | ●  | ●  | ●  | ●   | ●  |      |
| Screen gesture function              |  |  | ●  | —  | —  | —   | —  |      |
| Object gesture function              |  |  | ●  | —  | —  | —   | —  |      |
| Security key authentication function |  |  | ●  | ●  | ●  | ●   | ●  |      |
| IP filter function                   |  |  | ●  | ●  | ●  | ●   | ●  |      |
| File manager                         |  | (SD memory card or USB memory)           | ●  | ●  | ●  | ●   | ●  |      |
| Vertical display *5                  |  |  | ●<br>(Rotate 90 ° to left)                 | ●<br>(Other than below: rotate 90° to left<br>GT250S: rotate 90° to right) | ●<br>(Rotate 90 ° to left)                   | —   | ●<br>(Rotate 90 ° to left)                   |      |
| Maintenance functions                |  | Device monitor                           | (SD memory card or USB memory)             | ●  | ●  | ●   | ●  | ●    |
|                                      |  | Sequence program monitor (Q-R ladder)    | SD memory card or USB memory               | ●  | ●  | ●   | ●  | ●    |
|                                      |  | Sequence program monitor (Ladder)        | SD memory card or USB memory               | ●  | ●  | ●   | ●  | ●    |
|                                      | Sequence program monitor (SFC)                         | SD memory card or USB memory             | ●  | ●  | ●  | ●   | ●  |      |
|                                      | Network monitor  |  | ●  | ●  | ●  | ●   | ●  |      |
|                                      | CC-Link IE Field Network diagnostics                   |  | ●  | ●  | ●  | ●   | ●  |      |
|                                      | Intelligent module monitor                             |  | ●  | ●  | ●  | ●   | ●  |      |
|                                      | Drive recorder   | (SD memory card or USB memory)           | ●  | ●  | ●  | ●   | ●  |      |
|                                      | Servo amplifier graph <b>NEW</b>                       | (SD memory card or USB memory)           | ●  | ●  | ●  | ●   | ●  |      |
|                                      | Motion program editor <b>NEW</b>                       |  | ●*4  | ●*4  | —  | —   | —  |      |
|                                      | Motion program I/O <b>NEW</b>                          | SD memory card or USB memory             | ●*4  | ●*4  | —  | —   | —  |      |
|                                      | Servo amplifier monitor                                |  | ●  | ●  | ●  | ●   | ●  |      |
|                                      | R motion monitor                                       |  | ●  | ●  | ●  | ●   | ●  |      |
|                                      | Q motion monitor                                       |  | ●  | ●  | ●  | ●   | ●  |      |
|                                      | Motion SFC monitor                                     | SD memory card or USB memory             | ●  | ●  | ●  | ●   | ●  |      |
|                                      | CNC monitor 2  |  | ●  | ●  | —  | ●   | —  |      |
|                                      | CNC monitor  |  | ●*4  | ●*4  | —  | —   | —  |      |
|                                      | CNC data I/O   | SD memory card or USB memory             | ●*4  | ●*4  | —  | —   | —  |      |
|                                      | CNC machining program edit                             |  | ●*4  | ●*4  | —  | —   | —  |      |
|                                      | Log viewer   | (SD memory card or USB memory)           | ●  | ●  | ●  | ●   | ●  |      |
|                                      | FX list editor   |  | ●  | ●  | —  | ●   | —  |      |
|                                      | FX ladder monitor                                      |  | ●  | ●  | ●  | ●   | ●  |      |
|                                      | IQSS utility   | SD memory card or USB memory             | ●  | ●  | ●  | ●   | ●  |      |
| System launcher                      |  | ●  | ●  | ●  | ●  | ●   |  |      |
| System launcher (servo network)      |  | ●  | ●  | ●  | ●  | ●   |  |      |
| MELSEC-L troubleshooting             |  | ●  | ●  | ●  | ●  | ●   |  |      |

\*1 Necessary units when using GT27, GT25, GT25 wide, GT25 handy, GT25 rugged, GT23, GT21 wide, GT21, or GS21 models are shown. Parenthesized devices are required depending on conditions of use.

\*2 Data is output to the printer that is recognized by the personal computer.

\*3 CSV files are saved in the virtual drive of the personal computer so that it is recommended to output the files to printers.

\*4 Only the GOTs with SVGA or higher resolution are supported.

\*5 Remote personal computer operation function (Ethernet) cannot be used. The following screens are displayed horizontally: utility screen, monitor and data management screens that are displayed from the utility screen (sequence program monitor, etc.), video camera images in the multimedia and video display functions. For the details of other GOT operations when placed vertically, please refer to the relevant product manual or Help.

\*6 Excluding GT2103-PMBLS.

\*7 GT2104-RTBD only.

# Specifications

For the details of functions, supported controllers, and connection types, please refer to the relevant manual or Help of the GOT2000 Series.  
●: Supported —: Not supported

| Category                             | Function name  | Necessary devices *1                     | GT23   | GT21 Wide                                      | GT21   | GS21   | GT SoftGOT2000                  |     |
|--------------------------------------|--|--|--|--|--|--|---------------------------------|-----|
| Screen design                        | Barcode function                                       |  | ●  | ●  | ●*6  | ●  | ●                               |     |
|                                      | RFID function  |  | ●  | ●  | ●*6  | ●  | ●                               |     |
|                                      | GOT Mobile function                                    | License, (SD memory card)                | —  | —  | —  | —  | —                               |     |
|                                      | VNC server function                                    | License                                  | —  | ●  | —  | —  | —                               |     |
|                                      | Remote personal computer operation function (Ethernet) | License                                  | —  | —  | —  | —  | —                               |     |
|                                      | Remote personal computer operation function (serial)   | RGB input unit or Video/RGB input unit   | —  | —  | —  | —  | —                               |     |
|                                      | Video display function                                 | Video input unit or Video/RGB input unit | —  | —  | —  | —  | —                               |     |
|                                      | RGB display function                                   | RGB input unit or Video/RGB input unit   | —  | —  | —  | —  | —                               |     |
|                                      | Multimedia function                                    | Multimedia unit, CF card                 | —  | —  | —  | —  | —                               |     |
|                                      | External I/O function                                  | External I/O unit                        | —  | —  | —  | —  | —                               |     |
|                                      | Operation panel function                               | External I/O unit                        | —  | —  | —  | —  | ●                               |     |
|                                      | Video output function                                  | HDMI output <b>NEW</b>                   | Digital video output unit                      | —  | —  | —  | —                               | —   |
|                                      |  | RGB output                               | RGB output unit                                | —  | —  | —  | —                               | —   |
|                                      | Report function  | File output <b>NEW</b>                   | (SD memory card or USB memory)                 | ●  | —  | —  | —                               | ●*3 |
|                                      |  | Serial printer output                    | (SD memory card or USB memory)                 | ●  | ●  | ●*6  | ●                               | ●*3 |
|                                      |  | Ethernet printer output <b>NEW</b>       | (SD memory card or USB memory)                 | ●  | ●  | ●*15   | ●                               | ●*3 |
|                                      |  | PictBridge printer output                | SD memory card or USB memory, printer unit     | —  | —  | —  | —                               | ●*3 |
|                                      |  | Sound output function                    | Sound output unit *18                          | —  | —  | —  | —                               | ●   |
|                                      | Server function, Client function                       |  | —  | —  | —  | —  | —                               |     |
|                                      | Mail send function                                     |  | —  | —  | —  | —  | ●                               |     |
|                                      | Network drive function <b>NEW</b>                      |  | —  | —  | —  | —  | ●                               |     |
|                                      | FTP server function                                    | (SD memory card or USB memory)           | ●  | ●  | ●*15   | ●  | —                               |     |
|                                      | File transfer function (FTP transfer)                  | SD memory card or USB memory             | ●  | ●  | ●*15   | ●  | —                               |     |
|                                      | File transfer function (GOT internal transfer)         | SD memory card or USB memory             | ●  | —  | —  | —  | —                               |     |
|                                      | MES interface function                                 | License, (SD memory card)                | —  | —  | —  | —  | —                               |     |
|                                      | Wireless LAN function                                  | Wireless LAN communication unit          | —  | —  | —  | —  | —                               |     |
|                                      | USB mouse, USB keyboard                                |  | ●  | ●  | —  | —  | ●                               |     |
|                                      | GOT functions  | Base screen                              |  | ●  | ●  | ●  | ●                               | ●   |
|                                      |  | Overlap window                           |  | ●  | ●  | ●  | ●                               | ●   |
|                                      |  | Superimpose window                       |  | ●  | ●  | ●  | ●                               | ●   |
| Dialog window                        |  |  | ●  | ●  | ●  | ●  | ●                               |     |
| Mobile screen                        |  |  | —  | —  | —  | —  | —                               |     |
| Key window                           |  |  | ●  | ●  | ●  | ●  | ●                               |     |
| Language switching                   |  |  | ●  | ●  | ●  | ●  | ●                               |     |
| System information                   |  |  | ●  | ●  | ●  | ●  | ●                               |     |
| Operator authentication function     |  | (SD memory card or USB memory)           | ●  | ●  | ●*16   | ●  | ●                               |     |
| Operation log                        |  | SD memory card or USB memory             | ●  | —  | —  | —  | ●                               |     |
| Startup logo                         |  |  | ●  | ●  | ●  | ●  | ●                               |     |
| KANA KANJI conversion                |  |  | —  | —  | —  | —  | ●                               |     |
| FA transparent                       |  |  | ●  | ●  | ●  | ●  | —                               |     |
| SoftGOT-GOT link                     |  | License key                              | —  | —  | —  | —  | ●                               |     |
| Backup/Restoration                   |  | SD memory card or USB memory             | ●  | ●  | ●*6  | ●  | —                               |     |
| Multi-channel function               |  |  | ●<br>(2 channels<br>(No units can be mounted)) | ●<br>(2 channels<br>(No units can be mounted)) | ●*6<br>(2 channels<br>(No units can be mounted)) | ●<br>(2 channels<br>(No units can be mounted)) | ●*21 <b>NEW</b><br>(4 channels) |     |
| Station No. switching                |  |  | ●  | ●  | ●  | ●  | ●                               |     |
| GOT network interaction              |  |  | ●  | —  | —  | —  | ●                               |     |
| Screen gesture function              |  |  | —  | —  | —  | —  | —                               |     |
| Object gesture function              |  |  | —  | —  | —  | —  | —                               |     |
| Security key authentication function |  |  | ●  | —  | —  | —  | —                               |     |
| IP filter function                   |  |  | ●  | ●  | ●  | ●  | —                               |     |
| File manager                         |  | (SD memory card or USB memory)           | ●  | —  | —  | —  | —                               |     |
| Vertical display *5                  |  | ●<br>(Rotate 90 ° to left)               | ●<br>(Rotate 90 ° to left)                     | ●<br>(Rotate 90 ° to right)                    | ●<br>(Rotate 90 ° to left)                       | —  |                                 |     |
| Maintenance functions                | Device monitor   | (SD memory card or USB memory)           | ●  | ●  | ●  | ●  | —                               |     |
|                                      | Sequence program monitor (Q-R ladder)                  | SD memory card or USB memory             | —  | —  | —  | —  | —                               |     |
|                                      | Sequence program monitor (Ladder)                      | SD memory card or USB memory             | —  | —  | —  | —  | —                               |     |
|                                      | Sequence program monitor (SFC)                         | SD memory card or USB memory             | —  | —  | —  | —  | —                               |     |
|                                      | Network monitor  |  | —  | —  | —  | —  | —                               |     |
|                                      | CC-Link IE Field Network diagnostics                   |  | —  | —  | —  | —  | —                               |     |
|                                      | Intelligent module monitor                             |  | —  | —  | —  | —  | —                               |     |
|                                      | Drive recorder   | (SD memory card or USB memory)           | —  | —  | —  | —  | —                               |     |
|                                      | Servo amplifier graph <b>NEW</b>                       | (SD memory card or USB memory)           | —  | —  | —  | —  | —                               |     |
|                                      | Motion program editor <b>NEW</b>                       |  | —  | —  | —  | —  | —                               |     |
|                                      | Motion program I/O <b>NEW</b>                          | SD memory card or USB memory             | —  | —  | —  | —  | —                               |     |
|                                      | Servo amplifier monitor                                |  | —  | —  | —  | —  | —                               |     |
|                                      | R motion monitor                                       |  | —  | —  | —  | —  | —                               |     |
|                                      | Q motion monitor                                       |  | —  | —  | —  | —  | —                               |     |
|                                      | Motion SFC monitor                                     | SD memory card or USB memory             | —  | —  | —  | —  | —                               |     |
|                                      | CNC monitor 2  |  | —  | —  | —  | —  | —                               |     |
|                                      | CNC monitor  |  | —  | —  | —  | —  | —                               |     |
|                                      | CNC data I/O   | SD memory card or USB memory             | —  | —  | —  | —  | —                               |     |
|                                      | CNC machining program edit                             |  | —  | —  | —  | —  | —                               |     |
|                                      | Log viewer   | (SD memory card or USB memory)           | —  | —  | —  | —  | —                               |     |
|                                      | FX list editor   |  | ●  | ●  | ●*7  | ●  | —                               |     |
|                                      | FX ladder monitor                                      |  | —  | —  | —  | —  | —                               |     |
|                                      | IQSS utility   | SD memory card or USB memory             | —  | —  | —  | —  | —                               |     |
| System launcher                      |  | ●  | —  | —  | —  | —  |                                 |     |
| System launcher (servo network)      |  | —  | —  | —  | —  | —  |                                 |     |
| MELSEC-L troubleshooting             |  | —  | —  | —  | —  | —  |                                 |     |

\*8 Excluding GT2705-VTBD.

\*9 To use multiple units such as extension units, barcode readers, or RFID controllers with a GT2705-VTBD, the total current consumption of the units should be less than the value that the GT2705-VTBD can provide. For the details, please refer to the relevant manual of the GOT2000 Series.

\*10 GT2715-VTBA, GT2715-VTBD, GT2712-STBA, GT2712-STBD, GT2712-STWA, GT2712-STWD only.

\*11 For the applicable communication units and option units, please refer to "Connectable model list" (page 152), "Product list" (page 172), and the relevant product manual.

\*12 Use the standard interface of the personal computer.

\*13 When using functions that require a USB memory or SD memory card, a virtual drive in the personal computer is used.

\*14 GT2103-PMBD, GT2103-PMBDS, and GT2103-PMBDS2 require an SD memory card unit (GT21-03SDCCD) separately. GT2103-PMBLS does not allow for SD memory cards.

\*15 GT2104-RTBD, GT2103-PMBD only.

\*16 On GT2103-PMBLS, only the functions that do not require SD memory card can be used.

\*17 Excluding GT2505-VTBD.

\*18 GT25 wide models have a built-in sound output interface so that the sound output unit is not required.

\*19 GT2505HS-VTBD supports the function with Ethernet connection only.

\*20 GT21 has different interfaces depending on the model. For the details, please refer to the performance specifications on pages 134 and 135.

\*21 Only Ethernet, OPC UA client, and microcomputer connections are supported.

# Specifications

## Connectable model list (GOT2000/GOT SIMPLE)

### ◆ Mitsubishi Electric programmable controllers/C Controller modules/Safety controllers/Motion controllers

| Series                  | Model name                           | Connection type            |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|-------------------------|--------------------------------------|----------------------------|-------------------------------|---------------------------------|--|--|---|--|---|--------------------------------------|--|------------------------|-------------------------------|---------------------------------|--|------------------------------------|----------------------------------|-----------------------|---------------------------------|--|---|-----------------|----------------|--|
|                         |                                      | GT27/GT25                  |                               |                                 |  |  |   |  | GT23                                      |                                      |  | GT21/GS21 <sup>1</sup> |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | Ethernet connection        | Direct CPU connection         | Serial communication connection | CC-Link IE TSN connection <sup>42</sup> <b>NEW</b> | CC-Link IE Controller Network connection <sup>42</sup> | CC-Link connection (Intelligent device station) <sup>42</sup> | CC-Link connection (Via G4) <sup>2</sup> | Bus connection <sup>3</sup> <sup>42</sup> | MELSECNET/H connection <sup>42</sup> | MELSECNET/10 connection <sup>4</sup> <sup>42</sup> | Ethernet connection    | Direct CPU connection         | Serial communication connection | CC-Link connection (Via G4) <sup>2</sup> | Multi-drop connection <sup>5</sup> | Ethernet connection <sup>6</sup> | Direct CPU connection | Serial communication connection | CC-Link connection (Via G4) <sup>2</sup> | Multi-drop connection <sup>5</sup> <sup>7</sup> |                 |                |  |
| Programmable controller | MELSEC IQ-R Series                   | R00CPU <b>NEW</b>          |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | R01CPU <b>NEW</b>          |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | R02CPU <b>NEW</b>          |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | R04CPU                     |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | R08CPU                     |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | R16CPU                     |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | R32CPU                     | ○                             | ×                               | ○  | ○  | ○   | ○  | ×   | ×                                    | ×  | ×                      | ×                             | ○                               | ×  | ×                                  | ○                                | ×                     | ○                               | ×  | ×   | ×               |                |  |
|                         |                                      | R120CPU                    |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | R04ENCPU                   |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | R08ENCPU                   |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | R16ENCPU                   |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | R32ENCPU                   |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | R120ENCPU                  |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | Safety CPU                 | R08SFCPU <sup>39</sup>        |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      |                            | R16SFCPU <sup>39</sup>        | ○                               | ×  | ○  | ×   | ○  | ○   | ×                                    | ×  | ×                      | ×                             | ×                               | ○  | ×                                  | ×                                | ○                     | ×                               | ○  | ×   | ×               | ×              |  |
|                         |                                      |                            | R32SFCPU <sup>39</sup>        |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      |                            | R120SFCPU <sup>39</sup>       |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | Process CPU                | R08PCPU <sup>41</sup>         |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      |                            | R16PCPU <sup>41</sup>         | ○                               | ×  | ○  | ×   | ○  | ○   | ×                                    | ×  | ×                      | ×                             | ×                               | ○  | ×                                  | ×                                | ○                     | ×                               | ○  | ×   | ×               | ×              |  |
|                         |                                      |                            | R32PCPU <sup>41</sup>         |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         | R120PCPU <sup>41</sup>               |                            |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         | SIL2 process CPU <b>NEW</b>          | R08PSFCPU <sup>43</sup>    |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | R16PSFCPU <sup>43</sup>    | ○                             | ×                               | ×  | ×  | ○   | ○  | ×   | ×                                    | ×  | ×                      | ×                             | ○                               | ×  | ×                                  | ○                                | ×                     | ×                               | ×  | ×   | ×               |                |  |
|                         |                                      | R32PSFCPU <sup>43</sup>    |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | R120PSFCPU <sup>43</sup>   |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         | High-speed type universal model QCPU | Q03UDVCPU                  | ○ <sup>18</sup>               | ○ <sup>8</sup>                  | ○  | ×  | ○ <sup>9</sup>  | ○ <sup>10</sup>                          | ○   | ○                                    | ○  | ○ <sup>18</sup>        | ○ <sup>18</sup>               | ○ <sup>8</sup>                  | ○ <sup>18</sup>                          | ○ <sup>8</sup>                     | ○                                | ○ <sup>18</sup>       | ○ <sup>8</sup>                  | ○  | ○   | ○ <sup>8</sup>  |                |  |
|                         |                                      | Q04UDVCPU                  |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | Q06UDVCPU                  |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | Q13UDVCPU                  |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | Q26UDVCPU                  |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | Universal model QCPU       | Q00UCPU                       |                                 |  |  |   | ○ <sup>9</sup>                           |   |                                      |  | ○ <sup>11</sup>        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      |                            | Q01UCPU                       |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      |                            | Q02UCPU                       |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      |                            | Q03UDCPU                      |                                 |  |  | ×   | ○ <sup>12</sup>                          | ○ <sup>10</sup>                           | ○                                    |  |                        | ○ <sup>18</sup>               | ○ <sup>18</sup>                 | ○  | ○ <sup>18</sup>                    | ○                                | ○                     | ○ <sup>18</sup>                 | ○  | ○   | ○               | ○              |  |
|                         |                                      |                            | Q04UDHCPU                     | ○ <sup>18</sup>                 | ○  | ○  |   |  |   |                                      |  | ○                      |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      |                            | Q06UDHCPU                     |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      |                            | Q10UDHCPU                     |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      |                            | Q13UDHCPU                     |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      |                            | Q20UDHCPU                     |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      |                            | Q26UDHCPU                     |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      |                            | Built-in Ethernet type        | Q03UDECPU                       |  |  |   |  | ○ <sup>12</sup>                           |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      |                            |                               | Q04UDEHCPU                      |  |  |   | ×  |   | ○ <sup>10</sup>                      | ○  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | Q06UDEHCPU                 |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | Q10UDEHCPU                 |                               | ○ <sup>18</sup>                 | ○ <sup>8</sup>                                     | ○  | ×   | ○ <sup>9</sup>                           | ○ <sup>10</sup>                           | ○                                    |  |                        | ○ <sup>18</sup>               | ○ <sup>18</sup>                 | ○ <sup>8</sup>                           | ○ <sup>18</sup>                    | ○ <sup>8</sup>                   | ○                     | ○ <sup>18</sup>                 | ○ <sup>8</sup>                           | ○   | ○               | ○ <sup>8</sup> |  |
|                         |                                      | Q13UDEHCPU                 |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         | Q20UDEHCPU                           |                            |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         | Q26UDEHCPU                           |                            |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         | Q50UDEHCPU                           |                            |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         | Q100UDEHCPU                          |                            |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         | Basic model QCPU                     | Q00JCPU                    |                               |                                 |  |  |   |  |   |                                      |  | ○ <sup>11</sup>        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | Q00CPU <sup>16</sup>       | ○ <sup>18</sup>               | ○                               | ○  | ×  | ○ <sup>13</sup>   | ×  | ○   |                                      | ○  | ○ <sup>18</sup>        | ○ <sup>14</sup> <sup>18</sup> | ○                               | ○ <sup>18</sup>                          | ○                                  | ○                                | ○                     | ○                               | ○  | ○   | ○               |                |  |
|                         |                                      | Q01CPU <sup>16</sup>       |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | Q02CPU <sup>16</sup>       |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | Q02HCPU <sup>16</sup>      |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | Q06HCPU <sup>16</sup>      | ○ <sup>18</sup>               | ○                               | ○  | ×  | ○ <sup>17</sup>   | ×  | ○   |                                      |  | ○ <sup>18</sup>        | ○ <sup>14</sup> <sup>18</sup> | ○                               | ○ <sup>18</sup>                          | ○                                  | ○                                | ○                     | ○                               | ○  | ○   | ○               |                |  |
|                         |                                      | Q12HCPU <sup>16</sup>      |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | Q25HCPU <sup>16</sup>      |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | Q02PHCPU                   |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | Process CPU                | Q06PHCPU                      | ○ <sup>18</sup>                 | ○  | ○  | ×   | ○ <sup>19</sup>                          | ×   | ○                                    |  |                        | ○ <sup>18</sup>               | ○ <sup>14</sup> <sup>18</sup>   | ×  | ○ <sup>18</sup>                    | ○                                | ○                     | ×                               | ×  | ×   | ×               | ×              |  |
|                         | Q12PHCPU                             |                            |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         | Q25PHCPU                             |                            |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         | Redundant CPU (main base)            | Q12PRHCPU                  | ○                             | ○                               | ×  | ×  | ○ <sup>21</sup>   | ×  | ○   |                                      |  | ×                      | ○                             | ×                               | ○  | ×                                  | ×                                | ×                     | ×                               | ×  | ×   | ×               |                |  |
|                         |                                      | Q25PRHCPU                  |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | Q12PRHCPU (extension base) | ○                             | ×                               | ○  | ×  | ×   | ×  | ○   |                                      |  | ×                      | ○                             | ×                               | ○  | ×                                  | ×                                | ×                     | ×                               | ×  | ×   | ×               |                |  |
|                         | Q25PRHCPU (extension base)           |                            |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         | MELSEC-QS Series                     | QS001CPU                   | ○                             | ×                               | ×  | ×  | ○ <sup>22</sup>   | ○ <sup>23</sup>                          | ×   | ×                                    | ×  | ○                      | ○                             | ×                               | ○  | ×                                  | ×                                | ×                     | ×                               | ×  | ×   | ×               |                |  |
|                         | MELSEC-L Series                      | L02SCPU                    | ○ <sup>24</sup> <sup>25</sup> | ○                               | ○  | ×  | ×   | ○ <sup>26</sup>                          | ○   | ○                                    | ×  | ×                      | ×                             | ○                               | ○ <sup>24</sup> <sup>25</sup>            | ○                                  | ○                                | ○                     | ○                               | ○  | ○   | ○               |                |  |
|                         |                                      | L02SCPU-P                  |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | L02CPU                     |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | L02CPU-P                   |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | L06CPU                     |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | L06CPU-P                   | ○ <sup>24</sup>               | ○ <sup>27</sup>                 | ○  | ×  | ×   | ○ <sup>26</sup>                          | ○   | ○                                    | ×  | ×                      | ×                             | ○ <sup>27</sup>                 | ○ <sup>24</sup>                          | ○ <sup>27</sup>                    | ○                                | ○                     | ○                               | ○  | ○   | ○ <sup>27</sup> |                |  |
|                         |                                      | L26CPU                     |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | L26CPU-P                   |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         | L26CPU-BT                            |                            |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         | L26CPU-PBT                           |                            |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         | MELSEC IQ-F Series                   | FX5U                       |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | FX5UC                      | ○                             | ○                               | ×  | ×  | ×   | ○  | ○ <sup>38</sup>                           | ×                                    | ×  | ×                      | ×                             | ×                               | ○  | ○                                  | ×                                | ×                     | ○                               | ○  | ×   | ×               |                |  |
|                         |                                      | FX5UJ <b>NEW</b>           |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | FX0                        |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         | MELSEC-F Series                      | FX0S                       |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | FX0N                       |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | FX1                        | ×                             | ○                               | ×  | ×  | ×   | ×  | ×   | ×                                    | ×  | ×                      | ×                             | ○                               | ×  | ○                                  | ×                                | ○                     | ×                               | ×  | ×   | ○               |                |  |
|                         |                                      | FX1S                       |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | FX1N                       |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |
|                         |                                      | FX1NC                      |                               |                                 |  |  |   |  |   |                                      |  |                        |                               |                                 |  |                                    |                                  |                       |                                 |  |   |                 |                |  |



For the details of the connection configuration, please refer to the GOT2000 Series Connection Manual.

| Series   | Model name         | Connection type                    |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
|--|--------------------|------------------------------------|-----------------------|---------------------------------|---|--|---|---|--|---------------------------------|--------------------------------------|--|------------------------------------|---------------------|-------------------------|---------------------------------|--|------------------------------------|----------------------------------|-----------------------|---------------------------------|--|--------------------------------------|---|--|
|  |                    | GT27/GT25                          |                       |                                 |   |  |   |   |  |                                 |                                      | GT23                                     |                                    |                     | GT21/GS21 <sup>*1</sup> |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
|  |                    | Ethernet connection                | Direct CPU connection | Serial communication connection | CC-Link IE TSN connection <sup>42</sup> NEW | CC-Link IE Controller Network connection <sup>42</sup> | CC-Link IE Field Network connection <sup>42</sup> | CC-Link connection (Intelligent device station) <sup>42</sup> | CC-Link connection (Via G4) <sup>2</sup> | Bus connection <sup>3</sup> 4/2 | MELSECNET/H connection <sup>42</sup> | MELSECNET/10 connection <sup>4</sup> 4/2 | Multi-drop connection <sup>5</sup> | Ethernet connection | Direct CPU connection   | Serial communication connection | CC-Link connection (Via G4) <sup>2</sup> | Multi-drop connection <sup>5</sup> | Ethernet connection <sup>6</sup> | Direct CPU connection | Serial communication connection | CC-Link connection (Via G4) <sup>2</sup> | Multi-drop connection <sup>5</sup> 7 |   |  |
| Programmable controller                          | MELSEC-F Series    | FX2                                | X                     | O                               | X   | X  | X   | X   | X  | X                               | X                                    | X  | X                                  | O                   | X                       | O                               | X  | X                                  | O                                | X                     | O                               | X  | X                                    | O |  |
|  |                    | FX2C                               | X                     | O                               | X   | X  | X   | X   | X  | X                               | X                                    | X  | O                                  | X                   | O                       | X                               | X  | O                                  | X                                | O                     | X                               | X  | O                                    | O |  |
|  |                    | FX2N                               | X                     | O                               | X   | X  | X   | X   | X  | X                               | X                                    | X  | O                                  | X                   | O                       | X                               | X  | O                                  | X                                | O                     | X                               | X  | O                                    | O |  |
|  |                    | FX2NC                              | X                     | O                               | X   | X  | X   | X   | X  | X                               | X                                    | X  | O                                  | X                   | O                       | X                               | X  | O                                  | X                                | O                     | X                               | X  | O                                    | O |  |
|  |                    | FX3G                               |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
|  |                    | FX3GC                              |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
|  |                    | FX3U                               |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
|  |                    | FX3UC                              |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
|  |                    | FX3S                               |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
| FX3GE  |                    |                                    |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
| C Controller module                              | MELSEC iQ-R Series | R12CCPU-V                          |                       | X                               |   | X  | O   | O   | O  | X                               | X                                    | X  | X                                  | O                   | X                       | O                               | X  | X                                  | O                                | X                     | O                               | X  | X                                    |   |  |
|  | MELSEC-Q Series    | Q24DHCCPU-V                        |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
|  |                    | Q24DHCCPU-VG                       |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
|  |                    | Q24DHCCPU-LS                       |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
|  |                    | Q12DCCPU-V <sup>29</sup>           |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
| Safety controller                                | MELSEC-WS Series   | Q26DHCCPU-LS                       |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
|  |                    | WS0-CPU0                           |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
|  |                    | WS0-CPU1                           | X                     | O                               | X   | X  | X   | X   | X  | X                               | X                                    | X  | X                                  | O                   | X                       | X                               | X  | X                                  | O                                | X                     | X                               | X  | X                                    |   |  |
| Motion controller                                | MELSEC iQ-R Series | WS0-CPU3                           |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
|  |                    | R16MTCPU                           |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
|  |                    | R32MTCPU                           |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
|  |                    | R64MTCPU                           |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
|  | MELSEC-Q Series    | Q172CPU <sup>32</sup> Discontinued |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
|  |                    | Q173CPU <sup>32</sup> Discontinued |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
|  |                    | Q172CPU <sup>32</sup> Discontinued |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
|  |                    | Q173CPU <sup>32</sup> Discontinued |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
|  |                    | Q172HCPU Discontinued              |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
|  |                    | Q173HCPU Discontinued              |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
|  |                    | Q172DCPU                           |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
|  |                    | Q173DCPU                           |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
|  |                    | Q172DCPU-S1                        |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
|  |                    | Q173DCPU-S1                        |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
|  |                    | Q172DSCPU                          |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
|  |                    | Q173DSCPU                          |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
|  |                    | Q170MCPUs <sup>35</sup>            |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
|  |                    | Q170MSCPU                          |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
|  |                    | Q170MSCPU-S1                       |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
|  |                    | IMR-MQ100                          |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
| MELSECNET/H remote I/O station                   | QJ72LP25-25        |                                    |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
|  | QJ72LP25G          |                                    |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
|  | QJ72BR15           |                                    |                       |                                 |   |  |   |   |  |                                 |                                      |  |                                    |                     |                         |                                 |  |                                    |                                  |                       |                                 |  |                                      |   |  |
| CC-Link IE Field Network head module             | MELSEC iQ-R Series | RJ27GF15-T2                        |                       | X                               | O   | X  | X   | O   | X  | X                               | X                                    | X  | X                                  | O                   | X                       | O                               | X  | X                                  | O                                | X                     | O                               | X  | X                                    |   |  |
|  | MELSEC-L Series    | LJ27GF15-T2                        | X                     | X                               | O   | X  | X   | O   | X  | X                               | X                                    | X  | X                                  | X                   | O                       | X                               | X  | X                                  | O                                | X                     | X                               | X  | X                                    |   |  |
| CC-Link IE Field Network Ethernet adapter module |                    | NZ2GF-ETB                          |                       | X                               | X   | X  | X   | O   | X  | X                               | X                                    | X  | X                                  | O                   | X                       | X                               | X  | O                                  | X                                | X                     | X                               | X  |                                      |   |  |

<sup>1</sup> GT2103-PMBLS supports connection with MELSEC iQ-F Series and MELSEC-F Series only.  
<sup>2</sup> CC-Link (via G4): connect to the CC-Link system via AJ65BT-G4-S3 or AJ65BT-R2N.  
<sup>3</sup> When using bus connection, follow the precautions below.  
 • When multiple GOTs are connected, the GOT2000 Series cannot be connected with the GOT800 Series or A77GOT.  
 • Bus connection cannot be established with QCPU (A mode).  
 • The number of connectable GOTs is restricted according to the CPU type and the number of intelligent function modules.  
 • The GOT2000 Series, GOT1000 Series, and GOT-A900 Series can be connected together in a system. Please refer to the following Technical Bulletins on the Mitsubishi Electric Factory Automation Global website ([www.mitsubishielectric.com/fal/](http://www.mitsubishielectric.com/fal/)).  
 • "Precautions when Replacing GOT1000 Series with GOT2000 Series" No. GOT-A-0061  
 • "Precautions when Replacing GOT-A900 Series with GOT2000 Series" No. GOT-A-0062  
<sup>4</sup> Includes the case on the MELSECNET/H network system in the MNET/10 mode. The GOT cannot be connected to the remote I/O network.  
<sup>5</sup> When the number of connected slave GOTs and the device points of each GOT increase, the device update cycle on the screen may get slower.  
 (Please consider 250 points as a guide of 1 GOT, and 750 points as a guide of the total points.)  
<sup>6</sup> Only supported by GT2107-WTBD, GT2107-WTSD, GT2104-RTBD, GT2103-PMBD, GS2110-WTBD, and GS2107-WTBD.  
<sup>7</sup> GT2103-PMBDS2, GT2103-PMBLS, GS2110-WTBD, and GS2107-WTBD are not supported.  
<sup>8</sup> Access via the serial port (RS-232C) of QCPU in the multiple CPU system since the CPU has no serial port.  
<sup>9</sup> Use a CC-Link IE Controller Network module with the upper five digits of the serial No. later than 09042.  
<sup>10</sup> Use a CPU with the upper five digits of the serial No. later than 12012.  
<sup>11</sup> When using the bus extension connector box (A9GT-QCNE), attach it to the extension base unit. (Connecting it to the main base unit is not allowed.)  
<sup>12</sup> Use a CPU and a CC-Link IE Controller Network module with the upper five digits of the serial No. later than 09042.  
<sup>13</sup> Use a CPU of function version B or later or a CC-Link IE Controller Network module of function version D or later.  
<sup>14</sup> In the multiple CPU system, use a CPU or a MELSECNET/H network module of function version B or later.  
<sup>15</sup> GT2103-PMBD and GT2103-PMBLS cannot be connected to Q00J, Q00, or Q01CPU.  
<sup>16</sup> When in multiple CPU system configuration, use a CPU of function version B or later.  
<sup>17</sup> Use a CPU with the upper five digits of the serial No. later than 09012.  
 When the total number of stations in a network is 65 or more, use a CC-Link IE Controller Network module with the upper five digits of the serial No. 09042 or later.  
<sup>18</sup> In the Ethernet, MELSECNET/H, or MELSECNET/10 connection, to monitor a QCPU in the multiple CPU system, always use a network module of function version B or later.  
<sup>19</sup> Use a CC-Link IE Controller Network module of function version D or later.  
<sup>20</sup> The supported version of the main units varies depending on the Ethernet module to be used as shown below.

| Ethernet module <sup>*</sup> | FX3U(C)            | CPU                           | FX3S               |
|------------------------------|--------------------|-------------------------------|--------------------|
| FX3U-ENET-L                  | Ver. 2.21 or later | FX3G(C)                       | FX3S               |
| FX3U-ENET-ADP <sup>*</sup>   | Ver. 3.10 or later | FX3U-ENET-L is not supported. |                    |
|                              |                    | Ver. 2.00 or later            | Ver. 1.00 or later |

<sup>\*</sup> To connect to a FX3SCPU, use a FX3U-ENET-ADP Ver.1.20 or later.  
<sup>21</sup> Use a CPU with the upper five digits of the serial No. later than 10042 or a CC-Link IE Controller Network module of function version D or later.

<sup>22</sup> Use a CPU with the upper five digits of the serial No. later than 10032 or a CC-Link IE Controller Network module of function version D or later.  
<sup>23</sup> Use a CPU with the upper five digits of the serial No. later than 13042.  
<sup>24</sup> When using a LJ71E71-100, use a CPU with the upper five digits of the serial No. later than 14112.  
<sup>25</sup> Use a LJ71E71-100 since the CPU has no built-in Ethernet port.  
<sup>26</sup> Use a CPU with the upper five digits of the serial No. later than 13012.  
<sup>27</sup> The adapter L6ADP-R2 or L6ADP-R4 is required. When using the L6ADP-R4 adapter, use a CPU with the upper five digits of the serial No. later than 15102.  
<sup>28</sup> Use the serial port of a serial communication module controlled by another CPU on the multiple CPU system.  
<sup>29</sup> Use a CPU with the upper five digits of the serial No. later than 12042.  
<sup>30</sup> GT2103-PMBD and GT2103-PMBLS cannot be connected to the MELSEC-WS Series.  
<sup>31</sup> In Ethernet connection, serial communication connection, CC-Link (intelligent device station) connection, CC-Link (via G4) connection, MELSECNET/H connection, or MELSECNET/10 connection, use main modules with the following product numbers.  
 Q172CPU: Product number N\*\*\*\*\* or later  
 Q173CPU: Product number M\*\*\*\*\* or later  
<sup>32</sup> When using SV13, SV22, or SV43, use the motion CPU on which any of the following main OS software version is installed.  
 ■ Ethernet connection, serial communication connection, CC-Link (intelligent device station) connection, CC-Link (via G4) connection, MELSECNET/H connection, MELSECNET/10 connection  
 SW6RN-SV13Q□: 00H or later  
 SW6RN-SV22Q□: 00H or later  
 SW5RN-SV43Q□: 00B or later  
 ■ Direct CPU connection, bus connection, multi-drop connection  
 SW6RN-SV13Q□: 00E or later  
 SW6RN-SV22Q□: 00E or later  
 SW5RN-SV43Q□: 00B or later  
<sup>33</sup> In direct CPU connection, bus connection, or multi-drop connection, use main modules with the following product numbers.  
 Q172CPU: Product number K\*\*\*\*\* or later  
 Q173CPU: Product number J\*\*\*\*\* or later  
<sup>34</sup> PERIPHERAL I/F can be used.  
<sup>35</sup> When using SV43, use the CPU on which any of the following main OS software version is installed.  
 SW7DNC-SV43Q□: 00F or later  
<sup>36</sup> Only the PLC CPU area (CPU No.1) can be monitored.  
<sup>37</sup> Use the built-in Ethernet port since RJ1EN71 is not supported.  
<sup>38</sup> Only cyclic transmission can be used.  
<sup>39</sup> Mount a safety function module R6SFM next to the RnSFCPU on the base unit. The RnSFCPU and the safety function module R6SFM must have the same pair version. If their pair versions differ, the RnSFCPU does not operate.  
<sup>40</sup> Up to 32 axes are supported by GT21. R standard placement method is not supported.  
<sup>41</sup> Mount a redundant function module R6RFM next to the RnPCPU on the base unit when building a redundant system.  
<sup>42</sup> GT2510-WXTBD, GT2510-WXTSD, GT2507-WTBD, GT2507-WTSD, GT2505-VTBD, GT2505HS-VTBD, and GT2505HS-VTBD are not supported.  
<sup>43</sup> Mount the SIL2 function module R6PSFM and redundant function module R6RFM next to the RnPSFCPU on the base unit.

# Specifications

## Connectable model list (GOT2000/GOT SIMPLE)

### ■ Modules usable when connected with Mitsubishi Electric programmable controllers/C Controller modules/Motion controllers

#### ● Ethernet connection

| CPU series  | Ethernet module   |
|---|---|
| MELSEC iQ-R Series<br>C Controller module (MELSEC iQ-R Series)<br>Motion controller (MELSEC iQ-R Series)<br>CC-Link IE Field Network head module (MELSEC iQ-R Series) | RJ71EN71 <sup>1</sup> 4<br>RJ71GN11-T2 <sup>5</sup> 6 <sup>7</sup> <b>NEW</b> |
| MELSEC-Q Series (Q mode)<br>MELSEC-QS Series<br>C Controller module (MELSEC-Q Series)<br>Motion controller (MELSEC-Q Series)  | QJ71E71-100<br>QJ71E71-B5<br>QJ71E71-B2<br>QJ71E71                            |
| MELSEC-L Series   | LJ71E71-100 <sup>1</sup> 1  |
| MELSEC-F Series   | FX3U-ENET-L <sup>2</sup><br>FX3U-ENET-ADP <sup>2</sup> <sup>3</sup>           |

<sup>1</sup> Use a CPU with the upper five digits of the serial No. later than 14112.

<sup>2</sup> Options for extension controller may be required depending on the connected CPU.

<sup>3</sup> To connect to a FX3SCPU, use a FX3U-ENET-ADP Ver.1.20 or later.

<sup>4</sup> Use firmware version 12 or higher when building a redundant system.

<sup>5</sup> Usable with MELSEC iQ-R Series programmable controller CPUs only.

<sup>6</sup> To use R00CPU, R01CPU, or R02CPU, use the firmware version 11 or later.

<sup>7</sup> To use programmable controller CPU (excluding R00CPU, R01CPU, R02CPU), use the firmware version 43 or later.

#### ● Serial communication connection

| CPU series  | Serial communication module <sup>1</sup>   |  |  |
|---|--|--|--|
|   | Model name   | CH1  | CH2  |
| MELSEC iQ-R Series<br>C Controller module (MELSEC iQ-R Series)<br>Motion controller (MELSEC iQ-R Series)<br>CC-Link IE Field Network head module (MELSEC iQ-R Series) | RJ71C24 <sup>4</sup><br>RJ71C24-R2 <sup>4</sup><br>RJ71C24-R4 <sup>4</sup>   | RS-232<br>RS-232<br>RS-422/485   | RS-422/485<br>RS-232<br>RS-422/485   |
| MELSEC-Q Series (Q mode)<br>C Controller module (MELSEC-Q Series)<br>Motion controller (MELSEC-Q Series)<br>MELSECNET/H remote I/O station                            | QJ71C24 <sup>2</sup><br>QJ71C24-R2 <sup>2</sup><br>QJ71C24N<br>QJ71C24N-R2<br>QJ71C24N-R4<br>QJ71CMO <sup>3</sup><br>QJ71CMON <sup>3</sup> | RS-232<br>RS-232<br>RS-232<br>RS-232<br>RS-422/485<br>Modular connector<br>Modular connector | RS-422/485<br>RS-232<br>RS-422/485<br>RS-232<br>RS-422/485<br>RS-232<br>RS-232 |
| MELSEC-L Series<br>CC-Link IE Field Network head module (MELSEC-L Series)   | LJ71C24<br>LJ71C24-R2  | RS-232<br>RS-232   | RS-422/485<br>RS-232   |

<sup>1</sup> Communication cannot be performed with RS-485.

<sup>2</sup> Either CH1 or CH2 can be used for the function version A.  
Both CH1 and CH2 can be used together for the function version B or later.

<sup>3</sup> Only CH2 can be connected.

<sup>4</sup> Use firmware version 07 or higher when building a redundant system.

#### ● CC-Link IE TSN connection **NEW**

| CPU series         | CC-Link IE TSN module                              |
|--------------------|--|
| MELSEC iQ-R Series | RJ71GN11-T2 <sup>1</sup> <sup>2</sup> <sup>3</sup> |

<sup>1</sup> Usable with MELSEC iQ-R Series programmable controller CPUs only.

<sup>2</sup> To use R00CPU, R01CPU, or R02CPU, use the firmware version 11 or later.

<sup>3</sup> To use programmable controller CPU (excluding R00CPU, R01CPU, R02CPU), use the firmware version 43 or later.

#### ● CC-Link IE Controller Network connection

| CPU series   | CC-Link IE Controller Network module                  |
|--|---|
| MELSEC iQ-R Series<br>C Controller module (MELSEC iQ-R Series)<br>Motion controller (MELSEC iQ-R Series)                     | RJ71GP21-SX <sup>2</sup>                              |
| MELSEC-Q Series (Q mode)<br>MELSEC-QS Series<br>C Controller module (MELSEC-Q Series)<br>Motion controller (MELSEC-Q Series) | QJ71GP21-SX <sup>1</sup><br>QJ71GP21S-SX <sup>1</sup> |

<sup>1</sup> When the CC-Link IE Controller Network is in the extended mode, use a module with the upper five digits of the serial No. 12052 or later.

<sup>2</sup> Use firmware version 12 or higher when building a redundant system.

#### ● CC-Link IE Field Network connection

| CPU series   | CC-Link IE Field Network module  |
|--|--|
| MELSEC iQ-R Series<br>C Controller module (MELSEC iQ-R Series)<br>Motion controller (MELSEC iQ-R Series) | RJ71GF11-T2 <sup>1</sup><br>RJ71EN71<br>RD77GF4<br>RD77GF8<br>RD77GF16<br>RD77GF32 |
| MELSEC-Q Series (Q mode)<br>C Controller module (MELSEC-Q Series)<br>Motion controller (MELSEC-Q Series) | QJ71GF11-T2<br>QD77GF4 <b>NEW</b><br>QD77GF8 <b>NEW</b><br>QD77GF16                |
| MELSEC-QS Series   | QS0J71GF11-T2  |
| MELSEC-L Series  | LJ71GF11-T2  |
| MELSEC iQ-F Series   | FX5-CCLIEF   |

<sup>1</sup> Use firmware version 12 or higher when building a redundant system.

#### ● CC-Link (intelligent device station) connection

| CPU series  | CC-Link module                          |
|---|---|
| MELSEC iQ-R Series<br>C Controller module (MELSEC iQ-R Series)<br>Motion controller (MELSEC iQ-R Series)<br>CC-Link IE Field Network head module (MELSEC iQ-R Series) | RJ61BT11 <sup>2</sup>                   |
| MELSEC-Q Series (Q mode)<br>C Controller module (MELSEC-Q Series)<br>Motion controller (MELSEC-Q Series)  | QJ61BT11<br>QJ61BT11N                   |
| MELSEC-L Series   | LJ61BT11                                |
| MELSEC iQ-F Series  | FX3U-16CCL-M <sup>1</sup><br>FX5-CCL-MS |
| MELSEC-F Series   | FX3U-16CCL-M                            |

<sup>1</sup> When using an FX3U-16CCL-M with the MELSEC iQ-F Series, bus conversion module (FX5-CNV-BUS or FX5-CNV-BUSC) is required.

<sup>2</sup> Use firmware version 04 or higher when building a redundant system.

For the details of the connection configuration, please refer to the GOT2000 Series Connection Manual.

## ● CC-Link (via G4) connection

| CPU series   | CC-Link module        | Peripheral module          |
|--|-----------------------|----------------------------|
| MELSEC-Q Series (Q mode)<br>C Controller module (MELSEC-Q Series)<br>Motion controller (MELSEC-Q Series) | QJ61BT11<br>QJ61BT11N | AJ65BT-G4-S3<br>AJ65BT-R2N |
| MELSEC-L Series  | LJ61BT11              |                            |

## ● MELSECNET/H connection

| CPU series   | MELSECNET/H network module              |             |
|--|---|-------------|
|  | Optical loop                            | Coaxial bus |
| MELSEC-Q Series (Q mode) *1<br>MELSEC-QS Series<br>Motion controller (MELSEC-Q Series) | QJ71LP21<br>QJ71LP21-25<br>QJ71LP21S-25 | QJ71BR11 *1 |
| C Controller module (MELSEC-Q Series)  | QJ71LP21-25<br>QJ71LP21S-25             |             |

\*1 Use function version B or later of the MELSECNET/H network module and CPU.

## ● MELSECNET/10 connection

| CPU series   | MELSECNET/H (MNET/10 mode), MELSECNET/10 network module |             |
|--|---|-------------|
|  | Optical loop  | Coaxial bus |
| MELSEC-Q Series (Q mode) *1<br>MELSEC-QS Series<br>Motion controller (MELSEC-Q Series) | QJ71LP21<br>QJ71LP21-25<br>QJ71LP21S-25                 | QJ71BR11 *1 |
| C Controller module (MELSEC-Q Series)  | QJ71LP21-25<br>QJ71LP21S-25                             |             |

\*1 Use function version B or later of the MELSECNET/H network module and CPU.

## ◆ Mitsubishi Electric industrial computers **NEW**

| Series | Model name | GT27/GT25/GT23/GT21/GS21 *1 |                       |                                 |                           |  |                                     |   |                             |                |                        |                         |                       |
|--------|------------|-----------------------------|-----------------------|---------------------------------|---------------------------|--|-------------------------------------|---|-----------------------------|----------------|------------------------|-------------------------|-----------------------|
|        |            | Connection type             |                       |                                 |                           |  |                                     |   |                             |                |                        |                         |                       |
|        |            | Ethernet connection         | Direct CPU connection | Serial communication connection | CC-Link IE TSN connection | CC-Link IE Controller Network connection | CC-Link IE Field Network connection | CC-Link connection (intelligent device station) | CC-Link connection (via G4) | Bus connection | MELSECNET/H connection | MELSECNET/10 connection | Multi-drop connection |
| MELIPC | MI5122-VW  | ○                           | ×                     | ×                               | ×                         | ×  | ○                                   | ×   | ×                           | ×              | ×                      | ×                       | ×                     |

\*1 GT23, GT21, and GS21 support connection using Ethernet connection.

## ◆ Mitsubishi Electric inverters

| Series              | Model name          | GT27/GT25/GT23/GT21/GS21 *1 |        |                       |          |
|---------------------|---------------------|-----------------------------|--------|-----------------------|----------|
|                     |                     | RS-485                      | RS-232 | Multi-drop connection | Ethernet |
| FR-D700 Series      | FR-D7□□             | ○                           | ×      | ×                     | ×        |
|                     | FR-D7□□S            | ○                           | ×      | ×                     | ×        |
|                     | FR-D7□□W            | ○                           | ×      | ×                     | ×        |
| FR-F700PJ Series    | FR-F7□□PJ (F)       | ○                           | ×      | ×                     | ×        |
|                     | FR-E7□□             | ○                           | ×      | ×                     | ×        |
| FR-E700 Series      | FR-E7□□S            | ○                           | ×      | ×                     | ×        |
|                     | FR-E7□□W            | ○                           | ×      | ×                     | ×        |
|                     | FR-E7□□-NE *2,3     | ×                           | ×      | ×                     | ○ *4     |
| FR-F700 Series      | FR-F7□□             | ○                           | ×      | ×                     | ×        |
|                     | FR-F7□□P Series     | ○                           | ×      | ×                     | ×        |
| FR-A800 Series      | FR-A8□□             | ○                           | ×      | ×                     | ×        |
|                     | FR-A8□□2            | ○                           | ×      | ×                     | ×        |
|                     | FR-A8□□6            | ○                           | ×      | ×                     | ×        |
|                     | FR-A8□□-GF          | ○                           | ×      | ×                     | ×        |
|                     | FR-A8□□2-GF         | ○                           | ×      | ×                     | ×        |
| FR-A800 Plus Series | FR-A8□□-CRN         | ○                           | ×      | ×                     | ×        |
|                     | FR-A8□□2-CRN        | ○                           | ×      | ×                     | ×        |
|                     | FR-A8□□-E-CRN       | ○                           | ×      | ×                     | ○        |
|                     | FR-A8□□2-E-CRN      | ○                           | ×      | ×                     | ○        |
|                     | FR-A8□□-R2R         | ○                           | ×      | ×                     | ×        |
|                     | FR-A8□□2-R2R        | ○                           | ×      | ×                     | ×        |
|                     | FR-A8□□-E-R2R       | ○                           | ×      | ×                     | ○        |
|                     | FR-A8□□2-E-R2R      | ○                           | ×      | ×                     | ○        |
| FR-F800 Series      | FR-F8□□             | ○                           | ×      | ×                     | ×        |
|                     | FR-F8□□2            | ○                           | ×      | ×                     | ×        |
|                     | FR-F8□□6            | ○                           | ×      | ×                     | ×        |
|                     | FR-F8□□-E           | ○                           | ×      | ×                     | ○        |
|                     | FR-F8□□2-E          | ○                           | ×      | ×                     | ○        |
| FR-B Series         | FR-B-□□□□           | ○                           | ×      | ×                     | ×        |
| FR-B3 Series        | FR-B3- (N) (H) □□□□ | ○                           | ×      | ×                     | ×        |
| MELIPM Series       | MD-CX522-□□K        | ○                           | ×      | ×                     | ×        |
|                     | MD-CX522-□□K-A0     | ○                           | ×      | ×                     | ×        |

\*1 Except GT2103-PMBDS2 and GT2103-PMBLS.

\*2 Use FR-E700-NE with SERIAL (serial No.) \*\*88\*\*\*\*\* or later.

\*3 Use FR-E700-SC-NNE or FR-E700-SC-ENE with SERIAL (serial No.) \*\*89\*\*\*\*\* or later.

\*4 Supports UDP only.

## ◆ Mitsubishi Electric servo amplifiers (general-purpose)

| Series                   | Model name  | GT27/GT25/GT23/GT21/GS21 *1 |        |                       |          |
|--------------------------|-------------|-----------------------------|--------|-----------------------|----------|
|                          |             | RS-422                      | RS-232 | Multi-drop connection | Ethernet |
| MELSERVO-J4 Series       | MR-J4-□A    | ○                           | ○ *2   | ×                     | ×        |
|                          | MR-J4-□A-RJ | ○                           | ○ *2   | ×                     | ×        |
| MELSERVO-J3 Series       | MR-J3-□A    | ○                           | ○ *2   | ×                     | ×        |
|                          | MR-J3-□T    | ○                           | ○ *2   | ×                     | ×        |
| MELSERVO-J2-Super Series | MR-J2S-□A   | ○                           | ○      | ×                     | ×        |
|                          | MR-J2S-□CP  | ○                           | ○      | ×                     | ×        |
| MELSERVO-J2M Series      | MR-J2M-□CL  | ○                           | ○      | ×                     | ×        |
|                          | MR-J2M-□P8A | ○                           | ○      | ×                     | ×        |
| MELSERVO-JE Series       | MR-J2M-□DU  | ○                           | ○      | ×                     | ×        |
|                          | MR-JE-□A    | ○                           | ×      | ×                     | ×        |
|                          | MR-JE-□C    | ×                           | ×      | ×                     | ○        |

\*1 Except GT2103-PMBLS.

\*2 RS-422/232 interface converter or RS-422/232 conversion cable is required.

# Specifications

## Connectable model list (GOT2000/GOT SIMPLE)

### ◆ Mitsubishi Electric servo amplifiers (SSCNET III/H)

Servo amplifiers (SSCNET III/H) are connected to the GOT through a motion controller or simple motion module.

| Series             | Model name  | Motion controller or programmable controller |             | GT27/GT25/GT23/GT21/GS21 *6 |                       |                                 |                           |  |                                     |  |                             |                |                        |                            |                       |   |   |
|--------------------|---|--|-------------|-----------------------------|-----------------------|---------------------------------|---------------------------|--|-------------------------------------|--|-----------------------------|----------------|------------------------|----------------------------|-----------------------|---|---|
|                    |   |  |             | Connection type             |                       |                                 |                           |  |                                     |  |                             |                |                        |                            |                       |   |   |
|                    |   | Simple motion module                         | CPU type    | Ethernet connection         | Direct CPU connection | Serial communication connection | CC-Link IE TSN connection | CC-Link IE Controller Network connection | CC-Link IE Field Network connection | CC-Link connection (intelligent device station) *1 | CC-Link connection (via G4) | Bus connection | MELSECNET/H connection | MELSECNET/10 connection *2 | Multi-drop connection |   |   |
| MELSERVO-J4 Series | MR-J4-□B<br>MR-J4-□B-RJ<br>MR-J4W2-□B<br>MR-J4W3-□B | —  | RnMTCPU     | ○                           | ×                     | ○                               | ×                         | ○  | ○                                   | ○  | ○                           | ×              | ×                      | ×                          | ×                     | × |   |
|                    |   |  | Q17nDSCPU   | ○                           | ○                     | ○                               | ×                         | ○  | ×                                   | ○  | ○                           | ○              | ○                      | ○                          | ○                     | ○ | × |
|                    |   |  | Q170MSCPU   | ○                           | ○                     | ○                               | ×                         | ○  | ○                                   | ○  | ○                           | ○              | ○                      | ○                          | ○                     | ○ | × |
|                    |   |  | RD77MS      | RnCPU                       | ○                     | ×                               | ○                         | ○  | ○                                   | ○  | ○                           | ○              | ×                      | ×                          | ×                     | × | × |
|                    |   |  | QD77MS *3   | QnCPU                       | ○                     | ○                               | ○                         | ×  | ○                                   | ○  | ○                           | ○              | ○                      | ○                          | ○                     | ○ | × |
|                    |   |  | LD77MS      | LnCPU                       | ○                     | ○                               | ○                         | ×  | ×                                   | ○  | ○                           | ○              | ×                      | ×                          | ×                     | × | × |
|                    |   |  | FX5-40SSC-S | FX5CPU                      | ○                     | ○                               | ×                         | ×  | ×                                   | ×  | ○                           | ×              | ×                      | ×                          | ×                     | × | × |
|                    |   |  | FX5-80SSC-S | FX5CPU                      | ○                     | ○                               | ×                         | ×  | ×                                   | ×  | ○                           | ×              | ×                      | ×                          | ×                     | × | × |
| MELSERVO-JE Series | MR-JE-□B  |  | RD77MS *4   | RnCPU                       | ○                     | ×                               | ○                         | ○  | ○                                   | ○  | ○                           | ×              | ×                      | ×                          | ×                     | × |   |
|                    |   |  | QD77MS *5   | QnCPU                       | ○                     | ○                               | ○                         | ×  | ○                                   | ○  | ○                           | ○              | ○                      | ○                          | ○                     | × |   |
|                    |   |  | LD77MS *5   | LnCPU                       | ○                     | ○                               | ○                         | ×  | ×                                   | ○  | ○                           | ×              | ×                      | ×                          | ×                     | × |   |
|                    |   |  | FX5-40SSC-S | FX5CPU                      | ○                     | ○                               | ×                         | ×  | ×                                   | ×  | ○                           | ×              | ×                      | ×                          | ×                     | × |   |
|                    |   |  | FX5-80SSC-S | FX5CPU                      | ○                     | ○                               | ×                         | ×  | ×                                   | ×  | ○                           | ×              | ×                      | ×                          | ×                     | × |   |
|                    |   |  | FX5-80SSC-S | FX5CPU                      | ○                     | ○                               | ×                         | ×  | ×                                   | ×  | ○                           | ×              | ×                      | ×                          | ×                     | × |   |

\*1 Connect the GOT as a CC-Link intelligent device station.

\*2 Only supports the case where MELSECNET/H is used in the MELSECNET/10 mode. Connection to the remote I/O network is not allowed.

\*3 Use a module with the upper five digits of the serial No. later than 15041.

\*4 Use a module with the firmware version 3 or later.

\*5 Use a module with the upper five digits of the serial No. later than 16102.

\*6 GT23, GT21, and GS21 support connection using Ethernet connection, direct CPU connection, serial communication connection, or CC-Link connection (via G4).

### ◆ Mitsubishi Electric servo amplifiers (CC-Link IE Field Network)

Servo amplifiers (CC-Link IE Field Network) are connected to the GOT through a simple motion module or a master/local module.

| Series             | Model name                | Motion controller or programmable controller |          | GT27/GT25/GT23/GT21/GS21 *6 *7 |                       |                                 |                           |  |  |  |                             |                |                        |                            |                       |
|--------------------|---------------------------|--|----------|--------------------------------|-----------------------|---------------------------------|---------------------------|--|--|--|-----------------------------|----------------|------------------------|----------------------------|-----------------------|
|                    |                           |  |          | Connection type                |                       |                                 |                           |  |  |  |                             |                |                        |                            |                       |
|                    |                           | Simple motion module, or master/local module | CPU type | Ethernet connection            | Direct CPU connection | Serial communication connection | CC-Link IE TSN connection | CC-Link IE Controller Network connection | CC-Link IE Field Network connection *8 | CC-Link connection (intelligent device station) *1 | CC-Link connection (via G4) | Bus connection | MELSECNET/H connection | MELSECNET/10 connection *2 | Multi-drop connection |
| MELSERVO-J4 Series | MR-J4-□GF<br>MR-J4-□GF-RJ | RD77GF4*3                                    | RnCPU    | ○                              | ×                     | ○                               | ○                         | ○  | ○                                      | ○  | ×                           | ×              | ×                      | ×                          | ×                     |
|                    |                           | RD77GF8*3                                    | RnCPU    | ○                              | ×                     | ○                               | ○                         | ○  | ○                                      | ○  | ×                           | ×              | ×                      | ×                          | ×                     |
|                    |                           | RD77GF16*3                                   | RnCPU    | ○                              | ×                     | ○                               | ○                         | ○  | ○                                      | ○  | ×                           | ×              | ×                      | ×                          | ×                     |
|                    |                           | RD77GF32                                     | RnCPU    | ○                              | ×                     | ○                               | ○                         | ○  | ○                                      | ○  | ×                           | ×              | ×                      | ×                          | ×                     |
|                    |                           | QD77GF4*4                                    | QnCPU    | ○                              | ○                     | ○                               | ×                         | ○  | ○                                      | ○  | ×                           | ○              | ○                      | ○                          | ×                     |
|                    |                           | QD77GF8*4                                    | QnCPU    | ○                              | ○                     | ○                               | ×                         | ○  | ○                                      | ○  | ×                           | ○              | ○                      | ○                          | ×                     |
|                    |                           | QD77GF16*4                                   | QnCPU    | ○                              | ○                     | ○                               | ×                         | ○  | ○                                      | ○  | ×                           | ○              | ○                      | ○                          | ×                     |
|                    |                           | RJ71EN71                                     | RnCPU    | ○                              | ×                     | ○                               | ○                         | ○  | ○                                      | ○  | ×                           | ×              | ×                      | ×                          | ×                     |
|                    |                           | RJ71GF11-T2                                  | RnCPU    | ○                              | ×                     | ○                               | ○                         | ○  | ○                                      | ○  | ×                           | ×              | ×                      | ×                          | ×                     |
|                    |                           | QJ71GF11-T2*5                                | QnCPU    | ○                              | ○                     | ○                               | ×                         | ○  | ○                                      | ○  | ×                           | ○              | ○                      | ○                          | ×                     |
|                    |                           | LJ71GF11-T2*5                                | LnCPU    | ○                              | ×                     | ○                               | ×                         | ×  | ×                                      | ○  | ×                           | ×              | ×                      | ×                          | ×                     |

\*1 Connect the GOT as a CC-Link intelligent device station.

\*2 Only supports the case where MELSECNET/H is used in the MELSECNET/10 mode. Connection to the remote I/O network is not allowed.

\*3 To use the motion mode, use a module with the firmware version 1 or later; to use the I/O mode, use a module with the firmware version 2 or later.

\*4 To use the I/O mode, use a module with the upper five digits of the serial No. later than 18022.

\*5 Use a module with the upper five digits of the serial No. later than 14102. Motion mode is not supported.

\*6 GT23 supports connection using Ethernet connection, direct CPU connection, serial communication connection, or CC-Link connection (via G4).

\*7 GT21 and GS21 support connection using Ethernet connection.

\*8 Not connectable from the GOT in the same network.

### ◆ Mitsubishi Electric robot controllers

| Series    | Controller name                 | GT27/GT25/GT23/GT21/GS21 *5 |                       |                                 |                           |  |                                     |  |                             |                |                        |                            |                       |
|-----------|---------------------------------|-----------------------------|-----------------------|---------------------------------|---------------------------|--|-------------------------------------|--|-----------------------------|----------------|------------------------|----------------------------|-----------------------|
|           |                                 | Connection type             |                       |                                 |                           |  |                                     |  |                             |                |                        |                            |                       |
|           |                                 | Ethernet connection         | Direct CPU connection | Serial communication connection | CC-Link IE TSN connection | CC-Link IE Controller Network connection | CC-Link IE Field Network connection | CC-Link connection (intelligent device station) *1 | CC-Link connection (via G4) | Bus connection | MELSECNET/H connection | MELSECNET/10 connection *2 | Multi-drop connection |
| F Series  | CR750-Q (Q172DRCPU)             | ○ *3                        | ○ *4                  | ○                               | ×                         | ○  | ○                                   | ○  | ○                           | ○              | ○                      | ○                          | ×                     |
|           | CR751-Q (Q172DRCPU)             | ○ *3                        | ○ *4                  | ○                               | ×                         | ○  | ○                                   | ○  | ○                           | ○              | ○                      | ○                          | ×                     |
|           | CR750-D                         | ○                           | ×                     | ×                               | ×                         | ×  | ×                                   | ×  | ×                           | ×              | ×                      | ×                          | ×                     |
|           | CR751-D                         | ○                           | ×                     | ×                               | ×                         | ×  | ×                                   | ×  | ×                           | ×              | ×                      | ×                          | ×                     |
| SQ Series | CRnQ-700 (Q172DRCPU)            | ○ *3                        | ○ *4                  | ○                               | ×                         | ○  | ○                                   | ○  | ○                           | ○              | ○                      | ○                          | ×                     |
| SD Series | CRnD-700                        | ○                           | ×                     | ×                               | ×                         | ×  | ×                                   | ×  | ×                           | ×              | ×                      | ×                          | ×                     |
| FR Series | CR800-D                         | ○ *6                        | ×                     | ×                               | ×                         | ×  | ×                                   | ×  | ×                           | ×              | ×                      | ×                          | ×                     |
|           | CR800-R (R16RTCPU)              | ○                           | ×                     | ○                               | ×                         | ○  | ○                                   | ○  | ×                           | ×              | ×                      | ×                          | ×                     |
|           | CR800-Q (Q172DSRCPU) <b>NEW</b> | ○                           | ○ *4                  | ○                               | ×                         | ○  | ○                                   | ○  | ○                           | ○              | ○                      | ○                          | ×                     |

\*1 Connect the GOT as a CC-Link intelligent device station.

\*2 Only supports the case where MELSECNET/H is used in the MELSECNET/10 mode. Connection to the remote I/O network is not allowed.

\*3 The Display I/F of CRnQ-700, CR750/751-Q cannot be used. Ethernet connections can be established only via the Ethernet module (QJ71E71) or the built-in Ethernet port in the multiple CPU system (QnUDE).

\*4 Access via the serial port (RS-232) of QCPU in the multiple CPU system since CRnQ-700, CR750/751-Q, and CR800-Q have no serial ports.

\*5 GT23, GT21, and GS21 support connection using Ethernet connection, direct CPU connection, serial communication connection, or CC-Link connection (via G4).

\*6 Ethernet connections can be established to the built-in LAN port of CR800-D.

For the details of the connection configuration, please refer to the GOT2000 Series Connection Manual.

## ◆ Mitsubishi Electric CNCs

| Series                  | GT27/GT25/GT23 *6   |                       |                                 |                           |  |                                     |  |                             |                |                        |                            |                       |
|-------------------------|---------------------|-----------------------|---------------------------------|---------------------------|--|-------------------------------------|--|-----------------------------|----------------|------------------------|----------------------------|-----------------------|
|                         | Connection type     |                       |                                 |                           |  |                                     |  |                             |                |                        |                            |                       |
|                         | Ethernet connection | Direct CPU connection | Serial communication connection | CC-Link IE TSN connection | CC-Link IE Controller Network connection | CC-Link IE Field Network connection | CC-Link connection (intelligent device station) *1 | CC-Link connection (via G4) | Bus connection | MELSECNET/H connection | MELSECNET/10 connection *2 | Multi-drop connection |
| CNC C80 (R16NCCPU-S1)*7 | ○                   | ×                     | ○                               | ×                         | ○  | ○                                   | ○  | ×                           | ×              | ×                      | ×                          | ×                     |
| CNC C70 (Q173NCCPU) *3  | ○                   | ○ *4                  | ○                               | ×                         | ○  | ○                                   | ○  | ○                           | ○              | ○                      | ○                          | ×                     |
| CNC M700VS              | ×                   | ×                     | ×                               | ×                         | ×  | ×                                   | ○ *5   | ×                           | ×              | ×                      | ×                          | ×                     |
| CNC M70V                | ×                   | ×                     | ×                               | ×                         | ×  | ×                                   | ○ *5   | ×                           | ×              | ×                      | ×                          | ×                     |
| CNC M800/M80 <b>NEW</b> | ×                   | ×                     | ×                               | ×                         | ×  | ×                                   | ○ *8 *9  | ×                           | ×              | ×                      | ×                          | ×                     |

\*1 Connect the GOT as a CC-Link intelligent device station.

\*2 Includes the connection where MELSECNET/H is used in the MELSECNET/10 mode. Connection to the remote I/O network is not allowed.

\*3 When using a CNC C70, the CNC monitor function, the CNC data I/O function, and the CNC machining program edit function can be used in bus connection and Ethernet connection (Display I/F connection only). The above functions are supported by the GOT models of which resolution is SVGA or higher.

\*4 Access via the serial port (RS-232) of QCPU in the multiple CPU system since CNC C70 has no serial port.

\*5 Only cyclic transmission can be used. (CC-Link unit FCU7-HN746 can be used)

\*6 GT23 supports connection using Ethernet connection, direct CPU connection, serial communication connection, or CC-Link connection (via G4).

\*7 When using a CNC C80, the CNC monitor2 function can be used in Ethernet connection (Display I/F connection only).

\*8 Only cyclic transmission can be used. (CC-Link unit FCU8-EX561(WN561) can be used)

\*9 When using M800S/M80, connect FCU8-EX561(WN561) to the relay module for communication extension (FCU8-EX702, or FCU8-EX703).

## ◆ Mitsubishi Electric power monitoring products

| Series  | Model name  | GT27/GT25/GT23/GT21/GS21 *2 |        |        |                       |
|---|-------------|-----------------------------|--------|--------|-----------------------|
|   |             | RS-485                      | RS-422 | RS-232 | Multi-drop connection |
| Energy measuring unit EcoMonitorLight           | EMU4-BD1-MB | ○ (2-wire type *1)          | ×      | ×      | ×                     |
|   | EMU4-HD1-MB | ○ (2-wire type *1)          | ×      | ×      | ×                     |
| Energy measuring unit EcoMonitorPlus <b>NEW</b> | EMU4-BM1-MB | ○ (2-wire type *1)          | ×      | ×      | ×                     |
|   | EMU4-HM1-MB | ○ (2-wire type *1)          | ×      | ×      | ×                     |
|   | EMU4-LG1-MB | ○ (2-wire type *1)          | ×      | ×      | ×                     |
| Electronic multi-measuring instrument           | ME110SSR-MB | ○ (2-wire type *1)          | ×      | ×      | ×                     |
|   | ME96NSR-MB  | ○ (2-wire type *1)          | ×      | ×      | ×                     |

\*1 Only MODBUS®/RTU connection is supported. Use the MODBUS®/RTU master communication driver.

\*2 Except GT2103-PMBDS2 and GT2103-PMBLS.

## ■ Applicable GOT models for each connection type

The GOT to be used differs depending on the connection type.

| Model     | Connection type  | Applicable model  |   |
|-----------|------------------|---|---|
| GT27/GT25 | RS-232           | All models<br>(Built-in interfaces of the GOT can be used.) |   |
|           | RS-422/485       |   |   |
|           | Ethernet         |   |   |
|           | CC-Link (via G4) |   |   |
|           | Other than above |   |   |
| GT23      | RS-232           | All models<br>(Built-in interfaces of the GOT can be used.) |   |
|           | RS-422/485       |   |   |
|           | Ethernet         |   |   |
|           | CC-Link (via G4) |   |   |
| GT21/GS21 | RS-232           | GT2107-WTBD<br>GT2107-WTSD<br>GT2104-RTBD<br>GT2103-PMBDS   | GT2103-PMBDS2<br>GS2110-WTBD<br>GS2107-WTBD                         |
|           | RS-422/485       | GT2107-WTBD<br>GT2107-WTSD<br>GT2104-RTBD<br>GT2103-PMBD    | GT2103-PMBDS<br>GT2103-PMBLS *1<br>GS2110-WTBD *2<br>GS2107-WTBD *2 |
|           | Ethernet         | GT2107-WTBD<br>GT2107-WTSD<br>GT2104-RTBD                   | GT2103-PMBD<br>GS2110-WTBD<br>GS2107-WTBD                           |
|           | CC-Link (via G4) | GT2107-WTBD<br>GT2107-WTSD<br>GT2104-RTBD<br>GT2103-PMBD    | GT2103-PMBDS<br>GT2103-PMBDS2<br>GS2110-WTBD<br>GS2107-WTBD         |
|           |                  |   |   |

\*1 Only connection with MELSEC iQ-F Series and MELSEC-F Series is supported.

\*2 Only RS-422 is supported.

# Specifications

## Connectable model list (GOT2000/GOT SIMPLE)

### ◆ Non-Mitsubishi programmable controllers/Motion controllers/Safety controllers

| Manufacturer                                      |                        | Model name                  |                 | GT27/GT25/GT23/GT21/GS21 *1 |                       |        |                                 |         |                        |   |
|---|------------------------|-----------------------------|-----------------|-----------------------------|-----------------------|--------|---------------------------------|---------|------------------------|---|
|   |                        |                             |                 | Ethernet connection         | Direct CPU connection |        | Serial communication connection |         | EtherNet/IP connection |   |
|   |                        |                             |                 |                             | RS-422                | RS-232 | RS-422                          | RS-232  |                        |   |
| OMRON Corporation                                 | SYSMAC CJ1             | CJ1H                        | CJ1M            | ○                           | ×                     | ○      | ○ *4                            |         | ×                      |   |
|   |                        | CJ1G                        |                 | ○                           | ×                     | ○      | ○ *4                            |         | ×                      |   |
|   | SYSMAC CJ2             | CJ2H                        |                 | ○                           | ×                     | ○      | ○ *4                            |         | ×                      |   |
|   |                        | CJ2M                        |                 | ○                           | ×                     | ○ *5   | ○ *4                            |         | ×                      |   |
|   | SYSMAC CPM             | CPM1                        | CPM1A           | ×                           | ×                     | ×      | ×                               | ○       | ×                      |   |
|   |                        | CPM2A                       |                 | ×                           | ×                     | ×      | ×                               | ○       | ×                      |   |
|   |                        | CPM2C                       |                 | ×                           | ×                     | ×      | ×                               | ○       | ×                      |   |
|   | SYSMAC CQM1            | CQM1                        |                 | ×                           | ×                     | ○ *8   | ×                               | ×       | ×                      |   |
|   | SYSMAC CQM1H           | CQM1H                       |                 | ×                           | ×                     | ○      | ×                               | ×       | ×                      |   |
|   | SYSMAC CP1             | CP1H                        | CP1L            | ×                           | ×                     | ×      | ○                               | ○       | ×                      |   |
|   |                        | CP1E (N type)               |                 | ×                           | ×                     | ○ *6   | ○ *6 *7                         | ○ *6 *7 | ×                      |   |
|   | SYSMAC CS1             | CS1H                        | CS1D *3         | ○                           | ×                     | ○      | ○                               | ○       | ×                      |   |
|   |                        | CS1G                        |                 | ○                           | ×                     | ○      | ○                               | ○       | ×                      |   |
|   | SYSMAC CVM1/CV *9      | CVM1-CPU11-V□               | CVM1-CPU01-V□   | CV1000-CPU01-V□             | CV2000-CPU01-V□       | ×      | ○ *4                            |         | ×                      | × |
|   |                        | CVM1-CPU01-V□               | CVM1-CPU01-V□   |                             |                       | ×      | ○ *4                            |         | ×                      | × |
|   | SYSMAC C200HS          | C200HS                      |                 | ×                           | ×                     | ×      | ○                               | ○       | ×                      |   |
|   | SYSMAC C200H           | C200H                       |                 | ×                           | ×                     | ×      | ○                               | ○       | ×                      |   |
| SYSMAC C1000H                                     | C1000H                 |                             | ×               | ×                           | ×                     | ○ *4   |                                 | ×       |                        |   |
| SYSMAC C2000H                                     | C2000H                 |                             | ×               | ×                           | ×                     | ○ *4   |                                 | ×       |                        |   |
| SYSMAC α  | C200HX                 | C200HE                      | ×               | ×                           | ○                     | ○      | ○                               | ×       |                        |   |
|   | C200HG                 |                             | ×               | ×                           | ○                     | ○      | ○                               | ×       |                        |   |
| NJ  | NJ501-□□□□             | NJ301-□□□□                  | ×               | ×                           | ×                     | ×      | ×                               | ○       |                        |   |
|   | NJ101-□□□□             |                             | ×               | ×                           | ×                     | ×      | ×                               | ○       |                        |   |
| NX  | NX1P2-□□□□□□           | NX701-□□□□                  | ×               | ×                           | ×                     | ×      | ×                               | ○       |                        |   |
|   | NX102-□□□□             |                             | ×               | ×                           | ×                     | ×      | ×                               | ○       |                        |   |
| KEYENCE CORPORATION                               | KV-7000                | KV-7300                     |                 | ○                           | ○                     | ○      | ○                               | ×       |                        |   |
|   |                        | KV-7500                     |                 | ○                           | ×                     | ×      | ○                               | ×       |                        |   |
|   | KV-5000                | KV-5000                     | KV-5500         | ○                           | ×                     | ×      | ○                               | ×       |                        |   |
|   |                        | KV-3000                     |                 | ○                           | ×                     | ○      | ○                               | ×       |                        |   |
|   | KV-1000                | KV-1000                     |                 | ○                           | ×                     | ○      | ○                               | ×       |                        |   |
|   |                        | KV-700                      |                 | ○                           | ×                     | ○      | ○                               | ×       |                        |   |
|   | KV Nano                | KV-N14□□                    |                 | ×                           | ×                     | ○      | ○                               | ○       | ×                      |   |
| KV-N24□□  |                        | KV-N40□□                    | ○               | ×                           | ○                     | ○      | ○                               | ×       |                        |   |
| KOYO ELECTRONICS INDUSTRIES CO., LTD. *2          | DirectLOGIC 05 Series  | D0-05AA                     | D0-05DD         | ×                           | ×                     | ○      | ○                               | ×       |                        |   |
|   |                        | D0-05AD                     |                 | D0-05DD-D                   | ×                     | ○      | ○                               | ×       |                        |   |
|   | DirectLOGIC 06 Series  | D0-06AR                     | D0-05DR         | ×                           | ○                     | ○      | ○                               | ×       |                        |   |
|   |                        | D0-06DA                     | D0-05DR-D       | ×                           | ○                     | ○      | ○                               | ×       |                        |   |
|   | DirectLOGIC 205 Series | D2-240                      | D2-260          | ×                           | ×                     | ○      | ○                               | ×       |                        |   |
| D2-250-1  |                        | ×                           |                 | ○                           | ○                     | ○      | ×                               |         |                        |   |
| KOSTAC SU Series                                  | SU-5E                  | SU-5M                       | ×               | ○                           | ○                     | ○      | ×                               |         |                        |   |
|   | SU-6B                  | SU-6M                       | ×               | ○                           | ○                     | ○      | ×                               |         |                        |   |
| PZ Series   | PZ3                    |                             | ×               | ○                           | ○                     | ×      | ×                               |         |                        |   |
| Sharp Corporation *2                              | JW-21CU                | JW-31CUH                    | JW-50CUH        | ×                           | ×                     | ×      | ○                               | ×       |                        |   |
|   |                        | JW-22CU                     | JW-70CUH        | ×                           | ×                     | ○ *4   | ○                               | ×       |                        |   |
|   | JW-32CUH               | JW-100CUH                   | ×               | ×                           | ○ *4                  | ○      | ×                               |         |                        |   |
|   | JW-33CUH               | JW-100CU                    | ×               | ×                           | ○ *4                  | ×      | ×                               |         |                        |   |
| Z-512J  |                        | ×                           | ×               | ○ *4                        | ×                     | ×      |                                 |         |                        |   |
| JTEKT Corporation *2                              | TOYOPUC Series         | PC2JC-CPU                   | PC2J16PR-CPU    | ×                           | ×                     | ○ *10  | ○                               | ○ *10   | ×                      |   |
|   |                        | PC2J16P-CPU                 |                 | ×                           | ×                     | ○ *10  | ○                               | ○ *10   | ×                      |   |
|   |                        | PC2J-CPU                    | PC2JR-CPU       | ×                           | ×                     | ×      | ○                               | ○ *10   | ×                      |   |
|   |                        | PC2JS-CPU                   |                 | ×                           | ×                     | ○ *10  | ○                               | ○ *10   | ×                      |   |
|   |                        | PC3JG-P-CPU                 | PC3JG-CPU       | ×                           | ×                     | ○ *10  | ○                               | ○ *10   | ×                      |   |
|   |                        | PC3JD-CPU                   | PC3JD-C-CPU     | ×                           | ×                     | ○ *10  | ○                               | ○ *10   | ×                      |   |
| TOSHIBA CORPORATION *2                            | PROSEC T Series        | T2 (PU224)                  |                 | ×                           | ○                     | ×      | ×                               | ×       |                        |   |
|   |                        | T2E                         | T2N             | ×                           | ○                     | ×      | ×                               | ×       |                        |   |
|   |                        | T3                          | T3H             | ×                           | ○                     | ×      | ×                               | ×       |                        |   |
|   | PROSEC V Series        | model 2000 (S2E)            | model 2000 (S2) | ×                           | ○                     | ×      | ×                               | ×       |                        |   |
| model 2000 (S2T)                                  |                        | model 3000 (S3)             | ×               | ○                           | ×                     | ×      | ×                               |         |                        |   |
| Unified Controller nv Series                      | PUB11                  |                             | ○               | ×                           | ×                     | ×      | ×                               |         |                        |   |
|   | PUM11                  | <b>NEW</b> PUM14 <b>NEW</b> | ○               | ×                           | ×                     | ×      | ×                               |         |                        |   |
|   | PUM12                  |                             | ○               | ×                           | ×                     | ×      | ×                               |         |                        |   |
| TOSHIBA MACHINE CO., LTD.                         | TCmini Series          | TC3-01                      | TC6-00          | ×                           | ×                     | ○      | ×                               | ×       |                        |   |
|   |                        | TC3-02                      | TC8-00          | ×                           | ×                     | ○      | ×                               | ×       |                        |   |
|   | Robot controller       | TC5-02                      | TC5-03          | ×                           | ○ *20                 | ×      | ×                               | ×       |                        |   |
| HITACHI Industrial Equipment Systems Co., Ltd. *2 | Large-sized H Series   | H-300                       | H-1002          | ×                           | ×                     | ○      | ○ *4                            |         | ×                      |   |
|   |                        | H-302                       | H-2000          |                             |                       |        | ○ *4                            |         |                        |   |
|   |                        | H-700                       | H-2002          |                             |                       |        | ○ *4                            |         |                        |   |
|   |                        | H-702                       | H-4010          |                             |                       |        | ○ *4                            |         |                        |   |
|   | H-200 to 252 Series    | H-200                       | H-252B          | ×                           | ×                     | ○      | ×                               | ×       | ×                      |   |
|   |                        | H-250                       | H-252C          | ×                           | ×                     | ○      | ×                               | ×       | ×                      |   |
|   | H Series board type    | HL-40DR                     | H-28DT          | ×                           | ×                     | ○      | ×                               | ×       | ×                      |   |
| HL-64DR   |                        | H-40DR                      |                 |                             |                       |        |                                 |         |                        |   |
| H-20DR  |                        | H-40DT                      |                 |                             |                       |        |                                 |         |                        |   |
| H-20DT  |                        | H-64DR                      |                 |                             |                       |        |                                 |         |                        |   |
| EH-150 Series                                     | H-28DR                 | H-64DT                      | ×               | ×                           | ○                     | ×      | ×                               | ×       |                        |   |
|   | EH-CPU104              | EH-CPU316                   |                 |                             |                       |        |                                 |         |                        |   |
|   | EH-CPU208              | EH-CPU516                   |                 |                             |                       |        |                                 |         |                        |   |
| Hitachi Ltd. *2                                   | S10V                   | LQP510                      |                 | ×                           | ○                     | ×      | ○                               | ×       |                        |   |
|   |                        | LQP520                      |                 | ×                           | ×                     | ×      | ○                               | ×       |                        |   |
|   | S10mini                | LQP000                      | LQP120          | ×                           | ×                     | ×      | ○                               | ○       | ×                      |   |
|   |                        | LQP010                      | LQP800          | ×                           | ×                     | ×      | ○                               | ○       | ×                      |   |
| LQP011  |                        | ×                           | ×               | ×                           | ○                     | ○      | ×                               |         |                        |   |
| FUJII ELECTRIC CO., LTD. *2                       | MICREX-F               | F55                         | F70             | ×                           | ×                     | ×      | ○                               | ×       |                        |   |
|   |                        | F120S                       | F15□S           | ×                           | ×                     | ×      | ○                               | ×       |                        |   |
|   |                        | F140S                       |                 | ×                           | ×                     | ×      | ○                               | ×       |                        |   |
| MICREX-SX SPH                                     | SPH200                 | SPH300                      | ○               | ×                           | ○                     | ○      | ○                               | ×       |                        |   |
|   | SPH2000                | SPH3000                     | ○               | ×                           | ○                     | ○      | ○                               | ×       |                        |   |

For the details of the connection configuration, please refer to the GOT2000 Series Connection Manual.

| Manufacturer                                | Model name                                      | GT27/GT25/GT23/GT21/GS21 *1                              |  |   |                                 |        |                        |   |   |
|---|---|--|--|---|---------------------------------|--------|------------------------|---|---|
|   |   | Ethernet connection                                      | Direct CPU connection  |   | Serial communication connection |        | EtherNet/IP connection |   |   |
|   |   |  | RS-422   | RS-232  | RS-422                          | RS-232 |                        |   |   |
| Panasonic Industrial Devices SUNX Co., Ltd. | FP0R<br>FP0-C16CT<br>FP0-C32CT                  | FP1-C24C<br>FP1-C40C                                     | ×  | ×   | ○                               | ×      | ×                      | × |   |
|   | FP2<br>FP2SH<br>FP3                             | FP5<br>FP10 (S)<br>FP10SH                                | ×  | ×   | ○                               | ×      | ○                      | × |   |
|   | FP-M (C20TC)<br>FP-M (C32TC)                    | FP Σ   | ×  | ×   | ○                               | ×      | ×                      | × |   |
|   | FP-X  |  | ×  | ×   | ○                               | ○      | ○                      | × |   |
|   | FP7   |  | ×  | ×   | ○                               | ○      | ○                      | × |   |
|   | GL120   | GL130  | ×  | ×   | ○ *2                            | ○ *2   | ×                      | × |   |
| YASKAWA Electric Corporation                | GL60S<br>GL60H                                  | GL70H  | ×  | ×   | ×                               | ○ *2   | ○ *2                   | × |   |
|   | CP-9200SH                                       |  | ○  | ×   | ×                               | ×      | ○                      | × |   |
|   | CP-9300MS                                       |  | ×  | ×   | ○ *2                            | ×      | ×                      | × |   |
|   | MP920   |  | ○  | ×   | ○                               | ○      | ○                      | × |   |
|   | MP930   |  | ×  | ×   | ○                               | ×      | ×                      | × |   |
|   | MP940   |  | ×  | ○   | ○                               | ×      | ×                      | × |   |
|   | PROGIC-8  |  | ×  | ×   | ○ *2                            | ×      | ×                      | × |   |
|   | CP-9200 (H)                                     |  | ×  | ×   | ○ *2                            | ×      | ×                      | × |   |
|   | CP-312  |  | ○  | ×   | ×                               | ×      | ○                      | × |   |
|   | CP-317  |  | ○  | ×   | ×                               | ×      | ○                      | × |   |
|   | MP2200<br>MP2300                                | MP2300S  | ○  | ×   | ×                               | ○      | ○                      | × |   |
|   | MP3200  | MP3300   | ○  | ×   | ×                               | ×      | ×                      | × |   |
|   | Yokogawa Electric Corporation *2                | FA500  | FA500  | ×   | ×                               | ×      | ○ *14                  |   | × |
|   |   | FA-M3  | F3SP05   | F3SP08  | ○                               | ×      | ○                      | ○ | × |
| F3SP10                                      |   |  |  | ×   | ×                               | ×      | ○                      | × |   |
| F3SP20                                      |   |  | F3SP30   | ×   | ×                               | ×      | ○                      | × |   |
| F3FP36                                      |   |  |  | ○   | ×                               | ×      | ○                      | × |   |
| F3SP21<br>F3SP25<br>F3SP28<br>F3SP35        |   |  | F3SP38<br>F3SP53<br>F3SP58<br>F3SP59   | ○   | ×                               | ○      | ○                      | × |   |
| F3SP66                                      |   |  | F3SP67   | ○   | ×                               | ○      | ○                      | × |   |
| F3SP22-0S                                   |   |  | ×  | ×   | ○                               | ×      | ×                      |   |   |
| F3SP71-4N                                   |   |  | ○  | ×   | ×                               | ×      | ×                      |   |   |
| F3SP71-4S                                   |   |  | ○  | ×   | ×                               | ○      | ×                      |   |   |
| F3SP76-7S                                   |   |  | ○  | ×   | ×                               | ×      | ×                      |   |   |
| STARDOM                                     |   | NFCP100  | NFJT100  | ○ *14   | ×                               | ○      | ×                      | × |   |
| Allen-Bradley (Rockwell Automation, Inc.)   |   | SLC500 Series *11  | SLC500-20<br>SLC500-30<br>SLC500-40  | SLC5/01<br>SLC5/02  | ×                               | ×      | ○ *2                   | × | × |
|   |   |  | SLC5/03<br>SLC5/04   | SLC5/05   | ×                               | ×      | ○                      | × | × |
|   | MicroLogix1000 Series (digital CPU) *11 *12 *13 |  | 1761-L10BWA<br>1761-L10BWB<br>1761-L16AWA<br>1761-L16BWA<br>1761-L16BWB<br>1761-L16BBB | 1761-L32AAA<br>1761-L32AWA<br>1761-L32BWA<br>1761-L32BWB<br>1761-L32BBB | ○ *15                           | ×      | ○                      | × | × |
|   |   | 1761-L20AWA-5A<br>1761-L20BWA-5A                         | 1761-L20BWB-5A   | ○ *15   | ×                               | ○      | ×                      | × |   |
|   |   | 1763-L16BWA  |  | ○ *15   | ×                               | ○      | ×                      | × |   |
|   |   | 1762-L24BWA  |  | ○ *15   | ×                               | ○      | ×                      | × |   |
|   |   | 1766-L32AWA  |  | ○ *15   | ×                               | ○      | ×                      | × |   |
|   | 1764-LSP  | 1764-LRP <b>NEW</b>                                      |  | ○ *15   | ×                               | ○      | ×                      |   |   |
|   | ControlLogix Series                             | 1756-L<br>1756-L1M1                                      | 1756-L1M2<br>1756-L1M3   | ○ *15   | ×                               | ○ *2   | ×                      | × |   |
|   |   | 1756-L55M12<br>1756-L55M13<br>1756-L55M14<br>1756-L55M16 | 1756-L55M22<br>1756-L55M23<br>1756-L55M24  | ○ *15   | ×                               | ○ *2   | ×                      | × |   |
|   |   | 1756-L61<br>1756-L62                                     | 1756-L63<br>1756-L64   | ○ *15   | ×                               | ○ *2   | ×                      | × |   |
|   |   | 1756-L72S  |  | ○ *15   | ×                               | ×      | ×                      | × |   |
|   |   | 1756-L71<br>1756-L72<br>1756-L73                         | <b>NEW</b> 1756-L74<br><b>NEW</b> 1756-L75<br><b>NEW</b>                               | <b>NEW</b>  | ○ *15                           | ×      | ×                      | × |   |
|   |   | 1756-L81E<br>1756-L82E<br>1756-L83E                      | <b>NEW</b> 1756-L84E<br><b>NEW</b> 1756-L85E<br><b>NEW</b>                             | <b>NEW</b>  | ○ *15                           | ×      | ×                      | × |   |
|   |   | CompactLogix Series                                      | 1769-L31<br>1769-L32C<br>1769-L35CR  |   | ×                               | ×      | ○ *2                   | × | × |
|   |   |  | 1769-L32E<br>1769-L35E   |   | ○ *15                           | ×      | ○ *2                   | × | × |
|   |   |  | FlexLogix Series *2  | 1794-L33<br>1794-L34  |                                 | ×      | ×                      | ○ | × |

# Specifications

## Connectable model list (GOT2000/GOT SIMPLE)

### ◆ Non-Mitsubishi programmable controllers/Motion controllers/Safety controllers

| Manufacturer                        | Model name                      | GT27/GT25/GT23/GT21/GS21 *1   |                       |        |                                 |        |                        |   |
|-------------------------------------|---------------------------------|---|-----------------------|--------|---------------------------------|--------|------------------------|---|
|                                     |                                 | Ethernet connection   | Direct CPU connection |        | Serial communication connection |        | EtherNet/IP connection |   |
|                                     |                                 |   | RS-422                | RS-232 | RS-422                          | RS-232 |                        |   |
| GE Intelligent Platforms, Inc. *2   | Series 90-30                    | IC693CPU311<br>IC693CPU313<br>IC693CPU323   | ×                     | ×      | ×                               | ○      | ○                      | × |
|                                     |                                 | IC693CPU350<br>IC693CPU360<br>IC693CPU363   | ×                     | ○      | ×                               | ○      | ○                      | × |
|                                     |                                 | IC697CGR772<br>IC697CGR935<br>IC697CPM790<br>IC697CPU731<br>IC697CPU780<br>IC697CPU788<br>IC697CPU789 | ×                     | ×      | ×                               | ○      | ○                      | × |
|                                     | VersaMax Micro                  | IC200UAA003   | ×                     | ○      | ○                               | ×      | ×                      | × |
|                                     |                                 | IC200UAR014<br>IC200UDD104<br>IC200UDD112   | ×                     | ×      | ○                               | ×      | ×                      | × |
|                                     |                                 | IC200UAA007<br>IC200UAL004<br>IC200UAL005<br>IC200UAL006  | ×                     | ○      | ○                               | ×      | ×                      | × |
|                                     |                                 | IC200UAR028<br>IC200UDD064<br>IC200UDD164<br>IC200UDD110  | ×                     | ○      | ○                               | ×      | ×                      | × |
|                                     |                                 | IC200UAA007<br>IC200UAL004<br>IC200UAL005<br>IC200UAL006  | ×                     | ○      | ○                               | ×      | ×                      | × |
|                                     |                                 | IC200UAR028<br>IC200UDD064<br>IC200UDD164<br>IC200UDD110  | ×                     | ○      | ○                               | ×      | ×                      | × |
|                                     | LS Industrial Systems Co., Ltd. | K300S   | ×                     | ×      | ×                               | ○      | ○                      | × |
|                                     |                                 | K200S   | ×                     | ×      | ×                               | ○      | ○                      | × |
|                                     |                                 | K120S   | ×                     | ×      | ○                               | ○      | ○                      | × |
| K80S                                |                                 | ×   | ×                     | ○      | ○                               | ○      | ×                      |   |
| Mitsubishi Electric India Pvt. Ltd. | Nexgenie 2000 PLC               | P2210<br>P2211  | P2213A<br>P2214       | ×      | ○                               | ×      | ×                      | × |
|                                     | Nexgenie 1000 PLC               | NG14RL<br>NG14RN<br>NG16ADL<br>NG16ADN  | NG16DL<br>NG16DN      | ×      | ○                               | ×      | ×                      | × |
| Schneider Electric SA               | Twido Series                    | ○ *14   | ×                     | ×      | ×                               | ×      | ×                      |   |
|                                     | Modicon Premium Series          | ○ *14   | ×                     | ×      | ×                               | ×      | ×                      |   |
|                                     | Modicon Quantum Series          | ○ *14   | ×                     | ×      | ×                               | ×      | ×                      |   |
| SICK AG                             | Flexi Soft Series               | FX3-CPU00000<br>FX3-CPU130002   | FX3-CPU320002         | ×      | ×                               | ○      | ×                      | × |
| Siemens AG                          | SIMATIC S7-200 Series           | ○ *17   | ×                     | ○      | ×                               | ×      | ×                      |   |
|                                     | SIMATIC S7-300 Series           | ○ *19   | ×                     | ○      | ×                               | ×      | ×                      |   |
|                                     | SIMATIC S7-400 Series           | ○ *19   | ×                     | ○      | ×                               | ×      | ×                      |   |
|                                     | SIMATIC S7-1200 Series          | ○ *17   | ×                     | ×      | ×                               | ×      | ×                      |   |
| SMC Corporation                     | LECA6                           | LECP6   | ×                     | ○ *18  | ×                               | ×      | ×                      |   |

\*1 Select an appropriate GT21 model depending on the connection type. For the details of applicable GOT models for each connection type, please refer to page 164.  
 \*2 GT21 and GS21 cannot be connected.  
 \*3 Connectable only when a single communication unit is used in a single CPU system.  
 \*4 Either RS-422 or RS-232 can be selected.  
 \*5 Only CJ2M-CPU1□ can be connected.  
 \*6 Connection is not available with the E type CP1E.  
 \*7 For CP1E (N type) CPU modules with 20 or less I/O points, only the direct CPU connection is available.  
 \*8 The CQM1-CPU11 is unable to communicate with GOT since the CQM1-CPU11 has no RS-232 interface.  
 \*9 SYSMAC CVM1/CV can be used with a CPU version 1 or later.  
 \*10 An RS-232/RS-422 interface converter (TXU-2051) is required.  
 \*11 Connection to DH485 network is available via adapter (1770-KF3).  
 \*12 DH485 connection can be used with a CPU in the series C or later. (DH485 protocol is not supported by a CPU in the series B or earlier.)

\*13 One-to-one connection is supported by a CPU in the series D or later. (DF1 half duplex is not supported by a CPU in the series C or earlier.)  
 \*14 Only MODBUS®/TCP connection is supported. Use the MODBUS®/TCP master communication driver.  
 \*15 EtherNet/IP (PCCP protocol) is supported.  
 \*16 Use EtherNet/IP Tag.  
 \*17 Only OP communication can be used in Ethernet connection of the S7-200 Series and the S7-1200 Series.  
 \*18 Only MODBUS®/RTU connection is supported. Use the MODBUS®/RTU master communication driver.  
 \*19 Only OP communication can be used on GT21 and GS21.  
 \*20 Only RS-485 is supported.  
 \*21 GT21 and GS21 do not support EtherNet/IP Tag.

### ■ Modules usable when connected with non-Mitsubishi controllers in serial communication connection, Ethernet connection, EtherNet/IP connection

| Manufacturer                                   | Ethernet  | RS-422   | RS-232   | EtherNet/IP |
|--|---|--|--|-------------|
| OMRON Corporation                              | CJ1W-EIP21<br>CJ1W-ETN21<br>CS1D-ETN21D<br>CS1W-EIP21<br>CS1W-ETN21 | CJ1W-SCU31-V1<br>CJ1W-SCU41(-V1)<br>CP1W-CIF11<br>CP1W-CIF12<br>CQM1-SCB41<br>CS1W-SCB41(-V1)<br>C200H-LK202-V1<br>C200HW-COM03<br>C200HW-COM06<br>C500-LK201-V1 | CJ1W-SCU21(-V1)<br>CJ1W-SCU41(-V1)<br>CPM1-CIF01<br>CPM2C-CIF01-V1<br>CP1W-CIF01<br>CQM1-CIF02<br>CQM1-SCB41<br>CS1W-SCB21(-V1)<br>CS1W-SCB41(-V1)<br>CS1W-SCU21(-V1)<br>C200HW-COM02<br>C200HW-COM05<br>C200HW-COM06<br>C200H-LK201-V1<br>C500-LK201-V1 | CJ1W-EIP21  |
| KEYENCE CORPORATION                            | KV-LE20V<br>KV-LE21V<br>KV-EP21V<br>KV-NC1EP *3                     | KV-L20<br>KV-L20R<br>KV-L20V<br>KV-NC20L<br>KV-N11L  | KV-L20<br>KV-L20R<br>KV-L20V<br>KV-NC10L<br>KV-NC20L<br>KV-N10L  | —           |
| KOYO ELECTRONICS INDUSTRIES CO., LTD.          | —   | D0-DCM<br>D2-DCM<br>U-01DM   | D0-DCM<br>D2-DCM<br>U-01DM   | —           |
| Sharp Corporation                              | —   | JW-10CM<br>JW-21CM<br>ZW-10CM  | —  | —           |
| JTEKT Corporation                              | —   | THU-2755<br>THU-2927<br>THU-5139   | —  | —           |
| Hitachi Industrial Equipment Systems Co., Ltd. | —   | COMM-H<br>COMM-2H  | COMM-H<br>COMM-2H  | —           |



For the details of the connection configuration, please refer to the GOT2000 Series Connection Manual.

| Manufacturer                                 |  | Ethernet  | RS-422  | RS-232  | EtherNet/IP   |
|--|--|---|---|---|---|
| Hitachi, Ltd.                                | Communication module                                     | —   | LQE165<br>LQE565                                      | LQE060<br>LQE160<br>LQE560  | —   |
| FUJII ELECTRIC CO., LTD.                     | RS-232C interface card                                   | —   | —   | NV1L-RS2  | —   |
|  | RS-232C/485 interface capsule                            |   | FFK120A-C10   | FFK120A-C10   |   |
|  | General-purpose interface module<br>Communication module |   | FFU120B<br>NC1L-RS4                                   | FFU120B<br>NC1L-RS2   |   |
|  |  |   | NP1L-RS1<br>NP1L-RS2<br>NP1L-RS3                      | NP1L-RS1<br>NP1L-RS4<br>NP1L-RS5  |   |
| Ethernet interface module                    | NP1L-ET1   | —   | —   |   |   |
| Panasonic Industrial Devices SUNX Co., Ltd.  | Computer communication unit<br>Communication cassette    | —   | AFPX-COM3<br>AFP7CCM1<br>AFP7CCM2<br>AFP7CCS1M1       | AFPG801<br>AFPG802<br>AFPX-COM1<br>AFPX-COM2<br>AFPX-COM4<br>AFP2462<br>AFP3462<br>AFP5462<br>AFP7CCS1<br>AFP7CCS2<br>AFP7CCS1M1<br>AFP0HCCS1<br>AFP0HCCS2<br>AFP0HCCS1M1 | —<br><b>NEW</b><br><b>NEW</b><br><b>NEW</b>   |
| YASKAWA Electric Corporation                 | MEMOBUS module<br>Communication module                   | CP-218IF<br>218IF<br>218IF-01<br>218IF-02 *1<br>218TXB  | JAMSC-IF612<br>JAMSC-120NOM27100<br>217IF<br>217IF-01 | CP-217IF<br>JAMSC-IF60<br>JAMSC-IF61<br>217IF<br>217IF-01<br>218IF-01<br>218IF-02 *1  | —   |
| Yokogawa Electric Corporation                | PC link module<br>Ethernet interface module              | F3LE01-5T<br>F3LE11-0T<br>F3LE12-0T   | F3LC11-2N<br>F3LC11-2F<br>LC02-0N                     | F3LC01-1N<br>F3LC11-1F<br>F3LC11-1N<br>F3LC12-1F<br>LC01-0N<br>LC02-0N  | —   |
| Allen-Bradley<br>(Rockwell Automation, Inc.) | EtherNet/IP communication module                         | 1756-ENBT<br>1756-ENET<br>1756-EN2T <b>NEW</b><br>1756-EN2TR<br>1756-EN3TR <b>NEW</b><br>1756-EN2TSC <b>NEW</b><br>1761-NET-ENI <b>NEW</b>                          | —   | —   | 1756-ENBT<br>1756-ENET *2<br>1756-EN2T<br>1756-EN2TR<br>1756-EN3TR <b>NEW</b><br>1756-EN2TSC <b>NEW</b><br>1788-ENBT/A <b>NEW</b> |
| GE Intelligent Platforms, Inc.               | Communication module                                     | —   | IC693CMM311<br>IC697CMM711                            | IC693CMM311<br>IC697CMM711  | —   |
| LS Industrial Systems Co., Ltd.              | Cnet I/F unit  | —   | G7L-CJUEC   | G7L-CJUEB   | —   |
|  | Cnet I/F module  | —   | G4L-CJUEA<br>G6L-CJUEC                                | G4L-CJUEA<br>G6L-CJUEB  | —   |
| Schneider Electric SA                        | Ethernet module  | TSX ETY 4102<br>TSX ETY 5102<br>140 NOE 771 00<br>140 NOE 771 10<br>140 NWM 100 00  | —   | —   | —   |
| Siemens AG                                   | Ethernet module  | —   | —   | —   | —   |
|  |  | CP 243-1<br>CP 243-1 IT<br>CP 343-1<br>CP 343-1 Advanced<br>CP 343-1 Advanced-IT<br>CP 343-1 IT<br>CP 343-1 Lean<br>CP 443-1<br>CP 443-1 IT<br>CP 443-1 Advanced-IT | —   | —   | —   |

\*1 When connecting MP2200, MP2300, or MP2300S using Ethernet connection or RS-232 connection, use a CPU of the software version 2.60 or later.

\*2 Use an EtherNet/IP communication module 1756-ENET of the version B or later.

\*3 When using KV-24□□, 40□□, or 60□□, a connection conversion unit (KV-N1) is required.

## ◆ Servo amplifiers

| Manufacturer          | Model name       | GT27/GT25/GT23 |        |
|-----------------------|------------------|----------------|--------|
|                       |                  | RS-485         | RS-232 |
| Panasonic Corporation | MINAS A4 Series  | ○              | ○      |
|                       | MINAS A4F Series | ○              | ○      |
|                       | MINAS A4L Series | ○              | ○      |
|                       | MINAS A5 Series  | ○              | ○      |

# Specifications

## Connectable model list (GOT2000/GOT SIMPLE)

### ◆ Robot controllers

| Manufacturer                        |   | Model name         |   |  | GT27/GT25/GT23/GT21/GS21 |        |
|-------------------------------------|---|--------------------|---|--|--------------------------|--------|
|                                     |   |                    |   |  | RS-422                   | RS-232 |
| IAI Corporation<br>X-SEL controller | ROBO CYLINDER RCA Series<br>dedicated program controller                    | ASEL               | ASEL  | ×  | ○                        |        |
|                                     | ROBO CYLINDER RCP2 Series<br>dedicated program controller                   | PSEL               | PSEL  | ×  | ○                        |        |
|                                     | Single-axis robot/linear servo/<br>ROBO CYLINDER RCS2<br>program controller | SSEL               | SSEL  | ×  | ○                        |        |
|                                     | Single-axis, multi-axis robot controller                                    | X-SEL              | XSEL-J<br>XSEL-K<br>XSEL-KE<br>XSEL-KET                   | XSEL-KT<br>XSEL-P<br>XSEL-Q              | ×                        | ○      |
|                                     | SCARA robot controller  | X-SEL              | XSEL-JX<br>XSEL-KTX<br>XSEL-KX                            | XSEL-PX<br>XSEL-QX                       | ×                        | ○      |
| IAI Corporation<br>ROBO CYLINDER    | RCA2/RCA Series<br>positioner controller                                    | ACON               | ACON-C<br>ACON-CG<br>ACON-CY                              | ACON-PL<br>ACON-PO<br>ACON-SE            | ○                        | ○      |
|                                     | ERC2 built-in positioner controller   | ERC2               | ERC2  |  | ○                        | ○      |
|                                     | RCP3/RCP2 Series<br>positioner controller                                   | PCON               | PCON-C<br>PCON-CA *1<br>PCON-CF<br>PCON-CFA *1<br>PCON-CG | PCON-CY<br>PCON-PL<br>PCON-PO<br>PCON-SE | ○                        | ○      |
|                                     | RCS2 Series<br>positioner controller  | SCON               | SCON-C<br>SCON-CA   |  | ○                        | ○      |
| TOSHIBA MACHINE CO., LTD.           | SCARA robot controller  | TTS2000<br>TTS2100 |   | ×  | ○                        |        |

\*1 Use PCON-CA or PCON-CFA of V0002 or later.

### ◆ Temperature controllers/Other control equipment

| Manufacturer      |                    | Model name                       |                            | GT27/GT25/GT23/GT21/GS21       |                                |        |          |       |
|-------------------|--------------------|----------------------------------|----------------------------|--------------------------------|--------------------------------|--------|----------|-------|
|                   |                    |                                  |                            | RS-485                         | RS-422                         | RS-232 | Ethernet |       |
| Azbil Corporation | AHC2001            | AHC2001                          |                            | ○ (4-wire type *11)            | ×                              | ○      | ×        |       |
|                   | AUR                | AUR350C                          | AUR450C                    | ○ (2-wire type *1)             | ×                              | ○ *2   | ×        |       |
|                   | CMC                | CMC10B                           |                            | ○ (4-wire type)                | ×                              | ○ *2   | ×        |       |
|                   | CMF                | CMF015                           |                            | ○ (2-wire type *1)             | ×                              | ○ *2   | ×        |       |
|                   |                    | CMF050                           |                            | ○ (2-wire type *1/4-wire type) | ×                              | ○ *2   | ×        |       |
|                   | CML                | CML                              |                            | ○ (2-wire type *1/4-wire type) | ×                              | ○ *2   | ×        |       |
|                   | CMS                | CMS                              |                            | ○ (2-wire type *1)             | ×                              | ○ *2   | ×        |       |
|                   | DMC                | DMC10                            |                            | ○ (2-wire type *1)             | ×                              | ○ *2   | ×        |       |
|                   |                    | DMC50                            |                            | ○ (2-wire type *1/4-wire type) | ×                              | ×      | ×        |       |
|                   | MPC                | MPC                              |                            | ○ (2-wire type *1)             | ×                              | ○ *2   | ×        |       |
|                   | MQV                | MQV                              |                            | ○ (2-wire type *1)             | ×                              | ○ *2   | ×        |       |
|                   | MVF                | MVF                              |                            | ○ (2-wire type *1)             | ×                              | ○ *2   | ×        |       |
|                   | NX                 | NX-D15<br>NX-D25                 | NX-D35                     |                                | ○ (2-wire type *1 *9)          | ×      | ×        | ○ *10 |
|                   |                    | NX-DX1<br>NX-DX2                 | NX-DY1<br>NX-DY2           |                                | ○ (2-wire type *1 *9)          | ×      | ×        | ○ *10 |
|                   |                    | NX-S01<br>NX-S11                 | NX-S12<br>NX-S21           |                                | ○ (2-wire type *1 *9)          | ×      | ×        | ○ *10 |
|                   | SDC                | SDC15<br>SDC25<br>SDC26          | SDC35<br>SDC36             |                                | ○ (2-wire type *1)             | ×      | ○ *2     | ×     |
|                   |                    | SDC45                            | SDC46                      |                                | ○ (2-wire type *1)             | ×      | ○ *2     | ×     |
|                   |                    | SDC20<br>SDC21<br>SDC30<br>SDC31 | SDC40A<br>SDC40B<br>SDC40G |                                | ○ (2-wire type *1/4-wire type) | ×      | ○ *2     | ×     |
|                   |                    | PBZ                              | PBC201-VN2                 |                                | ○ (2-wire type *1/4-wire type) | ×      | ○ *2     | ×     |
| RX                |                    | RX                               |                            | ○ (2-wire type *1)             | ×                              | ○ *2   | ×        |       |
| OMRON Corporation | INPANEL NEO        | E5ZN                             |                            | ○ (2-wire type *1)             | ×                              | ○ *2   | ×        |       |
|                   | THERMAC NEO        | E5AN<br>E5EN                     | E5CN<br>E5GN               |                                | ○ (2-wire type *1)             | ×      | ○ *2     | ×     |
|                   |                    | E5AN-H<br>E5AN-HT                | E5EN-H<br>E5EN-HT          |                                | ○ (2-wire type *1)             | ○      | ○ *2     | ×     |
|                   |                    | E5ON-H                           | E5CN-HT                    |                                | ○ (2-wire type *1)             | ×      | ○ *2     | ×     |
|                   | E5□C Series        | E5AC<br>E5CC<br>E5DC             | E5EC<br>E5GC               |                                | ○ (2-wire type *1)             | ×      | ○ *2     | ×     |
|                   |                    | E5CC-B                           | E5EC-B                     |                                | ○ (2-wire type *1)             | ×      | ○ *2     | ×     |
|                   |                    | E5AC-T<br>E5CC-T                 | E5EC-T                     |                                | ○ (2-wire type *1)             | ×      | ○ *2     | ×     |
|                   | E5□D Series        | E5CD<br>E5CD-B                   | E5ED<br>E5ED-B             |                                | ○ (2-wire type *1)             | ×      | ○ *2     | ×     |
|                   | THERMAC R          | E5AR<br>E5AR-T                   | E5ER<br>E5ER-T             |                                | ○ (2-wire type *1)             | ×      | ○ *2     | ×     |
|                   |                    | ACS-13A Series                   | ACS-13A-□□□, C5 *8         |                                | ○ (2-wire type *1)             | ×      | ○ *2     | ×     |
| DCL-33A Series    | DCL-33A-□□□, C5 *8 |                                  | ○ (2-wire type *1)         | ×                              | ○ *2                           | ×      |          |       |
| JC Series         | JCD-33A-□□□, C5 *8 |                                  |                            | ○ (2-wire type *1)             | ×                              | ○ *2   | ×        |       |
|                   | JCR-33A-□□□, C5 *8 |                                  |                            | ○ (2-wire type *1)             | ×                              | ○ *2   | ×        |       |
|                   | JCS-33A-□□□, C5 *8 |                                  |                            | ○ (2-wire type *1)             | ×                              | ○ *2   | ×        |       |
| JCM-33A Series    | JCM-33A-□□□, C5 *8 |                                  |                            | ○ (2-wire type *1)             | ×                              | ○ *2   | ×        |       |
| FCR-100 Series    | FCR-13A-□□□, C     | FCR-15A-□□□, C                   |                            | ×                              | ×                              | ○ *4   | ×        |       |
| FCD-100 Series    | FCD-13A-□□□, C     | FCD-15A-□□□, C                   |                            | ×                              | ×                              | ○ *4   | ×        |       |
| FCR-23A Series    | FCR-23A-□□□, C     |                                  |                            | ×                              | ×                              | ○ *4   | ×        |       |

Shinko Technos Co., Ltd.

\*12

For the details of the connection configuration, please refer to the GOT2000 Series Connection Manual.

| Manufacturer                         |   | Model name                                |  | GT27/GT25/GT23/GT21/GS21       |                                |         |          |       |
|--------------------------------------|---|---|--|--------------------------------|--------------------------------|---------|----------|-------|
|                                      |   |   |  | RS-485                         | RS-422                         | RS-232  | Ethernet |       |
| Shinko Technos Co., Ltd.<br>*12      | PC-900 Series                                 | PC935-□/M,C                               |  | X                              |                                |         |          |       |
|                                      |   | PC935-□/M,C5 *8                           |  | ○ (2-wire type *1)             | X                              | ○ *4    | X        |       |
|                                      |   | PC955-□/M,C                               |  | X                              |                                |         |          |       |
|                                      |   | PC955-□/M,C5 *8                           |  | ○ (2-wire type *1)             |                                |         |          |       |
|                                      | PCD-300 Series                                | PCD-33A-□/M,C5 *8                         |  | ○ (2-wire type *1)             | X                              | ○ *4    | X        |       |
|                                      | FIR Series                                    | FIR-201-M,C                               |  | X                              | X                              | ○ *4    | X        |       |
|                                      | JIR-301-M Series                              | JIR-301-M□,C5 *8                          |  | ○ (2-wire type *1)             | X                              | ○ *2    | X        |       |
| CHINO CORPORATION<br>*12             | AH3000 Series                                 | AH3000                                    |  | ○ (2-wire type *1)             | ○                              | ○       | X        |       |
|                                      | AL3000 Series                                 | AL3000                                    |  | ○ (2-wire type *1)             | ○                              | ○       | X        |       |
|                                      | DB1000 Series                                 | DB1000                                    |  | ○ (2-wire type *1)             | ○                              | ○       | X        |       |
|                                      | DB2000 Series                                 | DB2000                                    |  | ○ (2-wire type *1)             | ○                              | ○       | X        |       |
|                                      | DZ1000 Series                                 | DZ1000 *7                                 |  | ○ (2-wire type *1)             | ○                              | ○       | X        |       |
|                                      | DZ2000 Series                                 | DZ2000 *7                                 |  | ○ (2-wire type *1)             | ○                              | ○       | X        |       |
|                                      | GT120 Series                                  | GT120                                     |  | ○ (2-wire type *1)             | X                              | ○ *2    | X        |       |
|                                      | JJ Series                                     | JJ  |  | ○ (2-wire type *1)             | ○                              | X       | X        |       |
|                                      | KE Series                                     | KE3000                                    |  | ○ (2-wire type *1)             | ○                              | X       | X        |       |
|                                      | KP Series                                     | KP1000                                    | KP2000                                 | ○ (2-wire type *1)             | ○                              | ○       | X        |       |
|                                      | LE5000 Series                                 | LE5000                                    |  | ○ (2-wire type *1)             | ○                              | X       | X        |       |
|                                      | LT230 Series                                  | LT230                                     |  | ○ (2-wire type *1)             | X                              | ○ *2    | X        |       |
|                                      | LT300 Series                                  | LT350                                     | LT370                                  | ○ (2-wire type *1)             | ○                              | ○       | X        |       |
|                                      | LT400 Series                                  | LT450                                     | LT470                                  | ○ (2-wire type *1)             | ○                              | ○       | X        |       |
|                                      | LT830 Series                                  | LT830                                     |  | ○ (2-wire type *1)             | X                              | ○ *2    | X        |       |
| SE3000 Series                        | SE3000  |   | ○ (2-wire type *1)                     | ○                              | ○                              | X       |          |       |
| FUJII ELECTRIC CO., LTD.             | Temperature controller                        | PXF<br>PXG<br>PXR                         | NEW PXF4/5/9<br>PXG4/5/9<br>PXR3/4/5/9 | NEW                            | ○ (2-wire type *1)             | X       | ○ *2     | X     |
|                                      |   | Digital controller                        | PXH                                    | PXH9                           | ○ (2-wire type *1)             | X       | ○ *2     | X     |
|                                      | Multi-loop module type temperature controller | NEW PUM                                   | PUMA/B                                 | ○ (2-wire type *1)             | X                              | ○ *2    | X        |       |
| Yokogawa Electric Corporation<br>*12 | GREEN Series (UM)                             | UM330<br>UM331                            | UM350<br>UM351                         | ○ (2-wire type *1)             | X                              | ○ *2    | X        |       |
|                                      | GREEN Series (UP)                             | UP350<br>UP351                            | UP550                                  | ○ (2-wire type *1/4-wire type) | X                              | ○ *2    | X        |       |
|                                      |   | UP750                                     |  | ○ (2-wire type *1)             | X                              | ○ *2    | X        |       |
|                                      | GREEN Series (US)                             | US1000                                    |  | ○ (2-wire type *1)             | X                              | ○ *2    | X        |       |
|                                      | GREEN Series (UT)                             | UT320<br>UT321<br>UT350<br>UT351<br>UT420 | UT450<br>UT520<br>UT550<br>UT551       | ○ (2-wire type *1/4-wire type) | X                              | ○ *2    | X        |       |
|                                      |   | UT750                                     |  | ○ (2-wire type *1)             | X                              | ○ *2    | X        |       |
|                                      |   | UT100 Series (UP)                         | UP150                                  |                                | ○ (2-wire type *1)             | X       | ○ *2     | X     |
|                                      | UT100 Series (UT)                             | UT130<br>UT150                            | UT152<br>UT155                         | ○ (2-wire type *1)             | X                              | ○ *2    | X        |       |
|                                      | UT2000 Series                                 | UT2400                                    | UT2800                                 | ○ (4-wire type)                | X                              | ○ *2    | X        |       |
|                                      | UTAdvanced Series (UM)                        | UM33A                                     |  | ○ (2-wire type *1/4-wire type) | X                              | ○ *2    | ○ *10    |       |
|                                      | UTAdvanced Series (UP)                        | UP35A<br>UP32A                            | UP55A                                  | ○ (2-wire type *1/4-wire type) | X                              | ○ *2    | ○ *10    |       |
| NEW                                  |   |   | ○ (2-wire type *1/4-wire type)         | X                              | ○ *2                           | X       |          |       |
| UTAdvanced Series (UT)               | UT32A<br>UT35A<br>UT52A                       | UT55A<br>UT75A                            | ○ (2-wire type *1/4-wire type)         | X                              | ○ *2                           | ○ *10   |          |       |
| FKC INSTRUMENT INC.<br>*12           | SR Mini HG                                    | H-PCP-J                                   |  | ○ (2-wire type *1)             | ○                              | ○       | X        |       |
|                                      |   | H-PCP-A                                   | H-PCP-B *7                             | X                              | ○                              | ○       | X        |       |
|                                      | SRZ   | Z-CT<br>Z-DIO<br>Z-TIO                    |  | ○ (2-wire type *1 *6)          | ○ *5                           | ○ *2 *3 | ○ *10    |       |
|                                      |   | CB *7                                     | CB100<br>CB400<br>CB500                | CB700<br>CB900                 | ○ (2-wire type *1)             | X       | ○ *2     | X     |
|                                      | FB  | FB100                                     |  | ○ (2-wire type *1/4-wire type) | X                              | ○ *2    | ○ *10    |       |
|                                      |   | FB400                                     | FB900                                  |                                | ○ (2-wire type *1/4-wire type) | ○       | ○ *2 *3  | ○ *10 |
|                                      | RB  | RB100<br>RB400<br>RB500                   | RB700<br>RB900                         |                                | ○ (2-wire type *1)             | X       | ○ *2     | X     |
|                                      |   | PF  | PF900                                  | PF901                          | ○ (2-wire type *1/4-wire type) | ○       | ○ *2 *3  | X     |
|                                      | HA  | HA400<br>HA401                            | HA900<br>HA901                         |                                | ○ (2-wire type *1/4-wire type) | ○       | ○        | X     |
|                                      |   | RMC                                       | RMC500                                 |                                | ○ (2-wire type *1)             | X       | ○ *2     | X     |
|                                      | MA  | MA900                                     | MA901                                  | ○ (2-wire type *1/4-wire type) | ○                              | ○       | X        |       |
|                                      | AG  | AG500                                     |  | ○ (2-wire type *1/4-wire type) | ○                              | X       | X        |       |
|                                      | THV   | THV-A1                                    |  | ○ (2-wire type *1/4-wire type) | ○                              | X       | X        |       |
|                                      | SA  | SA100                                     | SA200                                  | ○ (2-wire type *1)             | X                              | ○ *2    | X        |       |
|                                      | SRX   | X-TIO                                     |  | ○ (2-wire type *1)             | X                              | ○ *2    | X        |       |
|                                      | SB1   | SB1                                       |  | ○ (2-wire type *1)             | X                              | ○ *2    | X        |       |
|                                      | B400  | B400                                      |  | ○ (2-wire type *1)             | ○                              | X       | X        |       |
|                                      | FZ  | FZ110                                     |  | ○ (2-wire type *1)             | X                              | ○ *2    | X        |       |
|                                      |   | FZ400                                     | FZ900                                  |                                | ○ (2-wire type *1)             | ○       | ○ *2 *3  | X     |
|                                      | RZ  | RZ100                                     | RZ400                                  | ○ (2-wire type *1)             | X                              | ○ *2    | X        |       |
| SRJ                                  | NEW J-TI-A                                    | J-TI-B                                    | ○ (2-wire type *1)                     | X                              | ○ *2                           | X       |          |       |

\*1 GT27/GT25: Use RS-422/485 interface, GT15-RS4-TE, or FA-LTBGT2R4CBL□. GT15-RS4-9S cannot be used.  
 \*2 If the temperature controller/indicating controller has an RS-485 interface, use an RS-232/RS-485 converter for the manufacturer.  
 \*3 If the temperature controller/indicating controller has an RS-422 interface, use an RS-232/RS-422 converter for the manufacturer.  
 \*4 Only the indicating controller equipped with RS-232 communication function can be connected.  
 \*5 Use a communication extension module (Z-COM).  
 \*6 Use a communication extension module (Z-COM) depending on the system configuration of the temperature controller.

\*7 Select a model that supports the MODBUS® communication function.  
 \*8 Connectable with the products manufactured in October 2007 or later (Indicating controllers with the serial numbers 07Axxxxx, 07Kxxxxx, and 07Xxxxxx or later).  
 \*9 Only MODBUS®/RTU connection is supported. Use the MODBUS®/RTU master communication driver.  
 \*10 Only MODBUS®/TCP connection is supported. Use the MODBUS®/TCP master communication driver.  
 \*11 Use a serial communication unit SCU.  
 \*12 GT21 and GS21 cannot be connected.

# Specifications

## Connectable model list (GOT2000/GOT SIMPLE)

### ◆ MODBUS® devices

Communication with MODBUS® compatible devices is possible by using the MODBUS®/RTU master or MODBUS®/RTU slave communication driver, or the MODBUS®/TCP master or MODBUS®/TCP slave communication driver.  
For the MODBUS® devices, which have been checked for operation, please refer to the Technical Bulletin "List of Valid Devices Applicable for GOT2000 Series MODBUS® Connection" (No. GOT-A-0070) on the Mitsubishi Electric Factory Automation Global website.

### ◆ PROFIBUS DP devices

Communication with PROFIBUS DP-compliant devices is possible by using the PROFIBUS DP communication driver. (GT27, GT25 only)  
For the PROFIBUS DP-compliant devices, please refer to the Technical Bulletin "List of PROFIBUS DP-compliant Equipment Validated to Operate with the GOT2000 Series" (No. GOT-A-0083) on the Mitsubishi Electric Factory Automation Global website.

### ◆ DeviceNet devices

Communication with DeviceNet-compliant devices is possible by using the DeviceNet communication driver. (GT27, GT25 only)  
For the DeviceNet-compliant devices, please refer to the Technical Bulletin "List of DeviceNet-compliant Equipment Validated to Operate with the GOT2000 Series" (No. GOT-A-0084) on the Mitsubishi Electric Factory Automation Global website.

### ◆ Microcomputer connection

By connecting a personal computer, microcomputer board, programmable controller, etc. to a GOT, the data can be written to or read from virtual devices of the GOT.

### ◆ SLMP devices

Communication with SLMP compatible devices is possible by using the SLMP communication driver.  
For the SLMP devices, which have been checked for operation, please refer to the Technical Bulletin "List of SLMP-compatible Equipment Validated to Operate with the GOT2000 Series" (No. GOT-A-0085) on the Mitsubishi Electric Factory Automation Global website.

### ◆ CC-Link IE Field Network Basic-compatible devices

Communication with CC-Link IE Field Network Basic-compatible devices is possible by using the Ethernet (CC-Link IE Field Network Basic) communication driver.  
The GOT2000 Series operates as a slave station and is connectable to CC-Link IE Field Network Basic-compatible devices that operate as master stations.  
For the CC-Link IE Field Network Basic-compatible devices, please refer to the Technical Bulletin "List of CC-Link IE Field Network Basic-compatible Equipment Validated to Operate with the GOT2000 Series" (No. GOT-A-0104) on the Mitsubishi Electric Factory Automation Global website.

### ■ Applicable GOT models for each connection type

The GOT to be used differs depending on the connection type.

| Model            | Connection type  | Applicable model   |                 |
|------------------|------------------|--|-----------------|
| GT27/GT25        | RS-232           | All models<br>(Built-in interfaces of the GOT can be used.)  |                 |
|                  | RS-422/485       |  |                 |
|                  | Ethernet         |  |                 |
|                  | CC-Link (via G4) |  |                 |
|                  | Other than above | GT27 all models<br>GT25 models excluding some models<br>(By mounting communication units on the GOT, bus connection, network connection, and others can be used.<br>No communication units can be mounted on GT2510-WXTBD, GT2510-WXTSD, GT2507-WTBD, GT2507-WTSD, GT2507T-WTSD, GT2505-VTBD, GT2506HS-VTBD, and GT2505HS-VTBD.) |                 |
| GT23             | RS-232           | All models<br>(Built-in interfaces of the GOT can be used.)  |                 |
|                  | RS-422/485       |  |                 |
|                  | Ethernet         |  |                 |
|                  | CC-Link (via G4) |  |                 |
| GT21/GS21        | RS-232           | GT2107-WTBD  | GT2103-PMBDS2   |
|                  |                  | GT2107-WTSD  | GS2110-WTBD     |
|                  |                  | GT2104-RTBD  | GS2107-WTBD     |
|                  |                  | GT2103-PMBDS   |                 |
|                  | RS-422/485       | GT2107-WTBD  | GT2103-PMBDS    |
|                  |                  | GT2107-WTSD  | GT2103-PMBSL *1 |
|                  |                  | GT2104-RTBD  | GS2110-WTBD *2  |
|                  |                  | GT2103-PMBSL   | GS2107-WTBD *2  |
| Ethernet         | GT2107-WTBD      | GT2103-PMBSL   |                 |
|                  | GT2107-WTSD      | GS2110-WTBD  |                 |
|                  | GT2104-RTBD      | GS2107-WTBD  |                 |
|                  |                  |  |                 |
| CC-Link (via G4) | GT2107-WTBD      | GT2103-PMBDS   |                 |
|                  | GT2107-WTSD      | GT2103-PMBDS2  |                 |
|                  | GT2104-RTBD      | GS2110-WTBD  |                 |
|                  | GT2103-PMBSL     | GS2107-WTBD  |                 |

\*1 Only connection with MELSEC iQ-F Series and MELSEC-F Series is supported.

\*2 Only RS-422 is supported.

Connectable model list (GT SoftGOT2000 Version1)

◆ Mitsubishi Electric programmable controllers/C Controller modules/Safety controllers/Motion controllers

| Series                  | Model name                      | Connection type               |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|-------------------------|---------------------------------|-------------------------------|-------------------------|-----------------------|------------------|---------------------------------|---------------------------|--|-------------------------------------|-------------------------|---------------------------------------|------------------|------------------|
|                         |                                 | Ethernet connection           |                         | Direct CPU connection |                  | Serial communication connection | CC-Link IE TSN connection | CC-Link IE Controller Network connection | CC-Link IE Field Network connection | MELSEC NET/H connection | MELSEC NET/10 connection <sup>1</sup> |                  |                  |
|                         |                                 | Single                        | Multi NEW               | RS-232                | USB              |                                 |                           |  |                                     |                         |                                       |                  |                  |
| Programmable controller | MELSEC iQ-R Series              | R00CPU NEW                    |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | R01CPU NEW                    |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | R02CPU NEW                    |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | R04CPU                        |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | R08CPU                        |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | R16CPU                        |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | R32CPU                        | ○                       | ○                     | ×                | ○                               | ○                         | ×  | ○                                   | ○                       | ×                                     | ×                |                  |
|                         |                                 | R120CPU                       |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | R04ENCPU                      |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | R08ENCPU                      |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | R16ENCPU                      |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | R32ENCPU                      |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | R120ENCPU                     |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | Safety CPU                    | R08SFCPU <sup>*27</sup> |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 |                               | R16SFCPU <sup>*27</sup> | ○                     | ○                | ×                               | ○                         | ○  | ×                                   | ○                       | ○                                     | ×                | ×                |
|                         | R32SFCPU <sup>*27</sup>         |                               |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         | R120SFCPU <sup>*27</sup>        |                               |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         | R08PCPU <sup>*28</sup>          |                               |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         | Process CPU                     | R16PCPU <sup>*28</sup>        | ○                       | ○                     | ×                | ○                               | ○                         | ×  | ○                                   | ○ <sup>*29</sup>        | ×                                     | ×                |                  |
|                         |                                 | R32PCPU <sup>*28</sup>        |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | R120PCPU <sup>*28</sup>       |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | R08PSFCPU <sup>*30</sup> NEW  |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | R16PSFCPU <sup>*30</sup> NEW  | ○                       | ○                     | ×                | ○                               | ×                         | ×  | ○                                   | ○ <sup>*29</sup>        | ×                                     | ×                |                  |
|                         | High-speed universal model QCPU | R32PSFCPU <sup>*30</sup> NEW  |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | R120PSFCPU <sup>*30</sup> NEW |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | Q03UDVCPU                     |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | Q04UDVCPU                     |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | Q06UDVCPU                     | ○ <sup>*23</sup>        | ○ <sup>*23</sup>      | ○ <sup>*18</sup> | ○                               | ○                         | ×  | ○ <sup>*2</sup>                     | ○ <sup>*4</sup>         | ○ <sup>*23</sup>                      | ○ <sup>*23</sup> |                  |
|                         |                                 | Q13UDVCPU                     |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | Q26UDVCPU                     |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | Universal model QCPU          | Q00UCPU                 |                       |                  |                                 |                           |  |                                     | ○ <sup>*2</sup>         |                                       |                  |                  |
|                         |                                 |                               | Q00UCPU                 |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 |                               | Q01UCPU                 |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         | Q02UCPU                         |                               |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         | Q03UDCPU                        |                               |                         |                       |                  |                                 |                           |  | ○ <sup>*3</sup>                     |                         |                                       |                  |                  |
|                         | Q04UDHCPU                       |                               | ○ <sup>*23</sup>        | ○ <sup>*23</sup>      | ○                | ○                               | ○                         | ×  |                                     | ○ <sup>*4</sup>         | ○ <sup>*23</sup>                      | ○ <sup>*23</sup> |                  |
|                         | Q06UDHCPU                       |                               |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         | Q10UDHCPU                       |                               |                         |                       |                  |                                 |                           |  |                                     | ○ <sup>*2</sup>         |                                       |                  |                  |
|                         | Q13UDHCPU                       |                               |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         | Q20UDHCPU                       |                               |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         | MELSEC-Q Series (Q mode)        | Q26UDHCPU                     |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | Q26UDHCPU                     |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | Built-in Ethernet type        | Q03UDECPU               |                       |                  |                                 |                           |  |                                     | ○ <sup>*3</sup>         |                                       |                  |                  |
|                         |                                 |                               | Q04UDEHCPU              |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 |                               | Q06UDEHCPU              |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 |                               | Q10UDEHCPU              |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 |                               | Q13UDEHCPU              | ○ <sup>*23</sup>      | ○ <sup>*23</sup> | ○ <sup>*18</sup>                | ○                         | ○  | ×                                   | ○ <sup>*2</sup>         | ○ <sup>*4</sup>                       | ○ <sup>*23</sup> | ○ <sup>*23</sup> |
|                         |                                 | Q20UDEHCPU                    |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | Q26UDEHCPU                    |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | Q50UDEHCPU                    |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         | Q100UDEHCPU                     |                               |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         | Basic model QCPU                | Q00JCPU                       |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | Q00CPU <sup>*6</sup>          | ○ <sup>*23</sup>        | ○ <sup>*23</sup>      | ○                | ×                               | ○                         | ×  | ○ <sup>*5</sup>                     | ×                       | ○ <sup>*23</sup>                      | ○ <sup>*23</sup> |                  |
|                         |                                 | Q01CPU <sup>*6</sup>          |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | Q02CPU <sup>*6</sup>          |                         |                       |                  | ×                               |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | Q02HCPU <sup>*6</sup>         |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         | High performance model QCPU     | Q06HCPU <sup>*6</sup>         | ○ <sup>*23</sup>        | ○ <sup>*23</sup>      | ○                | ○                               | ○                         | ×  | ○ <sup>*7</sup>                     | ×                       | ○ <sup>*23</sup>                      | ○ <sup>*23</sup> |                  |
|                         |                                 | Q12HCPU <sup>*6</sup>         |                         |                       |                  | ○                               |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | Q25HCPU <sup>*6</sup>         |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | Q02PHCPU                      |                         |                       |                  |                                 |                           |  | ○ <sup>*8</sup>                     |                         |                                       |                  |                  |
|                         |                                 | Q06PHCPU                      | ○ <sup>*23</sup>        | ○ <sup>*23</sup>      | ○                | ○                               | ○                         | ×  |                                     | ×                       | ○ <sup>*23</sup>                      | ○ <sup>*23</sup> |                  |
|                         | Process CPU                     | Q12PHCPU                      |                         |                       |                  |                                 |                           |  | ○ <sup>*9</sup>                     |                         |                                       |                  |                  |
|                         |                                 | Q25PHCPU                      |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | Q12PRHCPU                     | ○                       | ○                     | ○                | ○                               | ×                         | ×  | ○ <sup>*9</sup>                     | ×                       | ○ <sup>*10</sup>                      | ○ <sup>*10</sup> |                  |
|                         | Redundant CPU (main base)       | Q25PRHCPU                     |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | Q12PRHCPU                     | ○                       | ○                     | ×                | ×                               | ○                         | ×  | ×                                   | ×                       | ×                                     | ×                |                  |
|                         | Redundant CPU (extension base)  | Q25PRHCPU                     |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | Q12PRHCPU                     | ○                       | ○                     | ×                | ×                               | ○                         | ×  | ×                                   | ×                       | ×                                     | ×                |                  |
|                         | MELSEC-QS Series                | Q50UDEHCPU                    |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | Q100UDEHCPU                   | ○                       | ○                     | ×                | ○ <sup>*11</sup>                | ×                         | ×  | ○ <sup>*12</sup>                    | ○ <sup>*13</sup>        | ○                                     | ○                |                  |
|                         | MELSEC-L Series                 | L02SCPU                       | ○ <sup>*14</sup>        | ○ <sup>*14</sup>      | ○                | ○                               | ○                         | ×  | ×                                   | ○ <sup>*16</sup>        | ×                                     | ×                |                  |
|                         |                                 | L02SCPU-P                     | ○ <sup>*15</sup>        | ○ <sup>*15</sup>      | ○                | ○                               | ○                         | ×  | ×                                   | ○ <sup>*16</sup>        | ×                                     | ×                |                  |
|                         |                                 | L02CPU                        |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | L02CPU-P                      |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | L06CPU                        |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | L06CPU-P                      | ○ <sup>*14</sup>        | ○ <sup>*14</sup>      | ○ <sup>*17</sup> | ○                               | ○                         | ×  | ×                                   | ○ <sup>*16</sup>        | ×                                     | ×                |                  |
|                         |                                 | L26CPU                        |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | L26CPU-P                      |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | L26CPU-BT                     |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | L26CPU-PBT                    |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         | MELSEC iQ-F Series              | FX5U                          | ○                       | ○                     | ○                | ×                               | ×                         | ×  | ×                                   | ×                       | ×                                     | ×                |                  |
|                         |                                 | FX5UC                         |                         |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |
|                         |                                 | FX5UJ NEW                     |                         |                       |                  | ○                               |                           |  |                                     |                         |                                       |                  |                  |

• There are two ways of usage of GT SoftGOT2000: GT SoftGOT2000 for single channel connection and GT SoftGOT2000 (Multi-channel) for multi-channel connection. GT SoftGOT2000 (Multi-channel) supports Ethernet connection, connection to OPC UA servers, or connection to microcomputers. Therefore in the following list, Ethernet connection column is separated in two columns: Single (GT SoftGOT2000) and Multi (GT SoftGOT2000 (Multi-channel)). For connection with OPC UA servers or microcomputers, please refer to page 170.

• For the details of the connection configuration, please refer to the GT SoftGOT2000 Version1 Operating Manual.

# Specifications

- There are two ways of usage of GT SoftGOT2000: GT SoftGOT2000 for single channel connection and GT SoftGOT2000 (Multi-channel) for multi-channel connection. GT SoftGOT2000 (Multi-channel) supports Ethernet connection, connection to OPC UA servers, or connection to microcomputers. Therefore in the following list, Ethernet connection column is separated in two columns: Single (GT SoftGOT2000) and Multi (GT SoftGOT2000 (Multi-channel)). For connection with OPC UA servers or microcomputers, please refer to page 170.
- For the details of the connection configuration, please refer to the GT SoftGOT2000 Version1 Operating Manual.

| Series   | Model name         | Connection type                  |                  |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |                  |
|--|--------------------|----------------------------------|------------------|-----------------------|------------------|---------------------------------|---------------------------|--|-------------------------------------|-------------------------|---------------------------------------|------------------|------------------|------------------|
|  |                    | Ethernet connection              |                  | Direct CPU connection |                  | Serial communication connection | CC-Link IE TSN connection | CC-Link IE Controller Network connection | CC-Link IE Field Network connection | MELSEC NET/H connection | MELSEC NET/10 connection <sup>1</sup> |                  |                  |                  |
|  |                    | Single                           | Multi<br>NEW     | RS-232                | USB              |                                 |                           |  |                                     |                         |                                       |                  |                  |                  |
| Programmable controller                          | MELSEC-F Series    | FX0                              |                  |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |                  |
|  | FX0S               | ×                                | ×                | ○                     | ×                | ×                               | ×                         | ×  | ×                                   | ×                       | ×                                     | ×                | ×                |                  |
|  | FX0N               |                                  |                  |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |                  |
|  | FX1                |                                  |                  |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |                  |
|  | FX1S               | ×                                | ×                | ○                     | ×                | ×                               | ×                         | ×  | ×                                   | ×                       | ×                                     | ×                | ×                |                  |
|  | FX1N               |                                  |                  |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |                  |
|  | FX1NC              |                                  |                  |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |                  |
|  | FX2                |                                  |                  |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |                  |
|  | FX2C               | ×                                | ×                | ○                     | ×                | ×                               | ×                         | ×  | ×                                   | ×                       | ×                                     | ×                | ×                |                  |
|  | FX2N               |                                  |                  |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |                  |
|  | FX2NC              |                                  |                  |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |                  |
|  | FX3G               | ○                                | ○ <sup>*31</sup> | ○                     | ○                | ×                               | ×                         | ×  | ×                                   | ×                       | ×                                     | ×                | ×                |                  |
|  | FX3GC              |                                  |                  |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |                  |
| FX3U   |                    |                                  |                  |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |                  |
| FX3UC  | ○                  | ○ <sup>*31</sup>                 | ○                | ○                     | ×                | ×                               | ×                         | ×  | ×                                   | ×                       | ×                                     | ×                |                  |                  |
| FX3S   |                    |                                  |                  |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |                  |
| FX3GE  |                    |                                  |                  |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |                  |
| Controller module                                | MELSEC iQ-R Series | R12CCPU-V                        | ○ <sup>*25</sup> | ○ <sup>*25</sup>      | ×                | ○ <sup>*26</sup>                | ○ <sup>*19</sup>          | ×  | ○                                   | ○                       | ×                                     | ×                | ×                |                  |
|  | MELSEC-Q Series    | Q24DHCCPU-V                      |                  |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |                  |
|  |                    | Q24DHCCPU-VG                     |                  |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |                  |
|  |                    | Q24DHCCPU-LS                     | ○                | ○                     | ○ <sup>*18</sup> | ○                               | ○ <sup>*19</sup>          | ×  | ○ <sup>*2</sup>                     | ○                       | ○                                     | ○                | ○                |                  |
|  |                    | Q26DHCCPU-LS                     |                  |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |                  |
|  |                    | Q12DCCPU-V <sup>*20</sup>        |                  |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |                  |
| Safety controller                                | MELSEC-WS Series   | WS0-CPU0                         |                  |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |                  |
|  | WS0-CPU1           | ×                                | ×                | ×                     | ×                | ×                               | ×                         | ×  | ×                                   | ×                       | ×                                     | ×                | ×                |                  |
|  | WS0-CPU3           |                                  |                  |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |                  |
| Motion controller                                | MELSEC iQ-R Series | R16MTCPU                         | ○                | ○                     | ×                | ○                               | ○                         | ×  | ○                                   | ○                       | ×                                     | ×                | ×                |                  |
|  | R32MTCPU           |                                  |                  |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |                  |
|  | R64MTCPU           |                                  |                  |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |                  |
|  | MELSEC-Q Series    | Q172CPU <sup>Discontinued</sup>  | ×                | ×                     | ×                | ×                               | ×                         | ×  | ×                                   | ×                       | ×                                     | ×                | ×                | ×                |
|  |                    | Q173CPU <sup>Discontinued</sup>  |                  |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |                  |
|  |                    | Q172CPUN <sup>Discontinued</sup> | ×                | ×                     | ×                | ×                               | ×                         | ×  | ×                                   | ×                       | ×                                     | ×                | ×                | ×                |
|  |                    | Q173CPUN <sup>Discontinued</sup> |                  |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |                  |
|  |                    | Q172HCPU <sup>Discontinued</sup> | ×                | ×                     | ×                | ×                               | ×                         | ×  | ×                                   | ×                       | ×                                     | ×                | ×                | ×                |
|  |                    | Q173HCPU <sup>Discontinued</sup> |                  |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |                  |
|  |                    | Q172DCPU                         | ×                | ×                     | ×                | ×                               | ×                         | ×  | ×                                   | ×                       | ×                                     | ×                | ×                | ×                |
|  |                    | Q173DCPU                         |                  |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |                  |
|  |                    | Q172DCPU-S1                      | ×                | ×                     | ×                | ×                               | ×                         | ×  | ×                                   | ×                       | ×                                     | ×                | ×                | ×                |
|  |                    | Q173DCPU-S1                      |                  |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |                  |
|  |                    | Q172DSCPU                        | ○ <sup>*23</sup> | ○ <sup>*23</sup>      | ○ <sup>*18</sup> | ○                               | ○                         | ×  | ○                                   | ×                       | ○ <sup>*23</sup>                      | ○ <sup>*23</sup> | ○ <sup>*23</sup> | ○ <sup>*23</sup> |
|  |                    | Q173DSCPU                        |                  |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |                  |
|  |                    | Q170MCPU <sup>*21 *22</sup>      | ○ <sup>*23</sup> | ○ <sup>*23 *32</sup>  | ○                | ○                               | ○                         | ×  | ○                                   | ○ <sup>*4</sup>         | ○ <sup>*23</sup>                      | ○ <sup>*23</sup> | ○ <sup>*23</sup> | ○ <sup>*23</sup> |
|  |                    | Q170MSCPU <sup>*22</sup>         |                  |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |                  |
|  |                    | Q170MSCPU-S1 <sup>*22</sup>      | ○ <sup>*23</sup> | ○ <sup>*23</sup>      | ○                | ○                               | ○                         | ×  | ○                                   | ○                       | ○ <sup>*23</sup>                      | ○ <sup>*23</sup> | ○ <sup>*23</sup> | ○ <sup>*23</sup> |
| MR-MQ100   | ×                  | ×                                | ×                | ×                     | ×                | ×                               | ×                         | ×  | ×                                   | ×                       | ×                                     | ×                |                  |                  |
| MELSECNET/H remote I/O station                   | QJ72LP25-25        |                                  |                  |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |                  |
|  | QJ72LP25G          | ×                                | ×                | ○                     | ×                | ×                               | ×                         | ×  | ×                                   | ×                       | ×                                     | ×                | ×                |                  |
|  | QJ72BR15           |                                  |                  |                       |                  |                                 |                           |  |                                     |                         |                                       |                  |                  |                  |
| CC-Link IE Field Network head module             | MELSEC iQ-R Series | RJ72GF15-T2                      | ○                | ○                     | ×                | ○                               | ○                         | ×  | ×                                   | ○ <sup>*29</sup>        | ×                                     | ×                | ×                |                  |
|  | MELSEC-L Series    | LJ72GF15-T2                      | ×                | ×                     | ×                | ○                               | ○                         | ×  | ×                                   | ○                       | ×                                     | ×                | ×                |                  |
| CC-Link IE Field Network Ethernet adapter module |                    | NZ2GF-ETB <sup>*24</sup>         | ○                | ○                     | ×                | ×                               | ×                         | ×  | ×                                   | ×                       | ×                                     | ×                | ×                |                  |

<sup>\*1</sup> Includes the connection where MELSECNET/H is used in the MELSECNET/10 mode. Connection to the remote I/O network is not allowed.

<sup>\*2</sup> Use a CC-Link IE Controller Network module with the upper five digits of the serial No. later than 09042.

<sup>\*3</sup> Use a CPU and a CC-Link IE Controller Network module with the upper five digits of the serial No. later than 09042.

<sup>\*4</sup> Use a CPU with the upper five digits of the serial No. later than 12012.

<sup>\*5</sup> Use a CPU of function version B or later or a CC-Link IE Controller Network module of function version D or later.

<sup>\*6</sup> For the multiple CPU system configuration, use a CPU of function version B or later.

<sup>\*7</sup> Use a CPU with the upper five digits of the serial No. later than 09012. When the total number of stations in a network is 65 or more, use a CC-Link IE Controller Network module with the upper five digits of the serial No. 09042 or later.

<sup>\*8</sup> When the total number of stations in a network is 65 or more, use a CC-Link IE Controller Network module with the upper five digits of the serial No. 09042 or later.

<sup>\*9</sup> Use a CPU with the upper five digits of the serial No. later than 10042 or a CC-Link IE Controller Network module of function version D or later.

<sup>\*10</sup> Use a MELSECNET/H interface board driver (SW7DNC-MNETH-B) with the version K or later.

<sup>\*11</sup> Only the host station and the host station settings can be accessed. (Access to other stations or other PLC CPUs are not allowed.)

<sup>\*12</sup> Use a CPU with the upper five digits of the serial No. later than 10032 or a CC-Link IE Controller Network module of function version D or later.

<sup>\*13</sup> Use a CPU with the upper five digits of the serial No. later than 13042.

<sup>\*14</sup> When using a LJ71E71-100, use a CPU with the upper five digits of the serial No. later than 14112.

<sup>\*15</sup> Use a LJ71E71-100 since L02SCPU and L02SCPU-P have no built-in Ethernet port.

<sup>\*16</sup> Use a CPU with the upper five digits of the serial No. later than 13012.

<sup>\*17</sup> The adapter L6ADP-R2 is required.

<sup>\*18</sup> Access via the serial port (RS-232) of QCPU in the multiple CPU system since the CPU has no serial port.

<sup>\*19</sup> Use the serial port of a serial communication module controlled by another CPU on the multiple CPU system.

<sup>\*20</sup> Use a CPU with the upper five digits of the serial No. later than 12042.

<sup>\*21</sup> When using SV43, use the motion CPU on which any of the following main OS software version is installed. SW7DNC-SV43□□: 00F or later

<sup>\*22</sup> Only the PLC CPU area (CPU No.1) can be connected. The PERIPHERAL I/F cannot be used.

<sup>\*23</sup> In the Ethernet, MELSECNET/H, or MELSECNET/10 connection, to monitor a QCPU in the multiple CPU system, always use a network module of function version B or later.

<sup>\*24</sup> Devices of other stations can be monitored via NZ2GF-ETB. (Devices of the host station cannot be monitored.)

<sup>\*25</sup> Use the built-in Ethernet port since RJ71EN71 is not supported.

<sup>\*26</sup> Access via the RCP in the multiple CPU system since the CPU has no USB port to connect to a personal computer.

<sup>\*27</sup> Mount a safety function module R6SFM next to the RnSFCPU on the base unit. The RnSFCPU and the safety function module R6SFM must have the same pair version. If their pair versions differ, the RnSFCPU does not operate.

<sup>\*28</sup> Mount a redundant function module R6RFM next to the RnPCPU on the base unit when building a redundant system.

<sup>\*29</sup> In a redundant system, use a CC-Link IE Field Network interface board with the upper five digits of the serial No. 18042 or later.

<sup>\*30</sup> Mount the SIL2 function module R6PSFM and redundant function module R6RFM next to the RnPSFCPU on the base unit.

<sup>\*31</sup> The supported version of the main units varies depending on the Ethernet module to be used.

| Ethernet module <sup>*</sup> | CPU                |                               |                    |
|------------------------------|--------------------|-------------------------------|--------------------|
|                              | FX3U(C)            | FX3G(C)                       | FX3S               |
| FX3U-ENET-L                  | Ver. 2.21 or later | FX3U-ENET-L is not supported. |                    |
| FX3U-ENET-ADP <sup>*</sup>   | Ver. 3.10 or later | Ver. 2.00 or later            | Ver. 1.00 or later |

<sup>\*</sup>To connect to FX3SCPU, use FX3U-ENET-ADP Ver.1.20 or later.

<sup>\*32</sup> PERIPHERAL I/F can be used.

■ Modules usable when connected with Mitsubishi Electric programmable controllers/C Controller modules/  
Motion controllers

● Ethernet connection

● Programmable controller Ethernet modules

| CPU series  | Ethernet module                                    |
|---|--|
| MELSEC iQ-R Series<br>C Controller module (MELSEC iQ-R Series)<br>Motion controller (MELSEC iQ-R Series)<br>CC-Link IE Field Network head module (MELSEC iQ-R Series) | RJ71EN71 *4<br>RJ71GN11-T2 *6 *7 *8 *9 <b>NEW</b>  |
| MELSEC-Q Series (Q mode)<br>MELSEC-QS Series<br>C Controller module (MELSEC-Q Series)<br>Motion controller (MELSEC-Q Series) *1                                       | QJ71E71-100<br>QJ71E71-B5<br>QJ71E71-B2<br>QJ71E71 |
| MELSEC-L Series   | LJ71E71-100 *2                                     |
| MELSEC-F Series   | FX3U-ENET-L *3<br>FX3U-ENET-ADP *3 *5              |

\*1 When connecting to a Q170MCP/Q170MSCPU(-S1), only the PLC CPU area (CPU No.1) can be monitored. The PERIPHERAL I/F cannot be used.  
 \*2 When using a LJ71E71-100, use a CPU with the upper five digits of the serial No. later than 14112.  
 \*3 Options for extension controller may be required depending on the connected CPU.  
 \*4 Use firmware version 12 or higher when building a redundant system.  
 \*5 Use FX3U-ENET-ADP Ver.1.20 or higher to connect to FX3SCPU.  
 \*6 Only available to GT SoftGOT2000 (Multi-channel).  
 \*7 Usable with MELSEC iQ-R Series programmable controller CPUs only.  
 \*8 Use firmware version 11 or higher when using R00CPU, R01CPU, or R02CPU.  
 \*9 Use firmware version 43 or higher when using programmable controller CPUs (excluding R00CPU, R01CPU, R02CPU).

● Serial communication connection \*1

● Programmable controller serial communication modules

| CPU series  | Serial communication module                      |                     |
|---|--|---------------------|
| MELSEC iQ-R Series<br>C Controller module (MELSEC iQ-R Series)<br>Motion controller (MELSEC iQ-R Series)<br>CC-Link IE Field Network head module (MELSEC iQ-R Series) | RJ71C24 *3<br>RJ71C24-R2 *3                      |                     |
| MELSEC-Q Series (Q mode)<br>C Controller module (MELSEC-Q Series)<br>Motion controller (MELSEC-Q Series) *2   | QJ71C24<br>QJ71C24-R2<br>QJ71C24N<br>QJ71C24N-R2 | QJ71CMO<br>QJ71CMON |
| MELSEC-L Series<br>CC-Link IE Field Network head module (MELSEC-L Series)   | LJ71C24<br>LJ71C24-R2                            |                     |

\*1 Only RS-232C communication can be used.  
 \*2 When connecting to a Q170MCP/Q170MSCPU(-S1), only the PLC CPU area (CPU No.1) can be monitored.  
 \*3 Use firmware version 07 or higher when building a redundant system.

● CC-Link IE TSN connection

| CPU Series         | CC-Link IE TSN module |
|--------------------|-----------------------|
| MELSEC iQ-R Series | x                     |

● CC-Link IE Controller Network connection

● Network modules (programmable controller side)

| CPU series  | CC-Link IE Controller Network module |
|---|--------------------------------------|
| MELSEC iQ-R Series<br>C Controller module (MELSEC iQ-R Series)<br>Motion controller (MELSEC iQ-R Series)                        | RJ71GP21-SX *2                       |
| MELSEC-Q Series (Q mode)<br>MELSEC-QS Series<br>C Controller module (MELSEC-Q Series)<br>Motion controller (MELSEC-Q Series) *1 | QJ71GP21-SX<br>QJ71GP21S-SX          |

\*1 When connecting to a Q170MCP/Q170MSCPU(-S1), only the PLC CPU area (CPU No.1) can be monitored.  
 \*2 Use firmware version 12 or higher when building a redundant system.

● Network interface boards (personal computer side)

| Type                          | Network interface board   |
|-------------------------------|---|
| CC-Link IE Controller Network | Q80BD-J71GP21-SX<br>Q80BD-J71GP21S-SX<br>Q81BD-J71GP21-SX (optical loop)<br>Q81BD-J71GP21S-SX (optical loop, with external power supply function) |

# Specifications

- There are two ways of usage of GT SoftGOT2000: GT SoftGOT2000 for single channel connection and GT SoftGOT2000 (Multi-channel) for multi-channel connection. GT SoftGOT2000 (Multi-channel) supports Ethernet connection, connection to OPC UA servers, or connection to microcomputers. Therefore in the following list, Ethernet connection column is separated in two columns: Single (GT SoftGOT2000) and Multi (GT SoftGOT2000 (Multi-channel)). For connection with OPC UA servers or microcomputers, please refer to page 170.
- For the details of the connection configuration, please refer to the GT SoftGOT2000 Version1 Operating Manual.

## ● CC-Link IE Field Network connection

### • Network modules (programmable controller side)

| CPU series  | CC-Link IE Field Network module  |
|---|--|
| MELSEC iQ-R Series<br>C Controller module (MELSEC iQ-R Series)<br>Motion controller (MELSEC iQ-R Series)    | RJ71GF11-T2 *2<br>RJ71EN71<br>RD77GF4<br>RD77GF8<br>RD77GF16<br>RD77GF32 |
| MELSEC-Q Series (Q mode)<br>C Controller module (MELSEC-Q Series)<br>Motion controller (MELSEC-Q Series) *1 | QJ71GF11-T2  |
| MELSEC-QS Series  | QS0J71GF11-T2  |
| MELSEC-L Series   | LJ71GF11-T2  |
| MELSEC iQ-F Series  | x  |

- \*1 When connecting to a Q170MCP/Q170MSCPU(-S1), only the PLC CPU area (CPU No.1) can be monitored.  
\*2 Use firmware version 12 or higher when building a redundant system.

### • Network interface boards (personal computer side)

| Type                     | Network interface board |
|--------------------------|-------------------------|
| CC-Link IE Field Network | Q81BD-J71GF11-T2        |

## ● MELSECNET/H, MELSECNET/10 connection

### • Network modules (programmable controller side)

| CPU series  | MELSECNET/H, MELSECNET/10 network module |             |
|---|--|-------------|
|   | Optical loop                             | Coaxial bus |
| MELSEC-Q Series (Q mode) *1<br>MELSEC-QS Series<br>Motion controller (MELSEC-Q Series) *2 | QJ71LP21<br>QJ71LP21-25<br>QJ71LP21S-25  | QJ71BR11 *1 |
| C Controller module (MELSEC-Q Series)   | QJ71LP21-25<br>QJ71LP21S-25              |             |

- \*1 Use function version B or later of the MELSECNET/H network module and CPU.  
\*2 When connecting to a Q170MCP/Q170MSCPU(-S1), only the PLC CPU area (CPU No.1) can be monitored.

### • Network interface boards (personal computer side)

| Type        | Network interface board  |
|-------------|--|
| MELSECNET/H | Q80BD-J71LP21-25 (optical loop)<br>Q80BD-J71LP21S-25 (optical loop, with external power supply function)<br>Q80BD-J71LP21G (optical loop)<br>Q80BD-J71BR11 (coaxial loop)<br>Q81BD-J71LP21-25 (optical loop) |

## ◆ Mitsubishi Electric industrial computer NEW

| Series | Model name | Connection type     |   |                       |     |                                 |                           |  |                                     |                         |                             |                          |
|--------|------------|---------------------|---|-----------------------|-----|---------------------------------|---------------------------|--|-------------------------------------|-------------------------|-----------------------------|--------------------------|
|        |            | Ethernet connection |   | Direct CPU connection |     | Serial communication connection | CC-Link IE TSN connection | CC-Link IE Controller Network connection | CC-Link IE Field Network connection | MELSEC NET/H connection | MELSEC NET/10 connection *1 | MELIPC direct connection |
|        |            | Single              | Multi <span style="background-color: #cccccc;">NEW</span> | RS-232                | USB |                                 |                           |  |                                     |                         |                             |                          |
| MELIPC | MI5122-VW  | ○                   | ○   | x                     | x   | x                               | x                         | x  | ○                                   | x                       | x                           | ○                        |

- \*1 Only supports the case where MELSECNET/H is used in the MELSECNET/10 mode. Connection to the remote I/O network is not allowed.

## ◆ Mitsubishi Electric inverters NEW

| Series              | Model name       | Connection type     |   |        |        |                       |
|---------------------|------------------|---------------------|---|--------|--------|-----------------------|
|                     |                  | Ethernet connection |   | RS-485 | RS-232 | Multi-drop connection |
|                     |                  | Single              | Multi <span style="background-color: #cccccc;">NEW</span> |        |        |                       |
| FR-A800 Series      | FR-A8□□ *1       | x                   | ○ *3  | x      | x      | x                     |
|                     | FR-A8□2 *1       |                     |   |        |        |                       |
|                     | FR-A8□6 *1       |                     |   |        |        |                       |
|                     | FR-A8□0-E *2     |                     |   |        |        |                       |
|                     | FR-A8□2-E *2     |                     |   |        |        |                       |
|                     | FR-A8□6-E *2     |                     |   |        |        |                       |
|                     | FR-A8□0-GF *1    |                     |   |        |        |                       |
| FR-A8□2-GF *1       |                  |                     |   |        |        |                       |
| FR-A800 Plus Series | FR-A8□0-CRN *1   | x                   | ○ *3  | x      | x      | x                     |
|                     | FR-A8□2-CRN *1   |                     |   |        |        |                       |
|                     | FR-A8□0-E-CRN *2 |                     |   |        |        |                       |
|                     | FR-A8□2-E-CRN *2 |                     |   |        |        |                       |
|                     | FR-A8□0-R2R *1   |                     |   |        |        |                       |
|                     | FR-A8□2-R2R *1   |                     |   |        |        |                       |
| FR-F800 Series      | FR-F8□□ *1       | x                   | ○ *3  | x      | x      | x                     |
|                     | FR-F8□2 *1       |                     |   |        |        |                       |
|                     | FR-F8□6 *1       |                     |   |        |        |                       |
|                     | FR-F8□0-E *2     |                     |   |        |        |                       |
| FR-E700 Series      | FR-F8□2-E *2     | x                   | ○ *3  | x      | x      | x                     |
|                     | FR-E7□0-NE *2    |                     |   |        |        |                       |

- \*1 Inverter connection is supported by using CC-Link IE Field Network connection via a programmable controller CPU.  
\*2 Inverter connection is supported by using Ethernet connection via a programmable controller CPU.  
\*3 Connection is supported by using RJ71GN11-T2 via Ethernet.



◆ Mitsubishi Electric servo amplifiers (SSCNET III/H)

| Series             | Model name  | Motion controller or programmable controller |         | Connection type     |                  |                       |     |                                 |                           |  |                                     |                         |  |
|--------------------|---|--|---------|---------------------|------------------|-----------------------|-----|---------------------------------|---------------------------|--|-------------------------------------|-------------------------|--|
|                    |   |  |         | Ethernet connection |                  | Direct CPU connection |     | Serial communication connection | CC-Link IE TSN connection | CC-Link IE Controller Network connection | CC-Link IE Field Network connection | MELSEC NET/H connection | MELSEC NET/10 connection <sup>*1</sup> |
|                    |   |  |         | Single              | Multi <b>NEW</b> | RS-232                | USB |                                 |                           |  |                                     |                         |  |
| MELSERVO-J4 Series | MR-J4-□B<br>MR-J4-□B-RJ<br>MR-J4W2-□B<br>MR-J4W3-□B | —  | RnMTCPU | ○                   | ○                | ×                     | ○   | ○                               | ×                         | ○  | ○                                   | ×                       | ×                                      |
|                    |   | RD77MS                                       | RnCPU   | ○                   | ○                | ×                     | ○   | ○                               | ×                         | ○  | ○                                   | ×                       | ×                                      |
|                    |   | FX5-40SSC-S                                  | FX5CPU  | ○                   | ○                | ○                     | ○   | ×                               | ×                         | ×  | ×                                   | ×                       | ×                                      |
|                    |   | FX5-80SSC-S                                  | FX5CPU  | ○                   | ○                | ○                     | ○   | ×                               | ×                         | ×  | ×                                   | ×                       | ×                                      |
| MELSERVO-JE Series | MR-JE-□B  | RD77MS <sup>*2</sup>                         | RnCPU   | ○                   | ○                | ×                     | ○   | ○                               | ×                         | ○  | ○                                   | ×                       | ×                                      |
|                    |   | FX5-40SSC-S                                  | FX5CPU  | ○                   | ○                | ○                     | ×   | ×                               | ×                         | ×  | ×                                   | ×                       |  |
|                    |   | FX5-80SSC-S                                  | FX5CPU  | ○                   | ○                | ○                     | ×   | ×                               | ×                         | ×  | ×                                   | ×                       |  |

\*1 Only supports the case where MELSECNET/H is used in the MELSECNET/10 mode. Connection to the remote I/O network is not allowed.  
 \*2 Use a module with the firmware version 3 or later.

◆ Mitsubishi Electric robot controllers

| Series    | Controller name                | Connection type     |                  |                       |                 |                                 |                           |  |                                     |                         |  |
|-----------|--------------------------------|---------------------|------------------|-----------------------|-----------------|---------------------------------|---------------------------|--|-------------------------------------|-------------------------|--|
|           |                                | Ethernet connection |                  | Direct CPU connection |                 | Serial communication connection | CC-Link IE TSN connection | CC-Link IE Controller Network connection | CC-Link IE Field Network connection | MELSEC NET/H connection | MELSEC NET/10 connection <sup>*1</sup> |
|           |                                | Single              | Multi <b>NEW</b> | RS-232                | USB             |                                 |                           |  |                                     |                         |  |
| F Series  | CR750-Q(Q172DRCPU)             | ○ <sup>*2</sup>     | ○ <sup>*2</sup>  | ○ <sup>*3</sup>       | ○ <sup>*5</sup> | ○                               | ×                         | ○ <sup>*4</sup>                          | ○                                   | ○                       |  |
|           | CR751-Q(Q172DRCPU)             | ○                   | ○                | ×                     | ×               | ×                               | ×                         | ×  | ×                                   | ×                       |  |
|           | CR751-D                        | ○                   | ○                | ×                     | ×               | ×                               | ×                         | ×  | ×                                   | ×                       |  |
| SQ Series | CRnQ-700(Q172DRCPU)            | ○ <sup>*2</sup>     | ○ <sup>*2</sup>  | ○ <sup>*3</sup>       | ○ <sup>*5</sup> | ○                               | ×                         | ○ <sup>*4</sup>                          | ○                                   | ○                       |  |
| SD Series | CRnD-700                       | ○                   | ○                | ×                     | ×               | ×                               | ×                         | ×  | ×                                   | ×                       |  |
| FR Series | CR800-D                        | ○                   | ○ <sup>*7</sup>  | ×                     | ×               | ×                               | ×                         | ×  | ×                                   | ×                       |  |
|           | CR800-R(R16RTCPU)              | ○                   | ○                | ×                     | ○ <sup>*6</sup> | ×                               | ×                         | ×  | ×                                   | ×                       |  |
|           | CR800-Q(Q172DSRCPU) <b>NEW</b> | ○                   | ○                | ○ <sup>*3</sup>       | ○ <sup>*5</sup> | ○                               | ×                         | ○ <sup>*4</sup>                          | ○                                   | ○                       |  |

\*1 Only supports the case where MELSECNET/H is used in the MELSECNET/10 mode. Connection to the remote I/O network is not allowed.  
 \*2 The Display I/F of CRnQ-700, CR750/751-Q cannot be used. Ethernet connections can be established only via the Ethernet module (QJ71E71) or the built-in Ethernet port in the multiple CPU system (QnUDE).  
 \*3 Access via the serial port (RS-232) of QCPU in the multiple CPU system since CRnQ-700, CR750/751-Q, and CR800-Q have no serial port.  
 \*4 Use a CC-Link IE Controller Network module with the upper five digits of the serial No. later than 09042.  
 \*5 Access via QCPU in the multiple CPU system since CR750-Q, CR751-Q, CRnQ-700, and CR800-Q have no USB port.  
 \*6 Access via RCPU in the multiple CPU system since CR800-R has no USB port.  
 \*7 Connectable to the built-in LAN port of CR800-D in Ethernet connection.

◆ Mitsubishi Electric CNCs

| Series                | Connection type     |                  |                       |                 |                                 |                           |  |                                     |                         |  |
|-----------------------|---------------------|------------------|-----------------------|-----------------|---------------------------------|---------------------------|--|-------------------------------------|-------------------------|--|
|                       | Ethernet connection |                  | Direct CPU connection |                 | Serial communication connection | CC-Link IE TSN connection | CC-Link IE Controller Network connection | CC-Link IE Field Network connection | MELSEC NET/H connection | MELSEC NET/10 connection <sup>*1</sup> |
|                       | Single              | Multi <b>NEW</b> | RS-232                | USB             |                                 |                           |  |                                     |                         |  |
| CNC C80 (R16NCCPU-S1) | ○                   | ○                | ×                     | ○ <sup>*4</sup> | ×                               | ×                         | ×  | ×                                   | ×                       | ×                                      |
| CNC C70 (Q173NCCPU)   | ○                   | ○                | ○ <sup>*2</sup>       | ○               | ○                               | ×                         | ○ <sup>*3</sup>                          | ○                                   | ○                       | ○                                      |

\*1 Only supports the case where MELSECNET/H is used in the MELSECNET/10 mode. Connection to the remote I/O network is not allowed.  
 \*2 Access via the serial port (RS-232) of QCPU in the multiple CPU system since CNC C70 has no serial port.  
 \*3 Use a CC-Link IE Controller Network module with the upper five digits of the serial No. later than 09042.  
 \*4 Access via RCPU in the multiple CPU system since CNC C80 has no USB port.

◆ Non-Mitsubishi programmable controllers/Motion controllers

| Manufacturer                 | Model name                                       | Connection type                    |                    |                                |  |                 |   |
|------------------------------|--|------------------------------------|--------------------|--------------------------------|--|-----------------|---|
|                              |  | Ethernet connection                |                    | Direct CPU connection (RS-232) | Serial communication connection (RS-232) |                 |   |
|                              |  | Single                             | Multi <b>NEW</b>   |                                |  |                 |   |
| OMRON Corporation            | SYSMAC CJ1                                       | CJ1H                               | CJ1M               | ○                              | ○  | ○               | × |
|                              |  | CJ1G                               |                    | ○                              | ○  | ○               | × |
|                              | SYSMAC CJ2                                       | CJ2H                               |                    | ○                              | ○  | ○ <sup>*1</sup> | × |
|                              |  | CJ2M                               |                    | ○                              | ○  | ○               | × |
|                              | SYSMAC CPM                                       | CPM2A                              |                    | ×                              | ×  | ○               | × |
|                              | SYSMAC CQM1                                      | CQM1                               |                    | ×                              | ×  | ○ <sup>*2</sup> | × |
|                              | SYSMAC CQM1H                                     | CQM1H                              |                    | ×                              | ×  | ○               | × |
|                              | SYSMAC CP1                                       | CP1E (N type)                      |                    | ×                              | ×  | ○ <sup>*6</sup> | × |
|                              | SYSMAC CS1                                       | CS1H                               | CS1D <sup>*3</sup> | ○                              | ○  | ○               | × |
|                              |  | CS1G                               |                    | ○                              | ○  | ○               | × |
| SYSMAC CVM1/CV <sup>*4</sup> | CVM1-CPU11-V□<br>CVM1-CPU01-V□<br>CV500-CPU01-V□ | CV1000-CPU01-V□<br>CV2000-CPU01-V□ | ×                  | ×                              | ○  | ×               |   |
| SYSMAC α                     | C200HX   | C200HE                             | ×                  | ×                              | ○  | ×               |   |
|                              | C200HG   |                                    | ×                  | ×                              | ○  | ×               |   |
| NJ                           | NJ501-□□□□                                       | NJ301-□□□□                         | ×                  | ×                              | ×  | ×               |   |
|                              | NJ101-□□□□                                       |                                    | ×                  | ×                              | ×  | ×               |   |
|                              |  |                                    | ×                  | ×                              | ×  | ×               |   |
| KEYENCE CORPORATION          | KV-700   | KV-3000                            | ○                  | ○                              | ×  | ×               |   |
|                              | KV-1000  |                                    | ○                  | ○                              | ×  | ×               |   |
|                              | KV-5000  | KV-5500                            | ○                  | ○                              | ×  | ×               |   |
|                              | KV-7300  |                                    | ○                  | ○                              | ×  | ×               |   |
|                              | KV-7500  |                                    | ○                  | ○                              | ×  | ×               |   |

# Specifications

- There are two ways of usage of GT SoftGOT2000: GT SoftGOT2000 for single channel connection and GT SoftGOT2000 (Multi-channel) for multi-channel connection. GT SoftGOT2000 (Multi-channel) supports Ethernet connection, connection to OPC UA servers, or connection to microcomputers. Therefore in the following list, Ethernet connection column is separated in two columns: Single (GT SoftGOT2000) and Multi (GT SoftGOT2000 (Multi-channel)). For connection with OPC UA servers or microcomputers, please refer to page 170.
- For the details of the connection configuration, please refer to the GT SoftGOT2000 Version1 Operating Manual.

## ◆ Non-Mitsubishi programmable controllers/Motion controllers

| Manufacturer                  |                              | Model name          | Connection type           |                  |                                |  |   |   |
|-------------------------------|------------------------------|---------------------|---------------------------|------------------|--------------------------------|--|---|---|
|                               |                              |                     | Ethernet connection       |                  | Direct CPU connection (RS-232) | Serial communication connection (RS-232) |   |   |
|                               |                              |                     | Single                    | Multi <b>NEW</b> |                                |  |   |   |
| TOSHIBA CORPORATION           | Unified Controller nv Series | PU811               | ○                         | ○                | ×                              | ×  |   |   |
|                               |                              | PUM11 <b>NEW</b>    | ○                         | ○                | ×                              | ×  |   |   |
|                               |                              | PUM12 <b>NEW</b>    | ○                         | ○                | ×                              | ×  |   |   |
|                               |                              | PUM14 <b>NEW</b>    | ○                         | ○                | ×                              | ×  |   |   |
| YASKAWA Electric Corporation  |                              | GL120 GL130         | ×                         | ×                | ○                              | ×  |   |   |
|                               |                              | GL60S GL60H GL70H   | ×                         | ×                | ×                              | ○  |   |   |
|                               |                              | CP-9200SH           | ×                         | ×                | ×                              | ○  |   |   |
|                               |                              | CP-9300MS           | ×                         | ×                | ○                              | ×  |   |   |
|                               |                              | MP920               | ○                         | ○                | ○                              | ○  |   |   |
|                               |                              | MP930               | ×                         | ×                | ○                              | ×  |   |   |
|                               |                              | MP940               | ×                         | ×                | ○                              | ×  |   |   |
|                               |                              | PROGIC-8            | ×                         | ×                | ○                              | ×  |   |   |
|                               |                              | CP-9200 (H)         | ×                         | ×                | ○                              | ×  |   |   |
|                               |                              | CP-312              | ×                         | ×                | ×                              | ×  |   |   |
|                               |                              | CP-317              | ○                         | ○                | ×                              | ○  |   |   |
|                               |                              | MP2200              | ○                         | ○                | ×                              | ○  |   |   |
|                               |                              | MP2300              |                           | MP2300S          |                                |  | × | ○ |
|                               |                              | MP3200              |                           | MP3300           |                                |  | × | × |
| Yokogawa Electric Corporation | FA-M3                        | F3SP05 F3SP38       | ○                         | ○                | ×                              | ×  |   |   |
|                               |                              | F3SP08 F3SP53       |                           |                  |                                |  |   |   |
|                               |                              | F3FP36 F3SP58       |                           |                  |                                |  |   |   |
|                               |                              | F3SP21 F3SP59       |                           |                  |                                |  |   |   |
|                               |                              | F3SP25 F3SP66       |                           |                  |                                |  |   |   |
|                               |                              | F3SP28 F3SP67       |                           |                  |                                |  |   |   |
|                               |                              | F3SP35              |                           |                  |                                |  |   |   |
|                               | FA-M3V                       | F3SP71-4N F3SP76-7S | ○                         | ○                | ×                              | ×  |   |   |
|                               |                              | F3SP71-4S           | ○                         | ○                | ×                              | ×  |   |   |
|                               | STARDOM                      | NFCP100 NFJT100     | ○ *7                      | ○ *7             | ×                              | ×  |   |   |
| Siemens AG                    | SIMATIC S7-200 series *5     |                     | SIMATIC S7-400 series     |                  | ×                              | ×  |   |   |
|                               | SIMATIC S7-300 series        |                     | SIMATIC S7-1200 series *5 |                  |                                |  |   |   |
|                               |                              |                     |                           |                  |                                |  |   |   |

\*1 Only CJ2M-CPU1□ can be connected.

\*2 Connection to the CQM1-CPU11 is not allowed since the CQM1-CPU11 has no RS-232 interface.

\*3 Connection is supported only when a single communication unit is used in a single CPU system configuration.

\*4 SYSMAC CVM1/CV can be used with a CPU version 1 or later.

\*5 Only OP communication can be used in Ethernet connection of the S7-200 series and the S7-1200 series.

\*6 Connection is not available with the E type CP1E.

\*7 Only MODBUS®/TCP connection is supported. Use the MODBUS®/TCP master communication driver.

## ■ Modules usable when connected with non-Mitsubishi controllers in serial communication connection or Ethernet connection

| Manufacturer                  |                                     | Ethernet            |              | RS-232               |
|-------------------------------|-------------------------------------|---------------------|--------------|----------------------|
| OMRON Corporation             | Ethernet module                     | CS1W-ETN21          | CJ1W-ETN21   | —                    |
|                               |                                     | CS1W-EIP21          | CS1D-ETN21D  |                      |
| KEYENCE CORPORATION           | Ethernet module                     | KV-LE20V            | KV-LE21V     | —                    |
|                               |                                     | KV-EP21V <b>NEW</b> |              |                      |
| TOSHIBA CORPORATION           | Ethernet module                     | EN811               |              | —                    |
| YASKAWA Electric Corporation  | MEMOBUS module Communication module | 218IF               |              | JAMSC-IF60 217IF-01  |
|                               |                                     | 218IF-01            |              | JAMSC-IF61 218IF-01  |
|                               |                                     | 218IF-02 *1         |              | CP-217IF 218IF-02 *1 |
|                               |                                     | 218TXB              |              | 217IF                |
| Yokogawa Electric Corporation | Ethernet interface module           | F3LE01-5T           |              | —                    |
|                               |                                     | F3LE11-0T           |              |                      |
|                               |                                     | F3LE12-0T           |              |                      |
| Siemens AG                    | Ethernet module                     | CP243-1             | CP343-1 IT   | —                    |
|                               |                                     | CP243-1 IT          | CP343-1 Lean |                      |
|                               |                                     | CP343-1             | CP443-1      |                      |
|                               |                                     | CP343-1 Advanced    | CP443-1 IT   |                      |

\*1 To connect MP2200, MP2300, or MP2300S using Ethernet connection or RS-232 connection, use a CPU of software version 2.60 or later.

## ◆ MODBUS® devices

Communication is possible with devices compatible with MODBUS®/TCP master or MODBUS®/TCP slave connection.

For the MODBUS® devices, which have been checked for operation, please refer to the Technical Bulletin "List of Valid Devices Applicable for GOT2000 Series MODBUS® Connection" (No. GOT-A-0070) on the Mitsubishi Electric Factory Automation Global website.

## ◆ SLMP devices

Communication with SLMP compatible devices is possible.

For the SLMP devices, which have been checked for operation, please refer to the Technical Bulletin "List of SLMP-compatible Equipment Validated to Operate with the GOT2000 Series" (No. GOT-A-0085) on the Mitsubishi Electric Factory Automation Global website.

## ◆ OPC UA servers **NEW**

Communication with OPC UA servers is possible.

For the OPC UA servers, which have been checked for operation, please refer to the Technical Bulletin "List of OPC UA Servers Validated to Operate with the GOT2000 Series" (No. GOT-A-0137) on the Mitsubishi Electric Factory Automation Global website.

## ◆ Microcomputer connection **NEW**

By connecting a personal computer, microcomputer board, programmable controller, etc. to a GOT, the data can be written to or read from virtual devices of the GOT.

**Compatibility with conventional products**

**◆ Compatibility with GOT1000 Series**

The following shows the overview of replacing from the GOT1000 Series. For the details, please refer to the following Technical Bulletins and Renewal Guidance.

- Technical Bulletin “Precautions when Replacing GOT1000 Series with GOT2000 Series” No.GOT-A-0061 (GT16, GT15)
- Technical Bulletin “Precautions when Replacing the GT14 Model with GT2505(HS)-VTBD” No.GOT-A-0125 (GT14)
- Technical Bulletin “Precautions when Replacing GT11 Model with GT27 and GT25 Models” No.GOT-A-0145 (GT11)
- Technical Bulletin “Information and precautions on replacing GOT1000 with GOT2000 (GT10 model → GT21 model)” No.HIME-T-P-0137
- Renewal Guidance “GOT1000 Renewal Guidance” L(NA)08327ENG (GT16, GT15) **[Coming soon]**

**Panel cut dimensions**

The panel cut dimensions are the same if the GOT1000 Series and the GOT2000 Series have the same screen size. Changing mounting holes is not required.

| GOT1000 Series |   | GOT2000 Series  |
|----------------|---|---|
| 15"            | GT1695 *1, GT1595 *1                                  | Same dimensions as GT2715.  |
| 12.1"          | GT1685 *1, GT1585 *1                                  | Same dimensions as GT2712, GT2512.  |
| 10.4"          | GT167□ *1, GT157□ *1, GT1275 *1                       | Same dimensions as GT2710, GT2510-V, GT2310.  |
| 8.4"           | GT166□ *1, GT156□ *1, GT1265 *1                       | Same dimensions as GT2708, GT2508, GT2308.  |
| 5.7"           | GT1655 *1, GT155□ *1, GT145□ *2, GT115□ *1, GT105□ *1 | Same dimensions as GT2705, GT2505.  |
| 3.7"           | GT1020 *1   | Same dimensions as GT2103. (Although the screen size differs, panel cut dimensions are the same.) |

\*1 Discontinued product.  
\*2 To be discontinued product.

**Communication units, option units**

Communication units and option units for the GT16, GT15, GT12, or GT10 can be used with the GOT2000 Series as-is except for the following devices.

| GOT1000 Series         |   | GOT2000 Series                         | Remarks   |
|------------------------|---|--|---|
| Communication unit     | RS-422 conversion unit                          | GT15-RS2T4-9P *1<br>GT15-RS2T4-25P *1  | Use the built-in RS-422/485 interface or GT15-RS4-9S (serial communication unit)                  |
|                        | MELSECNET/10 communication unit                 | GT15-J71LP23-Z *1<br>GT15-J71BR13-Z *1 | GT15-J71LP23-25 (MELSECNET/H communication unit)<br>GT15-J71BR13 (MELSECNET/H communication unit) |
|                        | CC-Link communication unit (CC-Link (ID) Ver.1) | GT15-J61BT13-Z *1                      | GT15-J61BT13 (CC-Link communication unit)   |
|                        | Connection conversion adapter                   | GT10-9PT5S                             | —   |
|                        | Ethernet communication unit                     | GT15-J71E71-100 *1                     | Use the built-in Ethernet interface or GT25-J71E71-100 (Ethernet communication unit)              |
| Option unit            | Multimedia unit                                 | GT16M-MMR *1                           | GT27-MMR-Z (multimedia unit)  |
|                        | Video input unit                                | GT16M-V4 *1                            | GT27-V4-Z (video input unit)  |
|                        |   | GT15V-75V4 *1                          |   |
|                        | RGB input unit                                  | GT16M-R2 *1                            | GT27-R2 (RGB input unit)  |
|                        |   | GT15V-75R1 *1                          |   |
|                        | Video/RGB input unit                            | GT16M-V4R1 *1                          | GT27-V4R1-Z (video/RGB input unit)  |
|                        |   | GT15V-75V4R1 *1                        |   |
|                        | RGB output unit                                 | GT16M-ROUT *1                          | GT27-ROUT (RGB output unit)   |
| GT15V-75ROUT *1        |   |  |   |
| CF card unit           | GT15-CFCD *1                                    | —                                      |   |
| CF card extension unit | GT15-CFEX-C08SET *1                             | —                                      |   |

\*1 Discontinued product.

**Cables**

**<GT16, GT15>**

- For the details of using the bus connection cables, RS-232 cables, RS-422 cables, or other cables for GT16 or GT15 with GT27 or GT25, please refer to the Technical Bulletin “Precautions when Replacing GOT1000 Series with GOT2000 Series” No. GOT-A-0061.

**<GT14>**

- RS-232, RS-422, and other cables being used with GT14 can be used as-is with GT2505-VTBD or GT2505HS-VTBD.

**<GT10>**

- The cables being used with GT1020 can be used as-is with GT2103 (serial type).

**Project data**

The project data of the GOT1000 Series can be used as-is by converting the GOT Type using GT Designer3 Version 1.100E or later \*.

\* The supported version differs depending on the GOT2000 models.

**◆ Compatibility with GOT900 Series**

For the details, please refer to the following Technical Bulletins.

- Technical Bulletin “Precautions when Replacing GOT-A900 Series with GOT2000 Series” No.GOT-A-0062

**◆ Compatibility with GOT800, A77GOT, or A64GOT Series**

For the details, please refer to the following Technical Bulletins.

- Technical Bulletin “Precautions when Replacing A800, A77GOT, A64GOT Series with GOT2000 Series” No.GOT-A-0063

For the Technical Bulletins, please refer to the Mitsubishi Electric Factory Automation Global website ([www.MitsubishiElectric.com/fa/](http://www.MitsubishiElectric.com/fa/)).

# Product List

For the status of conforming to various standards and laws (CE, ATEX, UL/cUL, Class I Division 2, EAC, KC, KCs, and maritime certifications [ABS/BV/DNV GL/LR/NK/RINA]), please refer to the Mitsubishi Electric Factory Automation Global website ([www.MitsubishiElectric.com/fa/](http://www.MitsubishiElectric.com/fa/)).

## GOT model name

**GT27 15 - XTBA**

| Symbol | Screen size                                | Symbol | Structure  | Symbol | Resolution     | Symbol | Display section | Symbol | Panel color | Symbol | Power type           | Symbol  | Communication interface                                    |
|--------|--|--------|------------|--------|----------------|--------|-----------------|--------|-------------|--------|----------------------|---------|--|
| 15     | 15"  | None   | Standard   | WX     | WXGA           | T      | TFT color       | B      | Black       | A      | 100 V AC to 240 V AC | None *1 | Refer to Remarks column of GOT                             |
| 12     | 12.1"                                      | F      | Open frame | X      | XGA            | M      | TFT monochrome  | W      | White       | D      | 24 V DC              |         |  |
| 10     | 10.4", 10.1" widescreen, or 10" widescreen | HS     | Handy      | S      | SVGA           |        |                 | S      | Silver      | L      | 5 V DC               |         |  |
| 08     | 8.4"                                       | T      | Rugged     | W      | WVGA           |        |                 | N      | No frame    |        |                      | S *1    | RS-232 and RS-422/485 interfaces, or RS-422 interface only |
| 07     | 7" widescreen                              |        |            | V      | VGA            |        |                 |        |             |        |                      | S2 *1   | Two RS-232 interfaces                                      |
| 06     | 6.5"                                       |        |            | R      | 480 × 272 dots |        |                 |        |             |        |                      | -GF *2  | CC-Link IE Field Network communication unit set            |
| 05     | 5.7"                                       |        |            | P      | 320 × 128 dots |        |                 |        |             |        |                      |         |  |
| 04     | 4.3"                                       |        |            |        |                |        |                 |        |             |        |                      |         |  |
| 03     | 3.8"                                       |        |            |        |                |        |                 |        |             |        |                      |         |  |

\*1 For GT21 only  
\*2 For GT27/GT25 only

|             |   |
|-------------|---|
| <b>GT27</b> | Advanced model with multi-touch gesture functions |
| <b>GT25</b> | High-performance, cost efficient, mid-range model |
| <b>GT23</b> | Unchallenged cost performance                     |
| <b>GT21</b> | Compact models with basic functions               |
| <b>GS21</b> | Simple model with pursued usability               |

## GOTs

| Classification | Model        | Screen size      | Display section<br>Display color | Panel color            | Power                      | Remarks   |                            |
|----------------|--------------|------------------|----------------------------------|------------------------|----------------------------|---|----------------------------|
| GT27           | GT2715       | 15" XGA          | TFT color<br>65536 colors        | Black                  | 100 to 240 V AC<br>24 V DC | Multimedia & Video/RGB compatible<br>Multi-touch compatible |                            |
|                | GT2712       |                  |                                  | 12.1" SVGA             | Black                      |   | 100 to 240 V AC<br>24 V DC |
|                | GT2712-STBA  | White            |                                  |                        | 100 to 240 V AC<br>24 V DC |   |                            |
|                | GT2712-STBD  |                  |                                  |                        | 100 to 240 V AC<br>24 V DC |   |                            |
|                | GT2710       | 10.4" SVGA       |                                  | Black                  | 100 to 240 V AC<br>24 V DC |   |                            |
|                |              |                  |                                  | White                  | 100 to 240 V AC<br>24 V DC |   |                            |
|                |              | 10.4" VGA        |                                  | Black                  | 100 to 240 V AC<br>24 V DC |   |                            |
|                |              |                  |                                  | White                  | 100 to 240 V AC<br>24 V DC |   |                            |
|                | GT2708       | 8.4" SVGA        |                                  | Black                  | 100 to 240 V AC<br>24 V DC |   |                            |
|                |              |                  |                                  | White                  | 100 to 240 V AC<br>24 V DC |   |                            |
| 8.4" VGA       |              | Black            | 100 to 240 V AC<br>24 V DC       |                        |                            |   |                            |
| GT2705         | 5.7" VGA     | Black            | 100 to 240 V AC<br>24 V DC       | Multi-touch compatible |                            |   |                            |
| GT25           | GT2512       | 12.1" SVGA       | TFT color<br>65536 colors        | Black                  | 100 to 240 V AC<br>24 V DC | —   |                            |
|                | GT2512F-STNA |                  |                                  | —                      | 100 to 240 V AC<br>24 V DC |   | Open frame model           |
|                | GT2510       | 10.4" VGA        |                                  | Black                  | 100 to 240 V AC<br>24 V DC |   | —                          |
|                |              |                  |                                  | White                  | 100 to 240 V AC<br>24 V DC |   |                            |
|                |              | Open frame model |                                  | —                      | 100 to 240 V AC<br>24 V DC |   |                            |
|                |              |                  |                                  | —                      | 100 to 240 V AC<br>24 V DC |   |                            |
|                | GT2508       | 8.4" VGA         |                                  | Black                  | 100 to 240 V AC<br>24 V DC |   | —                          |
|                |              |                  |                                  | White                  | 100 to 240 V AC<br>24 V DC |   |                            |
|                |              | Open frame model |                                  | —                      | 100 to 240 V AC<br>24 V DC |   |                            |
|                |              |                  |                                  | —                      | 100 to 240 V AC<br>24 V DC |   |                            |
| GT2505         | 5.7" VGA     | Black            | 100 to 240 V AC<br>24 V DC       | —                      |                            |   |                            |
| GT25 Wide      | GT2510       | 10.1" WXGA       | TFT color<br>65536 colors        | Black                  | 24 V DC                    | Wide model  |                            |
|                | GT2507       | 7" WVGA          |                                  | Black                  | 24 V DC                    |   |                            |
| GT25 Handy     | GT2506       | 6.5" VGA         | TFT color<br>65536 colors        | Black                  | 24 V DC                    | Handy GOT   |                            |
|                | GT2505       | 5.7" VGA         |                                  | Black                  | 24 V DC                    |   |                            |
| GT25 Rugged    | GT2507       | 7" WVGA          | TFT color<br>65536 colors        | Silver                 | 24 V DC                    | Rugged model  |                            |
| GT23           | GT2310       | 10.4" VGA        | TFT color<br>65536 colors        | Black                  | 100 to 240 V AC<br>24 V DC | —   |                            |
|                | GT2308       | 8.4" VGA         |                                  | Black                  | 100 to 240 V AC<br>24 V DC |   |                            |

GOTs

| Classification |        | Model         | Screen size              | Display section<br>Display color   | Panel color | Power   | Remarks                         |
|----------------|--------|---------------|--------------------------|--|-------------|---------|---------------------------------|
| GT21<br>Wide   | GT2107 | GT2107-WTBD   | 7" WVGA                  | TFT color<br>65536 colors  | Black       | 24 V DC | Wide model                      |
|                |        | GT2107-WTSD   |                          |  | Silver *2   |         |                                 |
| GT21           | GT2104 | GT2104-RTBD   | 4.3"<br>[480 × 272 dots] | TFT color<br>65536 colors  | Black       | 24 V DC | Ethernet, RS-422/485,<br>RS-232 |
|                | GT2103 | GT2103-PMBD   | 3.8"<br>[320 × 128 dots] | TFT Monochrome (black/white)<br>32 shade grayscale<br>5-color LED<br>(white, green, pink, orange, red) | Black       | 24 V DC | Ethernet, RS-422/485            |
|                |        | GT2103-PMBDS  |                          |  |             | 24 V DC | RS-232, RS-422/485              |
|                |        | GT2103-PMBDS2 |                          |  |             | 24 V DC | RS-232 × 2 channels             |
|                |        | GT2103-PMBLS  |                          |  |             | 5 V DC  | RS-422 (FXCPU connection only)  |
| GS21           | GS2110 | GS2110-WTBD   | 10" WVGA                 | TFT color<br>65536 colors  | Black       | 24 V DC | GOT SIMPLE Series               |
|                | GS2107 | GS2107-WTBD   | 7" WVGA                  |  | Black       |         |                                 |

\*1 To comply with the ATEX directive and KCs regulation, protective sheet (GT25-□□PSCC-UC) and special fitting (GT25-□□FIT-EXS) in the "Options" list (page 176) are required separately. (Only protective sheet is required for GT2508-VTWD.) Communication units and option units cannot be used. When using these units, GOT does not conform to the standards. For the details, please refer to the Technical Bulletin "GOT2000 Series in Compliance with the ATEX Directive and KCs Certification Requirements" (No. GOT-A-0101) on the Mitsubishi Electric Factory Automation Global website ([www.MitsubishiElectric.com/fa/](http://www.MitsubishiElectric.com/fa/)).

\*2 The lower part of the panel including the USB environmental protection cover is black.

GOT + CC-Link IE Field Network communication unit sets

| Classification |        | Model          | Screen size | Display section<br>Display color | Panel color | Power                      | Remarks                     |
|----------------|--------|----------------|-------------|----------------------------------|-------------|----------------------------|-----------------------------|
| GT27           | GT2715 | GT2715-XTBA-GF | 15" XGA     | TFT color<br>65536 colors        | Black       | 100 to 240 V AC<br>24 V DC | GOT<br>+<br>GT15-J71GF13-T2 |
|                |        | GT2715-XTBD-GF |             |                                  | Black       | 100 to 240 V AC<br>24 V DC |                             |
|                | GT2712 | GT2712-STBA-GF | 12.1" SVGA  |                                  | Black       | 100 to 240 V AC<br>24 V DC |                             |
|                |        | GT2712-STBD-GF |             |                                  | White       | 100 to 240 V AC<br>24 V DC |                             |
|                |        | GT2712-STWA-GF |             |                                  | Black       | 100 to 240 V AC<br>24 V DC |                             |
|                | GT2710 | GT2710-STBA-GF | 10.4" SVGA  |                                  | Black       | 100 to 240 V AC<br>24 V DC |                             |
|                |        | GT2710-STBD-GF |             |                                  | White       | 100 to 240 V AC<br>24 V DC |                             |
|                |        | GT2710-VTBA-GF | 10.4" VGA   |                                  | Black       | 100 to 240 V AC<br>24 V DC |                             |
|                |        | GT2710-VTBD-GF |             |                                  | White       | 100 to 240 V AC<br>24 V DC |                             |
|                |        | GT2710-VTWA-GF |             |                                  | Black       | 100 to 240 V AC<br>24 V DC |                             |
|                | GT2708 | GT2708-STBA-GF | 8.4" SVGA   |                                  | Black       | 100 to 240 V AC<br>24 V DC |                             |
|                |        | GT2708-STBD-GF |             |                                  | White       | 100 to 240 V AC<br>24 V DC |                             |
|                |        | GT2708-VTBA-GF | 8.4" VGA    |                                  | Black       | 100 to 240 V AC<br>24 V DC |                             |
|                |        | GT2708-VTBD-GF |             |                                  | White       | 100 to 240 V AC<br>24 V DC |                             |
|                | GT2705 | GT2705-VTBD-GF | 5.7" VGA    |                                  | Black       | 24 V DC                    |                             |
| GT25           | GT2512 | GT2512-STBA-GF | 12.1" SVGA  | TFT color<br>65536 colors        | Black       | 100 to 240 V AC<br>24 V DC | GOT<br>+<br>GT15-J71GF13-T2 |
|                |        | GT2512-STBD-GF |             |                                  | Black       | 100 to 240 V AC<br>24 V DC |                             |
|                | GT2510 | GT2510-VTBA-GF | 10.4" VGA   |                                  | Black       | 100 to 240 V AC<br>24 V DC |                             |
|                |        | GT2510-VTBD-GF |             |                                  | White       | 100 to 240 V AC<br>24 V DC |                             |
|                |        | GT2510-VTWA-GF |             |                                  | Black       | 100 to 240 V AC<br>24 V DC |                             |
|                |        | GT2510-VTWD-GF |             |                                  | White       | 100 to 240 V AC<br>24 V DC |                             |
|                | GT2508 | GT2508-VTBA-GF | 8.4" VGA    |                                  | Black       | 100 to 240 V AC<br>24 V DC |                             |
|                |        | GT2508-VTBD-GF |             |                                  | White       | 100 to 240 V AC<br>24 V DC |                             |
|                |        | GT2508-VTWA-GF |             |                                  | Black       | 100 to 240 V AC<br>24 V DC |                             |
|                |        | GT2508-VTWD-GF |             |                                  | White       | 100 to 240 V AC<br>24 V DC |                             |

# Product List

## Communication units

| Product name                                     | Model                      | Specifications  | Supported model |                  |           |             |      |           |      |                  |   |
|--|----------------------------|---|-----------------|------------------|-----------|-------------|------|-----------|------|------------------|---|
|  |                            |   | GT27            | GT25             | GT25 Wide | GT25 Rugged | GT23 | GT21 Wide | GT21 | GS21             |   |
| Ethernet communication unit <sup>*1</sup>        | GT25-J71E71-100            | Data transfer method: 100BASE-TX, 10BASE-T  | ●               | ● <sup>*11</sup> | —         | —           | —    | —         | —    | —                | — |
| Serial communication unit                        | GT15-RS2-9P                | RS-232 serial communication unit (D-sub 9-pin male)   | ●               | ● <sup>*11</sup> | —         | —           | —    | —         | —    | —                | — |
|  | GT15-RS4-9S                | RS-422/485 serial communication unit (D-sub 9-pin female) <sup>*1 *2</sup>  | ●               | ● <sup>*11</sup> | —         | —           | —    | —         | —    | —                | — |
|  | GT15-RS4-TE                | RS-422/485 serial communication unit (terminal block) <sup>*1</sup><br>Can be used only when connected with temperature controllers/<br>indicating controllers by RS-485 connection or at the GOT multi-<br>drop connection   | ●               | ● <sup>*11</sup> | —         | —           | —    | —         | —    | —                | — |
| Q bus connection unit                            | GT15-QBUS                  | Q bus connection (1 channel) unit standard model  | ●               | ● <sup>*11</sup> | —         | —           | —    | —         | —    | —                | — |
|  | GT15-QBUS2                 | Q bus connection (2 channels) unit standard model   | ●               | ● <sup>*11</sup> | —         | —           | —    | —         | —    | —                | — |
|  | GT15-75QBUSL               | Q bus connection (1 channel) unit slim model <sup>*3</sup>  | ●               | ● <sup>*11</sup> | —         | —           | —    | —         | —    | —                | — |
|  | GT15-75QBUS2L              | Q bus connection (2 channels) unit slim model <sup>*3</sup>   | ●               | ● <sup>*11</sup> | —         | —           | —    | —         | —    | —                | — |
| MELSECNET/H communication unit                   | GT15-J71LP23-25            | Normal station unit (optical loop)  | ●               | ● <sup>*11</sup> | —         | —           | —    | —         | —    | —                | — |
|  | GT15-J71BR13               | Normal station unit (coaxial bus)   | ●               | ● <sup>*11</sup> | —         | —           | —    | —         | —    | —                | — |
| CC-Link IE TSN communication unit                | GT25-J71GN13-T2 <b>NEW</b> | Slave station (local station) unit  | ●               | ● <sup>*11</sup> | —         | —           | —    | —         | —    | —                | — |
| CC-Link IE Controller Network communication unit | GT15-J71GP23-SX            | Normal station unit (optical loop)  | ●               | ● <sup>*11</sup> | —         | —           | —    | —         | —    | —                | — |
| CC-Link IE Field Network communication unit      | GT15-J71GF13-T2            | Intelligent device station unit   | ●               | ● <sup>*11</sup> | —         | —           | —    | —         | —    | —                | — |
| CC-Link communication unit                       | GT15-J61BT13               | Intelligent device station unit CC-Link Ver. 2 compliant  | ●               | ● <sup>*11</sup> | —         | —           | —    | —         | —    | —                | — |
| Field network adapter unit                       | GT25-FNADP                 | Supported network: PROFIBUS DP, DeviceNet <sup>*4</sup>   | ●               | ● <sup>*11</sup> | —         | —           | —    | —         | —    | —                | — |
| Wireless LAN communication unit <sup>*5</sup>    | GT25-WLAN                  | IEEE802.11b/g/n compliant, built-in antenna, wireless LAN access point (base station) <sup>*6</sup> , station (client), connection to personal computer, tablet, smartphone<br>Compliance with: Japan Radio Law <sup>*7</sup> , FCC standards <sup>*8</sup> , RE Directive <sup>*13</sup> (R&TTE Directive <sup>*8</sup> ), SRRC <sup>*9</sup> , KC <sup>*9</sup> | ●               | ● <sup>*11</sup> | ●         | ●           | —    | —         | —    | —                | — |
| Serial multi-drop connection unit                | GT01-RS4-M                 | For GOT multi-drop connection   | ●               | ●                | ●         | ●           | ●    | ●         | ●    | ● <sup>*10</sup> | — |
| Connection conversion adapter                    | GT10-9PT5S                 | For connecting the RS-422/485 (D-Sub 9-pin connector) and RS-422/485 (terminal block)   | —               | ● <sup>*12</sup> | —         | —           | —    | —         | —    | —                | — |
| RS-232/485 signal conversion adapter             | GT14-RS2T4-9P              | For connecting the RS-232 (D-Sub 9-pin connector) and RS-485 (terminal block)   | —               | ● <sup>*12</sup> | —         | —           | —    | —         | —    | —                | — |

<sup>\*1</sup> May not be able to be used depending on the connection target. For details, please refer to the GOT2000 Series Connection Manual.

<sup>\*2</sup> Cannot be used when connected with temperature controllers or indicating controllers by RS-485 (2-wire type) connection.

<sup>\*3</sup> Cannot be stacked with other units.

<sup>\*4</sup> The unit should be used with an Anybus® CompactCom M40 network communication module manufactured by HMS. Please purchase the module by specifying the article number.

| Supported network | Communication module product name | Communication module article number |
|-------------------|-----------------------------------|-------------------------------------|
| PROFIBUS DP       | ABCC-M40-DPV1                     | AB6910-B, AB6910-C                  |
| DeviceNet         | ABCC-M40-DEV                      | AB6909-B, AB6909-C                  |

<sup>\*5</sup> Data transfer in wireless LAN communication may not be as stable as that in cable communication. A packet loss may occur depending on the surrounding environment and the installation location. Be sure to perform a confirmation of operation before using this product.

<sup>\*6</sup> When [Operation Mode] is set to [Access Point] in [Wireless LAN Setting] of GT Designer3, up to five stations are connectable.

<sup>\*7</sup> The product with hardware version A or later complies with the regulation. The product with hardware version A can be used only in Japan.

<sup>\*8</sup> The product with hardware version B or later complies with the regulation. The product with hardware version B or later can be used in Japan, the United States, the EU member states, Switzerland, Norway, Iceland, and Liechtenstein.

<sup>\*9</sup> The product with hardware version D or later complies with the regulation. The product with hardware version D or later can be used in Japan, the United States, the EU member states, Switzerland, Norway, Iceland, Liechtenstein, China (excluding Hong Kong, Macau, Taiwan), and South Korea.

<sup>\*10</sup> Available to GT2104-RTBD, GT2103-PMBD, and GT2103-PMBDS.

<sup>\*11</sup> Not available to GT2505-VTBD, GT2506HS-VTBD, and GT2505HS-VTBD.

<sup>\*12</sup> Only available to GT2505-VTBD.

<sup>\*13</sup> The product complies with the RE Directive from March 31, 2017.

## Communication units for GT25 Handy GOT

| Product name                      | Model      | Specifications  | Supported model |              |
|-----------------------------------|------------|---|-----------------|--------------|
|                                   |            |   | GT2506 Handy    | GT2505 Handy |
| Serial multi-drop connection unit | GT01-RS4-M | For GOT multi-drop connection   | ●               | —            |
| Connection conversion adapter     | GT10-9PT5S | For connecting the RS-422/485 (D-Sub 9-pin connector) and RS-422/485 (terminal block) | ● <sup>*1</sup> | —            |

<sup>\*1</sup> Usable only when the connector conversion box GT16H-CNB-42S is used.

Option units

| Product name              | Model       | Specifications  | Supported model |      |           |            |             |      |           |      |      |   |
|---------------------------|-------------|---|-----------------|------|-----------|------------|-------------|------|-----------|------|------|---|
|                           |             |   | GT27            | GT25 | GT25 Wide | GT25 Handy | GT25 Rugged | GT23 | GT21 Wide | GT21 | GS21 |   |
| Printer unit              | GT15-PRN    | USB slave (PictBridge) for printer connection, 1 channel<br>Cable for connection between printer unit and printer (3m) included | ●               | ●*3  | —         | —          | —           | —    | —         | —    | —    | — |
| Multimedia unit           | GT27-MMR-Z  | For video input (NTSC/PAL), 1 channel, recording video/<br>playing video files  | ●*1             | —    | —         | —          | —           | —    | —         | —    | —    | — |
| Video input unit          | GT27-V4-Z   | For video input (NTSC/PAL), 4 channels  | ●*1             | —    | —         | —          | —           | —    | —         | —    | —    | — |
| RGB input unit            | GT27-R2     | For analog RGB input, 2 channels (simultaneous display)   | ●*1             | —    | —         | —          | —           | —    | —         | —    | —    | — |
| Video/RGB input unit      | GT27-V4R1-Z | For video input (NTSC/PAL), 4 channels/analog RGB,<br>1 channel input   | ●*1             | —    | —         | —          | —           | —    | —         | —    | —    | — |
| RGB output unit           | GT27-ROUT   | For analog RGB output, 1 channel (slim unit)  | ●*1             | —    | —         | —          | —           | —    | —         | —    | —    | — |
| Digital video output unit | GT27-VHOUT  | For digital video output, 1 channel<br>HDMI Type A connector  | ●*1             | —    | —         | —          | —           | —    | —         | —    | —    | — |
| Sound output unit         | GT15-SOUT   | For sound output (ø3.5 stereo pin jack)   | ●               | ●*3  | —         | —          | —           | —    | —         | —    | —    | — |
| External I/O unit         | GT15-DIOR   | For connecting an external I/O device and an operation panel<br>(negative common input, source type output)                     | ●               | ●*3  | —         | —          | —           | —    | —         | —    | —    | — |
|                           | GT15-DIO    | For connecting an external I/O device and an operation panel<br>(positive common input, sink type output)                       | ●               | ●*3  | —         | —          | —           | —    | —         | —    | —    | — |
| SD memory card unit       | GT21-03SDCD | For mounting an SD memory card  | —               | —    | —         | —          | —           | —    | —         | —    | ●*2  | — |

\*1 Not available to GT2705-VTBD.

\*3 Not available to GT2505-VTBD.

\*2 Only available to GT2103-PMBD, GT2103-PMBDS, and GT2103-PMBDS2.

Software

| Product name   | Model            | Description                      | Supported model |      |           |            |             |      |           |      |      |   |
|--|------------------|----------------------------------|-----------------|------|-----------|------------|-------------|------|-----------|------|------|---|
|  |                  |                                  | GT27            | GT25 | GT25 Wide | GT25 Handy | GT25 Rugged | GT23 | GT21 Wide | GT21 | GS21 |   |
| HMI/GOT Screen Design Software<br>MELSOFT GT Works3  | SW1DND-GTWK3-E   | Standard license product         | DVD-ROM         | ●    | ●         | ●          | ●           | ●    | ●         | ●    | ●    | ● |
|  | SW1DND-GTWK3-EA  | Volume license product *1 *9     |                 | ●    | ●         | ●          | ●           | ●    | ●         | ●    | ●    | ● |
|  | SW1DND-GTWK3-EAZ | Additional license product *1 *6 |                 | ●    | ●         | ●          | ●           | ●    | ●         | ●    | ●    | ● |
| FA Integrated Engineering Software<br>MELSOFT iQ Works *2 *3                               | SW2DND-IQWK-E    | Standard license product         | DVD-ROM         | ●    | ●         | ●          | ●           | ●    | ●         | ●    | ●    | ● |
| GT Works Text to Speech License *7   | SW1DND-GTVO-M    | Standard license product         |                 | ●    | ●*8       | ●          | —           | ●    | —         | —    | —    | — |
| GT Works3 Add-on License for<br>GOT2000 Enhanced Drive Control<br>(Servo) Project Data *10 | SW1DND-GTSV-MZ   | Standard license product         |                 | ●    | ●         | ●          | ●           | ●    | —         | —    | —    | — |
| License key for GT SoftGOT2000 *4  | GT27-SGTKEY-U    | USB port license key             |                 | —    | —         | —          | —           | —    | —         | —    | —    | — |
| Remote Personal Computer<br>Operation<br>Function (Ethernet) License *5                    | GT25-PCRAKEY-1   | 1 license                        |                 | ●    | ●         | ●          | ●           | ●    | —         | —    | —    | — |
|  | GT25-PCRAKEY-5   | 5 licenses                       |                 | ●    | ●         | ●          | ●           | ●    | —         | —    | —    | — |
|  | GT25-PCRAKEY-10  | 10 licenses                      |                 | ●    | ●         | ●          | ●           | ●    | —         | —    | —    | — |
|  | GT25-PCRAKEY-20  | 20 licenses                      |                 | ●    | ●         | ●          | ●           | ●    | —         | —    | —    | — |
| VNC Server Function License *5   | GT25-VNCSKEY-1   | 1 license                        |                 | ●    | ●         | ●          | ●           | ●    | —         | ●    | —    | — |
|  | GT25-VNCSKEY-5   | 5 licenses                       |                 | ●    | ●         | ●          | ●           | ●    | —         | ●    | —    | — |
|  | GT25-VNCSKEY-10  | 10 licenses                      |                 | ●    | ●         | ●          | ●           | ●    | —         | ●    | —    | — |
|  | GT25-VNCSKEY-20  | 20 licenses                      |                 | ●    | ●         | ●          | ●           | ●    | —         | ●    | —    | — |
| MES I/F Function License *5  | GT25-MESIFKEY-1  | 1 license                        |                 | ●    | ●         | ●          | ●           | ●    | —         | —    | —    | — |
|  | GT25-MESIFKEY-5  | 5 licenses                       |                 | ●    | ●         | ●          | ●           | ●    | —         | —    | —    | — |
|  | GT25-MESIFKEY-10 | 10 licenses                      |                 | ●    | ●         | ●          | ●           | ●    | —         | —    | —    | — |
|  | GT25-MESIFKEY-20 | 20 licenses                      |                 | ●    | ●         | ●          | ●           | ●    | —         | —    | —    | — |
| GOT Mobile Function License *5   | GT25-WEBSKEY-1   | 1 license                        |                 | ●    | ●         | ●          | ●           | ●    | —         | —    | —    | — |
|  | GT25-WEBSKEY-5   | 5 licenses                       |                 | ●    | ●         | ●          | ●           | ●    | —         | —    | —    | — |
|  | GT25-WEBSKEY-10  | 10 licenses                      |                 | ●    | ●         | ●          | ●           | ●    | —         | —    | —    | — |
|  | GT25-WEBSKEY-20  | 20 licenses                      |                 | ●    | ●         | ●          | ●           | ●    | —         | —    | —    | — |

\*1 The desired number of licenses (2 or more) can be purchased. For details, please contact your local sales office.

\*2 Volume license product and additional license product are also available. For more details, please refer to the MELSOFT iQ Works catalog (LINA)08232(ENG).

\*3 The product includes the following software.

- System Management Software [MELSOFT Navigator]
- Motion Controller Engineering Software [MELSOFT MT Works2]
- Robot Engineering Software [MELSOFT RT ToolBox3\*]
- C Controller Setting and Monitoring Tool [MELSOFT CW Configurator]
- MITSUBISHI ELECTRIC FA Library
- Programmable Controller Engineering Software [MELSOFT GX Works3, GX Works2, GX Developer]
- HMI/GOT Screen Design Software [MELSOFT GT Works3]
- Inverter Setup Software [MELSOFT FR Configurator2]
- Servo Setup Software [MELSOFT MR Configurator2]

\* RT ToolBox3 mini (simplified version) will be installed if iQ Works product ID is used. When RT ToolBox3 (with simulation function) is required, please purchase RT ToolBox3.

\*4 To use GT SoftGOT2000, a license key for GT SoftGOT2000 is necessary for each personal computer.

\*5 1 license is required for 1 GOT unit.

\*6 This product does not include the DVD-ROM. Only the license certificate with the product ID No. is issued.

\*7 To edit sound files, each personal computer requires one license.

\*8 GT2505-VTBD does not support the sound output function.

\*9 Volume license product is not sold separately and should be purchased with the standard license product.

\*10 Each personal computer requires an add-on license.

Application package

| Product name                                  | Model            | Description | Supported model |      |           |            |             |      |           |      |      |   |
|---|------------------|-------------|-----------------|------|-----------|------------|-------------|------|-----------|------|------|---|
|   |                  |             | GT27            | GT25 | GT25 Wide | GT25 Handy | GT25 Rugged | GT23 | GT21 Wide | GT21 | GS21 |   |
| iQ Monozukuri Process Remote<br>Monitoring *1 | AP30-PRM001AA-MA | 1 license   |                 | ●    | ●         | ●          | ●           | ●    | ●         | ●    | ●*2  | ● |
|   | AP30-PRM001AA-MB | 5 licenses  |                 | ●    | ●         | ●          | ●           | ●    | ●         | ●    | ●*2  | ● |
|   | AP30-PRM001AA-MC | 10 licenses |                 | ●    | ●         | ●          | ●           | ●    | ●         | ●    | ●*2  | ● |
| iQ Monozukuri ANDON *3                        | AP30-ADN001AA-MA | 1 license   |                 | ●    | ●         | ●          | ●           | ●    | —         | —    | —    | — |
|   | AP30-ADN001AA-MB | 5 licenses  |                 | ●    | ●         | ●          | ●           | ●    | —         | —    | —    | — |
|   | AP30-ADN001AA-MC | 10 licenses |                 | ●    | ●         | ●          | ●           | ●    | —         | —    | —    | — |
|   | AP30-ADN001AA-MD | 15 licenses |                 | ●    | ●         | ●          | ●           | ●    | —         | —    | —    | — |
|   | AP30-ADN001AA-ME | 20 licenses |                 | ●    | ●         | ●          | ●           | ●    | —         | —    | —    | — |

\*1 Process Remote Monitoring setting tool, iQ Monozukuri Process Remote Monitoring template project for GT SoftGOT2000, and the Process Remote Monitoring license are included.

\*2 Supported by GT2104-RTBD and GT2103-PMBD only.

\*3 Contents Publisher, project file of the GOT for iQ Monozukuri ANDON (template screens), GOT Mobile function license, and the iQ Monozukuri ANDON license are included.

# Product List

## Options

| Product name  | Model             | Specifications  | Supported model   |      |           |             |      |           |      |      |   |
|---|-------------------|---|---|------|-----------|-------------|------|-----------|------|------|---|
|   |                   |   | GT27  | GT25 | GT25 Wide | GT25 Rugged | GT23 | GT21 Wide | GT21 | GS21 |   |
| Protective sheet *1                                       | GT27-15PSGC       | For 15"   | <ul style="list-style-type: none"> <li>• Antiglare type</li> <li>• Transparent</li> <li>• With a hole for the USB environmental protection cover</li> <li>• A set of 5 sheets</li> </ul>        | ●    | —         | —           | —    | —         | —    | —    | — |
|   | GT25-12PSGC       | For 12.1"   |   | ●    | ●         | —           | —    | —         | —    | —    | — |
|   | GT25-10PSGC       | For 10.4"   |   | ●    | ●         | —           | —    | —         | —    | —    | — |
|   | GT25-08PSGC       | For 8.4"  |   | ●    | ●         | —           | —    | —         | —    | —    | — |
|   | GT25-05PSGC       | For 5.7"  |   | ●    | —         | —           | —    | —         | —    | —    | — |
|   | GT25-05PSGC-2     | For 5.7"  | —   | ●    | —         | —           | —    | —         | —    | —    |   |
|   | GT25-10WPSGC      | For 10.1" wide models   | <ul style="list-style-type: none"> <li>• Antiglare type</li> <li>• Transparent</li> <li>• Without a hole for the USB environmental protection cover *10</li> <li>• A set of 5 sheets</li> </ul> | —    | —         | ●           | —    | —         | —    | —    | — |
|   | GT21-07WPSGC      | For 7" wide models  |   | —    | —         | ●           | —    | —         | ●    | —    | — |
|   | GT27-15PSCC       | For 15"   | <ul style="list-style-type: none"> <li>• Clear type</li> <li>• Transparent</li> <li>• With a hole for the USB environmental protection cover</li> <li>• A set of 5 sheets</li> </ul>            | ●    | —         | —           | —    | —         | —    | —    | — |
|   | GT25-12PSCC       | For 12.1"   |   | ●    | ●         | —           | —    | —         | —    | —    | — |
|   | GT25-10PSCC       | For 10.4"   |   | ●    | ●         | —           | —    | —         | —    | —    | — |
|   | GT25-08PSCC       | For 8.4"  |   | ●    | ●         | —           | —    | —         | —    | —    | — |
|   | GT25-05PSCC       | For 5.7"  |   | ●    | —         | —           | —    | —         | —    | —    | — |
|   | GT25-05PSCC-2     | For 5.7"  | —   | ●    | —         | —           | —    | —         | —    | —    |   |
|   | GT25-10WPSCC      | For 10.1" wide models   | <ul style="list-style-type: none"> <li>• Clear type</li> <li>• Transparent</li> <li>• Without a hole for the USB environmental protection cover *10</li> <li>• A set of 5 sheets</li> </ul>     | —    | —         | ●           | —    | —         | —    | —    | — |
|   | GT21-07WPSCC      | For 7" wide models  |   | —    | —         | ●           | —    | —         | ●    | —    | — |
|   | GT25-12PSCC-UC *9 | For 12.1"   | <ul style="list-style-type: none"> <li>• Clear type</li> <li>• Transparent</li> <li>• Without a hole for the USB environmental protection cover *2</li> <li>• A set of 5 sheets</li> </ul>      | ● *9 | ●         | —           | —    | —         | —    | —    | — |
|   | GT25-10PSCC-UC *9 | For 10.4"   |   | ● *9 | ● *9      | —           | —    | ●         | —    | —    | — |
|   | GT25-08PSCC-UC *9 | For 8.4"  |   | ●    | ● *9      | —           | —    | ●         | —    | —    | — |
|   | GT21-04RPSGC-UC   | For 4.3"  | <ul style="list-style-type: none"> <li>• Antiglare type</li> <li>• Transparent</li> <li>• Without a hole for the USB environmental protection cover</li> <li>• A set of 5 sheets</li> </ul>     | —    | —         | —           | —    | —         | —    | ●    | — |
| GT21-03PSGC-UC  | For 3.8"          | —   |   | —    | —         | —           | —    | —         | —    | ●    | — |
| GT21-04RPSCC-UC   | For 4.3"          | <ul style="list-style-type: none"> <li>• Clear type</li> <li>• Transparent</li> <li>• Without a hole for the USB environmental protection cover</li> <li>• A set of 5 sheets</li> </ul> | —   | —    | —         | —           | —    | —         | ●    | —    |   |
| GT21-03PSCC-UC  | For 3.8"          |   | —   | —    | —         | —           | —    | —         | —    | ●    | — |
| UV protective sheet (for the rugged model) *13            | GT25T-07WPSVC     | For 7" rugged model   | <ul style="list-style-type: none"> <li>• Antiglare type (UV cutoff)</li> <li>• Transparent</li> <li>• Without a hole for the USB environmental protection cover</li> <li>• 1 sheet</li> </ul>   | —    | —         | —           | ●    | —         | —    | —    | — |
| Environmental protection sheet (for the open frame model) | GT25F-12ESGS      | For 12.1"   |   | —    | ● *7      | —           | —    | —         | —    | —    | — |
|   | GT25F-10ESGS      | For 10.4"   |   | —    | ● *7      | —           | —    | —         | —    | —    | — |
|   | GT25F-08ESGS      | For 8.4"  | —   | ● *7 | —         | —           | —    | —         | —    | —    |   |
| USB environmental protection cover                        | GT25-UCOV         | For 15"/12.1"/10.4"/8.4"  | Environmental protection cover for the USB interface on the GOT front face (for replacement)  | ●    | ●         | —           | —    | —         | —    | —    | — |
|   | GT25-05UCOV       | For 5.7"  |   | ●    | —         | —           | —    | —         | —    | —    |   |
|   | GT21-WUCOV        | For 10.1" wide models/7" wide models/5.7"   |   | —    | ●         | ●           | —    | —         | ●    | —    | — |
| Protective cover for oil *3                               | GT20-15PCO        | For 15"   | ●   | —    | —         | —           | —    | —         | —    | —    | — |
|   | GT20-12PCO        | For 12.1"   | ●   | ●    | —         | —           | —    | —         | —    | —    |   |
|   | GT20-10PCO        | For 10.4"   | ●   | ●    | —         | —           | ●    | —         | —    | —    |   |
|   | GT21-10WPCO       | For 10.1" wide models   | —   | —    | ●         | —           | —    | —         | —    | —    |   |
|   | GT20-08PCO        | For 8.4"  | ●   | ●    | —         | —           | ●    | —         | —    | —    |   |
|   | GT21-07WPCO       | For 7" wide models  | —   | —    | ●         | —           | —    | —         | —    | —    |   |
|   | GT25T-07WPCO*14   | For 7" rugged model   | —   | —    | —         | ●           | —    | —         | —    | —    |   |
|   | GT25-05PCO        | For 5.7"  | ●   | —    | —         | —           | —    | —         | —    | —    |   |
|   | GT25-05PCO-2      | For 5.7"  | —   | ●    | —         | —           | —    | —         | —    | —    |   |
|   | GT21-04RPCO       | For 4.3"  | —   | —    | —         | —           | —    | —         | —    | ●    | — |
| GT10-20PCO  | For 3.8"          | —   | —   | —    | —         | —           | —    | —         | ●    | —    |   |
| Stand   | GT15-90STAND      | For 15"   | ●   | —    | —         | —           | —    | —         | —    | —    | — |
|   | GT15-80STAND      | For 12.1"   | ●   | ●    | —         | —           | —    | —         | —    | —    | — |
|   | GT15-70STAND      | For 10.4"/8.4"  | ●   | ●    | —         | —           | ●    | —         | —    | —    |   |
|   | GT25-10WSTAND     | For 10.1" wide models   | —   | —    | ●         | —           | —    | —         | —    | —    |   |
|   | GT21-07WSTAND     | For 7" wide models  | —   | —    | ●         | —           | —    | ●         | —    | —    |   |
|   | GT25T-07WSTAND    | For 7" rugged model   | —   | —    | —         | ●           | —    | —         | —    | —    |   |
| GT05-50STAND  | For 5.7"          | ●   | ●   | —    | —         | —           | —    | —         | —    | —    |   |



Options

| Product name        |                | Model   | Specifications  | Supported model        |   |                        |                        |               |                        |                                      |      |   |
|---------------------|----------------|---|---|------------------------|---|------------------------|------------------------|---------------|------------------------|--------------------------------------|------|---|
|                     |                |   |   | GT27                   | GT25  | GT25 Wide              | GT25 Rugged            | GT23          | GT21 Wide              | GT21                                 | GS21 |   |
| Memory card         | SD memory card | NZ1MEM-2GBSD  | SD memory card for GOT, 2 GB  | ●                      | ●   | ●                      | ●                      | ●             | ●                      | ●                                    | ●    |   |
|                     |                | NZ1MEM-4GBSD  | SDHC memory card for GOT, 4 GB  | ●                      | ●   | ●                      | ●                      | ●             | ●                      | ●                                    | ●    |   |
|                     |                | NZ1MEM-8GBSD  | SDHC memory card for GOT, 8 GB  | ●                      | ●   | ●                      | ●                      | ●             | ●                      | ●                                    | ●    |   |
|                     |                | NZ1MEM-16GBSD   | SDHC memory card for GOT, 16 GB   | ●                      | ●   | ●                      | ●                      | ●             | ●                      | ●                                    | ●    |   |
|                     | CF card        | GT05-MEM-128MC  | CF card for GT27-MMR-Z, 128 MB  | ●                      | —   | —                      | —                      | —             | —                      | —                                    | —    |   |
|                     |                | GT05-MEM-256MC  | CF card for GT27-MMR-Z, 256 MB  | ●                      | —   | —                      | —                      | —             | —                      | —                                    | —    |   |
|                     |                | GT05-MEM-512MC  | CF card for GT27-MMR-Z, 512 MB  | ●                      | —   | —                      | —                      | —             | —                      | —                                    | —    |   |
|                     |                | GT05-MEM-1GC  | CF card for GT27-MMR-Z, 1 GB  | ●                      | —   | —                      | —                      | —             | —                      | —                                    | —    |   |
|                     |                | GT05-MEM-2GC  | CF card for GT27-MMR-Z, 2 GB  | ●                      | —   | —                      | —                      | —             | —                      | —                                    | —    |   |
|                     |                | GT05-MEM-4GC  | CF card for GT27-MMR-Z, 4 GB  | ●                      | —   | —                      | —                      | —             | —                      | —                                    | —    |   |
| Memory card adaptor | GT05-MEM-ADPC  | Conversion adapter from CF card for GT27-MMR-Z to memory card (TYPE II)     |   | ●                      | —   | —                      | —                      | —             | —                      | —                                    | —    |   |
|                     |                | Attachment *11  | GT15-70ATT-98   | For 10.4"              | For replacing GT168□, GT158□, A985GOT *4                  | ●                      | ●                      | —             | —                      | ●                                    | —    | — |
|                     |                |   | GT15-70ATT-87   | For 10.4"              | For replacing A870GOT-SWS/TWS or A8GT-70GOT-TB/TW/SB/SW   | ●                      | ●                      | —             | —                      | ●                                    | —    | — |
| Attachment *11      | GT15-60ATT-97  | For 8.4"  | For replacing GT167□, GT157□, A97□GOT                                   | ●                      | ●   | —                      | —                      | ●             | —                      | —                                    | —    |   |
|                     |                |   | For replacing A960GOT   | ●                      | ●   | —                      | —                      | ●             | —                      | —                                    | —    |   |
|                     | GT15-60ATT-87  | For 8.4"  | For replacing A870GOT-EWS, A8GT-70GOT-EB/EW, A77GOT-EL, A77GOT-EL-S5/S3 | ●                      | ●   | —                      | —                      | ●             | —                      | —                                    |      |   |
|                     | GT15-60ATT-77  | For 8.4"  | For replacing A77GOT-CL, A77GOT-CL-S5/S3, A77GOT-L, A77GOT-L-S5/S3      | ●                      | ●   | —                      | —                      | ●             | —                      | —                                    |      |   |
|                     | GT15-50ATT-95W | For 5.7"  | For replacing A956WGOT, F940WGOT  | ●                      | ●   | —                      | —                      | —             | —                      | —                                    |      |   |
|                     | GT15-50ATT-85  | For 5.7"  | For replacing A85□GOT   | ●                      | ●   | —                      | —                      | —             | —                      | —                                    |      |   |
| Battery             | GT11-50BAT     | Battery for backup of SRAM data, clock data, and system status log data *6. |   | ●<br>(For replacement) | ● <sup>*12</sup><br>(For replacement)                     | ●<br>(For replacement) | ●<br>(For replacement) | ●<br>(Option) | ●<br>(For replacement) | ● <sup>*5</sup><br>(For replacement) | —    |   |
|                     |                | Special fitting *9  | GT25-12FIT-EXS  | For 12.1"              | For compliance with the ATEX directive and KCs regulation | ● <sup>*9</sup>        | —                      | —             | —                      | —                                    | —    | — |
| Special fitting *9  | GT25-10FIT-EXS | For 10.4"   | For compliance with the ATEX directive and KCs regulation               | ● <sup>*9</sup>        | ● <sup>*9</sup>   | —                      | —                      | —             | —                      | —                                    | —    |   |

- \*1 The white model does not have the front USB interface. It is recommended to use the products that the USB environmental protection cover area is closed.
- \*2 When using the product with the USB environmental protection cover area closed, the front USB interface cannot be used.
- \*3 Check if the protective cover for oil can be used in the actual environment before use. When using the cover, the front USB interface and human sensor cannot be used.
- \*4 Including the GP250□ and GP260□ manufactured by Schneider Electric Japan Holdings Ltd.
- \*5 GT2103-PMBD, GT2103-PMBDS, GT2103-PMBDS2, and GT2103-PMBSL do not have a built-in battery.
- \*6 GT21 does not support the system status log data backup function.
- \*7 GT2512F-STNA, GT2512F-STND, GT2510F-VTNA, GT2510F-VTND, GT2508F-VTNA, and GT2508F-VTND only.
- \*8 Only available to GT2104-RTBD.
- \*9 Necessary for the GOT to comply with the ATEX directive and KCs regulation. For applicable GOT models, please refer to the Mitsubishi Electric Factory Automation Global website ([www.MitsubishiElectric.com/fa](http://www.MitsubishiElectric.com/fa)).
- \*10 The protective sheet is shaped not to cover the USB environmental protection cover.
- \*11 An attachment is usable when the control panel has a thickness of 2 to 3 mm. When an attachment is used, the GOT is not IP67F-rated.
- \*12 Cannot be used with GT2506HS-VTBD.
- \*13 The UV protective sheet for the rugged model does not comply with IP66F and IP67F.
- \*14 The protective cover for oil for the rugged model does not comply with IP66F.

Options for GT25 Handy GOT

| Product name                           | Model         | Specifications  | Supported model |                 |
|--|---------------|---|-----------------|-----------------|
|  |               |   | GT2506 Handy    | GT2505 Handy    |
| Protective sheet                       | GT16H-60PSC   | For 6.5"  | ●               | —               |
|  | GT14H-50PSC   | For 5.7"  | —               | ●               |
| Emergency stop switch guard cover      | GT16H-60ESCOV | For 6.5"  | ●               | —               |
|  | GT14H-50ESCOV | For 5.7"  | —               | ●               |
| Connector conversion box               | GT16H-CNB-42S | For converting the Handy GOT signals into individual signals for the terminal block, D-sub connector, and Ethernet RJ-45. | ●               | ● <sup>*1</sup> |
|  | GT16H-CNB-37S | For converting the Handy GOT signals into individual signals for the terminal block and Ethernet RJ-45.                   | ●               | ●               |
|  | GT11H-CNB-37S | For converting the Handy GOT signals into individual signals for the terminal block and D-sub connector.                  | —               | ●               |
| Wall-mounting attachment for Handy GOT | GT14H-50ATT   | For GT2505 Handy GOT  | —               | ●               |
| SD memory card                         | NZ1MEM-2GBSD  | SD memory card for GOT, 2 GB  | ●               | ●               |
|  | NZ1MEM-4GBSD  | SDHC memory card for GOT, 4 GB  | ●               | ●               |
|  | NZ1MEM-8GBSD  | SDHC memory card for GOT, 8 GB  | ●               | ●               |
|  | NZ1MEM-16GBSD | SDHC memory card for GOT, 16 GB   | ●               | ●               |
| Battery                                | GT15-BAT      | Battery for backup of SRAM data, clock data, and system status log data (for replacement)                                 | ●               | —               |
|  | GT11-50BAT    |   | —               | ●               |

\*1 Only Ethernet connection is supported. Serial communication connection is not supported.

## Cables

| Product name                          |   | Model  | Cable length   | Recommended product <sup>1</sup>  | Specifications  | Supported model <sup>16</sup>  |                  |   |             |      |                  |                   |                   |                  |
|---------------------------------------|---|--|----------------|---|---|--|------------------|---|-------------|------|------------------|-------------------|-------------------|------------------|
|                                       |   |  |                |   |   | GT27   | GT25             | GT25 Wide   | GT25 Rugged | GT23 | GT21 Wide        | GT21              | GS21              |                  |
| QCPU bus connection cable             | QCPU connection cable<br>GOT-to-GOT connection cable                    | GT15-QC06B   | 0.6 m          | ○   | QCPU ⇔ GOT<br>GOT ⇔ GOT   | ●  | ● <sup>*13</sup> | —   | —           | —    | —                | —                 | —                 |                  |
|                                       |   | GT15-QC12B   | 1.2 m          |   |   |  |                  |   |             |      |                  |                   |                   |                  |
|                                       |   | GT15-QC30B   | 3 m            |   |   |  |                  |   |             |      |                  |                   |                   |                  |
|                                       |   | GT15-QC50B   | 5 m            |   |   |  |                  |   |             |      |                  |                   |                   |                  |
|                                       |   | GT15-QC100B  | 10 m           |   |   |  |                  |   |             |      |                  |                   |                   |                  |
|                                       | QCPU connection cable<br>GOT-to-GOT connection cable<br>(long distance) | GT15-QC150BS   | 15 m           | ○   | For connecting the QCPU and GOT (long distance), A9GT-QCNB is required.<br>For connecting the GOT and GOT (long distance)   | ●  | ● <sup>*13</sup> | —   | —           | —    | —                | —                 | —                 |                  |
|                                       |   | GT15-QC200BS   | 20 m           |   |   |  |                  |   |             |      |                  |                   |                   |                  |
|                                       |   | GT15-QC250BS   | 25 m           |   |   |  |                  |   |             |      |                  |                   |                   |                  |
|                                       |   | GT15-QC300BS   | 30 m           |   |   |  |                  |   |             |      |                  |                   |                   |                  |
|                                       |   | GT15-QC350BS   | 35 m           |   |   |  |                  |   |             |      |                  |                   |                   |                  |
| Bus extension connector box           | A9GT-QCNB   | —  | —              | Connect the connector box to the main base unit of PLC when connecting the QCPU and GOT (long distance).  | ●   | ● <sup>*13</sup>   | —                | —   | —           | —    | —                | —                 |                   |                  |
| Bus connection cable ferrite core     | GT15-QFC  | —  | ○              | Attach a ferrite core to the GOT-A900 bus connection cable when an existing GOT-A900 is replaced with a GOT2000. (two ferrite cores/ set)   | ●   | ● <sup>*13</sup>   | —                | —   | —           | —    | —                | —                 |                   |                  |
| RS-485 terminal block conversion unit | FA-LTBGT2R4CBL05  | 0.5 m  | ○              | RS-485 terminal block conversion unit<br>With a cable for connecting RS-422/485 (connector) of GOT2000 and a RS-485 terminal block conversion unit  | ●   | ● <sup>*13</sup>   | ●                | ●   | —           | —    | —                | —                 |                   |                  |
|                                       | FA-LTBGT2R4CBL10  | 1 m  |                |   |   |  |                  |   |             |      |                  |                   |                   |                  |
| FA-LTBGT2R4CBL20                      | 2 m   |  |                |   |   |  |                  |   |             |      |                  |                   |                   |                  |
| RS-422 conversion cable               | FA-CNV2402CBL   | 0.2 m  | ○              | For connecting the QCPU/L02SCPU(-P) and the RS-422 cable (GT01-C□R4-25P, GT10-C□R4-25R, GT21-C□R4-25P5)<br>For connecting the L6ADP-R2 and the RS-422 cable (GT01-C□R4-25P, GT10-C□R4-25P, GT21-C□R4-25P5)<br>[MINI-DIN 6-pin ⇔ D-sub 25-pin] | ●   | ●  | ●                | ●   | ●           | ●    | ● <sup>*12</sup> | ●                 |                   |                  |
|                                       | FA-CNV2405CBL   | 0.5 m  |                |   |   |  |                  |   |             |      |                  |                   |                   |                  |
| RS-422 cable                          | QnA/FXCPU direct connection cable                                       | GT01-C30R4-25P                                       | 3 m            | —   | For connecting a QnA/ACPU/motion CPU (A series)/FXCPU and the GOT<br>For connecting an RS-422 connector conversion cable (FA-CNV□CBL) and the GOT<br>For connecting a serial communication module and the GOT<br>For connecting a peripheral connection module (AJ65BT-G4-S3) and the GOT<br>[D-sub 25-pin ⇔ D-sub 9-pin]   | ●  | ●                | ●   | ●           | ●    | ●                | ● <sup>*3,7</sup> | ●                 |                  |
|                                       |   | GT01-C100R4-25P                                      | 10 m           |   |   |  |                  |   |             |      |                  |                   |                   |                  |
|                                       |   | GT01-C200R4-25P                                      | 20 m           |   |   |  |                  |   |             |      |                  |                   |                   |                  |
|                                       |   | GT01-C300R4-25P                                      | 30 m           |   |   |  |                  |   |             |      |                  |                   |                   |                  |
|                                       | Computer link connection cable  | GT10-C30R4-25P                                       | 3 m            | —   | For connecting a QnA/ACPU/FXCPU/motion CPU (A series) and the GOT<br>For connecting an RS-422 connector conversion cable (FA-CNV□CBL) and the GOT<br>For connecting a serial communication module and the GOT<br>For connecting a peripheral connection module (AJ65BT-G4-S3) and the GOT<br>[D-sub 25-pin ⇔ separate wire (connector terminal block 9-pin)]  | —  | —                | —   | —           | —    | —                | —                 | ● <sup>*10</sup>  | —                |
|                                       |   | GT10-C100R4-25P                                      | 10 m           |   |   |  |                  |   |             |      |                  |                   |                   |                  |
|                                       |   | GT10-C200R4-25P                                      | 20 m           |   |   |  |                  |   |             |      |                  |                   |                   |                  |
|                                       |   | GT10-C300R4-25P                                      | 30 m           |   |   |  |                  |   |             |      |                  |                   |                   |                  |
|                                       | CC-Link (G4) connection cable   | GT21-C30R4-25P5                                      | 3 m            | —   | For connecting a QnACPU and the GOT<br>For connecting an RS-422 connector conversion cable (FA-CNV□CBL) and the GOT<br>For connecting a serial communication module and the GOT<br>For connecting a peripheral connection module (AJ65BT-G4-S3) and the GOT<br>[D-sub 25-pin ⇔ separate wire (connector terminal block 5-pin)]<br>* GT2103-PMBD cannot be connected to Q00CPU, Q00CPU, Q01CPU, A Series, or FX1/FX2 Series. | —  | —                | —   | —           | —    | —                | —                 | ● <sup>*2</sup>   | —                |
|                                       |   | GT21-C100R4-25P5                                     | 10 m           |   |   |  |                  |   |             |      |                  |                   |                   |                  |
|                                       |   | GT21-C200R4-25P5                                     | 20 m           |   |   |  |                  |   |             |      |                  |                   |                   |                  |
|                                       |   | GT21-C300R4-25P5                                     | 30 m           |   |   |  |                  |   |             |      |                  |                   |                   |                  |
|                                       | Computer link connection cable  | GT09-C30R4-6C  | 3 m            | ○   | For connecting a serial communication module and the GOT<br>For connecting a computer link module and the GOT<br>[separate wire ⇔ D-sub 9-pin]  | ●  | ●                | ●   | ●           | ●    | ●                | ●                 | ● <sup>*3,7</sup> | ●                |
|                                       |   | GT09-C100R4-6C                                       | 10 m           |   |   |  |                  |   |             |      |                  |                   |                   |                  |
|                                       |   | GT09-C200R4-6C                                       | 20 m           |   |   |  |                  |   |             |      |                  |                   |                   |                  |
|                                       |   | GT09-C300R4-6C                                       | 30 m           |   |   |  |                  |   |             |      |                  |                   |                   |                  |
|                                       | FXCPU direct connection cable   | FXCPU communication expansion board connection cable | GT01-C10R4-8P  | 1 m   | —   | For connecting the FXCPU and GOT<br>For connecting the FXCPU communication expansion board and GOT<br>[MINI-DIN 8-pin ⇔ D-sub 9-pin] | ●                | ●   | ●           | ●    | ●                | ●                 | ● <sup>*3,7</sup> | ●                |
|                                       |   |  | GT01-C30R4-8P  | 3 m   |   |  |                  |   |             |      |                  |                   |                   |                  |
|                                       |   |  | GT01-C100R4-8P | 10 m  |   |  |                  |   |             |      |                  |                   |                   |                  |
|                                       |   |  | GT01-C200R4-8P | 20 m  |   |  |                  |   |             |      |                  |                   |                   |                  |
|                                       |   |  | GT01-C300R4-8P | 30 m  |   |  |                  |   |             |      |                  |                   |                   |                  |
|                                       |   |  | GT10-C10R4-8P  | 1 m   |   |  | —                | For connecting the FXCPU and GOT<br>For connecting the FXCPU communication expansion board and GOT<br>[MINI-DIN 8-pin ⇔ separate wire (connector terminal block 9-pin)] | —           | —    | —                | —                 | —                 | —                |
|                                       |   | GT10-C30R4-8P  | 3 m            |   |   |  |                  |   |             |      |                  |                   |                   |                  |
|                                       |   | GT10-C100R4-8P                                       | 10 m           |   |   |  |                  |   |             |      |                  |                   |                   |                  |
| GT10-C200R4-8P                        |   | 20 m   |                |   |   |  |                  |   |             |      |                  |                   |                   |                  |
| GT10-C300R4-8P                        |   | 30 m   |                |   |   |  |                  |   |             |      |                  |                   |                   |                  |
| GT21-C10R4-8P5                        |   | 1 m  | —              | For connecting the FXCPU and GOT<br>For connecting the FXCPU communication expansion board and GOT<br>[MINI-DIN 8-pin and separate wire (connector terminal block 5-pin)]   | —   | —  |                  |   | —           | —    | —                | —                 | —                 | ● <sup>*2</sup>  |
| GT21-C30R4-8P5                        |   | 3 m  |                |   |   |  |                  |   |             |      |                  |                   |                   |                  |
| GT21-C100R4-8P5                       | 10 m  |  |                |   |   |  |                  |   |             |      |                  |                   |                   |                  |
| GT21-C200R4-8P5                       | 20 m  |  |                |   |   |  |                  |   |             |      |                  |                   |                   |                  |
| GT21-C300R4-8P5                       | 30 m  |  |                |   |   |  |                  |   |             |      |                  |                   |                   |                  |
| GT10-C10R4-8PPL                       | 1 m   | —  |                |   | For connecting the FXCPU and GOT<br>For connecting the FXCPU communication expansion board and GOT<br>[MINI-DIN 8-pin ⇔ separate wire (connector terminal block 9-pin)]<br>* This cable cannot be used for FX1NC, FX2NC, FX3UC-D/DSS, FX3G, FX3GC, or FX3S.   | —  | —                | —   | —           | —    | —                | —                 | ● <sup>*4</sup>   | —                |
| GT10-C30R4-8PC                        | 3 m   |  |                |   |   |  |                  |   |             |      |                  |                   |                   |                  |
| GT10-C100R4-8PC                       | 10 m  |  |                |   |   |  |                  |   |             |      |                  |                   |                   |                  |
| GT10-C200R4-8PC                       | 20 m  |  |                |   |   |  |                  |   |             |      |                  |                   |                   |                  |
| GT10-C300R4-8PC                       | 30 m  |  |                |   |   |  |                  |   |             |      |                  |                   |                   |                  |
| RS-422 connector conversion cable     | GT10-C02H-9SC   |  | 0.2 m          | —   |   | For connecting a PLC and the GOT<br>[D-sub 9-pin ⇔ separate wire (connector terminal block 9-pin)]                                   | —                | —   | —           | —    | —                | —                 | —                 | ● <sup>*10</sup> |

Cables

| Product name                                      | Model  | Cable length                     | Recommended product <sup>1</sup> | Specifications  | Supported model <sup>16</sup>  |   |                  |             |                  |                  |                 |                  |   |
|---|--|----------------------------------|----------------------------------|---|--|---|------------------|-------------|------------------|------------------|-----------------|------------------|---|
|   |  |                                  |                                  |   | GT27   | GT25  | GT25 Wide        | GT25 Rugged | GT23             | GT21 Wide        | GT21            | GS21             |   |
| RS-232 cable                                      | Q/LCPU direct connection cable   | GT01-C30R2-6P                    | 3 m                              | —   | For connecting the Q/LCPU and GOT<br>For connecting L6ADP-R2 and GOT/personal computer (GT SoftGOT2000)<br>[MINI-DIN 6-pin ↔ D-sub 9 pin]  | ●   | ●                | ●           | ●                | ●                | ●               | ● <sup>*5</sup>  | ● |
|   |  | GT10-C30R2-6P                    | 3 m                              | —   | For connecting the Q/LCPU and GOT<br>[MINI-DIN 6-pin ↔ separate wire (connector terminal block 9-pin)]<br><br>For connecting multiple GOTs<br>[MINI-DIN 6-pin ↔ separate wire (connector terminal block 9-pin)]                                      | —   | —                | —           | —                | —                | —               | ● <sup>*6</sup>  | — |
|   | FXCPU communication expansion board connection cable<br>FXCPU communication special adapter connection cable | GT01-C30R2-9S                    | 3 m                              | —   | For connecting the FXCPU communication expansion board and GOT/personal computer (GT SoftGOT2000)<br>For connecting an FXCPU communication special adapter and GOT/personal computer (GT SoftGOT2000)<br>[D-sub 9-pin ↔ D-sub 9 pin]                 | ●   | ●                | ●           | ●                | ●                | ●               | ● <sup>*5</sup>  | ● |
|   |  | GT01-C30R2-25P                   | 3 m                              | —   | For connecting an FXCPU communication special adapter and GOT/personal computer (GT SoftGOT2000)<br>[D-sub 25-pin ↔ D-sub 9 pin]   | ●   | ●                | ●           | ●                | ●                | ●               | ● <sup>*5</sup>  | ● |
|   | Computer link connection cable<br>CC-Link (G4) connection cable  | GT09-C30R2-9P                    | 3 m                              | ○   | For connecting a serial communication module and the GOT<br>For connecting a computer link module and the GOT<br>For connecting a peripheral connection module (AJ65BT-R2N) and the GOT<br>[D-sub 9-pin ↔ D-sub 9 pin]                               | ●   | ●                | ●           | ●                | ●                | ●               | ● <sup>*5</sup>  | ● |
|   | Computer link connection cable   | GT09-C30R2-25P                   | 3 m                              | ○   | For connecting a serial communication module and the GOT<br>For connecting a computer link module and the GOT<br>[D-sub 25-pin ↔ D-sub 9 pin]  | ●   | ●                | ●           | ●                | ●                | ●               | ● <sup>*5</sup>  | ● |
|   | RS-232 connector conversion cable  | GT10-C02H-6PT9P                  | 0.2 m                            | —   | For connecting a PLC and the GOT<br>For connecting multiple GOTs<br>For connecting a barcode reader, RFID, or serial printer and the GOT<br>[D-sub 9-pin ↔ MINI-DIN 6-pin]   | —   | —                | —           | —                | —                | —               | ● <sup>*11</sup> | — |
|   | Data transfer cable  | GT01-C30R2-6P                    | 3 m                              | —   | For connecting the GOT and a personal computer<br>[MINI-DIN 6-pin ↔ D-sub 9-pin]<br>* This cable is usable for the FA transparent function only, and cannot be used to transfer screen or OS data.   | —   | —                | —           | —                | —                | —               | ● <sup>*11</sup> | — |
| Conversion cable for connecting external I/O unit | GT15-C03HTB  | 0.3 m                            | ○                                | For connecting an external I/O unit (GT15-DIO) and external I/O interface unit (A8GT-C05TK, A8GT-C30TB, user-fabricated cable) for GOT-A900 | ●  | ● <sup>*13</sup>  | —                | —           | —                | —                | —               | —                |   |
| Analog RGB cable                                  | GT15-C50VG   | 5 m                              | ○                                | For connecting an RGB image output device (external monitor, personal computer, or others) and the GOT                                      | ●  | —   | —                | —           | —                | —                | —               | —                |   |
| USB cable   | Data transfer cable<br>Printer connection cable  | GT09-C30USB-5P                   | 3 m                              | ○   | For connecting a personal computer (screen design software) and the GOT<br>For connecting a personal computer (GT SoftGOT2000) and QnU/L/FXCPU<br>For connecting a PictBridge-compatible printer and printer unit (GT15-PRN)<br>[USB-A ↔ USB Mini-B] | ●   | ●                | ●           | ●                | ●                | ● <sup>*9</sup> | ● <sup>*9</sup>  | ● |
|   |  | Panel-mounted USB port extension | GT14-C10EXUSB-4S                 | 1 m   | —  | For routing the USB port (host) of the GOT rear face to the front side of the control panel | ●                | ●           | ●                | ● <sup>*17</sup> | —               | ●                | — |
|   |  | GT10-C10EXUSB-5S                 | 1 m                              | —   | For routing the USB port (device) of the GOT rear face to the front side of the control panel  | ● <sup>*14</sup>  | ● <sup>*14</sup> | —           | ● <sup>*17</sup> | —                | —               | ● <sup>*15</sup> | — |

<sup>1</sup> FA-LTBGT2R4CBL□, FA-CNV240□CBL are developed by Mitsubishi Electric Engineering Company Limited and sold through your local sales office. The other products listed are developed by Mitsubishi Electric Systems & Service Co., LTD. and sold through your local sales office.

<sup>2</sup> This cable is usable for GT2103-PMBD.

<sup>3</sup> This cable is usable for GT2104-RTBD, GT2103-PMBDS.

<sup>4</sup> This cable is usable for GT2104-RTBD, GT2103-PMBDS, GT2103-PMBLS. For GT2103-PMBLS, use a 3 m or shorter cable.

<sup>5</sup> This cable is usable for GT2103-PMBDS, GT2103-PMBDS2.

<sup>6</sup> This cable is usable for GT2104-RTBD, GT2103-PMBDS2.

<sup>7</sup> GT2104-RTBD, GT2103-PMBDS is possible to correspond by combining the GT10-C02H-9SC type RS-422 connector conversion cable.

<sup>8</sup> GT2103-PMBDS, GT2103-PMBDS2 is possible to correspond by combining the GT10-C02H-6PT9P type RS-232 connector conversion cable.

<sup>9</sup> This cable is not usable for the printer connection.

<sup>10</sup> This cable is usable for GT2104-RTBD, GT2103-PMBDS.

<sup>11</sup> This cable is usable for GT2103-PMBDS, GT2103-PMBDS2.

<sup>12</sup> This cable is usable for GT2104-RTBD, GT2103-PMBD, GT2103-PMBDS.

<sup>13</sup> This cable is not usable for GT2505-VTBD.

<sup>14</sup> This cable is usable for GT2712-STWA, GT2712-STWD, GT2710-VTWA, GT2710-VTWD, GT2512F-STNA, GT2512F-STND, GT2510-VTWA, GT2510-VTWD, GT2510F-VTNA, GT2510F-VTND, GT2508-VTWA, GT2508-VTWD, GT2508F-VTNA, GT2508F-VTND.

<sup>15</sup> This cable is usable for GT2104-RTBD, GT2103-PMBD, GT2103-PMBDS, GT2103-PMBDS2, GT2103-PMBLS.

<sup>16</sup> Note that the usable connection types and cables differ depending on the GOT model. For the details, please refer to the GOT2000 Series Connection Manual.

<sup>17</sup> When using a rugged model, the panel-mounted USB port extension does not comply with IP66F.

# Product List

## Cables for GT25 Handy GOT

| Product name   |  | Model           | Cable length | Recommended product <sup>1</sup> | Specifications   | Supported model |              |
|--|--|-----------------|--------------|----------------------------------|--|-----------------|--------------|
|  |  |                 |              |                                  |  | GT2506 Handy    | GT2505 Handy |
| External connection cable<br>(to connect the connector conversion box)                     |  | GT16H-C30-42P   | 3 m          | —                                | For connection between the Handy GOT and the connector conversion box (GT16H-CNB-42S)  | ●               | —            |
|  |  | GT16H-C60-42P   | 6 m          | —                                |  | ●               | —            |
|  |  | GT16H-C100-42P  | 10 m         | —                                |  | ●               | —            |
|  |  | GT16H-C30-37PE  | 3 m          | —                                | For connection between the Handy GOT and the connector conversion box (GT16H-CNB-37S)  | ●               | —            |
|  |  | GT16H-C60-37PE  | 6 m          | —                                |  | ●               | —            |
|  |  | GT16H-C100-37PE | 10 m         | —                                |  | ●               | —            |
|  |  | GT14H-C30-42P   | 3 m          | —                                | For connection between the Handy GOT and the connector conversion box (GT16H-CNB-42S)  | —               | ●            |
|  | GT14H-C60-42P  | 6 m             | —            | —                                |  | ●               |              |
|  | GT14H-C100-42P   | 10 m            | —            | —                                |  | ●               |              |
| External connection cable<br>(to connect the connector conversion box or relay cable) *2   |  | GT11H-C30-37P   | 3 m          | —                                | For connection between the Handy GOT and the connector conversion box (GT16H-CNB-37S and GT11H-CNB-37S)  | —               | ●            |
|  |  | GT11H-C60-37P   | 6 m          | —                                |  | —               | ●            |
|  |  | GT11H-C100-37P  | 10 m         | —                                | For connection between the Handy GOT and the relay cable (GT11HC15R□-□P)   | —               | ●            |
| External connection cable<br>(to connect separate wire) *2                                 |  | GT11H-C30       | 3 m          | —                                | For connection between the Handy GOT and the FA device, the power supply, or the operation switch  | —               | ●            |
|  |  | GT11H-C60       | 6 m          | —                                |  | —               | ●            |
|  |  | GT11H-C100      | 10 m         | —                                |  | —               | ●            |
| Relay cable<br>(to connect the external connection cable and a programmable controller) *2 |  | GT11H-C15R4-8P  | 1.5 m        | —                                | For connecting to a programmable controller  | —               | ●            |
|  |  | GT11H-C15R4-25P | 1.5 m        | —                                |  | —               | ●            |
|  |  | GT11H-C15R2-6P  | 1.5 m        | —                                |  | —               | ●            |
| RS-422 conversion cable  |  | FA-CNV2402CBL   | 0.2 m        | ○                                | For connecting the QCPU/L02SCPU(-P) and the RS-422 cable (GT01-C□R4-25P, GT10-C□R4-25P, GT21-C□R4-25P5)<br>For connecting the L6ADP-R2 and the RS-422 cable (GT01-C□R4-25P, GT10-C□R4-25P, GT21-C□R4-25P5)<br>[MINI-DIN 6-pin ↔ D-sub 25-pin]  | ●               | ●            |
|  |  | FA-CNV2405CBL   | 0.5 m        |                                  |  | ●               | ●            |
| RS-422 cable *3  | QnA/FXCPU direct connection cable<br>Computer link connection cable<br>CC-Link (G4) connection cable         | GT01-C30R4-25P  | 3 m          | —                                | For connecting the QnA/ACPU/motion CPU (A series)/FXCPU and the GOT<br>For connecting the RS-422 connector conversion cable (FA-CNV□CBL) and the GOT<br>For connecting the serial communication module and the GOT<br>For connecting the peripheral connection module (AJ65BT-G4-S3) and the GOT<br>[D-sub 25-pin ↔ D-sub 9-pin] | ●               | ●            |
|  |  | GT01-C100R4-25P | 10 m         |                                  |  | ●               | ●            |
|  | Computer link connection cable   | GT09-C30R4-6C   | 3 m          | ○                                | For connecting the serial communication module and GOT<br>For connecting a computer link module and GOT<br>[separate wire ↔ D-sub 9-pin]   | ●               | ●            |
|  |  | GT09-C100R4-6C  | 10 m         |                                  |  | ●               | ●            |
|  | FXCPU direct connection cable<br>FXCPU communication expansion board connection cable                        | GT01-C10R4-8P   | 1 m          | —                                | For connecting the FXCPU and GOT<br>For connecting the FXCPU communication expansion board and GOT<br>[MINI-DIN 8-pin ↔ D-sub 9-pin]   | ●               | ●            |
|  |  | GT01-C30R4-8P   | 3 m          |                                  |  | ●               | ●            |
| GT01-C100R4-8P   |  | 10 m            | ●            |                                  |  | ●               |              |
| RS-232 cable   | Q/LCPU direct connection cable   | GT11H-C30R2-6P  | 3 m          | —                                | For connecting a QCPU or LCPU and the connector conversion box for Handy GOT (GT11H-CNB-37S/GT16H-CNB-42S)   | ●               | ●            |
|  | FXCPU communication expansion board connection cable<br>FXCPU communication special adapter connection cable | GT01-C30R2-9S   | 3 m          | —                                | For connecting the FXCPU communication expansion board and GOT/ personal computer (GT SoftGOT2000)<br>For connecting an FXCPU communication special adapter and GOT/ personal computer (GT SoftGOT2000)<br>[D-sub 9-pin ↔ D-sub 9-pin]   | ●               | ●            |
|  |  | GT01-C30R2-25P  | 3 m          | —                                | For connecting an FXCPU communication special adapter and GOT/ personal computer (GT SoftGOT2000)<br>[D-sub 25-pin ↔ D-sub 9-pin]  | ●               | ●            |
|  | Computer link connection cable<br>CC-Link (G4) connection cable  | GT09-C30R2-9P   | 3 m          | ○                                | For connecting a serial communication module and GOT<br>For connecting a computer link module and GOT<br>For connecting the peripheral connection module (AJ65BT-R2N) and GOT<br>[D-sub 9-pin ↔ D-sub 9-pin]   | ●               | ●            |
|  |  | GT09-C30R2-25P  | 3 m          | ○                                | For connecting a serial communication module and GOT<br>For connecting a computer link module and GOT<br>[D-sub 25-pin ↔ D-sub 9-pin]  | ●               | ●            |
| USB cable  | Data transfer cable<br>Printer connection cable  | GT09-C30USB-5P  | 3 m          | ○                                | For connecting a personal computer (screen design software) and GOT<br>For connecting a personal computer (GT SoftGOT2000) and QnU/L/ FXCPU<br>For connecting a PictBridge-compatible printer and printer unit (GT15-PRN)<br>[USB-A ↔ USB Mini-B]  | ●               | ●            |

\*1 The products listed are developed by Mitsubishi Electric Systems & Service Co., LTD. and sold through your local sales office.

\*2 Use the cable version C or later.

\*3 The total length of the cables between the Handy GOT and a controller includes the length of an external cable. A cable of 20 m or longer cannot be used for GT2506HS-VTBD and GT2505HS-VTBD.

## Cables for non-Mitsubishi FA products


RS-232 and RS-422 cables are available from every manufacturer. For more details, please refer to the Mitsubishi Electric Factory Automation Global website ([www.MitsubishiElectric.com/fa/](http://www.MitsubishiElectric.com/fa/)) or the GOT2000 Series Connection Manual.

## Manuals

| Manual name   | Manual number |
|---|---------------|
| GOT2000 Series User's Manual (Hardware)                                       | SH-081194ENG  |
| GOT2000 Series User's Manual (Utility)  | SH-081195ENG  |
| GOT2000 Series User's Manual (Monitor)  | SH-081196ENG  |
| GOT2000 Series Connection Manual (Mitsubishi Products) For GT Works3 Version1 | SH-081197ENG  |
| GOT2000 Series Handy GOT Connection Manual For GT Works3 Version1             | SH-081867ENG  |
| GOT SIMPLE Series User's Manual   | JY997D529011  |
| GT Designer3 (GOT2000) Screen Design Manual                                   | SH-081220ENG  |

Global support

Global FA Centers

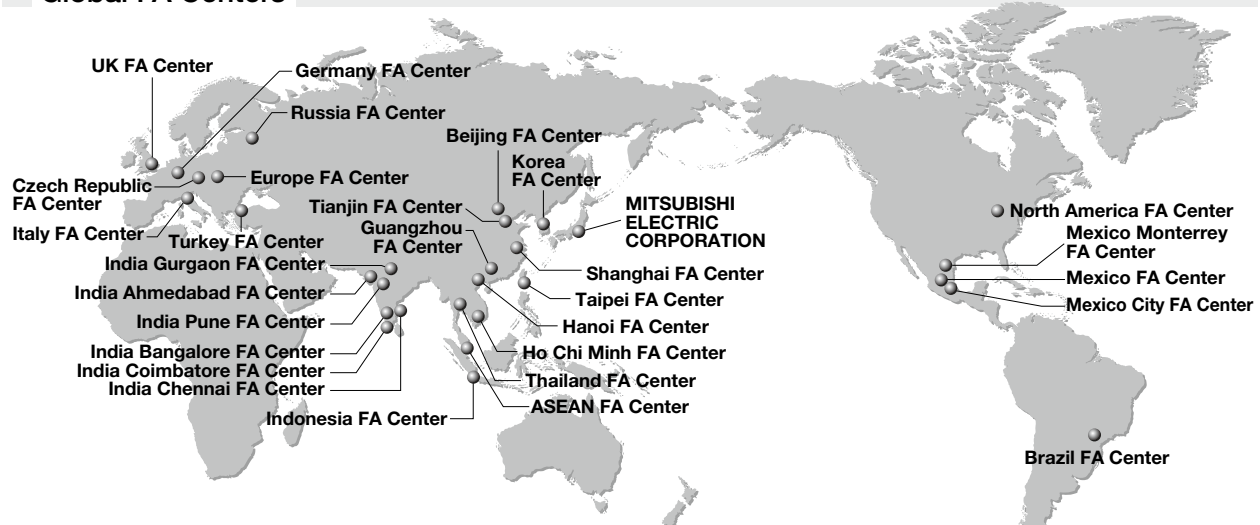

China Mainland

**Shanghai FA Center**  
**Mitsubishi Electric Automation (China) Ltd.**  
 Mitsubishi Electric Automation Center, No.1386 Hongqiao Road, Shanghai, China  
 Tel: +86-21-2322-3030 / Fax: +86-21-2322-3000(9611#)

**Beijing FA Center**  
**Mitsubishi Electric Automation (China) Ltd. Beijing Branch**  
 5/F, ONE INDIGO, 20 Jiuxianqiao Road Chaoyang District, Beijing, China  
 Tel: +86-10-6518-8830 / Fax: +86-10-6518-2938

**Tianjin FA Center**  
**Mitsubishi Electric Automation (China) Ltd. Tianjin Branch**  
 Room 3203 City Tower, No.35, Youyi Road, Hexi District, Tianjin, China  
 Tel: +86-22-2813-1015 / Fax: +86-22-2813-1017

**Guangzhou FA Center**  
**Mitsubishi Electric Automation (China) Ltd. Guangzhou Branch**  
 Room 1609, North Tower, The Hub Center, No.1068, Xingang East Road, Haizhu District, Guangzhou, China  
 Tel: +86-20-8923-6730 / Fax: +86-20-8923-6715

Taiwan

**Taipei FA Center**  
**SETSUYO ENTERPRISE CO., LTD.**  
 3F, No.105, Wugong 3rd Road, Wugu District, New Taipei City 24889, Taiwan  
 Tel: +886-2-2299-9917 / Fax: +886-2-2299-9963

Korea

**Korea FA Center**  
**Mitsubishi Electric Automation Korea Co., Ltd.**  
 8F, Gangseo Hangang Xi-tower A, 401, Yangcheon-ro, Gangseo-Gu, Seoul 07528, Korea  
 Tel: +82-2-3660-9632 / Fax: +82-2-3664-0475

ASEAN

**ASEAN FA Center**  
**Mitsubishi Electric Asia Pte. Ltd.**  
 307 Alexandra Road, Mitsubishi Electric Building, Singapore 159943  
 Tel: +65-6470-2475 / Fax: +65-6476-7439

Indonesia

**Indonesia FA Center**  
**PT. Mitsubishi Electric Indonesia Cikarang Office**  
 Jl. Kenari Raya Blok G2-07A Delta Silicon 5, Lippo Cikarang - Bekasi 17550, Indonesia  
 Tel: +62-21-2961-7797 / Fax: +62-21-2961-7794

Vietnam

**Hanoi FA Center**  
**Mitsubishi Electric Vietnam Co., LTD.**  
**Hanoi Branch**  
 6th Floor, Detech Tower, 8 Ton That Thuyet Street, My Dinh 2 Ward, Nam Tu Liem District, Hanoi, Vietnam  
 Tel: +84-24-3937-8075 / Fax: +84-24-3937-8076

**Ho Chi Minh FA Center**  
**Mitsubishi Electric Vietnam Co., LTD.**  
**Ho Chi Minh Head Office**  
 Unit 01-04, 10th Floor, Vincorn Center, 72 Le Thanh Ton Street, District 1, Ho Chi Minh City, Vietnam  
 Tel: +84-28-3910-5945 / Fax: +84-28-3910-5947

Thailand

**Thailand FA Center**  
**Mitsubishi Electric Factory Automation (Thailand) Co., Ltd.**  
 101, True Digital Park Office, 5th Floor, Sukhumvit Road, Bangchak, Phra Khanong, Bangkok 10260, Thailand  
 Tel: +66-2092-8600 / Fax: +66-2043-1231-33

India

**India Pune FA Center**  
**Mitsubishi Electric India Pvt. Ltd. Pune Branch**  
 Emerald House, EL-3, J Block, M.I.D.C., Bhosari, Pune - 411026, Maharashtra, India  
 Tel: +91-20-2710-2000 / Fax: +91-20-2710-2100

**India Gurgaon FA Center**  
**Mitsubishi Electric India Pvt. Ltd. Gurgaon Head Office**  
 2nd Floor, Tower A & B, Cyber Greens, DLF Cyber City, DLF Phase - III, Gurgaon - 122002, Haryana, India  
 Tel: +91-124-463-0300 / Fax: +91-124-463-0399

**India Bangalore FA Center**  
**Mitsubishi Electric India Pvt. Ltd. Bangalore Branch**  
 Prestige Emerald, 6th Floor, Municipal No.2, Madras Bank Road, Bangalore - 560001, Karnataka, India  
 Tel: +91-80-4020-1600 / Fax: +91-80-4020-1699

**India Chennai FA Center**  
**Mitsubishi Electric India Pvt. Ltd. Chennai Branch**  
 Citilights Corporate Centre No.1, Vivekananda Road, Srinivasa Nagar, Chetpet, Chennai - 600031, Tamil Nadu, India  
 Tel: +91-44-4554-8772 / Fax: +91-44-4554-8773

**India Ahmedabad FA Center**  
**Mitsubishi Electric India Pvt. Ltd. Ahmedabad Branch**  
 B/4, 3rd Floor, SAFAL Profitaire, Corporate Road, Prahaladnagar, Satellite, Ahmedabad - 380015, Gujarat, India  
 Tel: +91-79-6512-0063 / Fax: -

**India Coimbatore FA Center**  
**Mitsubishi Electric India Pvt. Ltd. Coimbatore Branch**  
 BMH Srinivas, 2nd Floor, Door No.1604, Trichy Road, Near ICICI Bank, Coimbatore - 641018, Tamil Nadu, India  
 Tel: +91-422-438-5606 / Fax: -

Americas

**North America FA Center**  
**Mitsubishi Electric Automation, Inc.**  
 500 Corporate Woods Parkway, Vernon Hills, IL 60061, U.S.A.  
 Tel: +1-847-478-2100 / Fax: +1-847-478-2253

Mexico

**Mexico FA Center**  
**Mitsubishi Electric Automation, Inc. Queretaro Office**  
 Parque Tecnológico Innovación Queretaro Lateral Carretera Estatal 431, Km 2+200, Lote 91 Módulos 1 y 2 Hacienda La Machorra, CP 76246, El Marques, Queretaro, Mexico  
 Tel: +52-442-153-6014 / Fax: -

**Mexico City FA Center**  
**Mitsubishi Electric Automation, Inc. Mexico Branch**  
 Mariano Escobedo #69, Col. Zona Industrial, Tlalnepanitla Edo. Mexico, C.P.54030  
 Tel: +52-55-3067-7511 / Fax: -

**Mexico Monterrey FA Center**  
**Mitsubishi Electric Automation, Inc. Monterrey Office**  
 Plaza Mirage, Av. Gonzalitos 460 Sur, Local 28, Col. San Jeronimo, Monterrey, Nuevo Leon, C.P. 64640, Mexico  
 Tel: +52-55-3067-7521 / Fax: -

Brazil

**Brazil FA Center**  
**Mitsubishi Electric do Brasil Comercio e Servicos Ltda.**  
 Avenida Adelino Cardana, 293, 21 andar, Bethaville, Barueri SP, Brasil  
 Tel: +55-11-4689-3000 / Fax: +55-11-4689-3016

Europe

**Europe FA Center**  
**Mitsubishi Electric Europe B.V. Polish Branch**  
 ul. Krakowska 48, 32-083 Balice, Poland  
 Tel: +48-12-347-65-00 / Fax: -

**Germany FA Center**  
**Mitsubishi Electric Europe B.V. German Branch**  
 Mitsubishi-Electric-Platz 1, 40882 Ratingen, Germany  
 Tel: +49-2102-486-0 / Fax: +49-2102-486-1120

**UK FA Center**  
**Mitsubishi Electric Europe B.V. UK Branch**  
 Travellers Lane, Hatfield, Hertfordshire, AL10 8XB, U.K.  
 Tel: +44-1707-27-8780 / Fax: +44-1707-27-8695

**Italy FA Center**  
**Mitsubishi Electric Europe B.V. Italian Branch**  
 Centro Direzionale Colleoni - Palazzo Sirio, Viale Colleoni 7, 20864 Agrate Brianza (MB), Italy  
 Tel: +39-039-60531 / Fax: +39-039-6053-312

**Czech Republic FA Center**  
**Mitsubishi Electric Europe B.V. Czech Branch**  
 Pekarska 621/7, 155 00 Praha 5, Czech Republic  
 Tel: +420-255-719-200 / Fax: -

**Russia FA Center**  
**Mitsubishi Electric (Russia) LLC St. Petersburg Branch**  
 Piskarevsky pr. 2, bld 2, lit "Sch", BC "Benua", office 720; 195027, St. Petersburg, Russia  
 Tel: +7-812-633-3497 / Fax: +7-812-633-3499

**Turkey FA Center**  
**Mitsubishi Electric Turkey A.S. Umraniye Branch**  
 Serifali Mahallesi Nutuk Sokak No:5, TR-34775 Umraniye / Istanbul, Turkey  
 Tel: +90-216-526-3990 / Fax: +90-216-526-3995

## ◆ Approval standards

### Mitsubishi's products comply with various standards and laws.

Mitsubishi's products also comply with various international standards including UL standards, and maritime certifications.

#### <International standards>

| Mark | Overview  | Country/Region  |
|------|---|---|
| CE   | EMC Directive harmonized standards, Low Voltage Directive harmonized standards, RoHS Directive harmonized standards | Europe  |
| Ex   | ATEX Directive harmonized standards   | Europe  |
| UL   | Safety standards<br>Class I, Division 2   | United States   |
| cUL  | Safety standards<br>Class I, Division 2   | Canada  |
| EAC  | Technical Regulations on EMC, Technical Regulations on safety of low voltage equipment                              | Eurasian Economic Union (Russia, Belarus, Kazakhstan, etc.) |
| KC   | EMC standards   | Korea   |
| KCs  | Safety standards  | Korea   |

#### <Maritime certifications>

| Abbrev. | Certification Organization  | Country         |
|---------|-----------------------------|-----------------|
| ABS     | American Bureau of Shipping | United States   |
| BV      | Bureau Veritas              | France          |
| DNV GL  | DNV GL                      | Norway, Germany |
| LR      | Lloyd's Register            | England         |
| NK      | NIPPON KAIJI KYOKAI         | Japan           |
| RINA    | Registro Italiano Navale    | Italy           |

For the details on the approval model within each standard, please refer to the Mitsubishi Electric Factory Automation Global website ([www.MitsubishiElectric.com/fa/](http://www.MitsubishiElectric.com/fa/)).

## Factory Automation Global website

[www.MitsubishiElectric.com/fa/](http://www.MitsubishiElectric.com/fa/)

Mitsubishi Electric Factory Automation provides a mix of services to support its customers worldwide, through a consolidated global website. In addition to documents such as catalogs, manuals, and technical bulletins, the latest information about GOT will be posted on the website as soon as it becomes available.

#### Factory Automation Global website




#### Industrial Computer MELIPC

The information about MELIPC MI3000 can be viewed from here.

#### Download

Various documents such as catalogs, manuals, and technical bulletins can be downloaded.

#### Human-Machine Interfaces (HMIs)-GOT top page

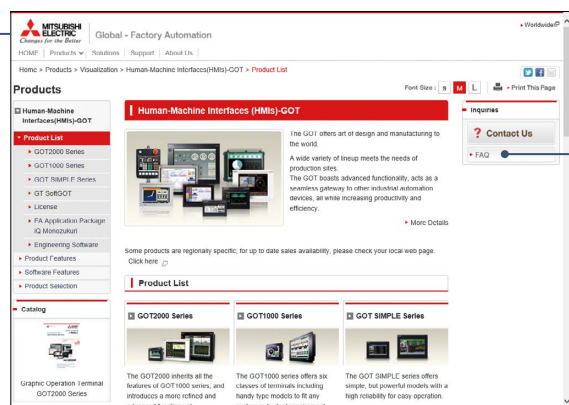


#### FAQ

Frequently asked questions about Mitsubishi Electric industrial devices including GOT can be viewed from here.

# MELIPC MI3000

Panel computers equipped with integrated touch screens

For details

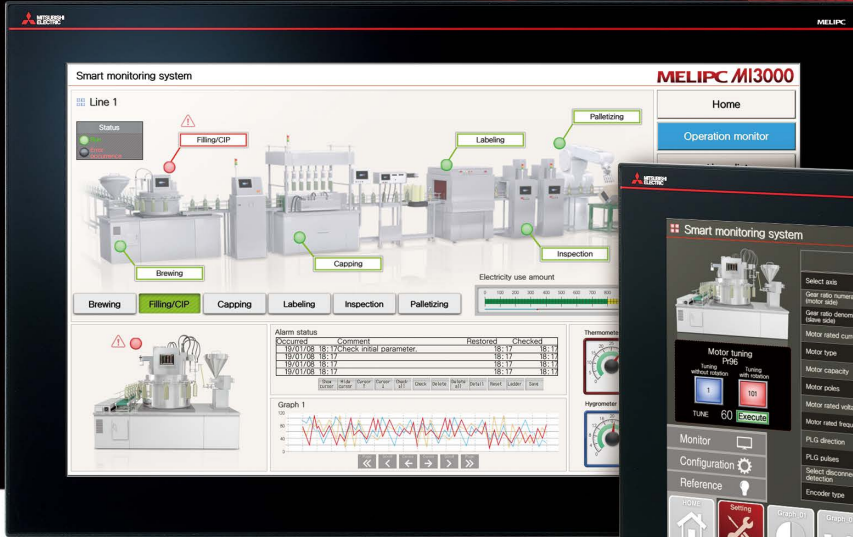

21.5" widescreen MI3321G-W



15" MI3315G-W

### Beautiful, stunning, large screen monitor

Large 21.5-inch widescreen display and 15-inch display models are available. Colorful images are displayed with 16.77 million colors. Light-touch operation is realized with a PCAP touch panel that is widely used for smartphones and tablet devices.

| Item                | Specifications  |
|---------------------|---|
| Display             | 15"/21.5", TFT color LCD, 16.77 million colors  |
| Resolution          | Full HD, XGA  |
| Backlight           | LED   |
| Internal storage    | 64 GB   |
| Standard interface  | Ethernet (3 ports), RS-232, RS-422/485, DisplayPort<br>USB host (USB-A): 2 channels (USB 2.0), 2 channels (USB 3.0)<br>Sound output |
| Extension interface | PCI Express® x 1 slot, (half size) x 1<br>mini PCI Express® Full size x 2<br>M.2 (2280) SATA x 1                                    |

### Windows® 10 IoT Enterprise pre-installed


Not only familiar Windows® applications, but also usercreated applications can be used to configure systems that meet requirements of individual customers.






**Various software pre-installed**

Edgecross Basic Software, SLMP Data Collector, and GT SoftGOT2000 are pre-installed on MI3000. The data collected by Edgecross, SLMP Data Collector, and GT SoftGOT2000 can be monitored on the GT SoftGOT2000 screen.

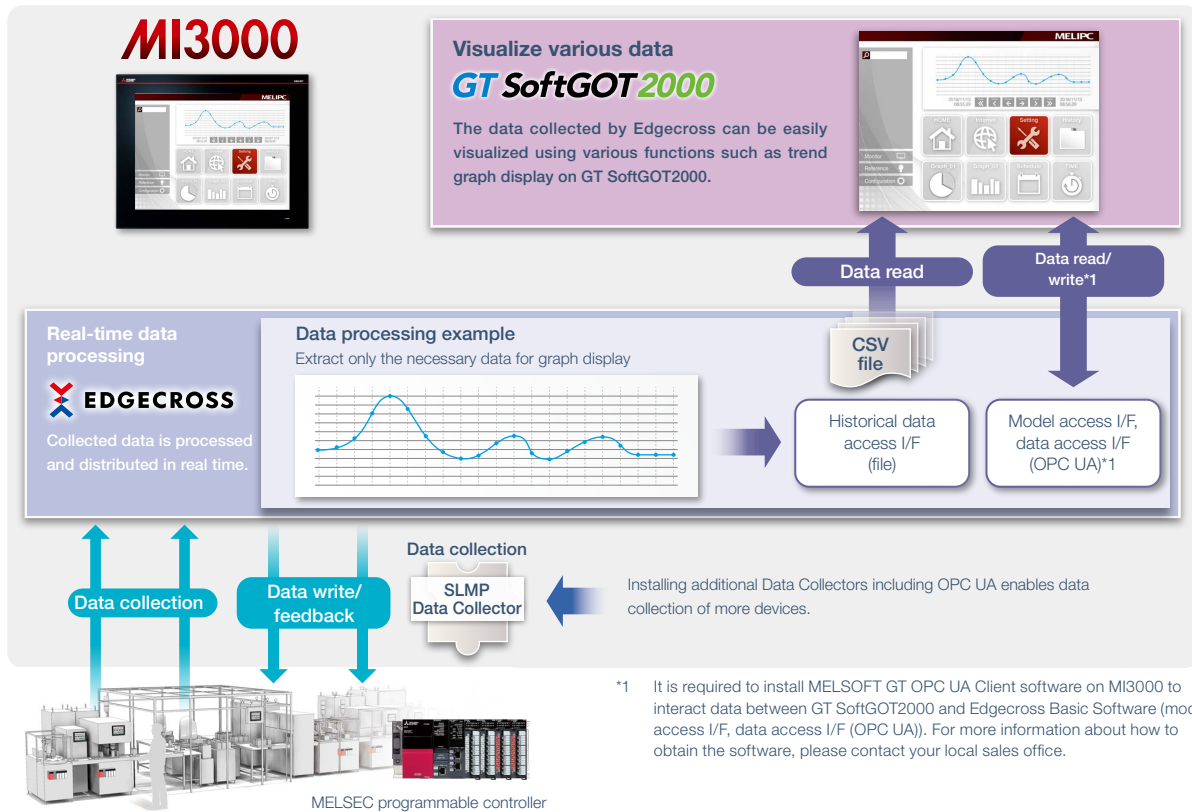

**■ MELIPC MI3000 external appearance [rear face]**

- 1 DisplayPort**  
Output to an external monitor.  
Screen can be displayed on a larger monitor.
- 2 M.2 (2280) SATA (inside the cover)**  
Expand storage for collecting and storing large amounts of data.
- 3 4 PCI Express®/mini PCI Express® (inside the cover)**  
Expand functions by using an expansion board.
- 5 Sound output**  
For outputting sound by connecting a speaker with built-in amplifier.  
To use sound notification on GT SoftGOT2000, sound files can be easily created with GT Designer3.  
\* For the details, please refer to page 118.
- 6 7 USB3.0/USB2.0**  
Each interface has two ports for connecting to various USB compatible devices.
- 8 Ethernet**  
Various Ethernet compatible devices can be connected to three ports. The network in the office can be separated from the one in the shop floor to enhance security.
- 9 10 RS-232/422/485**  
For data collection from existing facilities.

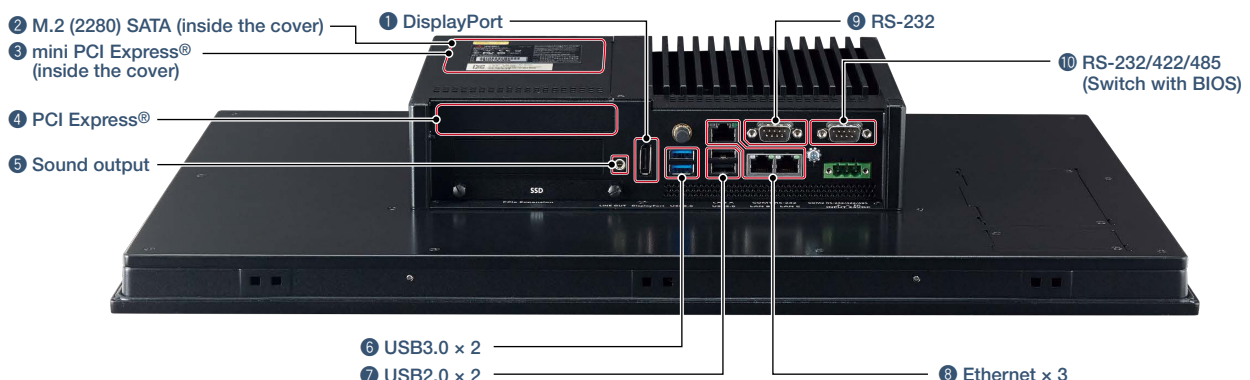

# MELIPC MI3000

## MELIPC MI3000

### General specifications

| Item                          | Specifications  |
|-------------------------------|---|
| Operating ambient temperature | 0 °C to 55 °C   |
| Storage ambient temperature   | -20 °C to 60 °C   |
| Operating ambient humidity    | 10% RH to 90% RH, non-condensing  |
| Storage ambient humidity      | 10% RH to 90% RH, non-condensing  |
| Vibration resistance          | Compliant with IEC60068-2-64, 5 to 500Hz, one hour in direction X, Y, Z each  |
| Random vibration              |   |
| Shock resistance              | Compliant with IEC-60068-2-27, 10 G, half sine wave, 11 msec  |
| Operating atmosphere          | No greasy fumes, corrosive gas, flammable gas, excessive conductive dust, and direct sunlight (as well as at storage)                     |
| Operating altitude *3/4       | —   |
| Overvoltage category *1       | II or less  |
| Pollution degree *2           | 2 or less   |
| Cooling method                | Self-cooling  |
| Grounding                     | Grounding with a ground resistance of 100 Ω or less by using a ground cable that has a cross-sectional area of 2 mm <sup>2</sup> or more. |

- \*1 This indicates the section of the power supply to which the equipment is assumed to be connected between the public electrical power distribution network and the machinery within the premises. Category II applies to equipment that is supplied with power from fixed facilities. The withstand surge voltage for the equipment with the rated voltage up to 300 V is 2500 V.
- \*2 This indicates the occurrence rate of conductive material in an environment where a device is used. Pollution degree 2 indicates an environment where only non-conductive pollution occurs normally and a temporary conductivity caused by condensation shall be expected depending on the conditions.

### Power supply specifications

| Item  | Specifications   |           |
|---|--|-----------|
|   | MI3321G-W  | MI3315G-W |
| Power supply voltage  | 24 V DC (+20%, -20%)   |           |
| Power consumption   | Under the maximum load   | 90 W      |
|   | Stand alone  | 27 W      |
| Applicable wire size  | Single wiring (single wire, stranded wire): 0.2 to 2.5 mm <sup>2</sup> (AWG24 to AWG14)<br>Rod terminal with an insulation sleeve: 0.25 to 2.5 mm <sup>2</sup> (AWG22 to AWG14)<br>Double wiring (single wire, stranded wire): 0.2 to 1.5 mm <sup>2</sup> (AWG24 to AWG16) |           |
| Applicable solderless terminal                                    | DNO0508D (AWG20), DNO0708D (AWG18),<br>DNO1508D (AWG16) (manufactured by DINKLE)<br>Crimp tool: DNT13-0101 (manufactured by DINKLE)  |           |
| Applicable tightening torque (for terminal block terminal screws) | 0.20 N·m (M2.5)  |           |

- \*3 Do not use or store the product under pressure higher than the atmospheric pressure of altitude 0 m. Doing so may cause malfunction.
- \*4 No limitations to altitude. When used at a high altitude, the upper limits of the permissible voltage and the operating ambient temperature become lower. Please check performance before use at the customer side.

### Performance specifications


| Item   | Specifications   |   |  |
|--|--|---|--|
|  | MI3321G-W  | MI3315G-W   |  |
| Display section *1 *2                              | Display device   | TFT color LCD   |  |
|  | Screen size  | 21.5" widescreen  |  |
|  | Resolution   | Full HD: 1920 × 1080  |  |
|  | Contrast ratio   | 5000:1  |  |
|  | Display color  | 16.77 million   |  |
|  | Backlight  | LED backlight (not replaceable)                             |  |
|  | Backlight life *4  | 50,000 hours  |  |
| Touch panel *3/11                                  | Type   | PCAP (Projected Capacitive)                                 |  |
|  | Simultaneous press   | Max. 10 keys *3   |  |
|  | Transmittance  | 90%±3%  |  |
| Panel color  | Black  |   |  |
| Hardware   | MPU  | Intel® Core™ i3-6100U 2.30 GHz (Dual Core)                  |  |
|  | Memory capacity  | 8 GB DDR4   |  |
|  | ROM  | 64 GB SSD   |  |
|  | Battery  | Not replaceable *4  |  |
| Software   | OS   | Windows® 10 IoT Enterprise 2016 LTSB (64 bit)               |  |
|  | System language  | At initial startup: English                                 |  |
| Additional storage                                 | Interface  | M.2(2280) SATA SSD: 1                                       |  |
| Extension interface                                | PCI Express®   | x1 slot, (half size) x 1                                    |  |
|  | mini PCI Express®  | Full size x 2   |  |
| Built-in interface                                 | Display (for external monitor output)  | Interface   | DisplayPort 1.4  |
|  |  | Connector   | DisplayPort connector  |
|  |  | Number of ports   | 1  |
|  | Ethernet   | Resolution*5  | Max. 3840 x 2160   |
|  |  | Interface   | 10BASE-T, 100BASE-TX, 1000BASE-T                               |
|  |  | Number of ports   | 3  |
|  | RS-232   | Connector for external wiring                               | RJ-45  |
|  |  | Number of ports   | 1  |
|  |  | Transmission speed  | 300 to 115200 bps  |
|  | RS-232/RS-422/RS-485   | Connector for external wiring                               | D-sub 9-pin (male)   |
|  |  | Interface   | RS-232, RS-422, RS-485 (two wire system)<br>Default: RS-232 *6 |
|  |  | Number of ports   | 1  |
| USB  | Transmission speed   | 300 to 115200 bps   |  |
|  | Connector for external wiring  | D-sub 9-pin (male)  |  |
|  | Number of ports  | • USB3.0: 2<br>• USB2.0: 2                                  |  |
| Sound output                                       | Connector  | USB Type-A  |  |
|  | Interface  | Audio Line-Out  |  |
| Built-in clock precision                           | Number of ports  | 1   |  |
|  | Connector  | φ3.5 stereo mini-jack (3-prong)                             |  |
| POWER LED  | Daily difference: -2 seconds to +2 seconds<br>Monthly difference: -60 seconds to +60 seconds |   |  |
| Protective structure                               | 2 colors (blue and orange)   |   |  |
| Safety standards, radio laws (as of December 2019) | Front: IP66  |   |  |
| External dimensions                                | CE, UL, cUL, KC, BSMI, CCC, FCC  |   |  |
| Panel cutting dimensions                           | 349.8(13.77) (H) × 558.4(21.98) (W) × 88.8(3.50) (D) mm(inch)                                | 307.3(12.10) (H) × 383.2(15.09) (W) × 86(3.39) (D) mm(inch) |  |
| Weight   | 341.8(13.46) (H) × 550.3(21.67) (W) mm(inch)   | 298.5(11.75) (H) × 374.5(14.74) (W) mm(inch)                |  |
|  | 9.8(21.6) kg(lb)   | 7.0(15.4) kg(lb)  |  |

- \*1 As a characteristic of liquid crystal display panels, bright dots (always lit) and dark dots (never lit) may appear on the panel. Since liquid crystal display panels comprise a great number of display elements, the appearance of bright and dark dots cannot be reduced to zero. Individual differences in liquid crystal display panels may cause differences in color, uneven brightness and flickering. Note that these phenomena are characteristics of liquid crystal display panels and it does not mean the products are defective or damaged.

- \*2 Flickering may occur due to vibration, shock, or the display colors.
- \*3 Multiple touch keys cannot be pressed simultaneously while GT SoftGOT2000 is used.
- \*4 The battery cannot be removed by users. For the battery replacement, please contact your local sales office.
- \*5 Maximum resolution at 60 Hz.
- \*6 The interface can be switched between RS-232, RS-422, and RS-485 with the BIOS.

External dimensions


Unit : mm (inch)

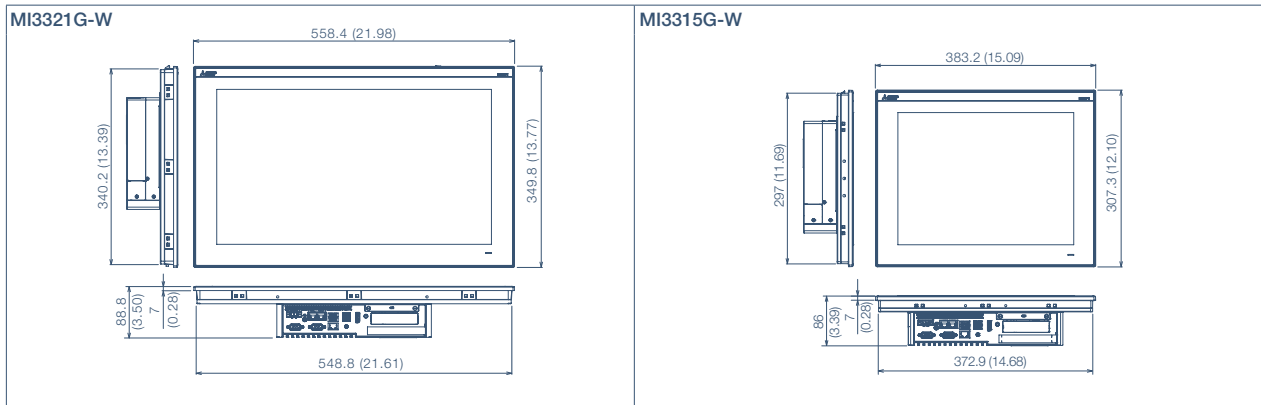

Panel cut dimensions

Unit : mm (inch)

| Screen size      | Model    | A                | B                |
|------------------|----------|------------------|------------------|
| 21.5" widescreen | M3321G-W | 550.3<br>(21.67) | 341.8<br>(13.46) |
| 15"              | M3315G-W | 374.5<br>(14.74) | 298.5<br>(11.75) |

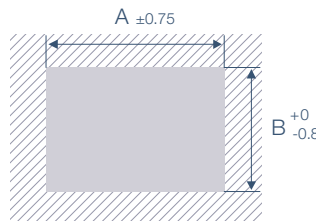

\* Panel thickness: 2 mm to 6 mm  
(0.08 inch to 0.24 inch)

Product list

MELIPC

| Product name  | Model    | Screen size               | Panel color | Outline   |
|---------------|----------|---------------------------|-------------|---|
| MELIPC MI3000 | M3321G-W | 21.5" widescreen, Full HD | Black       | Edgecross Basic Software, SLMP Data Collector, GT SoftGOT2000 pre-installed |
|               | M3315G-W | 15" XGA                   | Black       |   |

Option


| Product name            | Model             | Outline  |
|-------------------------|-------------------|--|
| Network interface board | Q81BD-J71GF11-T2  | PCI Express® bus compatible, CC-Link IE Field Network (master/local station)   |
|                         | Q81BD-J71GP21-SX  | PCI Express® bus compatible, CC-Link IE Controller Network (control/normal station)                                      |
|                         | Q81BD-J71GP21S-SX | PCI Express® bus compatible, CC-Link IE Controller Network (control/normal station), with external power supply function |

Engineering tool

| Product name  | Model          | Outline                  |                             |
|---|----------------|--------------------------|-----------------------------|
| HMI/GOT Screen Design Software<br>MELSOFT GT Works3 | SW1DND-GTWK3-E | English Version          | Standard license product *1 |
| GT Works Text to Speech License *2                  | SW1DND-GTVO-M  | Standard license product |                             |

\*1 The desired number of licenses (2 or more) can be purchased. For details, please contact your local sales office.

\*2 To edit sound files, each personal computer requires one license.

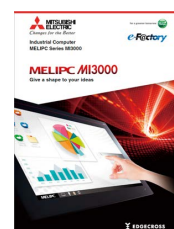

For the details of MI3000, please refer to the MELIPC MI3000 catalog (L(NA)08600ENG).

Android and Google Chrome are trademarks or registered trademarks of Google LLC.  
 Anybus is a registered trademark of HMS Industrial Networks AB.  
 DisplayPort is a trademark owned by the Video Electronics Standards Association (VESA) in the United States and other countries.  
 ETHERNET is a registered trademark of Xerox Corp.  
 Intel, Intel Core, and Intel Atom are trademarks of Intel Corporation or its subsidiaries in the U.S. and/or other countries.  
 IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.  
 Safari is a trademark of Apple Inc., registered in the U.S. and other countries.  
 SD and SDHC Logos are registered trademarks or trademarks of SD-3C, LLC.  
 MELDAS, MELSEC, iQ Platform, MELSOFT, GOT, CC-Link, CC-Link/LT, CC-Link IE are either trademarks or registered trademarks of Mitsubishi Electric Corporation in Japan and other countries.  
 Microsoft, Windows, Windows Vista, Windows Server, Excel, Visual Basic, Visual C++, Visual Studio, Access, SQL Server are registered trademarks or trademarks of Microsoft Corporation in the United States, Japan and other countries.  
 MODBUS is a registered trademark of SCHNEIDER ELECTRIC USA, INC.  
 Oracle is a registered trademark of Oracle Corporation and/or its affiliates in the United States and other countries.  
 PCI Express is a registered trademark of PCI-SIG.  
 PictBridge is a registered trademark of Canon Inc.  
 Unicode and the Unicode Logo are registered trademarks of Unicode, Inc. in the United States and other countries.  
 VNC is a registered trademark of RealVNC Ltd. in the United States and other countries.  
 Other product and company names are either trademarks or registered trademarks of their respective owners.

The actual color may differ slightly from the pictures in this catalog.  
 The actual display may differ from what are shown on GOT screen images.


#### Precautions before use

This publication explains the typical features and functions of the products herein and does not provide restrictions or other information related to usage and module combinations. Before using the products, always read the product user manuals. Mitsubishi Electric will not be held liable for damage caused by factors found not to be the cause of Mitsubishi Electric; opportunity loss or lost profits caused by faults in Mitsubishi Electric products; damage, secondary damage, or accident compensation, whether foreseeable or not, caused by special factors; damage to products other than Mitsubishi Electric products; or any other duties.

#### For safe use

- To use the products given in this publication properly, always read the relevant manuals before beginning operation.
- The products have been manufactured as general-purpose parts for general industries, and are not designed or manufactured to be incorporated in a device or system used in purposes related to human life.
- Before using the products for special purposes such as nuclear power, electric power, aerospace, medicine or passenger-carrying vehicles, consult with Mitsubishi Electric.
- The products have been manufactured under strict quality control. However, when installing the products where major accidents or losses could occur if the products fail, install appropriate backup or fail-safe functions in the system.

# YOUR SOLUTION PARTNER

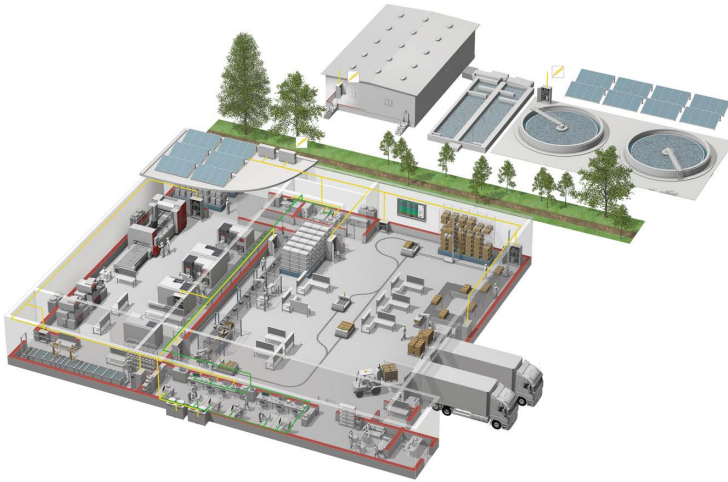

Mitsubishi Electric offers a wide range of automation equipment from PLCs and HMIs to CNC and EDM machines.

## A NAME TO TRUST

Since its beginnings in 1870, some 45 companies use the Mitsubishi name, covering a spectrum of finance, commerce and industry.

The Mitsubishi brand name is recognized around the world as a symbol of premium quality.

Mitsubishi Electric Corporation is active in space development, transportation, semi-conductors, energy systems, communications and information processing, audio visual equipment and home electronics, building and energy management and automation systems, and has 237 factories and laboratories worldwide in over 121 countries.

This is why you can rely on Mitsubishi Electric automation solution - because we know first hand about the need for reliable, efficient, easy-to-use automation and control in our own factories.

As one of the world's leading companies with a global turnover of over 4 trillion Yen (over \$40 billion), employing over 100,000 people, Mitsubishi Electric has the resource and the commitment to deliver the ultimate in service and support as well as the best products.



Low voltage: MCCB, MCB, ACB



Medium voltage: VCB, VCC



Power monitoring, energy management



Compact and Modular Controllers



Inverters, Servos and Motors



Visualisation: HMIs



Numerical Control (NC)



Robots: SCARA, Articulated arm



Processing machines: EDM, Lasers, IDS



Transformers, Air conditioning, Photovoltaic systems

\* Not all products are available in all countries.

# Global Partner. Local Friend.

## American Offices

|  |  |   |
|--|--|---|
| <b>USA</b><br><b>Mitsubishi Electric Automation, Inc.</b><br>500 Corporate Woods Parkway, Vernon Hills, IL 60061, U.S.A.<br>Tel: +1-847-478-2100 | <b>Mexico</b><br><b>Mitsubishi Electric Automation, Inc.</b><br><b>Mexico Branch</b><br>Boulevard Miguel de Cervantes Saavedra 301, Torre Norte<br>Piso 5, Ampliacion Granada, Miguel Hidalgo, Ciudad de<br>Mexico, Mexico, C.P.11520<br>Tel: +52-55-3067-7512 | <b>Brazil</b><br><b>Mitsubishi Electric do Brasil Comercio e Servicos Ltda.</b><br>Avenida Adelino Cardana, 293, 21 andar, Bethaville, Barueri<br>SP, Brazil<br>Tel: +55-11-4689-3000 |
|--|--|---|

## Asia-Pacific Offices

|   |   |   |
|---|---|---|
| <b>China</b><br><b>Mitsubishi Electric Automation (China) Ltd.</b><br>Mitsubishi Electric Automation Center, No.1386 Hongqiao<br>Road, Shanghai, China<br>Tel: +86-21-2322-3030                     | <b>Taiwan</b><br><b>SETSUYO ENTERPRISE CO., LTD.</b><br>6F, No.105, Wugong 3rd Road, Wugu District, New Taipei City<br>24889, Taiwan<br>Tel: +886-2-2299-2499   | <b>Korea</b><br><b>Mitsubishi Electric Automation Korea Co., Ltd.</b><br>7F to 9F, Gangseo Hangang Xi-tower A, 401, Yangcheon-ro,<br>Gangseo-Gu, Seoul 07528, Korea<br>Tel: +82-2-3660-9569 |
| <b>Singapore</b><br><b>Mitsubishi Electric Asia Pte. Ltd.</b><br>307 Alexandra Road, Mitsubishi Electric Building, Singapore<br>159943<br>Tel: +65-6473-2308  | <b>Thailand</b><br><b>Mitsubishi Electric Factory Automation<br/>(Thailand) Co., Ltd.</b><br>101, True Digital Park Office, 5th Floor, Sukhumvit Road,<br>Bangchak, Phra Khanong, Bangkok 10260, Thailand<br>Tel: +66-2092-8600 | <b>Indonesia</b><br><b>PT. Mitsubishi Electric Indonesia</b><br>Gedung Jaya 8th Floor, J.L. MH. Thamrin No.12, Jakarta<br>Pusat 10340, Indonesia<br>Tel: +62-21-3192-6461                   |
| <b>Vietnam</b><br><b>Mitsubishi Electric Vietnam Co., Ltd.</b><br>Unit 01-04, 10th Floor, Vincorm Center, 72 Le Thanh Ton<br>Street, District 1, Ho Chi Minh City, Vietnam<br>Tel: +84-28-3910-5945 | <b>India</b><br><b>Mitsubishi Electric India Pvt. Ltd.</b><br><b>Pune Branch</b><br>Emerald House, EL-3, J Block, M.I.D.C., Bhosari,<br>Pune - 411026, Maharashtra, India<br>Tel: +91-20-2710-2000                              | <b>Australia</b><br><b>Mitsubishi Electric Australia Pty. Ltd.</b><br>348 Victoria Road, P.O. Box 11, Rydalmere, N.S.W. 2116,<br>Australia<br>Tel: +61-2-9684-7777                          |

## European Offices

|   |  |   |
|---|--|---|
| <b>Germany</b><br><b>Mitsubishi Electric Europe B.V.</b><br><b>German Branch</b><br>Mitsubishi-Electric-Platz 1, 40882 Ratingen, Germany<br>Tel: +49-2102-486-0                                   | <b>UK</b><br><b>Mitsubishi Electric Europe B.V.</b><br><b>UK Branch</b><br>Travellers Lane, UK-Hatfield, Hertfordshire, AL10 8XB, U.K.<br>Tel: +44-1707-28-8780      | <b>Italy</b><br><b>Mitsubishi Electric Europe B.V.</b><br><b>Italian Branch</b><br>Centro Direzionale Colleoni - Palazzo Sirio, Viale Colleoni 7,<br>20864 Agrate Brianza (MB), Italy<br>Tel: +39-039-60531       |
| <b>Spain</b><br><b>Mitsubishi Electric Europe B.V.</b><br><b>Spanish Branch</b><br>Carretera de Rubi 76-80-Apdo. 420,<br>E-08190 Sant Cugat del Valles (Barcelona), Spain<br>Tel: +34-935-65-3131 | <b>France</b><br><b>Mitsubishi Electric Europe B.V.</b><br><b>French Branch</b><br>25, Boulevard des Bouvets, 92741 Nanterre Cedex, France<br>Tel: +33-1-55-68-55-68 | <b>Czech</b><br><b>Mitsubishi Electric Europe B.V.</b><br><b>Czech Branch</b><br>Pekarska 621/7, 155 00 Praha 5,<br>Czech Republic<br>Tel: +420-255-719-200   |
| <b>Turkey</b><br><b>Mitsubishi Electric Turkey A.S.</b><br><b>Umraniye Branch</b><br>Serifali Mahallesi Nutuk Sokak No:5, TR-34775<br>Umraniye / Istanbul, Turkey<br>Tel: +90-216-526-3990        | <b>Poland</b><br><b>Mitsubishi Electric Europe B.V.</b><br><b>Polish Branch</b><br>ul. Krakowska 48, 32-083 Balice, Poland<br>Tel: +48-12-347-65-00                  | <b>Russia</b><br><b>Mitsubishi Electric (Russia) LLC</b><br><b>St. Petersburg Branch</b><br>Piskarevsky pr. 2, bld 2, lit "Sch", BC "Benua", office 720;<br>195027 St. Petersburg, Russia<br>Tel: +7-812-633-3497 |
| <b>South Africa</b><br><b>Adroit Technologies</b><br>20 Waterford Office Park, 189 Witkoppen Road, Fourways,<br>South Africa<br>Tel: +27-11-658-8100  |  |   |

The release date varies depending on the product and your region. For details, please contact your local sales office.

## MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE: TOKYO BLDG., 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN  
 NAGOYA WORKS: 1-14, YADA-MINAMI 5, HIGASHI-KU, NAGOYA, JAPAN